Pro Tips

NOZZLE REMOVAL

Make sure the pen is **HOT** (blue or green LED) before trying to unscrew the nozzle. When screwing the nozzle back on don't force it.

Nozzle Removal Tool ▶



Manual temperature optimization for minor flow adjustment and expertly consistent 3Doodles. Turn it 90° to the right to crank up the heat, or 90° to the left to turn it down.



WELD PLASTIC

You can join 3Doodled pieces by touching the hot tip of the 3Doodler to both parts to melt them together while extruding.





n a

PUSH FIRST

If it's still not working then follow the step by step instructions in the user manual or message us at cs@the3Doodler.com or visit our YouTube channel at: youtube.com/3Doodler

Plastics & Accessories

Choose from 60+ vibrant plastic colors. Transform your Doodling with our latest accessories including the Nozzle Set.



JOIN THE COMMUNITY

Discover and share instant inspiration (and hundreds of free stencils!) with our global community at: the3Doodler.com/community

For more information, customer service, repairs, or warranty inquiries please contact us at cs@the3Doodler.com



Start Guide





& select your temperature (HI or LO).





It may take a few seconds for your plastic to extrude.

SET YOUR 3DOODLER ABS FLEXY PLA WOOD

Button Features

SLOW SPEED

Hold down on the small button for slow.

FAST SPEED

Hold down on the big button for fast.

DOUBLE CLICK

Constant Doodling without holding down any buttons

- Hold down button to pause
- Single click to stop

BOTH BUTTONS

Hold down on both buttons to reverse your strand while the LFD flashes

For more detailed instructions and additional tips please see the user manual or visit the 3Doodler.com

Get a grip BY PUSHING DOWN To Doodle effectively on a flat surface, push

the nozzle firmly into the surface while Doodling.

