


U-2893-2 GMT

User's manual

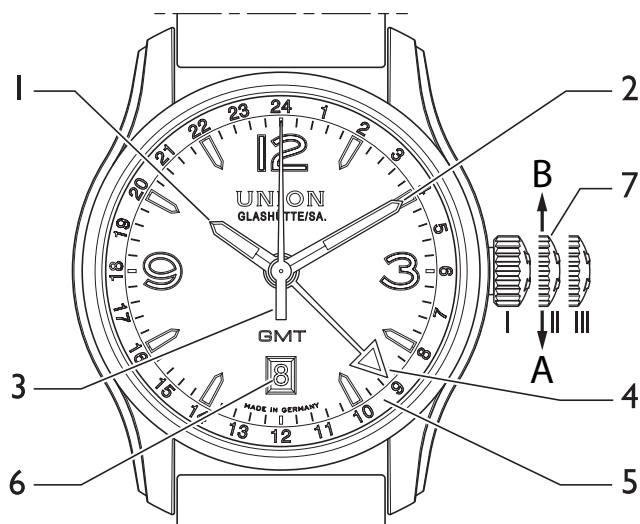

Technical specifications

- Mechanical movement U 2893-2 with automatic winding and 24 hour hand (second time zone)
- Number of jewels: 21
- 28,800 vibrations/hour
- Power reserve: Approx 42 hours

Display / Functions

- 1 Hour hand
- 2 Minute hand
- 3 Seconds hand
- 4 24 hour hand (second time zone)
- 5 24 hour scale (second time zone)
- 6 Date
- 7 3 position crown
 - I Rest and winding position
 - II Date setting position (**A** turn backwards) / 24 hour hand setting position (**B** turn forwards)
 - III Time setting position, with stop second and midnight date change

U-2893-2 GMT

CONGRATULATIONS

Congratulations on your choice of a watch by UNION GLASHÜTTE/SA.® - a German brand among the most renowned and with the richest traditions.

This exceptionally designed, undeniably attractive timepiece also has a superior design quality. Using only the highest value materials and components, your UNION GLASHÜTTE/SA.® watch is protected against shocks, temperature variations, water and dust.

Its sapphire crystal has a double sided anti-reflective coating, and it is driven by a mechanical movement U 2893-2 with automatic winding and 24 hour hand (second time zone).

To ensure perfect and accurate running for many years to come, we recommend you attentively follow the advice given in these instructions.

We hope you will be very pleased with your UNION GLASHÜTTE/SA.® timepiece!

USE

Winding

Crown in rest position **I**, not pulled out

Manual winding is necessary if you have not worn your watch for some considerable period of time. To restart it, you only need to turn the crown a few times (clockwise), or to tilt your watch from side to side a few times. To restore your watch's 42 hour power reserve, around 65 turns of the crown (forward) are required.

When wearing your watch, the automatic device winds it every time you move your wrist.

Notes

The accuracy may be influenced by the wearing conditions. There is no stop of the crown at full winding.

Setting the time

Crown in position **III**, pulled out

Pull the crown out to position **III** carefully; the seconds hand (**3**) will stop. Turn the crown forwards or backwards to the desired time, and then push it back into the rest position **I**.

Once the hour hand passes the 12 o'clock position, you can see if it is indicating midnight (date will change) or midday (date will not change).

Advice on how to synchronise your watch

To synchronise the seconds hand (**3**) with an official time signal (radio/TV/Internet), pull the crown out to position **III**; the seconds hand will stop. At the signal, push the crown back into the rest position **I**.

Second time zone

The 24 hour hand (**4**) indicates the time of a second time zone on the scale (**5**) of the dial. It completes a revolution in 24 hours.

Pull out the crown (**7**) to position **II** and turn it forwards (**B**) until the local time in the second time zone is shown. Then, push the crown back into rest position **I**.

During this operation, your watch will continue to function normally, so you will not need to alter the time.

Rapid date correction

Crown in position **II**, intermediate

Pull the crown out to position **II**, turn it backwards (**A**) until the desired date is displayed, and then push it back into the rest position **I**. During this operation, your watch will continue running, so the time will not need to be re-set. You will need to re-set the date manually after months with less than 31 days.

CARE AND MAINTENANCE

We would advise you to clean your watch regularly (except for the leather strap) using a soft cloth and lukewarm soapy water. After immersion in salt water, rinse the watch in fresh water and leave it to dry completely.

Ensure that you do not leave it in places subject to great temperature and humidity variations, in intense sunlight or near strong magnetic fields.

We recommend you have your watch inspected every 3 to 4 years by your approved dealer or agent. For an irreplaceable maintenance service and to ensure the warranty remains valid, always approach an approved dealer or agent.

Water resistance precautions

Your watch is water resistant but, following a shock, it may lose its water resistance without you realising. Water resistance must be checked up during its scheduled inspection.

Important

In the event of failure of your watch, entrust it only to an approved dealer or agent (see the warranty).