

BRiO

**DESCRIPTION: STEAM IRON
MODEL NO: BR1927SI**

**INSTRUCTION MANUAL - PLEASE SAVE THESE
INSTRUCTIONS AND READ FULLY BEFORE USE**


1YEAR WARRANTY

BRiO

TECHNICAL INFORMATION: MODEL BR1927SI

Please make sure that your house installation supply voltage corresponds to the voltage marked on the unit. Incorrect power supply may cause serious damage to this appliance.

Mains supply: 220-240V ~ 50 Hz – AC only
Rated Power: 1100-1400 Watt

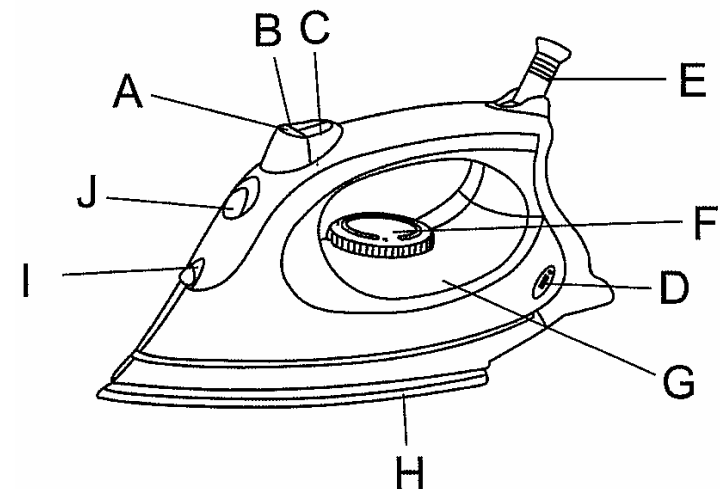

A. Steam / Non Steam button	E. Cord Support
B. Burst of Steam	F. Thermostat
C. Spray button	G. Water Tank
D. Indicator lamp	H. Soleplate
I. Spray	J. Water Filler

UNPACKING

Your BRIO appliance has been packaged carefully to ensure the product reaches you in good condition. Carefully unpack your BRIO appliance. Make sure you do not discard any packaging material until all parts of the appliance have been found (see below). Carefully wipe the exterior of the appliance to remove any dust that may have accumulated if necessary. Dry with a dry towel. Do not use harsh abrasive cleaners as these may damage any plastics. Refer cleaning section. Remove any label or sticker before use.
WARNING! Do not immerse in water or any other liquids.
WARNING! If the product has been damaged, dropped, has a malfunction in any way, or if the supply cord is damaged, immediately contact your retailer for replacement or repair.

PACKAGE CONTENTS

You should have the following. Do not discard any packaging until all accessories have been found. Each product is checked at production and there should be no missing components.

- ✓ Manual
- ✓ Steam Iron
- ✓ Measuring Cup



SAFETY NOTE

Before using this BRIO product ensure that it is working order, not damaged and that you have read all the important safety notes in this manual in full and fully understand how this appliance operates.



OPERATION GUIDE



Location

This appliance is for indoor use only.
This appliance is for household use only and not for commercial use. Always place the appliance on a level non-slippery stable surface. Always place the appliance on a heat resistant surface, as the appliance will reach high temperatures.
WARNING! Do not leave any appliance on while unattended.
WARNING! Always leave a gap of approximately 20 cm around the exterior of appliance when on. Never use near curtains, under cupboards or near walls, or other flammable material.
WARNING! Do not let the supply cord hang over the edge of any bench or tabletop. There may be a risk of scalding or other injury should young children pull the appliance from the bench or tabletop.



Power connection

This appliance must be connected to a 220-240 volt AC 50 Hz 3 pin earthed power outlet socket supply. Do not overload the supply socket, 10 amps (2300-2400 watts) is the maximum allowed on any one-socket outlet. Appliances such as refrigeration, computers or other critical appliances should not be used on circuits with other appliances connected; they should have dedicated supply circuits to lessen the risk of power loss. This appliance has a maximum power rating of 1400W
If using an extension cord, ensure that it is suitably rated for the load of this appliance.

Operation

CAUTION! The first time you use this iron, trial it on an old piece of cloth, to ensure that there are no impurities left inside the appliance from manufacture.

DRY IRON

Your Brio iron may be used as a dry iron.

Plug the power cord into a suitable mains outlet corresponding to the supply requirements of your appliance, 220-240V ~50Hz – AC only.

Select the desired temperature setting on the temperature control dial. The 'power-on' indicator will glow, indicating that heating cycle is on. When the appliance reaches the desired temperature, the indicator light will stop, and the iron is ready for use. This indicator light will cycle on and off as the appliance automatically maintains its operating temperature. Select "NON-STEAM" setting on the steam/non steam button (A)

STEAM IRON

Your Brio iron may be used as a steam iron.

Place the iron on an angle of approximately 45°. Carefully pour a small amount of water into the water tank to the maximum level.

WARNING! DO NOT OVERFILL. ALWAYS FILL BEFORE CONNECTING TO THE POWER SUPPLY.

Plug the power cord into a suitable mains outlet corresponding to the supply requirements of your appliance, 220-240V ~50Hz – AC only.

Select the desired temperature setting on the temperature control dial. The power on indicator will glow, indicating that heating cycle is on. When the appliance reaches the desired temperature, the indicator light will stop, and the iron is ready for use. This indicator light will cycle on and off as the appliance automatically maintains its operating temperature.

Select "Steam" position on the steam/non steam button (A)

Steaming will automatically commence. **NOTE:** When the iron is placed on its 'heel stand', steaming will automatically stop.

BURST OF STEAM

For a stronger short burst of steam simply press the "Burst of Steam" button (B).

SPRAY

To spray a fine film of water onto the clothing article simply press "Spray" button (I).

WARNING! Avoid contact with hot steam and hot surfaces. Use caution in order to avoid personal injury. Keep this appliance away from children and infirm persons.

WARNING! Always empty the iron completely after use. Do not let water sit in the iron.

NOTE: The first time you use your appliance; there may be a small amount of smoke and odour. This is normal. It is due to the heating of a protective coating, placed on the heating elements, to protect the heating elements during shipping.

WARNING! Do not leave this iron on while unattended. Always use the safety heel rest.

WARNING! DO NOT LET SUPPLY CORD HANG OVER THE EDGE OF ANY BENCH OR TABLETOP. THERE MAY BE A RISK OF SCALDING OR OTHER INJURY SHOULD YOUNG CHILDREN PULL THE APPLIANCE FROM THE BENCH OR TABLETOP.

**CLEANING AND CARING**

Always allow your appliance to cool completely before final cleaning.

WARNING! Never immerse your appliance in water or other liquids.

When cooled completely wipe the exterior of the appliance with a warm soft damp cloth. Dry with a dry towel.

Never leave water inside the water tank when not in use. Always remove all water from the water tank.

Do not use harsh abrasives as they may damage any plastic, non-stick surface or the exterior finish.

Store your appliance in its original box or in a dry cupboard. Keep this manual with the appliance for future reference.

**IMPORTANT SAFEGUARDS**

When using electrical appliances, basic safety precautions should always be followed including the following:

Carefully read these instructions before using your appliance.

VERY IMPORTANT: Do not immerse in water or other liquids or use near washbasins or sinks. Ensure that the appliance does not get wet (water splashes etc.) and do not use it with wet hands. Safely dispose of plastic bags and other components of the packaging. They may be potentially dangerous to children.

WARNING! Unplug from mains outlet when appliance is not in use, filling with water or cleaning.

An appliance dropped or damaged should not be used until examined by a service engineer.

Do not permit the mains lead to come in contact with hot objects.

If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

CAUTION: Keep out of reach of children. This appliance is not intended for use by young children or infirm persons. Young children must be supervised to ensure that they do not play with the appliance.

Use this appliance only for its intended use

This appliance is intended for household use only and not for commercial or industrial use.

The appliance should not be used outdoors, placed near a hot gas or electrical burner or placed in a heated oven.

WARNING! Do not let the cord hang over edge of table or counter. Risk of scalding.

WARNING! An appliance should never be left unattended when plugged in.

WARNING! Hot steam. Keep away from hot steam. Do not touch hot surfaces. The soleplate will reach extremely high temperatures.

WARNING! Always place the appliance on a heat resistant surface, as the soleplate will reach high temperatures. USE THE HEEL REST STAND.

WARNING! Ensure adequate ventilation; keep an open space of approximately 20 cm all around the appliance.

WARNING! Do not use the appliance near flammable materials such as curtains, or other combustible material.

If appliance is to be used by a third party, please supply the instruction manual with it.

No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling.

CAUTION

Do not attempt to service this appliance yourself. Refer servicing to qualified service personnel.



Guarantee Card

This product is guaranteed against faulty materials and workmanship for a period of 12 months from the date of purchase. The obligation to the purchaser under this warranty is limited to servicing the unit and replacing defective parts when the product is returned freight prepaid to the retailer. This warranty becomes void if the product has been tampered with, damaged by accident, damaged in any other way by improper use or has been purchased second hand. All production orders have quality inspections. In the unlikely event of a deficiency, please contact the retailer from whom this product was purchased.

WARRANTY FOR APPLIANCES USED COMMERCIALY LIMITED TO 90 DAYS

Description	STEAM IRON
Model No	BR1927SI
Purchase date	
Purchased from	

IMPORTANT!

Please retain this warranty card along with your purchase receipt. Please do not post to the retailer or importer. If service is required, both of these documents are to be returned with the appliance to your retailer, otherwise a fee may be charged.