

More HP resources

Resource	Contents
HP support For worldwide support, go to http://welcome.hp.com/country/us/en/wwcontact_us.html .	<ul style="list-style-type: none">Online chat with an HP technician.Email support.Find telephone numbers.Locate HP service center locations.Access <i>User Guide</i>.
Google support For Google support, go to http://www.google.com/mobile/android .	<ul style="list-style-type: none">Access Google online help and support.
Serial number, product number, model number, and IMEI number	<ul style="list-style-type: none">Label under the removable battery
Limited Warranty The warranty is located in the document folder of the voice tablet box.	<ul style="list-style-type: none">Warranty information about this voice tablet.

Specification

The voice tablet operates on DC power, which can be supplied by an AC or a DC power source. The AC power source must be rated at 100—240 V, 50/60 Hz, 0.3-1.0 A.

Note: The voice tablet can operate on DC power using an industry-standard micro-A or micro-B USB cable. The HP adapter included with your voice tablet is recommended for charging the voice tablet.

Temperature

Operating: Metric, 0°C to 40°C; U.S., 32°F to 104°F

Relative humidity (noncondensing)

Operating: 10% to 90%

Product description

This product is a lightweight tablet and features a thin-panel display, processor, RAM, integrated battery pack, and an external AC adapter. The printed *Quick Start* guide identifies the hardware components of your tablet. The AC adapter has a rating of 100-240 V ac, 50/60 Hz, 0.3-1.0 A. To access the latest user guide, go to <http://www.hp.com/support>, and select your country. Select **Drivers & Downloads**, and then follow the on-screen instructions.

Regulatory information









For regulatory identification purposes, your product is assigned a Regulatory Model Number, HSTNH-B19C. The RMN is located on the regulatory label under the removable battery.

This regulatory number should not be confused with the marketing name (if any, etc.) or product numbers (HP P/N, etc.).

The *Product Notices* document provides country- and region-specific non-wireless and wireless regulatory notices and compliance information for the product. Some notices may not apply to your product.

One or more integrated wireless devices may be installed. In some environments, the use of wireless devices may be restricted. Such restrictions may apply on-board airplanes, in hospitals, near explosives, in hazardous locations, and so on. If you are uncertain of the policy that applies to the use of this product, ask for authorization to use it before you turn it on.

Regulatory markings for your country or region may be located on a label under the removable battery or may be located in the *Product Notices* document.

- **WARNING:** To reduce the risk of electric shock or damage to the equipment, plug the AC adapter into an AC outlet that is easily accessible at all times.
- **WARNING:** To reduce potential safety issues, only the AC adapter provided with the product, a replacement AC adapter provided by HP, or an AC adapter purchased as an accessory from HP should be used with the product.
- **WARNING:** To reduce the possibility of heat-related injuries or of overheating the voice tablet, do not place the voice tablet directly on your lap. Do not allow a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The voice tablet and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950).
- **WARNING!**
Keep the battery away from children.
- **WARNING!** To reduce potential safety issues, only the battery provided with the voice tablet, a replacement battery provided by HP, or a compatible battery purchased as an accessory from HP should be used with the voice tablet.
- **WARNING:** To reduce the risk of fire or burns, do not disassemble, crush, or puncture; do not short external contacts; do not dispose of in fire or water.
- **WARNING:**  Listening to music at high volume levels and for extended durations can damage one's hearing. To reduce the risk of hearing damage, lower the volume to a safe, comfortable level and reduce the amount of time listening at high levels.
For your own safety, before using headsets or earphones, always reset the volume. Some headphones are louder than other headphones, even if the volume control setting is the same.
Changing the default audio or equalizer settings might lead to higher volume and should only be done with caution. For your own safety, headsets or earphones used with this product should comply with the headphone limits in EN 50332-2.
If the product includes a headset or earphones, this combination is in compliance to EN 50332-1.

© Copyright 2013 Hewlett-Packard Development Company, L.P. Google, Android, and Google Play are trademarks of Google Inc. The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical and editorial errors or omissions contained herein.

First Edition: November 2013

Printed in China
Imprimé en Chine
Stampato in Cina
Impreso en China
Impresso na China
中国印刷
중국에서 인쇄



752194-001


Quick Start



Note: Features may vary by model and country.

Setting up your voice tablet

- 1 If a SIM card is not preinstalled in the voice tablet, insert a SIM card (purchased separately) in the appropriate slot.

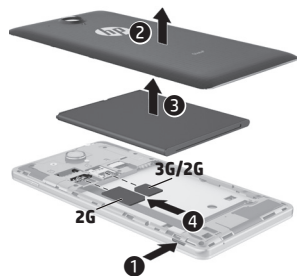



- 3 After charging the battery, press and hold the power button for about 2 seconds until the HP logo is displayed.

- 4 Follow the on-screen instructions to select a language, a wireless network, and a Google™ account.


NOTE: If you do not have a Google account, you can create one now.

Lock and unlock

Lock—Press the power button.

Unlock—Press the power button to turn on the voice tablet, then place your finger on the lock icon  and slide the icon to the unlock  position.

2

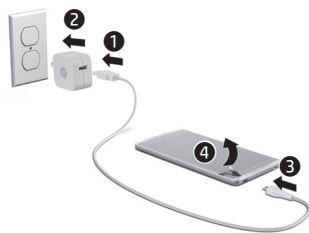






Turn off the voice tablet


Press and hold the power button, touch **Power off**, and then touch **OK**. If your voice tablet becomes unresponsive, press and hold the power button for several seconds to turn off the voice tablet.

Using your voice tablet


Home screen icons

-  **Phone**—Allows you to make a phone call.
-  **Contacts**—Allows you to store frequently called phone numbers.
-  **Search**—Allows you to type one or more keywords to search with Google.
-  **All apps**—Displays a list of all apps installed. To configure your preferences, touch , and then touch the **Settings** icon.

-  **Recent apps**—Opens a list of apps used recently.



-  **Home**—Opens or returns to the Home screen.

-  **Back**—Opens the previous screen.



-  **Voice search**—Allows you to speak one or more keywords to search with Google.

NOTE: The appearance of the Home screen may vary.

Make a call

Touch the  icon on the Home screen or the Apps screen, touch the keys to enter the phone number, and then touch the  icon.

— or —

Touch , touch a contact name, and then touch the  icon.



Answer a call

Slide the  icon outside the circle.


Send a call to voicemail

Slide the  icon outside the circle.

Return a recent call

 
Touch the , touch , and then touch a recent call to return it.

End a call

Touch the  icon at the bottom of the screen.


Use gestures

The following gestures can be used with your voice tablet:




Download apps from the Google Play™ Store

You must be connected to a wireless network and signed into a Google account before you can access the Play Store to download apps.

1. On the Home screen, touch , and then touch the **Play Store** app.
2. To search for an app, touch the **Search** icon, and then type a keyword, or touch a category.
3. Scroll down to see the available apps, and then touch an app to select it.
4. Touch **Install**, and the app begins to download and install.

Display apps, widgets, and notification

Apps—Touch , and then touch the **Apps** tab to see a list of all apps.

Widgets—Touch , and then touch the **Widgets** tab to see a list of all widgets.

Notification—Swipe down from the top of the screen to see your notifications.



Back up your data

HP strongly encourages that you periodically back up your personal data and media on your voice tablet to another computer, a dedicated storage device, or to the cloud using one of several commercially available solutions. For more information, see the *User Guide* on the HP Web site.

Change your voice tablet's view

The Auto-rotate feature allows you to change your voice tablet's view. For landscape view, hold the voice tablet horizontally. For portrait view, hold the voice tablet vertically.

NOTE: Some apps do not rotate automatically.

To change the Auto-rotate setting, touch **Settings**, touch **Display**, and then touch **Auto-rotate screen** to lock  or unlock  the screen rotation.

Insert a micro SD card

