


Features

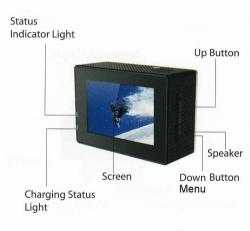



Waterproof Housing





Accessories



Waterproof Housing



Handle Bar/Pole Mount



Mount 1



Mount 2



Mount 3





Mount 5





Mount 7



Clip 1



Clip 2



Helmet Mounts



Bandages





Mount 4



Battery



Adhesives



Tethers



Metal Tether





Protective Backdoor



USB Cable



Charger



Lens Cloth

Mounting Your Camera

Attach your camera to helmets, gear and equipment.











1. Video - logo camera - or Photo - logo P



Record Video

2. Playback (Car, Video or JPEG)



3. Settings (Video Settings, Photo Settings, and System Settings)

To access to Video Settings, go to the Video mode and press the down button. To acess the Photo Settings, go to the Photo mode and press the down button.

a. Video Settings:





You can then choose different settings such as

MicroSD Card	1080p 30fps	720p 60fps
32 GB	240 mins	320 mins
16 GB	120 mins	160 mins
8 GB	60 mins	80 mins
4 GB	30 mins	40 mins

You can also choose Video Quality, Seamless mode, White Balance mode, Motion Detection - usefull in driver mode so you can save battery and memory space, and Date Stamp display.

b. Photo Settings:





You can select different resolutions up to 12 Mp, White Balance modes, Driver/Timer modes, Burst mode, Date Stamp Display.

c. System Settings:







- 1) Sounds. . . .
- 2) Power Save
- 3) Screen Save
- 4) Screen rotation
- 5) TV output
- 6) Date& Time
- 7) Language
- 8) TV out
- 9) Light Frequency
- 10) System
- 11) Format

Capturing Video + Photos

To capture the photos and videos, click on the button OK/Shutter modes.

Storage/MicroSD Cards

This camera is compatible with 4GB, 16GB, and 32GB capacity microSD, microSDHC, and microSDXC memory cards. You must use a microSD card with a Class 10 speed rating. We recommend using brand name memory cards for maximum reliability in high-vibration activities.

Charging the Battery

If recording is occurring when battery reaches 0%, the camera will save the file and power OFF.

To charge the battery:

- 1. Connect the camera to a computer or USB power supply.
- 2. The Charging Status Light remains ON while the battery is charging.
- 3. The Charging Status Light will turn OFF when the battery is fully charged.

Connecting to the iSmart DV App

The iSmart DV App lets you control your camera remotely using a smartphone or tablet. Features include full camera control, live preview, photo playback and sharing of select content and more

- 1. Download the iSmart DV App to your smartphone or tablet at the Apple App Store or Google Play.
- 2. Press the Power/Mode Button to power camera ON.
- 3. Press the OK/Shutter button for 3 seconds until you see "waiting for WiFi connection"
- 4. In your smartphone or tablet's Wi-Fi settings, connect to the network called "Action Cam" followed by a series of numbers.
- 5. Enter the password "1234567890".
- 6. Open the iSmart DV App on your smartphone or tablet.

Compatibility

The iSmart DV App is compatible with some smartphones and tablets listed below.



 


For Wi-Fi Edition

For Wi-Fi Edition

Remote control instructions (two remote optional)

- 1: the first key to shutdown
- 2: the second key to take pictures (press photo aut omatically switch to the picture mode)
- 3: the third key for camera (press the camera key switch to camera model)



- Sport DV after startup, the red power button on the remote control is a direct shutdown.
- MODE key on the remote control panel, click on the remote control sport DV photographs video switch.
- 3.) REC key on the remote remote control panel, click on the remote control sport DV photo graph video.



THANK YOU!

Congratulations on your new camera! This user manual will help you learn the basics of capturing life's most incredible moments!

Products in sales, the masses of users to provide a lot of valuable Suggestions, we will continue to update software and hardware for provide a perfect products, subject to our available products, if there are any discrepancies, please understanding!