

Thank you for purchasing JXD product!  
 For better enjoying it, we highly recommend you to read the following information before starting to use it.  
 Notice: please power off the device before connecting with USB cable, then turn it on. Otherwise it will influence the device's function. Other USB cables than the provided USB cable should not be used.

- AVOID leaving your device in high temperature, high humidity or dusty air-environment.
- AVOID leaving your device inside vehicles with closed windows in hot summer particularly.
- AVOID crushing your device with any hard objects, which may causes its surface scratches or some hardware damage. Don't disassemble your device individually.
- DON'T use your device when very dry environment to avoid static impacts.
- DON'T use your device when driving to avoid traffic accidents.
- MUST insert or pull out the TF card in power-off status to avoid unpredictable damage to your device caused by transient current.
- DON'T disconnect your device from computers while formatting system or download/upload files, which may cause program errors.
- DON'T leave your device near children.
- JXD is not responsible for the lost of your data in your device under any circumstances.
- JXD will not inform its customers for any modification of software of product introduction in advance, and JXD's interpretation shall prevail in the precondition of obeying the local laws.



JXD802

BASIC FUNCTIONS and PC ENVIRONMENT REQUIREMENT

Basic functions

- Video: ASF(MPEG-4), AVI(Divx,Xvid), 3GP and MP4
- Audio: MP3, WMA, WAV and AAC etc.
- Photo: JPEG format
- Built-in Microphone / Line-in recording.
- Video recording - AV in.
- TV output (NTSC/PAL)
- Calendar, Calculator and Game download.
- E-book and English-Chinese Dictionary
- Multi-languages
- TF card slot
- Built-in Li-ion battery.
- Built-in speaker.
- DC and DV
- FM

PC Environment Requirement


1. Minimum PC Environment requirement

- WIN98/ME/2000/XP, IBM compatible PC
- Pentium 166MHz or above
- USB port
- 32MB memory (64MB for WIN2000) or above
- 20MB hard disk space
- CD-ROM Drive
- Sound card
- Available for internet

2. Connect your device to PC

- Connect your device to your PC via USB cable (provided in the accessories) correctly.

BUTTON AND CONNECTOR

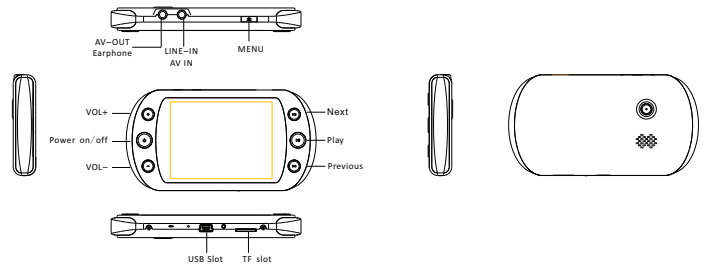

- **Power on** - Press Power button for long.
- **Power off** - Press Power button for 3 seconds .
- **Charge** - Connect USB cable till seeing instruction light is red. The usual charging time is around 5 hours, and JXD recommends you to charge your device in power off status.  
 Notice: The instruction light is on in green at charging status and off when battery is full, then you can tear off the USB cable to start using the device.

OPERATION DETAILS / VIDEO

- Power on your device;
- Press "+/-" or ">|/<<" to move the cursor and select "VIDEO", "AUDIO", "PHOTO", "CAMERA", "DV", "RECORD", "GAME", "LEARNING", "TOOL", "SETUP", "FM", "TV-IN", "LINE-IN" and "RESOURCE" and press ">|I" to confirm.

VIDEO

- Power on your device;
- Select VIDEO icon by ">|/<<" button, and press ">|I" to confirm;
- Press ">|/<<" to select video page up or page down, press "+/-" to select the target video, then press ">|I" to play;
- While playing video, press "+/-" to adjust the volume, press ">|/<<" to FF or FW, press ">|I" to play or pause, press "⏏" or ">|I" to display the play bar, press "🔊" to open/close the volume and press "🔊" to exit;
- Press "🔊" to pop up setting interface, press "+/-" button to select "Disp Mode", "Loop Mode", "File Protect", "Del File", "TV Output" and "Exit", press ">|I" to enter into submenu, press "<<" back to main menu. press "+/-" to move the optional up/down, press ">|I" to confirm and press "🔊" to cancel and exit.

OPERATION DETAILS / VIDEO

Main menu	Press "> I" to enter into submenu	Submenu
Disp Mode	Press "<<" back to main menu	List Thumbnail
Loop Mode		Current All Random
File Protect		Lock Unlock
Del File		Current All
TV Output		LCD Output NTSC Output PAL Output
Exit		

Press "+/-" to move up/down, press ">|I" to confirm and press "🔊" to exit.

Video output:

Connect your device and TV through the AV cable, select PAL or NTSC output mode for best signal, press "+/-" to select the system to match your TV then press ">|I" to confirm. Back to main menu, select the video you want to play and press ">|I" to play, then you will see the device screen turns black and your video playing on the TV. Press "🔊" to exit and back to video main menu.

AUDIO

- Power on your device.
- Select AUDIO icon by ">|/<<" button, and press ">|I" to confirm.
- Press ">|/<<" to select audio page up or page down, press "+/-" to select the target audio, then press ">|I" to play and again to pause.
- While playing video, press "+/-" to adjust the volume, press "🔊" to select among "Randomly", "Circularly" and "Orderly", press ">|/<<" to FF or FW, press ">|I" to play or pause and press "🔊" to exit.
- Press "🔊" to pop up setting interface, press "+/-" button to select "Loop Mode", "File Protect", "Del File", "EQ mode" and "Exit", press ">|I" to enter into submenu, press "<<" back to main menu, press "+/-" to move the optional up/down, press ">|I" to confirm and exit and press "🔊" to cancel and exit.

Main menu	Press "> I" to enter into submenu	Submenu
Loop Mode	Press "> I" back to main menu	Current All Random
File Protect		Lock Unlock
Del File		Current All
EQ mode		Normal dbb rock jazz pop live
Exit		


- Music playing interface  
 Press "🔊" to switch control, press "+/-" to move up/down, press ">|I" to confirm.  
 Notice:  
 ● Lyric displays synchronously while playing music: Download LRC format file (in the same name of your song), put it in the same folder of the music (e.g.:ABC.MP3 and ABC.LRC).  
 ● Always save music and lyric files in "/AUDIO" folder.

PHOTO

- Power on your device.
- Select PHOTO icon by ">|/<<" button, and press ">|I" to confirm.
- Press ">|/<<" to select picture page up or page down, press "+/-" to select the picture, and press ">|I" to display in full screen, while displaying pictures, press "+/-" to FF or FW.
- Press "🔊" to pop up setting interface, press "+/-" button to select "Disp Mode", "File Protect", "Del File", "TV Output" and "Exit", press ">|I" to enter into submenu, press "<<" back to main menu, press "+/-" to move the optional up/down, press ">|I" to confirm, and press "🔊" to cancel and exit.

Main menu	Press "> I" to enter into submenu	Submenu
Disp Mode	Press "> I" back to main menu	Thumbnail List
File Protect		Slide 1s 2s
Del File		Lock Unlock
TV Output		Current All
Exit		LCD Output NTSC Output PAL Output

- Power on your device.
- Select CAMERA icon by " >>|/|<< " button, and press " >|| " to confirm.
- Press "+/-" or ">>|/|<<" to adjust the focus, and press "📷" to take photo.
- Press ">||" to pop up setting interface, press "+/-" button to select "Mode", "Size", "Quality", "Effect", "Date Label" and "Exit", press ">>|" to enter into submenu, press "|<<" back to main menu, press "+/-" to move the optional up/down, press ">||" to confirm, and press "🏠" to cancel and exit.

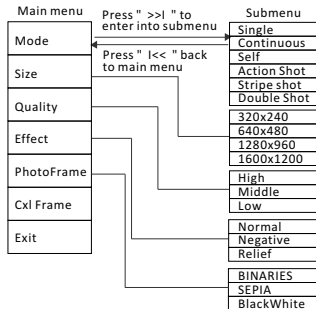


8

- Power on your device.
- Select DV icon by " >>|/|<< " button, and press " >|| " to confirm.
- Press "+/-" to adjust the focus; Press "📷" to start, and press "📷" again to stop and save.
- Press ">||" to pop up setting interface, press "+/-" button to select "Video Size", "Quality", "Effect" and "Exit", press ">>|" to enter into submenu, press "|<<" back to main menu, press "+/-" to move the optional up/down, press ">||" to confirm and press "🏠" to cancel and exit.
- Find the video files in the "VIDEO" folder.

## RECORD


- Power on your device.
- Select RECORD icon by " >>|/|<< " button, and press " >|| " to confirm.
- Press "+/-" to switch record mode: MIC, Line in (need to buy line-in cable separately). Press ">||" to start record; And press it again to stop/continue; Press "🏠" to save and press again to exit.
- You can find record files in the "AUDIO" folder.

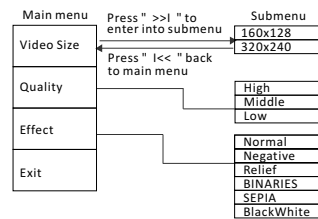

9

## GAME

- Power on your device.
- Select GAME icon by " >>|/|<< " button, and press " >|| " to confirm.
- Press "+/-" or ">>|/|<<" to select the game, and press " >|| " to start.
- While playing games, press "+/-", ">>|/|<<" and "📷" to operate; Press ">||" to select "Play" or "Pause", press "🏠" to exit.
- Press "📷" to pop up setting interface, press "+/-" to select "File Protect", "Del File", "TV Output" and "EXIT", press ">>|" to enter into submenu, press "|<<" back to main menu, press "+/-" to move the optional up/down, press ">||" to confirm and press "🏠" to cancel and exit.
- You can find and add the game files in the "GAME" folder.

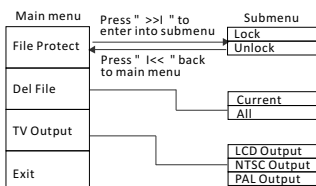



## LEARNING

## Dictionary

- Power on your device.
- Select LEARNING icon by " >>|/|<< " button, and press " >|| " to confirm.
- Press "+/-" or ">>|/|<<" to move the cursor and select DICTIONARY, press ">||" to start.
- While using the dictionary, press "+/-" or ">>|/|<<" to move the cursor, press " >|| " to confirm and spell your words, long press "📷" to adjust the cursor area and press "🏠" to exit.

10

- Power on your device;
- Select LEARNING icon by " >>|/|<< " button, and press " >|| " to confirm.
- Press "+/-" or ">>|/|<<" to move the cursor and select E-BOOK, press " >|| " to start.
- Press "📷" to pop up setting interface; Press "+/-" button to select "File Protect", "Del File" and "EXIT"; Press ">>|" to enter into submenu, press "|<<" back to main menu; Press "+/-" to move the optional up/down, press ">||" to confirm and press "🏠" to cancel and exit.

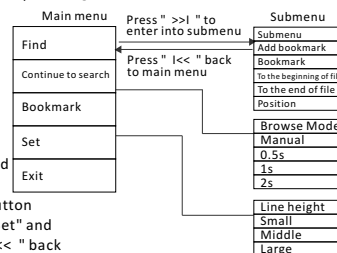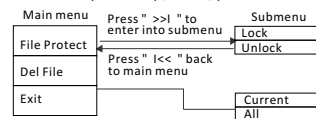

- While using E-BOOK, press "+/-" to select the file and press " >|| " to start, press "+/-" to move up/down and press ">>|/|<<" to turn page.
- Press "📷" to pop up setting interface, press "+/-" button to select "Find", "Continue to search", "Bookmark", "Set" and "EXIT", press ">>|" to enter into submenu, press "|<<" back to main menu, press "+/-" to move the optional up/down, press ">||" to confirm and press "🏠" to cancel and exit.
- You can find and add the E-book file in the "EBOOK" folder.

11

- Power on your device.
- Select TOOL icon by " >>|/|<< " button, and press " >|| " to confirm.
- Press "+/-" or ">>|/|<<" to move the cursor and select "Calendar", "Calc.", "Notepad", "Memory", and "Version", press ">||" to confirm and press "🏠" to exit.

## Calendar

- While using Calendar, long press "📷" to select the cursor area on month, year and date, press " >|| " to confirm, press "+/-" or ">>|/|<<" to move and select the date, month and year, press ">||" to confirm and press "🏠" to exit.

## Calculator (Calc.)

- While using Calculator, press "+/-" or ">>|/|<<" to move and select, press " >|| " to confirm. Press "🏠" to exit.

## Notepad

- NOTEPAD equals to E-BOOK function.

## Memory Management

- While using Memory Management, press "+/-" to move and select "Work space" and "Format"; Press ">>|/|<<" to move and select "Flash" and "SD", press ">||" to confirm and press "🏠" to exit;
- NOTICE: before format, please make copy of your data.

## Version

- While enter into Version, the screen will display the current version of your date.

12

- Power on your device.
- Select SETUP icon by " >>|/|<< " button, and press " >|| " to confirm.
- Press "+/-" or ">>|/|<<" to move the cursor and select "Language", "Default", "Sound", "AutoOff", and "Power mode", press ">||" to confirm and press "🏠" to cancel and exit.

## Language

- Open "Language" setting, press "+/-" or ">>|/|<<" to move the cursor and select "English", "Chinese", "Trad.Chinese", "Japanese", etc.(Total 21 kinds of language), press ">||" to confirm and press "🏠" to cancel and exit.

- NOTICE: need to reboot the device to effect.

## Default

- Open "Default" setting, press "+/-" or ">>|/|<<" to move the cursor and select YES or NO, press ">||" to confirm and press "🏠" to cancel and exit.

- NOTICE: all parameters will be the default state of factory set, including the opening logo.

## Sound

- Open "Sound" setting, press "+/-" or ">>|/|<<" to move the cursor and select ON or OFF, press ">||" to confirm and press "🏠" to cancel and exit.

## Autooff

- Open "Autooff" setting, press "+/-" or ">>|/|<<" to move the cursor and select "Never", "3 min", "15 min" or "60 min", press ">||" to confirm and press "🏠" to cancel and exit.

## Power Mode

- Open "Power Mode" setting, press "+/-" or ">>|/|<<" to move the cursor and select "Never", "30s", "60s" or "100s", press ">||" to confirm and press "🏠" to cancel and exit.

- NITICE: Once without any operation (standing-by state), the device will turn off the screen at setting time.

13

## FM

- Power on your device and connect the earphone as analogue.
- Select FM icon by " >>|/|<< " button, and press " >|| " to confirm, press "+/-" to adjust the volume, press ">>|/|<<" to choose FM channel, Press "📷" to choose "Search", "Auto seek" and "ManualSch"(manual search), press ">||" to confirm and start and press "🏠" to cancel and exit.

## TV-IN

- Power on your device and connect your device with AV cable after enter into stand-by state.
- Select TV IN icon by " >>|/|<< " button, and press " >|| " to confirm.
- Press ">>|/|<<" to select the "TV-IN" function, press " >|| " to confirm.
- Press ">||" to start record, press ">||" to save the record and enter the preparing state of next record, press "🏠" to save and exit.

## LINE-IN

- Power on your device and connect your device with Audio cable after enter into stand-by state.
- Select LINE IN icon by " >>|/|<< " button, and press " >|| " to confirm.
- Press ">>|/|<<" to select the "LINE-IN" function, press ">||" to confirm.

## RESOURCE

- Power on your device.
- Select RESOURCE icon by " >>|/|<< " button, and press " >|| " to confirm.
- Press "+/-" to move up/down, press ">>|/|<<" to turn page press " >|| " to view and press "🏠" to cancel and exit.

14

## TROUBLE SHOOTING

## Can't power on

- Maybe no power. Connect your device with computer by USB cable. Then the device will open.
- If disorderly system leads to halted the device, press the RESET button.
- If the system of your device damaged, update the program.

## Auto power off after power on

- Not enough power, auto power off. Connect your device with computer to charge.
- The auto power off setting too short. The device will power off without any operation during setting time.

## Can't find saving files

- Files have not been transferred fully.
- Files should be transferred into related folders in flash of the device or TF card (ex. Music files to MUSIC folder).
- The default work space is Flash, need to change the work space to TF card for the files in (Setting: TOOL->Memory->work space).
- All the files can be found in the RESOURCE function.

## ACCESSORIES

1x User Menu 1x Stereo earphone 1x USB cable 1x AV cable 1x Charger

## Product specification

Memory	2GB	S/N ratio	90db
Battery	Li-ion battery	Earphone power	5mW+5mW
Screen	2.8inch TFT	Frequency	20Hz~20KHz
Size (LxWxH)	109*58*13mm	Audio rate	Mp3 8kbps up to 320kbps WMA 54kbps up to 192kbps
Camera	0.3M Pixel	USB	USB2.0 (High speed)