



N300 WIFI GIGABIT ROUTER WITH VOICE


NF5 - QUICK START GUIDE

THANKS FOR PURCHASING NETCOMM WIRELESS FROM BOOM BROADBAND


This quick start guide is designed to get you up and running quickly with your new router. More advanced set up instructions can be found in the user manual which can be downloaded from www.netcommwireless.com

SET UP YOUR ROUTER

 1. Take the supplied **power adapter** and attach it to the Power socket on the rear of the router and connect the other end of it to a wall plug power source.

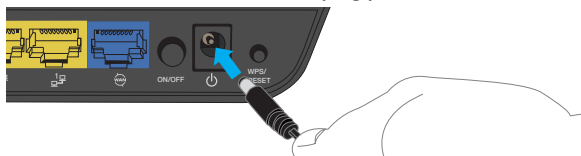


 2. For use with a fixed line connection, attach the **Ethernet cable** provided to the blue **WAN** port on the back of the router. Attach the other end to your NBN CONNECTION BOX. Usually you will need to connect to the UniDI port.

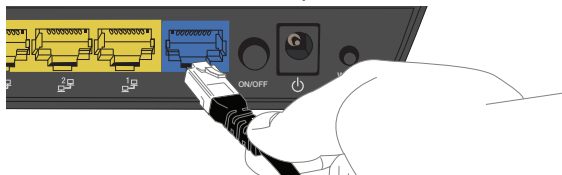

CONNECTING VIA AN ETHERNET CABLE

 1. Connect the **Ethernet cable** provided to one of the yellow **LAN** ports on the back of the NF5 router.

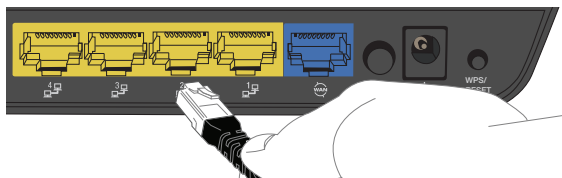

2. Connect the other end of the yellow **Ethernet cable** to your computer.

NOTE: There is only one Ethernet cable supplied. If you require more than one Ethernet cable, any standard Ethernet cable is suitable.

CONNECTING THE ROUTER TO THE INTERNET

1. After your router is powered up and connected via ethernet, open a Web browser and type **http://192.168.20.1** into the address bar and press **Enter**.
2. Enter **admin** into both the username and password fields and click **Login**.The **First time setup** wizard is displayed.
3. Click **Yes, Let's get started with the wizard** to configure your router.
4. Select **WAN** for the Interface setting.
5. Select the Ethernet WAN type PPPoE (PPP over Ethernet) and enter the details supplied in your activation e-mail.
These usually look like this:

Username

yourname@boombroadband.com.au

Password

a1b2c3d4e5 *(This is the default password)*

Step 1 of 5

WAN Interfaces:

WAN type:

Username

Password

☐ Enable Automatic 3G backup

Country

Service Provider

Network Name (APN)

Username

Password

Remote Host for keep alive

PIN

Confirm PIN

6. After entering your details, click **Next**.
7. Choose to enable or disable your wireless network, show / hide your wireless network name (SSID Broadcast) or change the wireless network name.After making any desired changes, click **Next**.

Step 2 of 5

WiFi Setup

Your router is already setup securely with a password and network name that is unique to every device. However you can choose alternative settings for these features if desired. From this page, you can configure your WiFi network name (SSID), and whether or not this name should be broadcast to all WiFi enabled devices. You can also change the WiFi password or even disable WiFi functionality entirely if desired.

Wireless (WiFi)

☒ On ☐ Off

SSID Broadcast

☒ Enable ☐ Disable

WiFi Network Name(Max 32 characters)

8. Select the wireless security type and key you would like to use and click **Next**.To use the default settings, just click **Next**.

Step 3 of 5

 
Router Security

A WiFi Security Key is already set-up with your Router, however you can change that key here if desired. You can also change the security type below. To connect to the Router via WiFi you will need to enter the Security Key into your device.

Security Key Type


Security Key (Minimum of 8 characters)

9. If you would like change the default username and password to log into the web based user interface. Confirm the new password by entering it a second time in the Retype Password field and click **Next**. To use the default settings, just click **Next**.

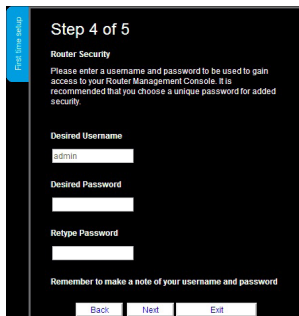

Note: We highly recommend that you change the username and password used to gain access to the Router Management Console for added security.

 10. Review your settings and if they are correct click **Finish**. If you would like to make any changes, click **Back** to reach the required page and adjust accordingly.

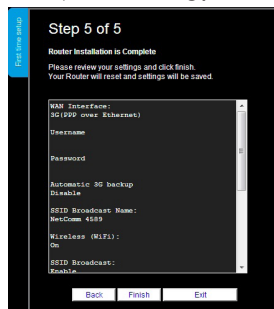

11. The NetComm Wireless Router will attempt to connect using the details you have entered. This can take up to **2 minutes**. When a connection is successfully made, the Internet Connection LED on the front of the unit will be lit.



CONNECTING VIA WIFI

1. Ensure WiFi is enabled on your device (e.g. computer/smartphone/gaming console).
2. Scan for wireless networks in your area and connect to the network name that matches the Wireless network name found on the **Wireless Security Card** (included in the box).
3. When prompted for your wireless security settings, enter the **Wireless security key** listed on your **Wireless Security Card**.