

# **User's Manual**

## TOOL'S LOGO




SW : software

HW : hardware


SN : tool serial number

Press [YES]->

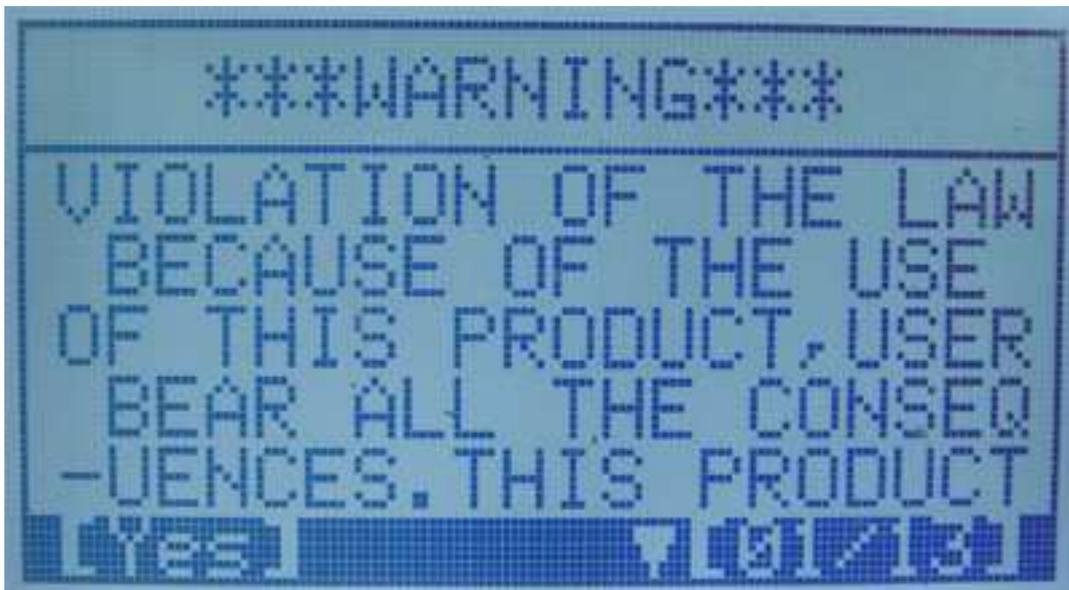

Statement of this product.

Press [YES] enter function menu->

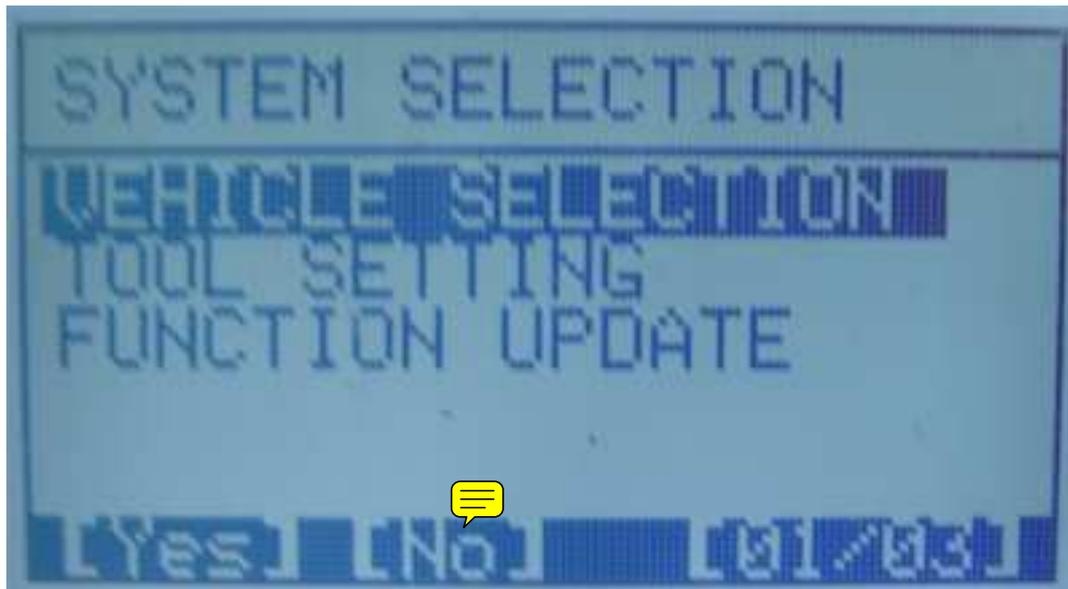

**KEYBOARD REFERENCE:**

[YES] - Enter the menu;

[NO] - Go back;

[▲] - Select cursor up;

[▼] - Select cursor down;

[◀] - Select cursor left;

[▶] - Select cursor right;

## 1. ENTER VEHICLE SELECTION MENU



It list by the vehicle name, and you can update the functions.

## 2. ENTER TOOL SETTING MENU



**CONTRAST ADJUST :** ADJUST THE LCD CONTRAST;

**VERSION :** VIEW THE TOOL'S SW HW AND SN INFO;

### 3. ENTER FUNCTION UPDATE FUNCTION




# EXAMPLE


VEHICLE SELECTION -> CHERY :



SPECIAL FUNCTIONS

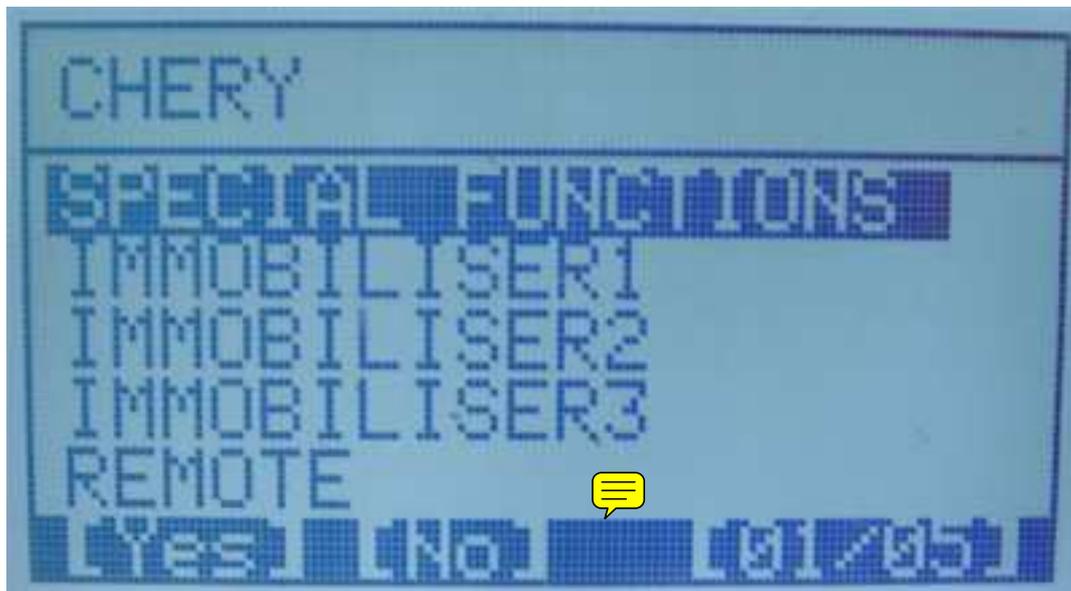

Select SPECIAL FUNCTIONS->

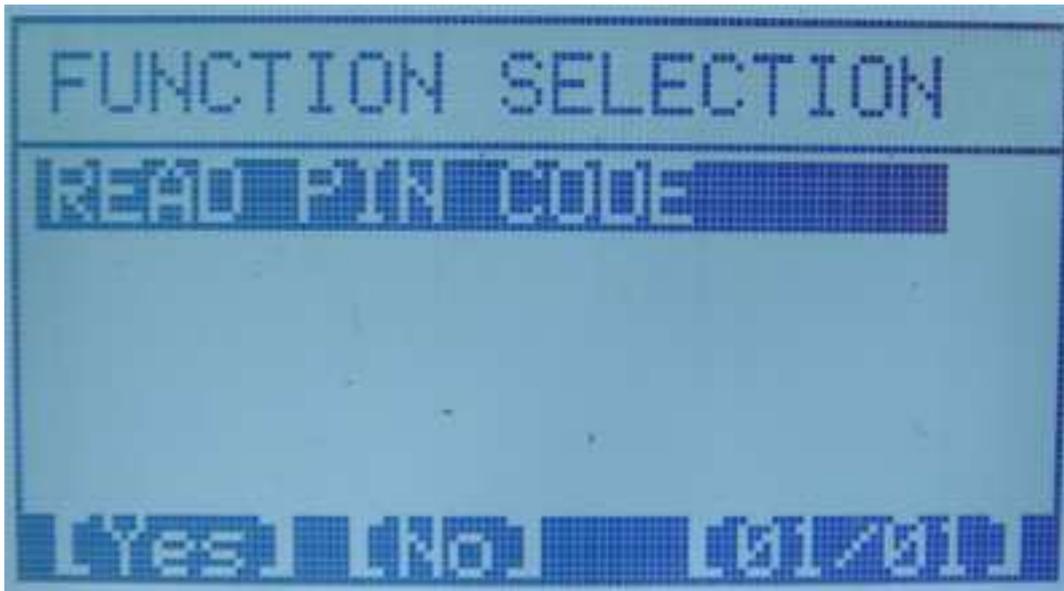

Press [YES] continue->



Choose OBDII socket, and switch ignition on, Press [YES] continue->



If communication failed, tool will show->



Press [NO] go back;

Else communication OK,tool will enter the function of next step->




Because of CHERY PIN CODE no is the only one,Please recode the PIN CODE and try it.



Press [NO] go back;


## IMMOBILISER1

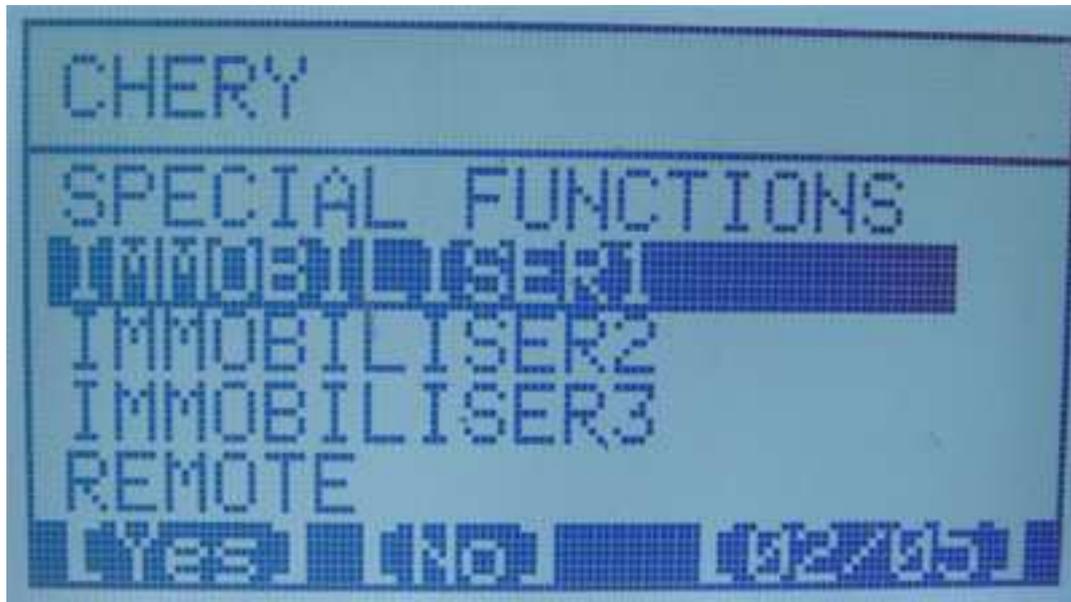

Press [YES]->



Press [YES]->

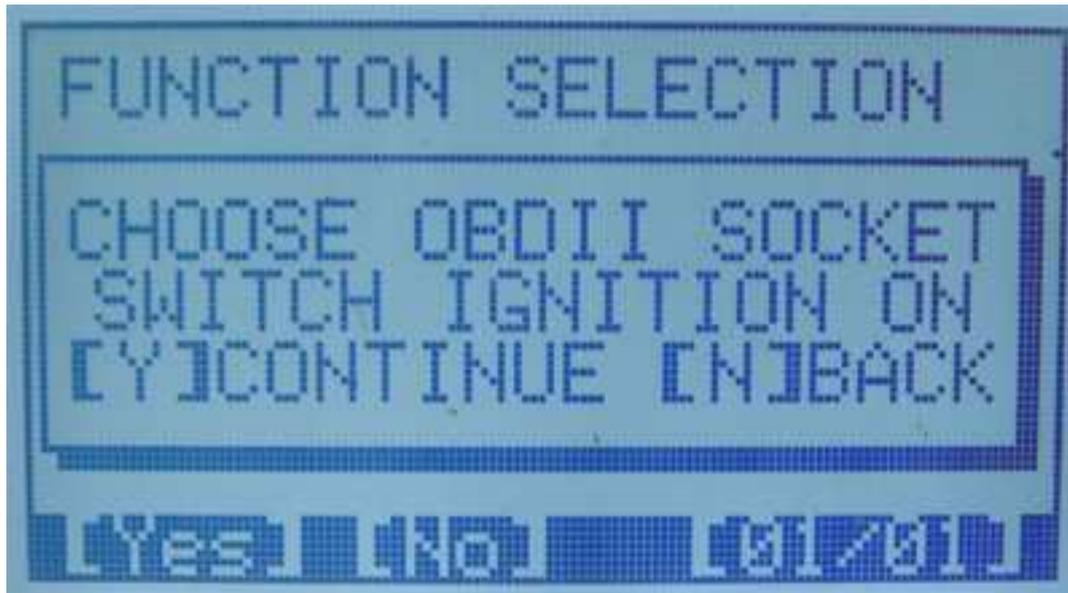

Choose OBDII socket, and switch ignition on, Press [YES] continue



If communication failed, tool will show




Press [NO] go back

Else communication OK,tool will enter the function of next step



Press [YES] input PINCODE, press [NO],no the program functions.

If press [NO].

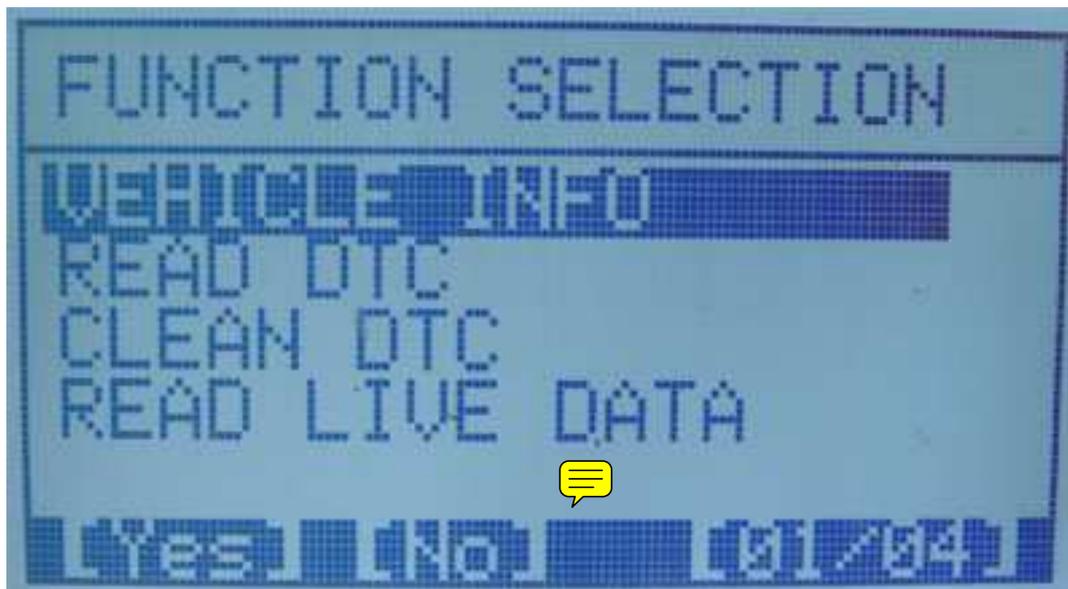

If press [YES]




Use the [UP] [DOWN] change number

[LEFT] [RIGHT] move the **cursor**

Input the PIN CODE,press [YES]



**If PIN CODE ERROR!**

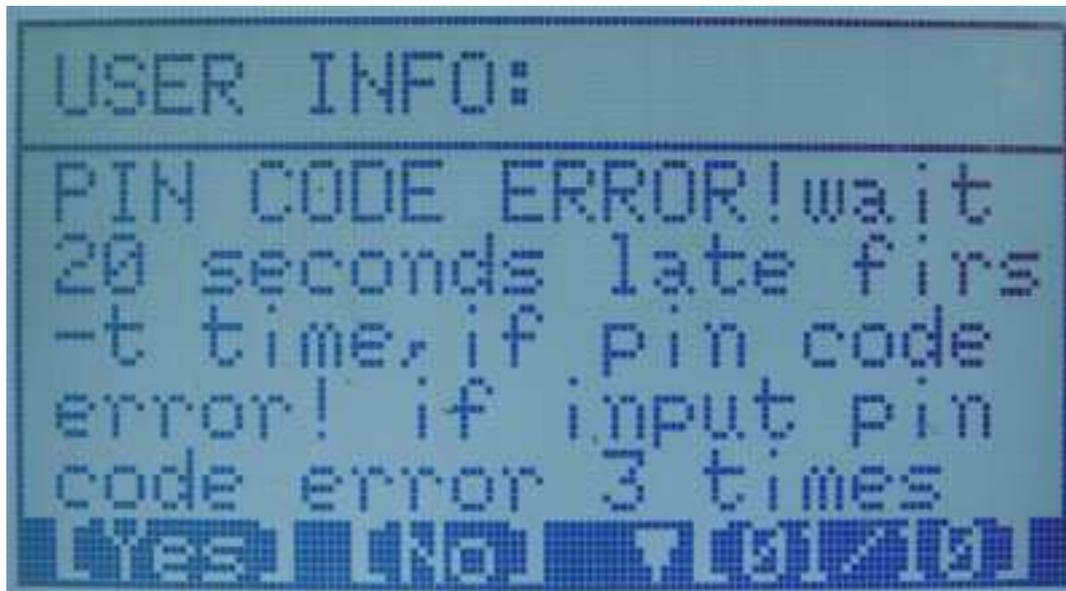

Press [NO], the program function is **invalid**.



PIN CODE IS CORRECT,the program function is **valid**.




Press [YES] enter program function



If you want to delete key




Press [YES]

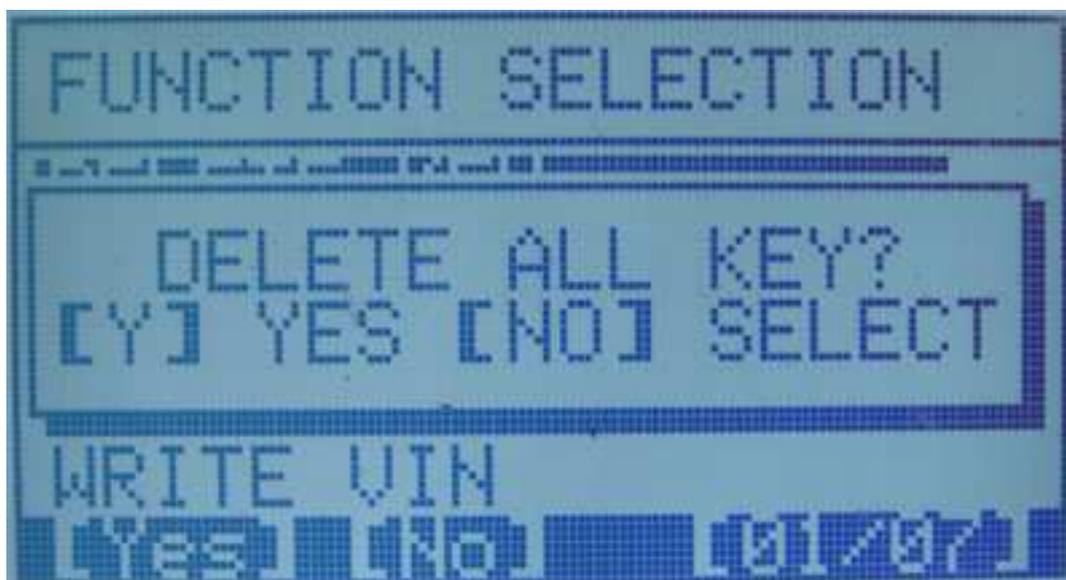


[YES] DELETE ALL KEY

[NO] SELECT KEY ADDRESS DELETE

If press[NO]

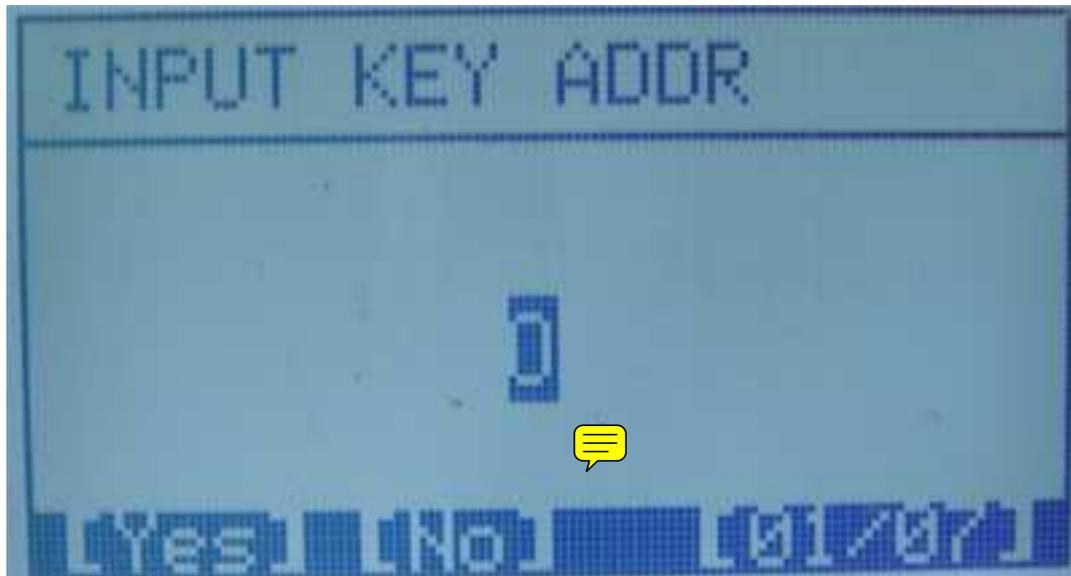

Input the the address,and press [YES]

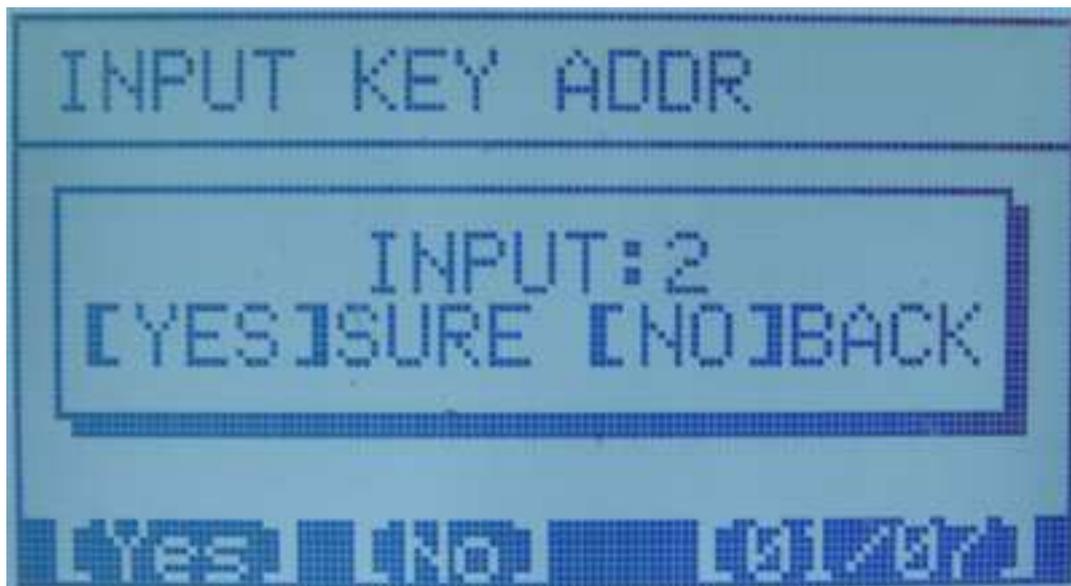


Press [YES]



Delete key finish.

IF YOU WANT TO MATCH KEY

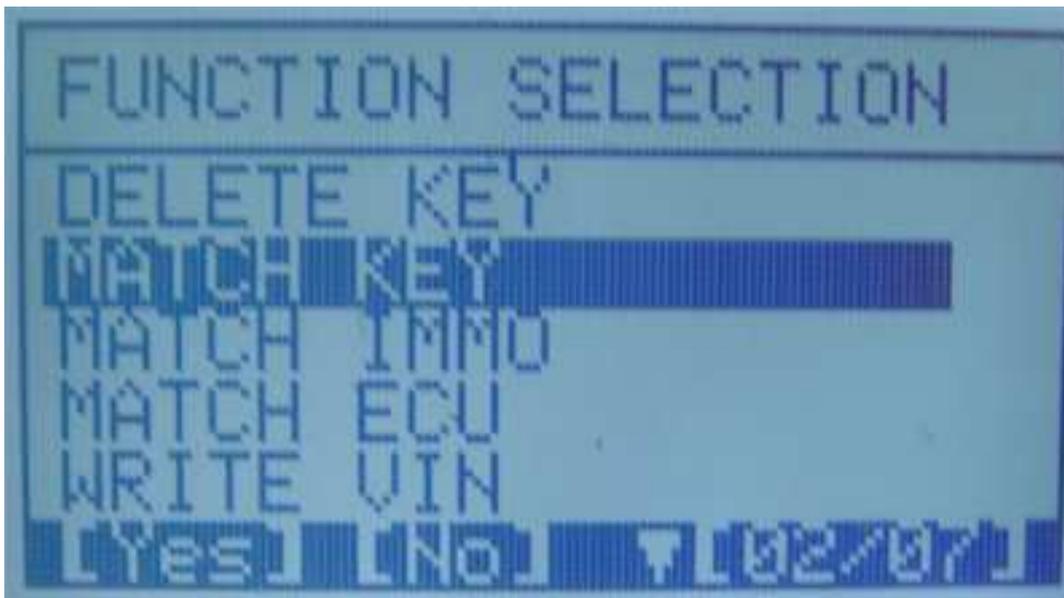

Select MATCH KEY function, press [YES]

MATCH FAIL




**MATCH OK**




**REMOTE**



Press [YES]

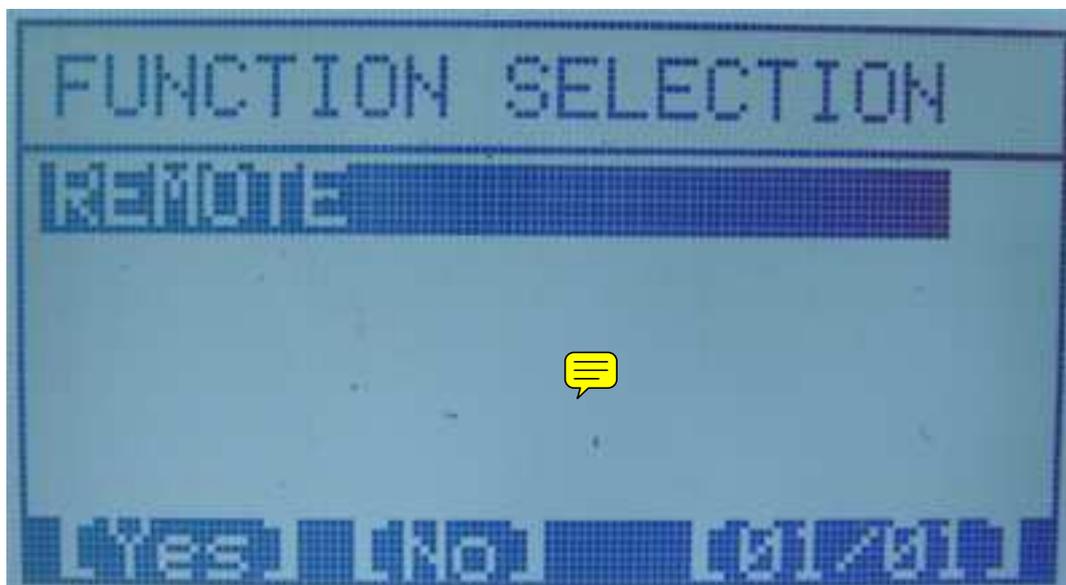


Press [YES]

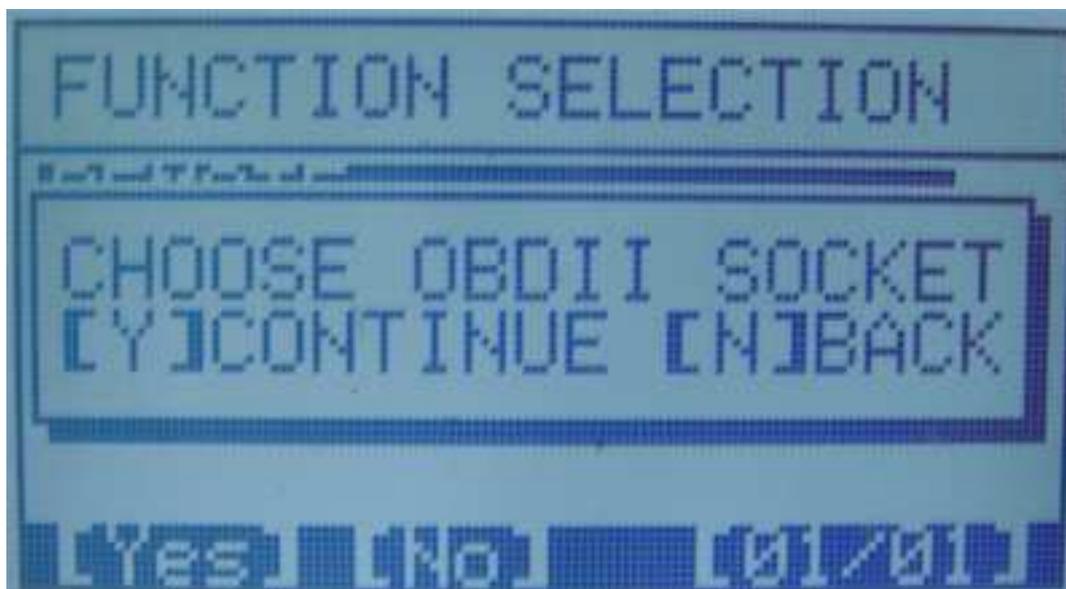

Choose OBDII socket ,don't switch the ignition on,Press [YES]



Press [YES]

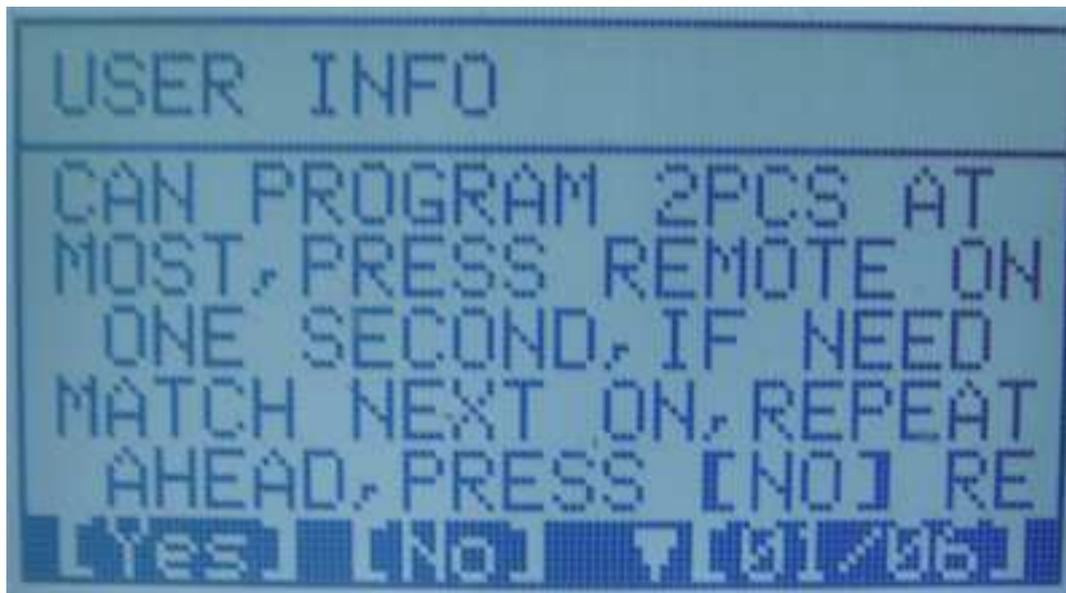

Do flow the user info.and press [NO],Match ok!

THE OTHER CARS PROGRAM THE SAME AS BY THIS WAY .