www.philips.com/welcome



EN User manual

DA Brugervejledning

 $\mathsf{DE} \ \ \textbf{Benutzerhandbuch}$

ES Manual del usuario

FR Mode d'emploi

NL Gebruiksaanwijzing

SV Användarhandbok

PHILIPS

Contents

1	Important Safety	4
	Notice	5
2	Your DVD Home Theater System	8
	Introduction	8
	What's in the box	8
	Overview of the main unit	9
	Overview of the main unit	10
	Overview of the remote control	11
3	Connect	13
	Place the unit	13
	Attach speakers to the main unit	13
	ConnectTV	13
	Connect audio cables	15
	Connect FM antenna	16
	Connect power	16
4	Get started	17
	Prepare the remote control	17
	Switch to standby mode	17
	Find the correct viewing channel	17
	Select the correct TV system	18
	Select menu display language	18
	Turn on Progressive Scan	18
<u> </u>	Play	 19
	Play discs	19
	Play from USB	20
	Play DivX video	20
	Play MP3/WMA/picture files	20
	Play control	21
	Play options	21
	Picture view options	22
6	Adjust settings	23
	General setup	23
	Audio setup	24
	Video setup	24
	Preference setup	25

7	Tune to FM radio stations Program radio stations automatically Program radio stations manually Tune to a preset radio station	27 27 27 27
8	Adjust volume level and sound effect	t
	Adjust volume level Select a sound effect Mute sound	28 28 28 28
9	Connect other devices Listen to an audio player	29 29
10	Product information Specifications Supported disc formats USB playability information	30 30 31 31
11	Troubleshooting	32
12	Glossary	34

1 Important

Safety

Know these safety symbols







This 'bolt of lightning' indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

The 'exclamation point' calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

WARNING: To reduce the risk of fire or electric shock, this apparatus should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on this apparatus.

CAUTION: To prevent electric shock, match wide blade of plug to wide slot, fully insert.

Important Safety Instructions

- (1) Read these instructions.
- (2) Keep these instructions.
- (3) Heed all warnings.
- (4) Follow all instructions.
- 5 Do not use this apparatus near water.
- 6 Clean only with dry cloth.

- 7 Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9 Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- (10) Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- (12) Unplug this apparatus during lightning storms or when unused for long periods of time.
- (13) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 14) Battery usage CAUTION To prevent battery leakage which may result in bodily injury, property damage, or damage to the unit:
 - Install all batteries correctly, + and as marked on the unit.

- Do not mix batteries (old and new or carbon and alkaline, etc.).
- Remove batteries when the unit is not used for a long time.
- (15) Apparatus shall not be exposed to dripping or splashing.
- (16) Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).
- 17) This product may contain lead and mercury. Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance: www.eiae.org.



Warning

 Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

Safety-Important notes for users in the U.K.

Mains plug

This apparatus is fitted with an approved 13 Amp plug. To change a fuse in this type of plug proceed as follows:

- (1) Remove fuse cover and fuse.
- 2 Fix new fuse which should be a BS1362 5 Amp, A.S.T.A. or BSI approved type.
- (3) Refit the fuse cover.

If the fitted plug is not suitable for your socket outlets, it should be cut off and an appropriate plug fitted in its place.

If the mains plug contains a fuse, this should have a value of 5 Amp. If a plug without a fuse is used, the fuse at the distribution board should not be greater than 5 Amp.

Note: The severed plug must be disposed off to avoid a possible shock hazard should it be inserted into a 13 Amp socket elsewhere.

How to connect a plug

The wires in the mains lead are coloured with the following code: blue = neutral (N), brown = live (L).

As these colours may not correspond with the colour markings identifying the terminals in your plug, proceed as follows:

- Connect the blue wire to the terminal marked N or coloured black.
- Connect the brown wire to the terminal marked L or coloured red.
- Do not connect either wire to the earth terminal in the plug, marked E (or e) or coloured green (or green and yellow).

Before replacing the plug cover, make certain that the cord grip is clamped over the sheath of the lead - not simply over the two wires.

Copyright in the U.K.

Recording and playback of material may require consent. see Copyright Act 1956 and The performer's Protection Acts 1958 to 1972.

Norge

Typeskilt finnes på apparatens bakside.

Observer: Nettbryteren er sekundert innkoplet. Den innebygde netdelen er derfor ikke fraktoplet nettet så lenge apparatet er tilsluttet nettkontakten.

For å redusere faren for brann eller elektrisk støt, skal apparatet, ikke utsettes for regn eller fuktighet.

Notice



This product complies with the radio interference requirements of the European Community.

This product complies with the requirements of the following directives and guidelines: 2004/108/EC + 2006/95/EC

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.

Recycling



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused. When you see the crossed-out wheel bin symbol attached to a product, it means the product is covered by the European Directive 2002/96/EC:



Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products. The correct disposal of your old product helps prevent potentially negative consequences on the environment and human health.

Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed of with normal household waste. When you see the crossed-out wheel bin symbol with the chemical symbol 'Pb', it means that the batteries comply with the requirement set by the directive for lead:



Please inform yourself about the local rules on separate collection of batteries. The correct disposal of batteries helps prevent potentially negative consequences on the environment and human health.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box),

polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.



The making of unauthorized copies of copyprotected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offence. This equipment should not be used for such purposes.



HDMI, and HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI licensing LLC.



Manufactured under license under U.S. Patent #'s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,487,535 & other U.S. and worldwide patents issued & pending. DTS and DTS Digital Surround are registered trademarks and the DTS logos and Symbol are trademarks of DTS, Inc. © 1996-2007 DTS, Inc. All Rights Reserved.



The USB-IF Logos are trademarks of Universal Serial Bus Implementers Forum, inc.



Manufactured under license from Dolby Laboratories. Dolby, Pro Logic and the double-D symbol are trademarks of Dolby Laboratories.



Manufactured under license from Dolby Laboratories.

Dolby and the double-D symbol are trademarks of Dolby Laboratories.



Offical DivX® Certified product. Plays all versions of DivX® video (including DivX® 6) with standard playback of DivX® media files.

This apparatus includes this label:



Your DVD Home Theater System

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

This DVD Home Theater System is designed to complement your home perfectly. Enjoy the DVD Home Theater System with multi-channel surround sound and excellent picture quality.

Introduction

With this unit, you can:

- watch video from DVD/VCD/SVCD or **USB** devices
- enjoy audio from discs or USB devices
- view pictures from discs or USB devices
- listen to FM radio
- Control EasyLink-compliant devices through a single remote control
- Sync audio output with the video output You can enrich sound output with these sound effects:
- Surround sound exprience
- Preset sound modes

The unit supports these media/disc formats:

























You can play DVD discs with the following region codes:


DVD region code	Countries
	Europe

What's in the box

Check and identify the contents of your package:

- Main unit
- Speakers (x 2)
- Digital subwoofer
- Power cord for the main unit
- Remote control (with batteries)
- FM wire antenna
- Composite AV cable (black)
- Power cord
- SCART adaptor

Overview of the main unit

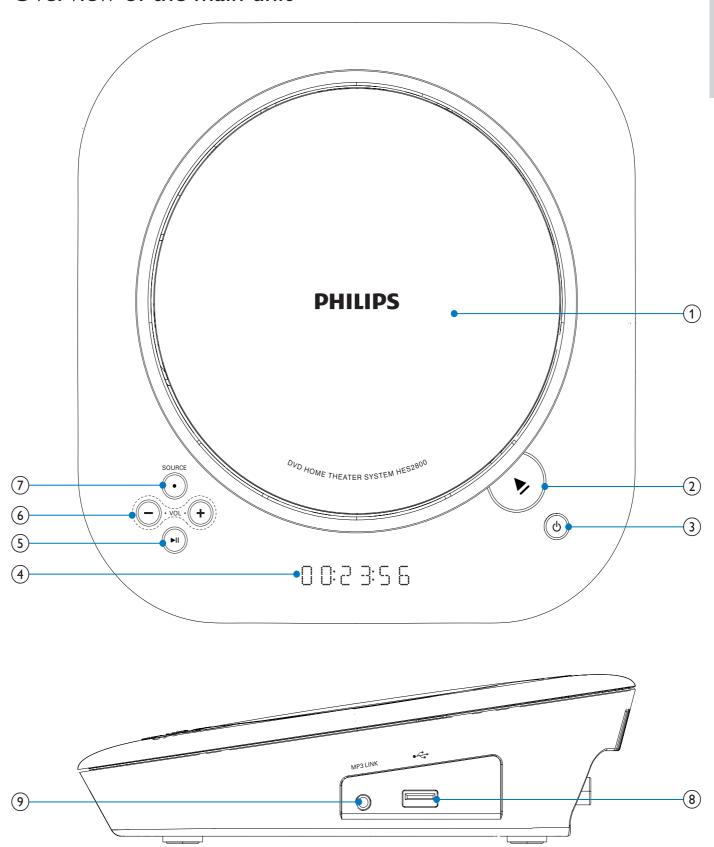


Caution


- Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.
- 1 Disc compartment
- (2) ▲
 - Open the disc compartment.
- (3) (b)
 - Turn on the apparatus, switch to standby mode, or Eco Power standby mode.
- (4) Display panel
 - Display current status.
- (5) **▶II**
 - Start or pause play.
- (6) VOL -/+
 - Adjust volume.
- (7) SOURCE
 - Select a source.
- (8)
 - USB socket.
- (9) MP3 LINK
 - Jack for an external audio device.

- 1 FR (4Ω)
 - socket for right speaker (red).
- ② FL (4 Ω)
 - socket for left speaker (white).
- 3 SW (8 Ω)
 - socket for subwoofer (black).
- (4) DC IN
 - Power supply socket.
- (5) HDMI
 - socket for HDMI cable (not supplied).
- (6) AV OUT
 - Audio/video output socket.
- 7 Component
 - socket for composite video cable (not supplied).
- (8) AUX
 - socket for audio cable (not supplied).
- (9) FMANT
 - FM antenna socket.

Overview of the main unit

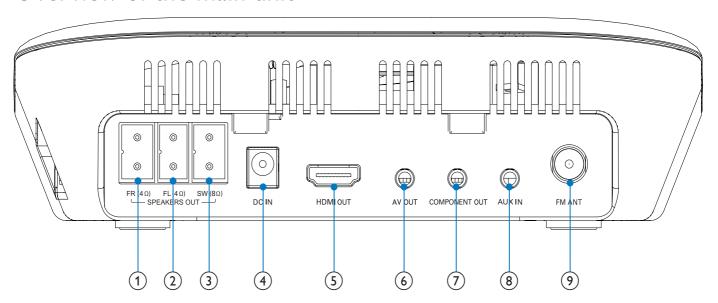

Overview of the remote control

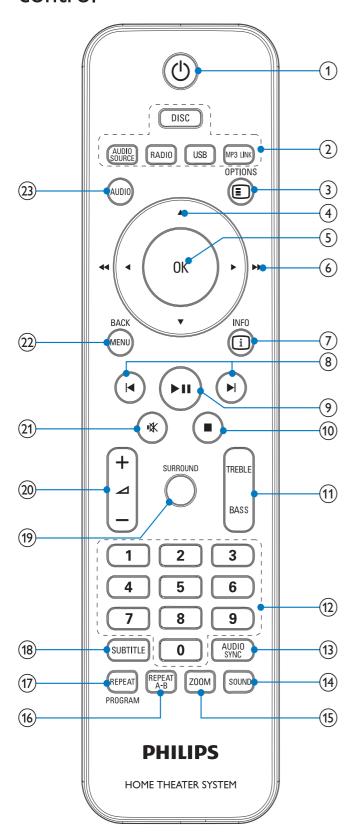

1 0

 Turn on the unit or switch to standby mode.

2 Source selection keys

• Select a source.

(3) © OPTIONS

Access or exit the system setup menu.

(4) ▲/▼

- For menus: navigate up/down.
- Move an enlarged picture up/down.
- Rotate or invert pictures.

(5) OK

Confirms an entry or selection.

(6) **◄/▶** (**◄◄/▶▶**)

- For menus, navigate left/right.
- Search within a track or disc.
- Move an enlarged picture left/right.
- Tune to a radio station.

(7) **(1)** INFO

- For video/audio play, display information about the current status or the disc.
- For pictures, display a thumbnail view of picture files.

(8) |◀/▶|

- Skip to the previous/next title/ chapter/track.
- Select a preset radio station.

9 ►II

Start or pause play.

(10) ■

- Stop play.
- Erase a preset radio station.

11) TREBLE / BASS

Selects treble or bass mode. Press ∠
 +/- to set the level for treble or bass.

(12) Numeric keypad

- Select a title/chapter/track directly.
- Select a preset radio station directly.

(13) AUDIO SYNC

Access audio delay setting.

(14) SOUND

• Selects a predefined sound effect.

(15) **ZOOM**

• For pictures or video: zoom in/out.

(16) REPEAT A-B

Repeat a specific section within a track/disc.

(17) REPEAT/PROGRAM

- Selects or turns off repeat or shuffle mode.
- Program radio stations.

(18) SUBTITLE

• Select DVD or DivX subtitle language.

(19) SURROUND

 Enable/disable Dolby Virtual Speakers (DVS) sound effect.

(20) 🚄 +/-

Adjust volume.

(21) •**≰**

Mute or restore volume.

(22) MENU/BACK


- Return to the previous screen.
- For video discs: access or exit the disc menu.
- For video discs with playback control(PBC): turn on/off PBC.

(23) AUDIO

- For VCD, select stereo, mono-left or mono-right channel.
- For DVD/DivX video, select an audio language.

3 Connect

Place the unit

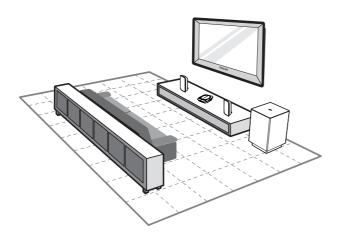


- 1 Place the unit near to the TV.
- 2 Keep the speakers at the normal listening ear-level and directly parallel to the listening area.
- 3 Place the subwoofer at the corner of the room or at least one meter away from the TV.



- To avoid magnetic interference or unwanted noise, never place this apparatus and speakers too close to any radiation devices.
- Never place this unit in an enclosed cabinet.
- Install this unit near the AC outlet where the AC power plug can be easily reached.

Attach speakers to the main unit

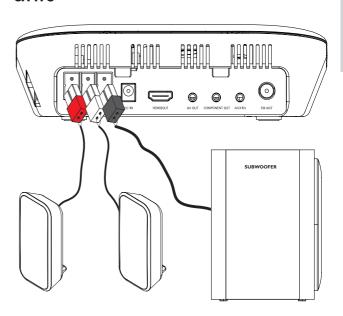



Note

- Ensure that the colors of the speaker plug and terminals are matched.
- 1 Insert red plug of right speaker into "FR".
- 2 Insert white plug of left speaker into "FL".
- 3 Insert black plug of subwoofer in to "SW".

Connect TV


Connect video cables

With this connection, you can watch video from the unit on the TV screen.

You can select the best video connection that your TV supports.

- Option 1: Connect through HDMI (for a HDMI, DVI or HDCP-compliant TV).
- Option 2: Connect through composite AV cable and SCART adaptor (for a standard TV).
- Option 3: connect through component video (for a Progressive Scan TV).

Option 1: Connect through HDMI

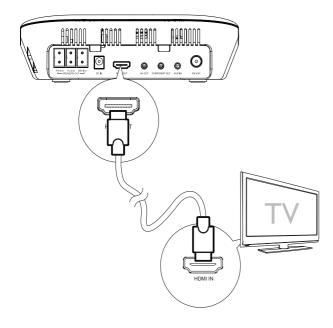

Connect HDMI (High Definition Multimedia Interface), DVI (Digital Visual Interface), or HDCP (High-bandwidth Digital Contents Protection)-compliant TVs through HDMI for the best picture quality. This connection transmits both video and audio signals. Through this connection, you can watch DVDs that contain HD (High-Definition) content.




- Some TVs do not support HDMI audio transmission.
- This connection provides the best video quality.
- 1 Connect an HDMI cable (not supplied) to:
 - the "HDMI" socket on this unit.
 - the HDMI input socket on the TV.



- This unit is HDMI CEC compatible. It enables the connected TV/device to control each other over HDMI.
- If your TV has only a DVI connection, connect through a HDMI/DVI adaptor. An extra audio connection is needed to complete this connection.

Option 2: Connect through SCART

1 Connect the black plug of the composite AV cable to "AV OUT" on the unit.

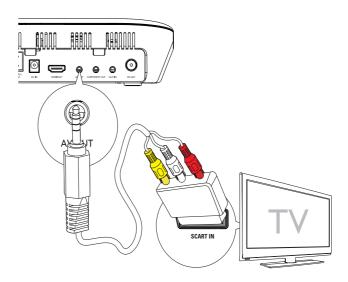

- 2 Connect other plugs to the SCART adaptor, ensure the colors are matched.
- 3 Connect the SCART adapter to the TV.


Option 3: Connect through component video

Connect a progressive scan TV through the black composite AV cable (supplied) for higher quality video.



Note


- The progressive scan video quality is only available when a progressive scan TV is connected.
- If your TV does not support progressive scan, you cannot view the picture.
- For how to activate progressive scan on your TV, refer to the TV user manual.

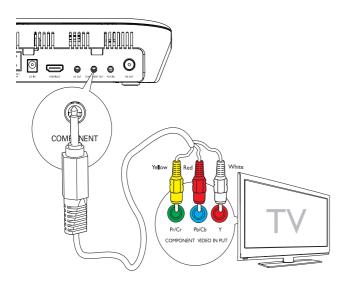

- 1 Connect the single side plug of the composite AV cable to "Component" on the unit.
- 2 Connect other plugs to the TV Component Video Input sockets (yellow plug to green socket, red plug to blue socket, white plug to red socket).

Connect audio cables


You can listen to audio players through this unit. For audio players with headphone sockets

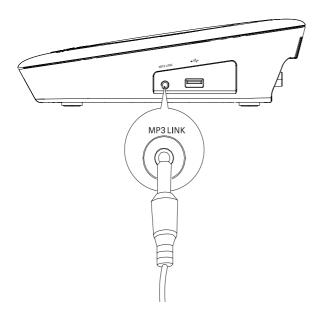

1 Press MP3 LINK repeatedly to select the MP3 link source.

- 2 Connect the MP3 link cable (not supplied) to:
 - the MP3 LINK socket on the main unit
 - the headphone socket on an external device.
- 3 Start to play the device (see the device user manual).

For audio players with red/white audio output sockets

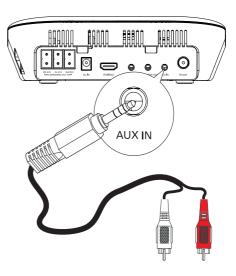


- 1 Press AUX repeatedly to select the AUX source.
- 2 Connect the composite audio cable (not supplied) to:
 - the **AUX** socket on the back of the main unit.
 - the AUDIO OUT sockets on an external device.
- 3 Start to play the device (see the device user manual).

15

Connect FM antenna



• This unit does not support MW radio reception.

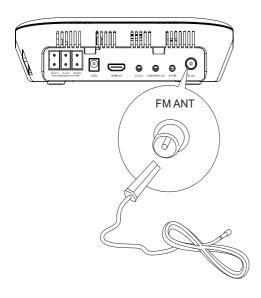

1 Connect the supplied FM antenna to the "FM ANT" socket on the unit.

Connect power




Caution

- Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the back or the underside of the product.
- Risk of electric shock! When you unplug the AC power, always pull the plug from the socket. Never pull the cord.



Note

- Before connecting AC power, ensure you have completed all other connections.
- 1 Connect one end of the power plug to the "DC IN" socket on the main unit.

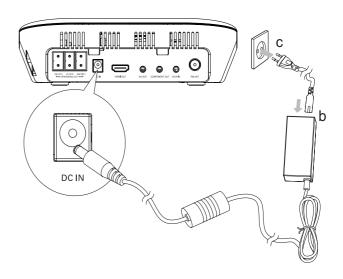

2 Connect the other end to the wall outlet.

4 Get started



Caution

• Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

Always follow the instructions in this chapter in sequence.

If you contact Philips, you will be asked for the model and serial number of this apparatus. The model number and serial number are on the back of the apparatus. Write the numbers here: Model No. ______ Serial No.

Prepare the remote control




Caution

- Risk of explosion! Keep batteries away from heat, sunshine or fire. Never discard batteries in fire.
- Risk of decreased battery life! Never mix different brands or types of batteries.
- Risk of product damage! When the remote control is not used for long periods, remove the batteries.



Note

- Perchlorate Material special handling may apply. See www.dtsc.ca.gov/hazardouswaste/perchlorate.
- 1 Open the battery compartment.
- 2 Insert two R03 or AAA batteries with correct polarity (+/-) as indicated.
- 3 Close the battery compartment.

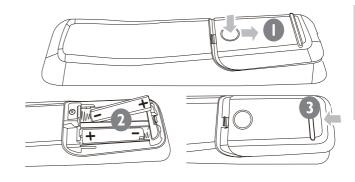

Switch to standby mode

Press Φ to turn on the unit. Letters is displayed under 2 different standby modes:

Mode	Normal Standby	Low
		Power
Turn on	[POWER ON]	[PHILIPS]
Turn off	[NORMAL	[Low
	STANDBY]	Power]

Find the correct viewing channel

- 1 Press **DISC** to switch to disc mode.
- 2 Press the source button repeatedly on the remote control of your TV.



• The video-in channel may be called AV,VIDEO, HDMI etc. See the TV user manual on how to select the correct input on the TV.

Select the correct TV system

Change this setting if the video does not appear correctly. By default, this setting matches the most common setting for TVs in your country.

- 1 Press © OPTIONS.
- 2 Select [Video Setup].
- 3 Select [TV Type] and then press ▶.
- 4 Select a setting and then press **OK**.
 - **[PAL]** For TV with PAL color system.
 - [NTSC] For TV with NTSC color system.
 - [Multi] ForTV that is compatible with both PAL and NTSC.
- 5 To exit the menu, press © OPTIONS.

Select menu display language

- 1 Press © OPTIONS.
- 2 Select [General Setup].
- 3 Select [OSD Language] and then press ▶.
- 4 Select a setting and then press **OK**.
- 5 To exit the menu, press © OPTIONS.

Turn on Progressive Scan

Progressive scan displays twice the number of frames per seconds than interlaced scanning (ordinary TV system). With nearly double the number of lines, progressive scan offers higher picture resolution and quality.

Before you turn on this feature, ensure that:

- The TV supports progressive scan signals.
- You have connected this unit with the TV through component video.
- 1 Turn on the TV.
- 2 Ensure that the TV progressive scan mode is deactivated (see the TV user manual).
- **3** Switch the TV to the correct viewing channel for this unit.

- 4 Press DISC.
- 5 Press © OPTIONS.
- 6 Press ▲/▼ to select [Video Setup] in the menu, then press ▶.
- 7 Select [Progressive] > [On], then press OK.
 - → A warning message is displayed.
- 8 To proceed, select [Ok] and press OK.
 - → The progressive setup is complete.



Note

- If a blank/distorted screen is displayed, wait for 15 seconds for auto recovery or turn off progressive scan manually.
- **9** Turn on the progressive scan mode on the TV.

Turn off progressive scan manually

- 1 Turn off the progressive scan mode on the TV.
- 2 Press © OPTIONS.
- Press ▲/▼ to select [Video Setup] in the menu, then press ▶.
- 4 Select [Progressive] > [Off], then press OK.
- 5 To exit the menu, press © OPTIONS.

5 Play



With some disc/file types, play may differ.

Play discs



Caution

- Never look at the laser beam inside the unit.
- Risk of product damage! Never play discs with accessories such as disc stabilizer rings or disc treatment sheets.
- Never put any objects other than discs into the disc compartment.
- 1 Press **DISC** to select the DISC source.
- Press ≜ on the main set to open the disc compartment.
- Place a disc into the disc compartment and press ►11.
 - → Ensure that the label faces outwards.
- 4 Play starts automatically.
 - To stop play, press ■.
 - To pause or resume play, press ►II.
 - To skip to the previous/next title/ chapter/track, press I◀/►I.

If play does not start automatically:

• Select a title/chapter/track and then press ►11.



Гір

• To play a locked DVD, enter the 4-digit parental control password.

Use the disc menu

When you load a DVD/(S)VCD disc, a menu may be displayed on the TV screen.

To return to the menu during play:

1 Press MENU/BACK.



Note

 To see the disc menu of a VCD disc, you must turn on PlayBack Control (PBC) feature of the disc.

Select an audio language

You can select an audio language on DVDs, DiVx video or VCDs.

- 1 During disc play, press AUDIO.
 - → The language options appear. If the selected audio channels is unavailable, the default disc audio channel is used.



Note

 For some DVDs, the language can only be changed from the disc menu. Press MENU/BACK to access the menu.

Select a subtitle language

You can select a subtitle language on DVDs or DivX® Ultra discs.

• During play, press **SUBTITLE**.



Пр

 For some DVDs, the language can only be changed from the disc menu. Press MENU/BACK to access the menu.

Sync audio output with video play

If the video play is slower than the audio output (sound does not match with the pictures), you can delay the audio output to match the video.


- 1 Press and hold **AUDIO SYNC** until 'AUDIO SYNC XXX' is displayed.
 - → 'XXX' denotes the delay time.

Within five seconds, press ∠ +/- to set the delay time for audio output.

Play from USB



- Ensure that the USB device contains playable music, pictures or video.
- 1 Plug the USB device to the ◆ socket.

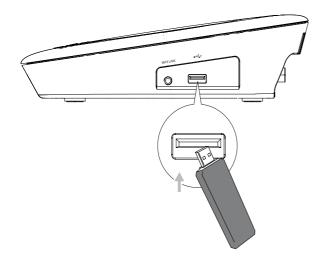

- Press **USB** to select the USB source. → A contents menu is displayed.
- 3 Select a folder, then press OK.
- 4 Select a file to play, then press ►II.
 - To return to the main menu, press until the 'Previous' folder is selected, then press **OK**.
 - To stop play, press ■.
 - To pause or resume play, press ► II.
 - To skip to the previous/next file, press
 I◄/►I.

Play DivX video

You can play DivX files copied onto a CD-R/RW, recordable DVD or USB device.

1 Insert a disc or connect a USB device.

- 2 Select a source:
 - For discs, press **DISC**.
 - For USB devices, press **USB**.
- 3 Select a title to play, then press ►II.
 - To stop play, press ■.
 - To pause or resume play, press ►II.
 - To change a subtitle language, press **SUBTITLE**.



- You can only play DivX videos rented or purchased through the DivX registration code of this unit.
- Subtitle files with the following filename extensions (.srt, .smi, .sub, .ssa, .ass) are supported but do not appear on the file navigation menu.
- The subtitle filename has to be the same as the file name of the video.

Play MP3/WMA/picture files

You can play MP3/WMA/picture files copied onto a CD-R/RW, recordable DVD or USB device.

- 1 Insert a disc or connect a USB device.
- 2 Select a source:
 - For discs, press **DISC**.
 - For USB devices, press **USB**.
 - A contents menu is displayed.
- 3 Select a folder, then press **OK**.
- 4 Select a file to play, then press ►II.
 - To return to the main menu, press ▲ until the 'Previous' folder is selected, then press OK.
 - To stop play, press ■.
 - To pause or resume play, press ►II.
 - To skip to the previous/next file, press
 I◄/►I.

Play control

Select repeat/shuffle play options

- 1 During play, press **REPEAT/PROGRAM** repeatedly to select a repeat option or the shuffle play mode.
 - To resume normal play, press REPEAT/PROGRAM repeatedly until [Repeat Off] is displayed.

Repeat A-B (DVD/VCD/CD/MP3/ WMA)

- 1 During music or video play, press **REPEAT** A-B at the start point.
- 2 Press REPEAT A-B at the end point.
 - → The selected section starts to play repeatedly.
 - To cancel repeat play, press REPEAT A-B again.



 The section A and B can be set only within the same track/title.

Search forward/backward

- 1 During play, press **◄/▶** (**◄◄/▶►**) repeatedly to select a search speed.
 - To resume play at normal speed, press
 II.

Resume video play from last stopped point



- This feature is only available for video play.
- 1 In stop mode and when the disc has not been removed, press **OK**.

To cancel resume mode and stop play completely:

In stop mode, press ■.

Play options

Display play information

1 During play, press © INFO repeatedly to display play information.

Zoom in/out image

- 1 During video/picture play, press **ZOOM** repeatedly to zoom in/out the image.
 - When the image is zoomed in, you can press
 /▶/▲/▼ to pan through the image.

Change the audio channel



Note

- This feature is only available for VCD/DivX play.
- 1 During play, press AUDIO repeatedly to select an audio channel available on the disc:
 - Mono Left
 - Mono Right
 - Stereo

Select an audio language



Note

- This feature is only available for DVDs/DivX videos recorded with multiple audio languages.
- 1 Press AUDIO repeatedly to select an audio language.

21

Select a subtitle language



Note

- This feature is only available for DVDs/DivX videos recorded with multiple audio languages.
- 1 Press **SUBTITLE** repeatedly to select an available subtitle language.

Picture view options

Start slideshow of pictures

- 1 During play, press ■.
 - → The thumbnails of 12 pictures are displayed.
- 2 Select a file, then press ►II to start slideshow play.
 - To go to previous or next screen display, press I◀/►I.
 - To select a picture, press the cursor buttons.
 - To display the selected photo only, press OK.

Rotate picture

During play, press ▲/▼ to rotate the picture anti-clockwise/clockwise.

Start musical slideshow

You can play MP3/WMA music files and JPEG photo files simultaneously to create musical slideshow. The MP3/WMA and JPEG files must be stored on the same disc or USB device.

- 1 Play MP3/WMA music.
- Navigate to the photo folder/album and press ►II to start slideshow play.
 - → Slideshow begins and continues till the end of the photo folder or album.
 - → Audio continues to play till the end of the disc.

- → To return to the menu, press MENU/BACK.
- **3** To stop slideshow play, press ■.
- **4** To stop music play, press again.

6 Adjust settings

- 1 Press OPTIONS.
- 2 Select a setup page.
- 3 Select an option and then press ▶.
- 4 Select a setting and then press **OK**.
 - To return to the previous menu, press
 - To exit the menu, press **OPTIONS**.

General setup

On [General Setup Page], you can set the following options:

[EasyLink]

If this unit is connected to HDMI CEC compliant TV/devices, all connected devices can respond to the following commands simultaneously:

Option	Description
[One	When you press ▶II, the TV and
Touch	this unit are turned on. Disc play
Play]	starts if there is a disc in the unit.
[System	When you press and hold Ф
Standby]	, connected HDMI CEC devices
	simultaneously switch to standby.
	To disable this feature, select
	[Decline].
[System	When you play audio that is
Audio	routed from the connected
Control]	devices, this unit switches to
	the corresponding audio source
	automatically.
	To enable this feature, select [On].
	Then proceed to [Audio Input
	Mapping] to scan and map all the
	connected devices.
[Audio	When you map the audio input
Input	correctly, this unit switches to
Mapping]	the audio from the played device
	automatically.



 You must turn on the HDMI CEC operations on the TV/devices before you can enjoy the EasyLink controls.
 See the TV/devices manual for details.

Philips does not guarantee 100% interoperability with all HDMI CEC compliant devices.

[Disc Lock]

Set play restriction for specific discs. Before you start, place the disc in the disc compartment (maximum 40 discs can be locked).

- **[Lock]** Restrict access to the current disc. You need to enter a password to unlock and play the disc.
- **[Unlock]** Play all discs.



• To set or change the password, go to [Preference Setup] > [Password].

[Display Dim]

Changes the brightness level of the display panel on this unit.

- [100%] Normal brightness.
- [70%] Medium brightness.
- [40%] Dimmest display.

[OSD Language]

Select the preferred language for on-screen display.

[Screen Saver]

The screen saver protects the TV screen damage due to prolonged exposure to a static image.

- [On] Enable the screen saver.
- [Off] Disable the screen saver.

[Sleep Timer]

Switches to standby automatically after the preset time.

- [15 mins], [30 mins], [45 mins], [60 mins] select the count down time before the apparatus switches to standby.
- [Off] disable sleep mode.

Switch to standby mode

[Standby Mode]

Set the standby mode.

- [Normal] power consumption <4W.
- **[Low Power]** power consumption <1W. However, it requires longer time to power up.

[DivX(R) VOD Code]

Display the DivX® registration code.



 Enter this DivX registration code when you rent or purchase video from www.divx.com/vod.The DivX videos rented or purchased through the DivX® VOD (Video On Demand) service can be played only on the device to which it is registered.

Audio setup

On [Audio Setup Page], you can set the following options:

[HDMI Audio]

When you connect this apparatus and TV with an HDMI cable, select the audio output setting for this connection.

- [On] the sound is output through both your TV and this apparatus. If the audio format on the disc is not supported, it is downmixed to twochannel sound (Linear-PCM).
- [Off] disable audio output from the TV.The sound is only output through this apparatus.

[Night Mode]

Make loud sound level softer and soft sound level louder so that you can watch the DVD movies at a low volume, without disturbing others.

- **[Off]** enjoy surround sound with its full dynamic range.
- [On] enjoy quiet viewing at night (DVDs only).

Video setup

On [Video Setup Page], you can set the following options:

[TV Type]

Change this setting if the video does not appear correctly. By default, this setting matches the most common setting for TVs in your country.

- **[PAL]** For TV with PAL color system.
- [NTSC] For TV with NTSC color system.
- [Multi] For TV that is compatible with both PAL and NTSC.

[TV Display]

The TV format determines the aspect ratio of display according to the type of TV you have connected.







4:3 Pan Scan (PS)

4:3 Letter Box (LB)

16:9 (Wide Screen)

- **[4:3 Pan Scan]** For 4:3 screen TV: full-height display with the trimmed sides.
- [4:3 Letter Box] For 4:3 screen TV: wide-screen display with black bars on the top and bottom of the screen.
- **[16:9 Wide Screen]** For widescreen TV: display ratio 16:9.

[Progressive]

Turn on or off progressive scan mode.

[Picture Settings]

Select a predefined set of picture color settings or customize your personal setting.

- [Standard] original color setting.
- [Bright] vibrant color setting.
- [Soft] warm color setting.
- [Personal] customize the color setting. Adjust the level of brightness, contrast, sharpness/tint and color saturation.

[HDMI Video] – Select the HDMI video output resolution that is compatible with your TV display capability.

Option	Description
[Auto]	Detect and select
	the best supported
	video resolution
	automatically.
[480 _P],	Select a video
[576p],	resolution that is best
[720 _P],	supported by your TV.
[1080i],	See yourTV manual
[1080 _P]	for details.

[Closed Caption]

Turn off or on display captions.

- [On] show the sound effects in subtitles. Applicable only to discs with Closed Caption information included and the TV that supports this feature.
- [Off] turn off closed caption.

Preference setup

On [Preference Page], you can set the following options:

[Audio]

Select the preferred audio language for disc play.

[Subtitle]

Select the preferred subtitle language for disc play.

[Disc Menu]

Select the preferred disc menu language.



Note

- If the language you have set is not available on the disc, the disc uses its own default language.
- For some discs, the subtitle/audio language can only be changed from the disc menu.
- To select the languages that are not listed in the menu, select [Others]. Then check the Language Code list at the back of this user manual and enter the respective 4-digit language code.

[Parental]

Restricts access to discs that are unsuitable for children. These types of discs must be recorded with ratings.

- 1) Press OK.
- 2) Select a rating level, then press **OK**.
- 3) Press the numeric keys to enter the password.



Note

- Rated discs above the level you set in [Parental] require a password to be played.
- The ratings are country-dependent. To allow all discs to play, select '8'.
- Some discs have ratings printed on them but are not recorded with ratings. This function has no effect on such discs.



Tip

• You can set or change the password (see [Preference Setup] > [Password]).

[PBC]

Turns on or off the content menu of VCDs/ SVCDs with PBC (playback control) feature.

- [On] display index menu when you load a disc for play.
- **[Off]** skip the menu and start play from the first title.

[MP3/JPEG Nav]

Select to display the folders or display all the files.

- [With Menu] display the folders of MP3/ WMA files.
- [Without Menu] display all the files.

[Password]

Set or change the password for locked discs and play restricted DVDs.

The default password is 0000.

- [Change]
- 1) Press the numeric keys to enter '0000' or your last set password at **[Old Password]** field.
- 2) Enter the new password at [New Password] field.
- 3) Enter the new password again at [Confirm PWD] field.
- 4) Press OK / ►II to exit the menu.



Note

• If you forget the password, enter '0000' before you set a new password.

[DivX Subtitle]

Select a character set that supports the DivX subtitle.

[Standard]	English, Irish, Danish, Estonian,
	Finnish, French, German, Italian,
	Portuguese, Luxembourgish,
	Norwegian (Bokmål and
	Nynorsk), Spanish, Swedish,
	Turkish
[Central	Polish, Czech, Slovak, Albanian,
Europe]	Hungarian, Slovene, Croatian,
	Serbian (Latin script), Romanian
[Cyrillic]	Belarusian, Bulgarian, Ukrainian,
	Macedonian, Russian, Serbian
[Greek]	Greek
[Hebrew]	Hebrew



• Ensure that the subtitle file has the exact same file name as the movie file. If for example the file name of the movie is 'Movie.avi', then you will need to name the text file 'Movie.sub' or 'Movie.srt'.

[Version Info]

Display the software version of this apparatus.



Tip

 This information is required when you want to find out if a newest software version is available at the Philips website that you may download and install on this apparatus.

[Default]

Resets all the settings of this apparatus to factory default, except for [Disc Lock], [Password] and [Parental] settings.

7 Tune to FM radio stations

- 1 Ensure that you have connected and fully extended the supplied FM antenna.
- 2 Press RADIO.
- 3 Press and hold **◄/▶** (**◄◄/▶▶**).
- 4 When the frequency indication starts to change, release the button.
 - → The FM tuner tunes to a station with strong reception automatically.
- 5 Repeat steps 3-4 to tune to more stations. To tune to a weak station:

Press **◄/▶** (**◄◄/▶▶**) repeatedly until you find optimal reception.

Program radio stations automatically



Note

- You can program a maximum of 20 preset radio stations.
- 1 Press ► to select a preset number to start programing.
- 2 Press and hold REPEAT/PROGRAM for 2 seconds to activate automatic programming.
 - → [AUTO] (auto) is displayed briefly.
 - → All available stations are programmed in the order of waveband reception strength.
 - → The last programed radio station is broadcast automatically.

Program radio stations manually



Note

- You can program a maximum of 20 preset radio stations.
- 1 Tune to a radio station.
- 2 Press REPEAT/PROGRAM to activate programming.
- Press I → to allocate a number from 1 to 20 to this radio station, then press REPEAT/PROGRAM to confirm.
 - → The preset number and the frequency of the preset station are displayed.
- 4 Repeat the above steps to program other stations.



Note

• To overwrite a programmed station, store another station in its place.

Tune to a preset radio station

1 Press I◀/►I to select a preset number that you want.



Тір

• You can also use the numerical keypad to select a preset station directly.

8 Adjust volume level and sound effect

Adjust volume level

1 During play, press ∠ +/- to increase/ decrease the volume level.

Select a sound effect



Note

 You cannot use different sound effects at the same time

Select a preset sound effect

- 1 During play, press **SOUND** repeatedly to select:
 - [CLASSIC] (Concert)
 - [ROCK] (Action)
 - [Sports] (Gaming)
 - [Lounge] (Drama)
 - [Night]

Select surround sound effect

DVS (Dolby Virtual Speaker) technology creates a highly compelling 5.1-channel listening experience from as few as two speakers. It is an ideal entertainment solution for locations where space for multiple speaker setup is limited.

1 During play, press **SURROUND** to turn on/off surround sound effect.

Adjust treble/bass level

1 Press TREBLE or BASS.

Within 5 seconds, press ∠ +/- to set the level for high tones (treble) or low tones (bass).

Mute sound

1 During play, press **★** to mute/unmute sound.

9 Connect other devices

Listen to an audio player

You can listen to an audio player through this unit.

- 1 Connect the audio player.
 - For audio players with red/white audio output sockets:
 Connect a red/white audio cable (not supplied) to the AUX IN L/R sockets and to the audio output sockets on the audio player.
 - For audio players with headphone sockets:
 Connect a 3.5mm audio cable (not supplied) to the MP3 LINK socket and to the headphone socket on the audio player.
 - For audio players with optical sockets: Connect an optical cable (not supplied) to the OPTICAL IN socket and to the optical output socket on the audio player.
- 2 Select the AUDIO SOURCE or MP3 LINK source.
- 3 Start play on the audio player.

10 Product information



 Product information is subject to change without prior notice.

Specifications

Amplifier		
Rated Output Power	2X35W+75W RMS	
Frequency Response	20 -20000 Hz, ±3dB	
Signal to Noise Ratio	>67dB	
Aux Input	1.00V RMS 20kohm	

Disc	
LaserType	Semiconductor
Disc Diameter	12cm/8cm
Video Decoding	MPEG-1 / MPEG-2 /
	DivX
Video DAC	12Bits
Signal System	PAL / NTSC
Video Format	4:3 / 16:9
Video S/N	>48dB
Audio DAC	24Bits / 96kHz
Total Harmonic	<1% (1 kHz)
Distortion	
Frequency	4Hz - 20kHz (44.1kHz)
Response	4Hz - 22kHz (48kHz)
	4Hz - 24kHz (96kHz)
S/N Ratio	>67dBA

Tuner (FM)	
FM Tuning Range	87.5 - 108MHz
Tuning grid	50KHz
Sensitivity	
- Mono, 26dB S/N Ratio	<22 dBf
- Stereo, 46dB S/N Ratio	>43 dBf
Search Selectivity	>28dBf
Total Harmonic Distortion	≤ 3%
Signal to Noise Ratio	≤50dB

Speakers	
Speaker	2x4ohm+8ohm(subwoofer)
Impedance	
Speaker Driver,	6.25'' subwoofer
subwoofer	
Speaker Driver,	3'' woofer
woofer	
Speaker Driver,	19mm tweeter
tweeter	
Sensitivity	
- Subwoofer	$>$ 84dB/m/W \pm 4dB/m/W
- Woofer/	$>$ 82dB/m/W \pm 4dB/m/W
Tweeter	

General information	
AC power	230V, 50Hz
Operation Power	25W
Consumption	
Normal Standby Power	<4W
Consumption	
Low Power Standby Power	<1W
Consumption	
Composite Video Output	1.0Vp-p, 75ohm
Coaxial Output	0.5Vpp ± 0.1Vpp
	75ohm
HDMI (CEC) Output	1.3a
USB Direct	Version 2.0
Dimensions	
- Main Unit ($W \times H \times D$)	$200 \times 55 \times 205$
	mm
- Speakers	$100 \times 230 \times 90$
	mm
- Subwoofer Box (W x H	$170 \times 330 \times 340$
\times D)	mm
Weight	
- With Packing	8 kg
- Main Unit	670 g / pcs
- Speaker Box	690 g / pcs
- Subwoofer Box	4100 g / pcs

Supported disc formats

- Digital Video Discs (DVDs)
- Video CDs (VCDs)
- Super Video CDs (SVCDs)
- Digital Video Discs + Rewritable (DVD+RW)
- Compact Discs (CDs)
- Picture (Kodak, IPEG) files on CDR(W)
- DivX(R) disc on CD-R(W):
- DivX 3.11, 4.x and 5.x
- WMA

Supported MP3-CD formats:

- ISO 9660
- Max. title/album name: 12 characters
- Max. title number plus album: 255.
- Max. nested directory: 8 levels.
- Max. album number: 32.
- Max. MP3 track number: 999.

- Supported sampling frequencies for MP3 disc: 32 kHz, 44.1 kHz, 48 kHz.
- Supported Bit-rates of MP3 disc are: 32, 64, 96, 128, 192, 256 (kbps).
- The following formats are not supported:
 - Files like *.VMA, *.AAC, *.DLF, *.M3U,
 - *.PLS, *.WAV
 - Non-English Album/Title name
 - Discs recorded in Joliet format
 - MP3 Pro and MP3 with ID3 tag

USB playability information

Compatible USB devices:

- USB flash memory (USB 2.0 or USB1.1)
- USB flash players (USB 2.0 or USB1.1)
- memory cards (requires an additional card reader to work with this apparatus)

Supported formats:

- USB or memory file format FAT12, FAT16, FAT32 (sector size: 512 bytes)
- MP3 bit rate (data rate): 32-320 Kbps and variable bit rate
- WMA v9 or earlier
- Directory nesting up to a maximum of 8 levels
- Number of albums/ folders: maximum
 99
- Number of tracks/titles: maximum 999
- ID3 tag v2.0 or later
- File name in Unicode UTF8 (maximum length: 128 bytes)

Unsupported formats:

- Empty albums: an empty album is an album that does not contain MP3/ WMA files, and is not be shown in the display.
- Unsupported file formats are skipped.
 For example, Word documents (.doc) or MP3 files with extension .dlf are ignored and not played.
- AAC, WAV, PCM audio files
- DRM protected WMA files (.wav, .m4a, .m4p, .mp4, .aac)
- WMA files in Lossless format

11 Troubleshooting

↑ Warning

• Never remove the casing of this apparatus.

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using this apparatus, check the following points before requesting service. If the problem remains unsolved, go to the Philips web site www. philips.com/welcome. When you contact Philips, ensure that the apparatus is nearby and the model number and serial number are available.

No power

- Ensure that the AC cord of the apparatus is connected properly.
- Ensure that there is power at the AC outlet.
- As a power-saving feature, the system switches off automatically 15 minutes after track play reaches the end and no control is operated.

No disc detected

- Insert a disc.
- Check if the disc is inserted upside down.
- Wait until the moisture condensation at the lens has cleared.
- Replace or clean the disc.
- Use a finalized CD or correct format disc.

No picture

- Check the video connection.
- Turn on the TV to the correct Video-In channel.
- Progressive scan is activated but the TV does not support progressive scan.

Black and white or distorted picture

- The disc does not match the TV color system standard (PAL/NTSC).
- Sometimes a slight picture distortion may appear. This is not a malfunction.
- Clean the disc.
- A distorted picture may appear during progressive scan setup.

The aspect ratio of the TV screen cannot be changed even though you have set the TV display format.

- The aspect ratio if fixed on the loaded DVD disc.
- The aspect ratio may not be changed for some TV systems.

No sound or poor sound

- Adjust the volume.
- Disconnect the headphone.
- Ensure the wireless subwoofer is connected.

Remote control does not work

- Before pressing any function button, first select the correct source with the remote control instead of the main unit.
- Reduce the distance between the remote control and the unit.
- Insert the battery with its polarities (+/– signs) aligned as indicated.
- Replace the battery.
- Aim the remote control directly at the sensor on the front of the unit.

Disc does not play

- Insert a readable disc and ensure that the label side faces outwards.
- Check the disc type, color system and regional code. Check for any scratches or smudges on the disc.
- Press © **OPTIONS** to exit the system setup menu.
- Disable the password for parental control or change the rating level.
- Moisture has condensed inside the system. Remove the disc and leave the system turned on for about an hour. Disconnect and reconnect the AC power plug, and then turn on the system again.
- As a power-saving feature, the system turns off automatically 15 minutes after disc play reaches the end and no control is operated.

Poor radio reception

- Increase the distance between the unit and yourTV or VCR.
- Fully extend the FM antenna.
- Connect an outdoor FM antenna instead.

Unable to select Progressive Scan

• Ensure the video output mode is set to [Pr/Cr Pb/Cb Y].

No sound on HDMI connection.

 You may not hear any sound if the connected device is non-HDCP compliant or only DVI-compatible.

No picture on HDMI connection.

- Check if the HDMI cable is faulty. Replace a new HDMI cable.
- If this happens when you change the HDMI video resolution, select the correct resolution until the picture appears.

Audio or subtitle languages cannot be set

- The disc is not recorded with sound or subtitles in multiple languages.
- The audio or subtitle language setting is prohibited on the disc.

Cannot display some files in USB device or SD/MMC card

- The number of folders or files in the USB device or SD/MMC card has exceeded a certain limit. This phenomenon is not a malfunction.
- The formats of these files are not supported.

USB device or SD/MMC card not supported

 The USB device or SD/MMC card is incompatible with the apparatus. Try another one.

12 Glossary

A

Analog audio

Sound that has not been turned into numbers. Analog sound is available when you use the AUDIO LEFT/RIGHT. These red and white jacks send audio through two channels, the left and right.

Aspect ratio

Aspect ratio refers to the length to height ratio of TV screens. The ratio of a standard TV is 4:3, while the ratio of a high-definition or wide TV is 16:9. The letter box allows you to enjoy a picture with a wider perspective on a standard 4:3 screen.

AUX

Auxiliary input that allows you to connect portable audio devices.

C

Component Video Out sockets

An analog video connection. It is capable of transmitting high quality video through the red, blue and green connectors on this unit. Commonly labeled as R/G/B,Y/Pb/Pr, etc.

Composite video (CVBS)

A single video signal commonly used in most consumer video products.

D

Digital Audio

Digital Audio is a sound signal that has been converted into numerical values. Digital sound can be transmitted through multiple channels. Analog sound can only be transmitted through two channels.

Disc menu

A screen display that allows election of images, sounds, subtitles, multi-angles, etc., recorded on a DVD.

DivX®

The DivX® codec is a patent-pending, MPEG-4 based video compression technology developed by DivX®, Inc. It can shrink the file size of digital video and still maintain the high visual quality.

Dolby Digital

A surround sound system developed by Dolby Laboratories that contains up to six channels of digital audio (front left and right, surround left and right, center and subwoofer.)

Dolby Digital Pro Logic II

An advanced, matrix decoding technology that expands any two channel audio, such as CDs and stereo encoded videocassettes, video games and TV broadcasts to a five channel full bandwidth (range) playback (Left/Center/Right/Left Surround/Right Surround), resulting in a surround sound experience.

E

EasyLink

Philips Easylink complies to the HDMI CEC industry standard protocal to share functionalities between this unit and its connected devices. This feature is only available if you connect this unit to a HDMI compliant device with a HDMI cable.

Н

HDCP

High-bandwidth Digital Content Protection. This is a specification that provides a secure transmission of digital contents between different devices (to prevent unauthorized copyright.)

HDMI

High-Definition Multimedia Interface is a high-speed digital interface that can transmit uncompressed high definition video and digital multichannel audio. It delivers high quality picture and sound quality, completely free from noise. HDMI is fully backward-compatible with DVI.

As required by the HDMI standard, connecting to HDMI or DVI products without HDCP (High-bandwidth Digital Content Protection) will result in no Video or Audio output.

J

JPEG

A very common digital still picture format. A still-picture data compression system proposed by the Joint Photographic Expert Group, which features small decrease in image quality in spite of its high compression ratio. Files are recognized by their file extension '.jpg' or '.jpeg.'

M

MP3

A file format with a sound data compression system. MP3 is the abbreviation of Motion Picture Experts Group 1 (or MPEG-1) Audio Layer 3. With the MP3 format, one CD-R or CD-RW can contain about 10 times more data than a regular CD.

P

Parental control

A function of the DVD to limit playback of the disc by the age of the users according to the limitation level in each country. The limitation varies from disc to disc; when it is activated, playback will be prohibited if the software's level is higher than the user-set level.

PBC

Playback Control. A system where you navigate through a Video CD/Super VCD with on-screen menus that are recorded onto the disc. You can enjoy interactive playback and search.

Progressive scan

The progressive scan displays twice the number of frames per second than in an ordinary TV system. It offers higher picture resolution and quality.

S

Surround

A system that creates realistic, threedimensional sound fields. It is usually achieved with multiple speakers that are arranged around the listener.



Document order number: HES2800_12_UM_V2.1

