



Nomad User Manual

2013 Ford Model

On your marks, get setJust go!

The last thing you want to do when starting your holiday is trawl through a large manual. We have put together a 'Quick Starter's' guide found at the front of your manual to get to you started on your adventure from the moment you collect your motorhome to your first pit stop.

Contents

- **A step by step quick guide to start your holiday**
 - Setting Off Page 3
 - Stock up with food Page 4
 - Finding a Campsite Page 5
 - A quick guide to setting up on your first night Page 6
- **Emergency & Useful Numbers**
 - Includes Just go contact numbers, Breakdown assistance & other useful numbers Page 7

Complete guide to operating your motorhome

- LPG gas Instructions Page 9-10
- Toilet Cassette & Fresh water tank Page 11
- Bike & Bike rack Page 12
- Grey water tank Page 12
- Habitation Door Page 13
- Towing eye location Page 13
- Vehicle Dimensions Page 13
- Control Panel Page 14
- Heating & hot water system Page 17
- Frost protection Switch Page 18
- Bathroom (toilet, shower, sink operations) Page 19
- TV Page 20
- Fridge Page 21
- Bed conversions Page 22-23

Cabin & Optional Extras operations

- Starting the vehicle / Trip Control Page 1
- Cab Air Conditioning Page 2
- Generators Pages 7-10
- Satellite Navigation Page 11
- Snow Chains Pages 12-13

General information

- **Basic Motorhome Driving Advice** Pages 15-16
 - Top tips – Obstacles to avoid Page 17
 - UK/European useful signs & driving information Pages 18-20
 - **London Congestion Charge Information** Pages 21-22
 - **Places to Stay & Visit**
 - Local campsites to Just go Page 23
 - UK campsite websites & Places to visit Page 24
 - Environment & Keeping safe Page 25
 - **Refilling Information**
 - Local filling station for LPG gas & diesel upon your return to Just go Page 27
 - Includes list of filling stations which supply LPG gas. Pages 28-39
 - **Returning the motorhome**
 - Information on how to return your motorhome Page 41
 - Map of how to find Just go depot Page 42
 - Just go handover checklist
-
- **Just go Terms & Conditions**
 - **A5 Document Pocket**
 - Includes Rental Agreement / Additional driver declaration (if applicable)
 - Return Handover Checklist
 - EU Green Card / Ferry Crossing (if applicable)

Getting started on your holiday



Keen to get your motorhome adventure started?

To help get you on your way we have put together a 'Quick starter's' guide to get you settled on your first night in your motorhome.

Get the holiday feeling from the moment you arrive at Just go!

Step 1 Setting off

Packing up your motorhome:

- Need a hand? Please feel free to ask for a helping hand with your suitcases.
- If you're tight on space we can also store your suitcases for you while you are away, please just ask.
- If you're stopping at relatives or friends on your holiday, you can make use of their electricity by hooking up the motorhome to their power supply. Please ask us and we can supply you with a UK plug adaptor.

Plan of action:

- Make sure before you set off your satellite navigation is all charged and your next location is entered in so you're ready for the off
- Maps are supplied with the vehicle to use the old school method of navigation!

I don't have Satellite Navigation?

- Take the hassle out of navigation and the arguments it tends to cause. Your more than welcome to hire one of our, come in the office and the girls will be happy to help arrange one for you.
- They will also help you input your first location for you and give you a quick guide if you're unsure of how to use one.

Ready to go?

- Need the loo?, make sure everyone is ready for the off, although you have a toilet onboard you don't want to be using this before you have even left us!
- As much as we love kids don't forget to do a final head count before leaving!!
- Switch your fridge onto the battery symbol before you leave so your fridge will be cooling while you are driving to the supermarket!
- Once you're all packed make sure your gas is off, the vehicle is unplugged from the mains, the windows are all shut, you have the keys and then you are ready for the open road.



We want you to have a fantastic holiday so please let us know if we can do anything further to help.


Step 2
Stock up
with food

- **Hungry?** There are 2 supermarkets (north & south) just moments away from Just go where you will be able to stock up with all the necessities before you reach your 1st campsite.

North

Dunstable Tesco's Stores Skimpot Road Dunstable Luton LU5 4JU	Drive time : 15 mins Distance:9miles
---	---

- Join the M1 motorway Northbound and continue till you reach Junction11
- Come off at Junction 11 & take the A505 exit to Luton/Dunstable
- At the roundabout, take the 1st exit onto Dunstable Rd/A505 heading to Dunstable
- At the roundabout, take the 1st exit onto Skimpot Rd/A5065
- Turn right and you have reached Tesco's

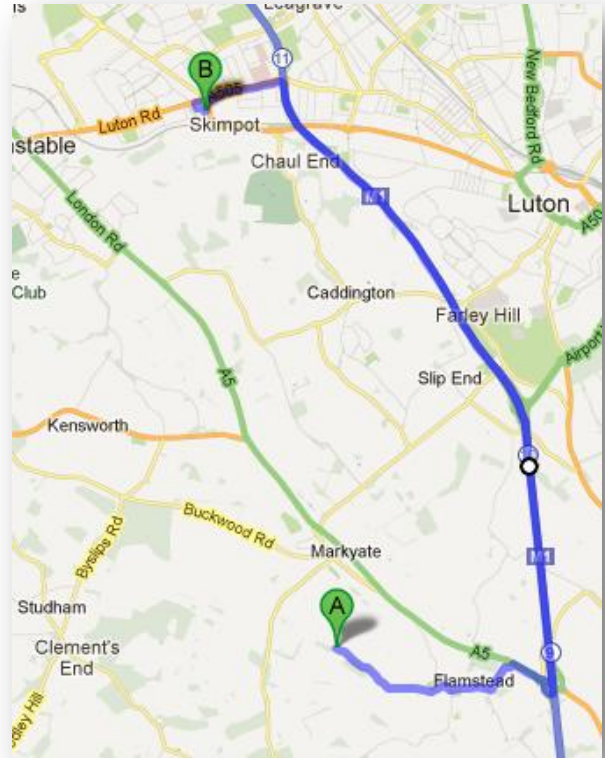


We will be more than happy to programme the address into your Sat Nav for you!

South


Hemel Hempstead Tesco's Stores Jarman Way Hemel Hempstead Hertfordshire HP2 4JS	Drive time : 15 mins Distance:9.1miles
---	---

- Join the M1 motorway Southbound and continue till you reach Junction 8
- Come off at Junction 8 exit onto Breakspear Way/A414 toward Hemel Hempstead
- At the roundabout, take the 1st exit onto Bennetts End Rd
- Turn right at St Albans Hill and you have reached Tesco's

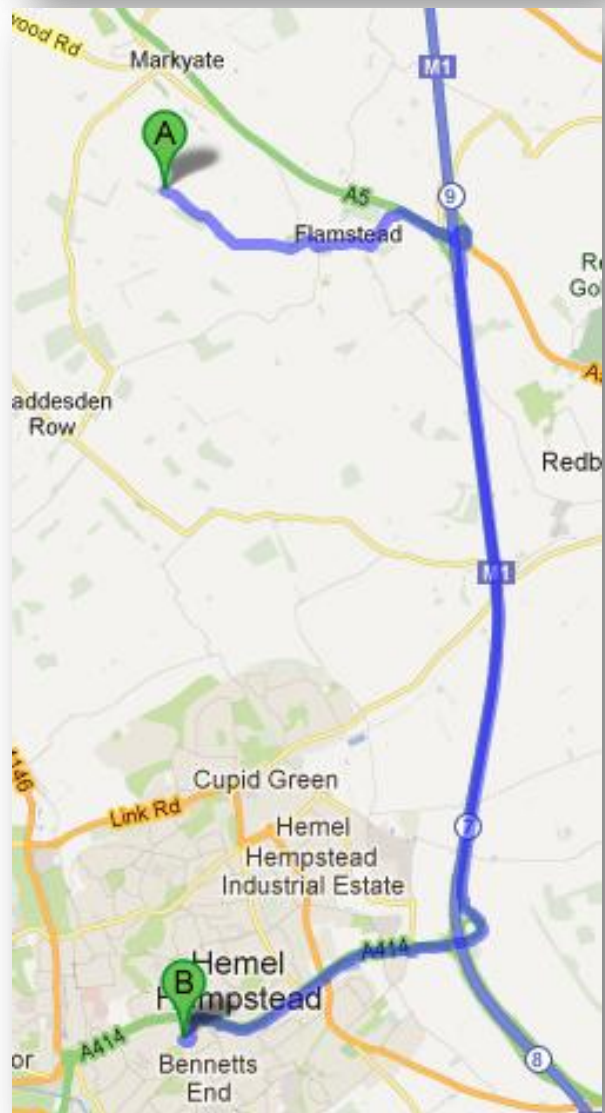

**Step 3
Finding a
campsite**

- **Long day?** If you are looking to relax and unwind after a long day's travel then look no further than Town Farm Campsite. At only 25 minutes (approx) drive from Just go Town Farm is an ideal site for your first pit stop. (For more local campsites please see the Places to stay & visit section)

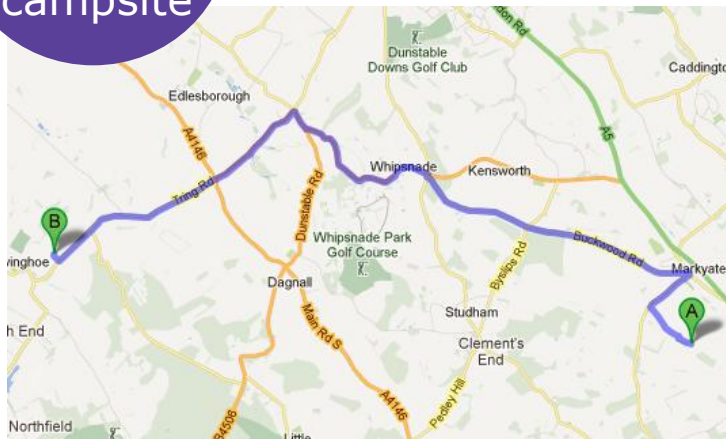

Drive Time from depot: 25 mins

Distance from depot: 9.5 miles

Location Description: Ideally situated in the Chiltern Hills this picturesque, friendly campsite is only 25 minutes from the Just go depot. Perfect as a base for your first or last night. The campsite is a working farm situated in the picturesque setting at the foot of the Chiltern Hills, home of the Ivinghoe Beacon.

Town farm

Town farm, Ivinghoe, Leighton Buzzard, LU7 9EL

Opening times: All year

Tel: 07906 265 435 **Contact:** Charles

Email: cwleach33@yahoo.co.uk

Website: <http://www.townfarmcamping.co.uk/home>



Why not let us phone ahead and reserve you a pitch?

Campsite details:

No. of pitches (with hook up)	Shower & Toilet Facilities (disabled)	Hard standing	Laundry Facilities	Dish washing Facilities	Waste disposal	Water Points
18 (18, (extra £2.50)	✓ (inc disabled)	✓	✓	✓	✓	✓
Shop on site	Eating facilities on site	Nearby Pub	Kids play area	Pet friendly	Tariff (based on a motorhome with 2 people (no hook up)	Additional costs
✗	✗	✓	✓	✓	£20.00 per night	Additional adults, dogs and gazebo's all free

Things to do:

Activity	Description	Websites
Pick your own	if you have time to stock up on freshly grown fruit and vegetables Town farm runs a pick your own during summer months	http://www.townfarmcamping.co.uk/info-events
Rose and Crown	Traditional English pub a walkable distance of 0.6 miles from the campsite	http://www.roseandcrownivinghoe.com/index.html
Ivinghoe Beacon	A high point of the Chiltern hills which offers stunning views of the surrounding countryside	http://www.bucksgeology.org.uk/ivinghoe_beacon.html
Various Activities	Various activities in and around the campsite	http://www.townfarmcamping.co.uk/info-events

Step 4 Setting up

Even after your guided tour of your motorhome it can become a bit of a blur, we thought you may need a quick reminder to get you set up for your first night's sleep in your motorhome. See the quick & easy steps below to getting comfy & settled in your new home.



- **Power!** Take the orange cable from your gas locker and connect to the motorhome and the campsite plug and hey presto instant power.



- **Gas on!** To enjoy the luxury of warm heating, hot water and to cook your favourite meal (if you decide not to go down the pub) you will need to turn your gas on. Turn the brass tap on top of the bottle clockwise and press the green button for a few seconds and your all set.



- **Need a bit of warmth?** Keep cosy & warm by turning your heating dial to the flame symbol.

- **Freshen up!** Using the same dial turn to the flame and the 60 degrees symbol for heating and hot water.

- **Fridge!** Keep your newly brought chilled items cool (not forgetting a bottle of wine or two!!) by turning the fridge to the 240v setting and enjoy continuous power when hooked up at your campsite.



Step 5 Enjoy

- **Enjoy** a cosy, warm evening in your new home for the next few days (or weeks) and settle down with your favourite tipples a good book or a movie with the family to recharge your batteries for the adventures to come.



For more detailed instructions on the operations of any items of your motorhome please see the 'comprehensive guide to operating your motorhome' section

Wherever your holiday takes you we hope you have fun and enjoy your time in a Just go motorhome!

We look forward to seeing you on your return.

Emergency and Useful numbers



Just go Contact Details:

The Just go office is open 9:00am – 5:30pm Monday – Friday, 9:00am – 4:00pm Saturday and is closed on Sunday

Tel: (UK) 0870 240 1918

Europe: 00 44 1582 842 888

Fax: 01582 843 610

Emergency text line: Tel: + 44 (0) 7918 704 814

For all out of hours assistance please contact the relevant chassis assistance number (Ford/Fiat/Renault) These numbers are contained in your manual and are also displayed on the front windscreen. Please note if the fault is due to keys locked in the vehicle, Flat tyres, to be towed, Flat chassis battery or incorrect fuel then the assistance service will charge for any callouts.

Should you have had an accident and need to notify Just go out of hours then please send a text to our out of hours text line.

For any other faults please contact Just go during office hours and our customer service team will be happy to assist.

NB the emergency text line is manned to 8pm each evening Monday to Saturday and to 12 midday on Sunday. Please don't request a return of a vehicle outside office hours as the staff member holding the emergency text phone will not be a key holder and does not have the ability to open the office.

<i>Emergency numbers</i>		
<i>Company</i>	<i>Telephone number</i>	<i>Other info</i>
Police, Ambulance, Fire, Coastguard	UK: 999 Northern Ireland: 999 Republic of Ireland: 112 or 999	
NHS Direct	0845 4647	
Ford Assistance	UK: 0800111234 EU: 0080088776611	
Renault assistance	UK:08000858005 EU:0080033228877	
RAC	UK: 0800 616 300	
	EU: 0033 472435255	
<i>Useful Numbers</i>		
<i>Company</i>	<i>Telephone number</i>	<i>Other info</i>
London congestion	0845 900 1234	
P&O Ferries	08716 646 464	
National Express	08717 818 178	www.nationalexpress.com
National Rail	UK: 08457 484 950 EU: +44 2072785240	www.nationalrail.co.uk
Euro Tunnel	UK: 08443 353 535 France: 0810 630 304 Belgium: 070 223 210 Spain:0034902307315 The NL: 09005400540	www.eurotunnel.com
Luton Airport General enquiries & Lost property	01582 405 100	www.london-luton.co.uk
Heathrow Airport General enquiries	08443 351 801	www.heathrowairport.com
Heathrow Airport Lost property	0208 745 7727	
Stansted Airport General enquiries	0844 335 1803	www.stanstedairport.com
Stansted Airport Lost property	01279 663 293	
Gatwick Airport General Enquiries	08448 920 322	www.gatwickairport.com
Gatwick airport Lost Property	01293 503 162	
Caravan Club General enquiries	01342 326 944	www.caravanclub.co.uk Open Mon – Fri 08:45 to 18:00 (Jan to June) / Mon – Fri 08:45 to 17:30 (July to Dec) / Saturday 09:00 to 13:00
Camping & Caravanning club UK club site bookings	0845 130 7633	www.campingandcaravanning.co.uk
Carefree EU site bookings	08451 307 701 or 02476 422 024	




Complete guide to operating your motorhome *Just go*

Motorhome Exterior:

Your vehicle comes with 3 keys (cab key / motorhome habitation key / steering wheel lock key & a Just go identity key ring which states the last 3 letters of the registration of your vehicle.

Cab Key

- The main cab key shown above opens the both doors of the vehicle's cab. If the main cab key has central locking this only applies to the vehicles cab not the habitation doors, locker or windows. Please make sure you lock the motorhome door with the habitation key shown above.

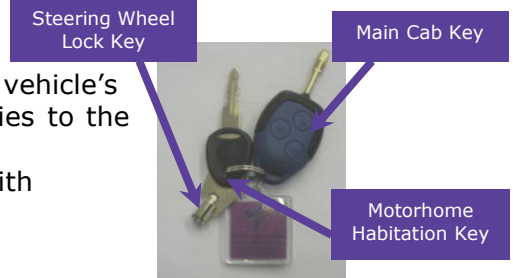

Motorhome Habitation Key

- This key opens the main door to the motorhome and all external compartments to the motorhome.

Steering Wheel Lock

- Please make sure you apply the steering wheel lock when the vehicle is left unattended and at night when you are asleep.
- Make sure you place the lock through the wheel and click the yellow end through the wheel as well to secure.



Diesel Fuel Tank

- Open the fuel tank with the main cab key (shown above). Please note that the motorhome takes **diesel fuel only**. If you are travelling during the winter, at high altitudes or in snowy resorts please refer to *Diesel additives* in the winter section.




LPG Gas – Turning on

- To turn on your gas there is a tap fixing just above the gauge. To open turn this anti clockwise & to close the valve turn it clockwise.
- You will also have to press the green button in for about 3 seconds on the regulator in order for the system to pressurise.
- Please make sure your gas bottle is turned off when the vehicle is moving, unattended or you are asleep.

LPG Gas bottle – Re-filling

- The gas bottle must be completely re-filled upon return to the Just go depot.**
- Always make sure the tap on the bottle is closed before refilling with LPG**
- Remove filler cap & place pump nozzle into the gasflow point. The pump nozzle will have a bayonet attachment so put the nozzle in filler and twist. You will feel that the nozzle is firmly attached. Now squeeze the nozzle handle and lock in the open position. Now go to the LPG pump and push & hold the flow button.
- Do not release the button until the pump stops. The pump will stop automatically when the bottle is full. Please be aware that when you release the filler nozzle it will make a loud whoosh noise, this is normal.
- When re-filling in Europe use the European adaptor which you will find zip tied to the gas bottle. The adaptor needs to be screwed firmly to the filler before inserting filler nozzle.
- Please be aware if travelling to northern Scotland, Ireland, Spain that you should ensure your LPG bottle is full before entering Spain as filling points are few and far between.

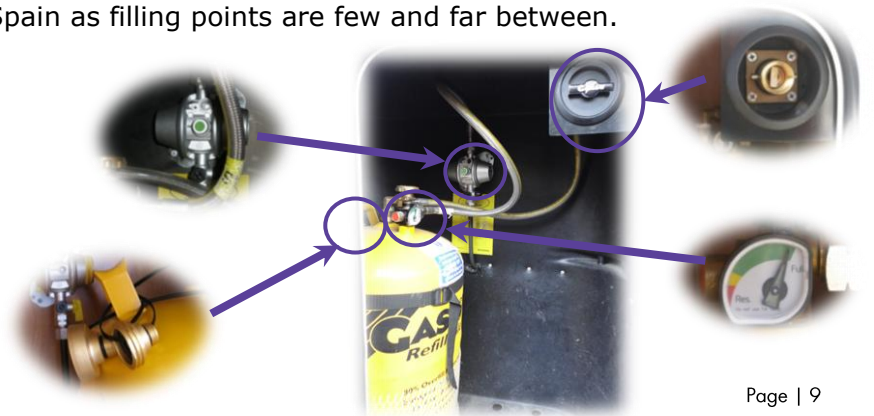

Your gas bottle has a capacity of 20 litres and costs approx £15.00 to fill from empty

IMPORTANT: FIRST FILLING ONLY. In some rare instances it is possible that on the FIRST FILL ONLY, the 80% shut-off may fail to activate. It is therefore **IMPORTANT** to pay attention when filling for the first time.

When using the 11kg cylinder - ensure your maximum fill is no more than 22.5litres. With a 6kg cylinder - the maximum should be 12litres. If you are using a system employing 2 cylinders which are filled together, add the maximum volumes for the cylinders together. e.g. if you are using two 11kg cylinders - your maximum fill should be no more than 45litres. If you are using an 11kg and a 6kg cylinder then your maximum would be no more than 34.5litres. Two 6kg cylinders would be 24litres.

Air may become trapped inside the cylinder on the first filling. This could cause difficulties in lighting your appliances as, being lighter, it sits on top of the gas. If this happens, open the cylinder valve to atmosphere for a few seconds and vent off some gas. This need only be done once.

After your first fill, it is recommended that you should carry out a quick leak check by using a soapy water solution brushed over the stainless steel filling hose connections - checking to see if there are any bubbles.

FILLING AND REFILLING YOUR CYLINDERS

Journalist Andrew Ditton of Caravan Magazine discovers that topping up with LP Gas is no more difficult than filling a car with petrol!

Gaslow installer CMR filled my gaslow cylinder before fitting the system. It was a few weeks before I had used up some gas. I couldn't wait to see how easy or difficult it would be to fill up again. The gaslow refillable system is a safe, simple and well thought-out product. While it may take years to recoup the installation costs through money saved on refills, the simple fact that it puts an end to lifting heavy gas cylinders makes Gaslow an absolute winner. I cannot fault it.

A quick search on the internet soon revealed the locations of LPG stations en route. For those without wireless internet, CMR can sell you a map showing locations of LPG stations across Britain.



The directions on the web site were spot-on and I easily found this garage just off Junction 9 of the M5. It wasn't as easy to find the LPG pump. Believe it or not, it was concealed within this row of pumps. The attendant assured us the signage would be improved.

This is what to look for - a smaller-than-average pump with a larger-than-average nozzle. The normal safety precautions apply: no smoking, switch off your mobile, and turn off the gas supply to the caravan.

Most gas pumps carry comprehensive instructions like these, so don't worry if you do not have this article to hand.

Once I'd found the pump, it was no more difficult to park alongside than with a regular petrol pump. Remove the filler cap from the caravan, take the nozzle from the pump and check the display resets to zero (as you would a petrol pump).

Here is a close-up of the filler attachment on the caravan. Don't worry about the screw thread inside - it's the two lugs you need to deal with.

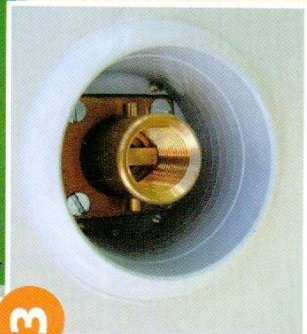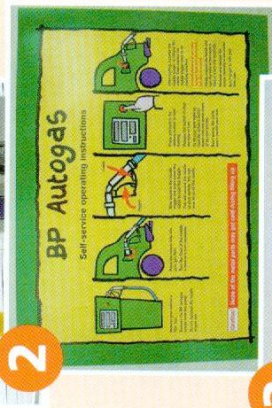

1


2

3

IMPORTANT:
You will need these adaptors when filling abroad!



01-4300
French/Italian
Adapter Adapter

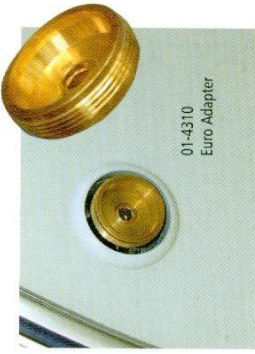

01-4310
Euro Adapter

4 Line up the filler nozzle to the two lugs and then give it a third of a turn clockwise to seal it securely.

4 Now I'm noticing the first major difference between the LPG pump and a petrol pump - you pull the trigger and nothing happens at first. There's nothing to worry about, just keep a grip on the trigger and locate the small clip. Use this clip to keep the trigger in place.

5 When the clip is holding the trigger, you can let go. If the clip is not engaged fully, the nozzle will release and a small spurt of gas will escape. This is nothing to worry about. Try again and use the clip to keep the nozzle pulled in.

6 Now everything is set up securely. Double check that the display reads zero and you are ready to start dispensing gas.

7 There is a big red plunger on the pump that you need to keep depressed to dispense LPG. If you let go, the gas stops. Press again and the pump resumes. Once your Gaslow system has received 80 per cent capacity, the pump will stop automatically. You cannot fill more than that for safety reasons.

After releasing the plunger, unclip the trigger and remove the nozzle by twisting it anti-clockwise one third of a turn. Be careful, as it may be very cold. You'll hear a small rush of gas as the nozzle depressurises. This is normal. All that remains is to replace the nozzle, pay the cashier and try to resist the urge to spend all your savings on chocolate!!

IMPORTANT
Always turn OFF
cylinder valves
BEFORE filling



Fresh Water Tank (holds 100 litres of fresh water)

- To refill unscrew cap and place the hose pipe provided into the tank making sure that the hose is as far down as possible.
- Use drinking water only.
- It should take 10-15 mins to completely fill an empty tank.
- Make sure the pressure of the water supply is not on too strong as the water will be flowing too fast & the tank will not be filled up fully.
- Check levels of tank by using the *control panel* (see 'control panel' section).
- Please ensure all hose & adaptors supplied are returned to motorhome on completion of filling water tank as there is a charge for missing items.
- We do not recommend that the fresh water tank is used for drinking water.



To empty the Toilet Cassette

- Ensure the lever that closes the vent from the loo to the toilet cassette is in the '**closed**' position. (This is **inside** of bathroom, grey lever underneath the toilet bowl, see '*Toilet*' section).
- Unlock toilet cassette door, push in both button at the same time to open.
- Lift up yellow lever and pull cassette out from the locker
- Rotate grey arm upwards and unscrew yellow cap
- Pour contents down designated waste disposal area or conventional toilet.
- Rinse with water and add loo chemical or sachet.



Luggage / Garage compartment Items



Make sure you only empty waste at approved dump points!

Luggage/Garage Compartment:

- Snow Chains – Winter only
- EU Mains Adaptor
- Warning triangle
- Dust pan & brush & Adaptors
- Hose & Bucket
- Aqua Kem Sachets (toilet cassette)
- Electrical Hook up cable
- Plunger

Supplied in your Emergency Box:

- First Aid Kit (pls note this is a chargeable item if used)
- Breathalyser Kit (pls note this is a chargeable item if used)
- 2 x High Vis Jacket
- Spare bulbs & fuses
- Headlight Benders
- Airbox maxi



Snow Chains

Snow chains are supplied with the vehicle upon request and during winter months; please see fitting instructions to follow. The snow chains are only to be used in emergency situation to get you off the road safely. They are not meant for long distance driving. We would recommend a maximum speed of 24km/h (10-15mph) and a maximum distance of 5 miles.

Reversing Sensors

The motorhome is equipped with reversing sensors however Just go always recommends that you have someone helping to direct you when reversing, as the sensors may not always pick up small posts etc. There are no overhead sensors so it will not pick up any overhead obstructions.

If hiring a bike rack please be aware that this does extend past the length of the motorhome, the reversing sensors will not take this into account and therefore cannot be relied upon. Always have some standing behind you when reversing.



Bike Rack

The motorhome can be equipped with a bike rack (upon request), which can hold up to 4 bikes.

- To open the bike rack loosen central arm by undoing the top central red screw and unclip the plastic strap around the middle tray. (pic 1)
- Pull the 3 trays down so they are in a horizontal position. (pic 2)
- Place the bikes on the trays and secure the wheels by clipping the plastic straps around the wheels. (pic 3 & 4)
- Now secure the central arm to the bike frame using the plastic strap. If more than 1 bike secure the bike furthest from the motorhome, this will hold all of them in one place. (pic 5)
- Once the bike rack is not in use fold the trays back to the vertical position and secure with the central arm and plastic strap.
- As the bike rack extends past the length of the motorhome, the reversing sensors will not take this into account and therefore cannot be relied upon. Always have some standing behind you when reversing.

Pic 1



Pic 2



Pic 3



Pic 4



Pic 5



Grey Water Tank

- Grey water is waste water from sinks & shower. Each motorhome has two grey water tanks, one for shower/bathroom sink water, and the other for kitchen sink water.
- The release levers are located underneath the motorhome as pointed out during your tour. Pull lever downwards to release and empty, and put back upwards to close.
- Both tanks are at the rear of the vehicle.
- Make sure the levers are closed, especially before travelling as they will come off whilst travelling over road humps.



Handle in the horizontal position



Handle in the vertical position is closed

Make sure you only empty waste at approved dump points!

Hook up

- In order to hook up your motorhome to a power supply at a camp site, locate the hook up point on the side of the motorhome.
- Open the cover and connect the extension cable provided, then connect the cable to a power supply.
- Note: At some campsites, the end of the extension cable which connects to the campsite supply may need to be twisted to turn it on.



Habitation door (main door into the rear of the motorhome)

- **To close door:** make sure the metal lever on the left hand side of the door, inside the motorhome is in the down (horizontal) position. Gently close the door. If you force it, the lock will break.
- **To lock:** turn the key a half turn to the left and back to the middle.
- **To unlock:** give the key a half turn to the right and back to the middle.
- Alternatively, to lock the door from the inside, move the white lever behind the lock on the inside of the door, to the right to lock it, and to left to unlock it.



Towing eye

- Your towing eye is located on the front passenger side bumper

Nomad Dimensions:

Vehicle width is: 2.34m / 7.68ft

Vehicle length is: 6.49m / 22ft

Vehicle height is: 3.00m / 9.85ft


Are you experiencing problems shutting your door?

Make sure your lever is in the horizontal position and firmly shut the door

Motorhome Interior:



Control Panel (above main entrance door)

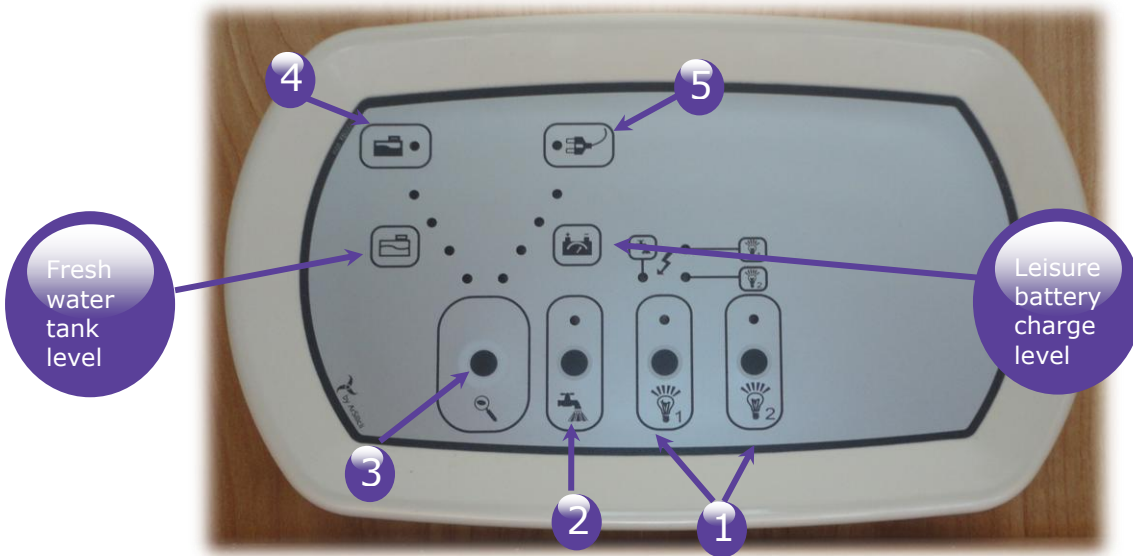

- 1 **Power:** Press the 'light bulb' switch to enable lights on.
- 2 **Water pump:** Press the 'water tap' button to turn the water pump on. This ensures that you can use the shower/sinks/loo flush etc. **Remember to turn it off when water is not required.**
- 3 **Water:** Press the 'test' button to check the level of fresh water left in the tank. Lights by the side of the 'water tank' symbol (box with curved top), indicate the level of water with a gradual scale. If all light illuminate, then the fresh water tank is full, and vice versa.
Leisure Battery: Press the 'test' button to check the leisure battery charge level. Lights by the side of the 'battery symbol' (box with +/- signs above it), indicate the level of battery power left with a gradual scale, the same as with the water. Note: When you are connected to an electrical hook up all the lights will illuminate, regardless of the leisure batteries level.
- 4 **Grey water:** The light on top of the panel (box half shaded with curved top), above the 'fresh water tank' symbol will turn red if grey water tank is full.
- 5 **Mains electricity connection:** when connected to 240V electrical hook up, an orange light will be displayed on the control panel, next to the 'plug' symbol.

This little gizmo is the heart of your motorhome. From turning on your lights to checking you leisure battery level

Lights

- **To switch on:** Turn the 'power' button on at the control panel, (see above). This works like a master light switch, and should be turned off as you leave the motorhome.
- All interior lights have their own power on/off switch.
- If none of the lights work, then either the master 'power' switch has not been turned on (see above), or the leisure battery has run out of power. Either turn the engine on to recharge the battery, or connect to a 240V electrical hook-up source to power them.

Hob

- Make sure the gas bottle is turned on.
- Works like a normal gas hob. Turn, depress and hold the relevant knob for 3 seconds and then light with a match.
- Make sure you switch off when not in use.
- Never close the lid when a flame is alight as glass lid will shatter.




Microwave (Works like a normal microwave)

- Will only work if you are hooked up to a 240v power supply or a generator. (please only use generator supplied by Just go unless otherwise agreed)
- Note: If the microwaves seem to work but is not cooking anything, it means your electrical source is not powerful enough. It needs to be a 16amp, 240v source. Campsite power supplies do vary particularly European campsites which supply insufficient power to run items like the microwave.

OPERATING YOUR MICROWAVE OVEN





1 . MICROWAVE COOKING

Select different microwave power level and set cooking time as you wish. There are five power levels available for choosing in the below chart. The maximum microwave cooking time is 99 minutes and 99 seconds. Keep on pressing "  " to choose the suitable power level.


Microwave Power Chart

Press "POWER LEVEL"	Microwave Power	Display
Once	100%	P100
Twice	80%	P 80
Thrice	50%	P 50
4 times	30%	P 30
5 times	10%	P 10





Example: Choose 50% power for cooking 10 minutes.

- (1) Press "  " three times to select power level 50%; 
- (2) Press the numeral buttons of "1", "0", "0", "0" in order to set the cooking time; 
- (3) Press "  " to start cooking, the time will start to count down.

2 . SPEEDY COOKING

When the unit is in waiting state, press on "  " can start cooking at 30 seconds with 100% microwave power. Each additional press will increase the cooking time by 30 seconds until the accrued time reaches 1 minute 30 seconds or less. By then, each press will increase cooking time by 1 minute, the maximum cooking time is 12 minutes.





Example: Set 3 minutes speedy cooking:

- (1) Press "  " once to start cooking, LED will display "0:30"; 
- (2) Press "  " again for 4 times, the cooking time will be 3 minutes. 

6 . SPEEDY DEFROST

Defrost the food with shorter time. Ensure to distribute the food as evenly as possible on the turnable.

Example: Defrost beef of 500g

- (1) Press "  ", LED displays "dEF2"; 
- (2) Press "5" "0" "0" in order, the range of defrosting weight is 100g-1200g; 
- (3) Press "  " to start defrosting.






7 . MICROWAVE AUTO FUNCTION

This function is designed to cook food by weight. The tables below show details of each program and the power level taken to cook on the weight of food.

Auto function weight adjustment chart




Pad	Display	Cook	Pad	Display	Cook	Pad	Display	Cook
1	A-1	Auto Reheat	4	A-4	Meat	7	A-7	Pizza
2	A-2	Vegetable	5	A-5	Pasta	8	A-8	Soup
3	A-3	Fish	6	A-6	Potato	9	A-9	Chicken

Example: Cook vegetable of 350g:


- (1) Press "  " button, repeatedly until the LED displays "A-2". 
- (2) Press "  " button three times to choose weight, LED will display "350"; 
- (3) Press "  " to start cooking, time will start to count down.

4 . Pre-set function

Example: to start a cooking at 12:12 with current time at 8:00.

- (1) Set the preferred cooking function (Microwave / Defrost) but do not press "  " to start the cooking.
- (2) Press "  " to current time will be display and 1st figure will flash.
- (3) Press "1", "2", "1", "2" to set the start time.
- (4) Press "  " to confirm the setting. The unit will turn back to the clock state.
- (5) Cooks begin when the time arrives.

Note: (1) If the setting is not within the range 0:00–23:59, the setting will be invalid;





(2) In the process of setting, if "  " is pressed or there is no operation within 1 minute, the unit will go back to the previous state automatically;

(3) The clock must be set before set the delay start cooking. If the pre-set cooking has not been programmed and only time to start cooking is set, the whole set will be regarded as an alarm clock setting and 5 beeps will be sound when the pre-set time is reached.


5 . DEFROST BY WEIGHT

The defrosting function is the gentle thawing of uncooked food. Flat foodstuff thaws better than bulky food. Ensure to distribute the food as evenly as possible on the turnable.

Example: Defrost beef of 500g:

- (1) Press "  ", LED will display "dEF1"; 
- (2) Press "5", "0", "0" in order, the range of defrosting weight is 100g-2000g. 
- (3) Press "  " to start defrosting.

RCD Unit (residual current device)

- This is located in a kitchen cupboard underneath the side. This can be accidentally knocked as located behind pots, pans etc.
- If you experience no 240v power please check to make sure the switch is on. i.e switch is in the 'up' position. 
- If this is tripped or knocked accidentally then the 240V supply will not work.



Gas Isolation Switches (located in a kitchen cupboard underneath the side)

- These switches isolate various gas functions on board the motorhome.
- The switch which has a picture of a pan is for your gas hob and should *always* be in the horizontal position.
- The switch which has a picture of a tap/boiler is for your water boiler and should *always* be in the horizontal position.
- The switch which has a picture of a snow flake is for your gas supply to the fridge. Just go isolates this for safety reasons and should always be in the vertical position. If you find you are without power for the whole duration of your hire i.e Festivals, you can phone the office and we can guide you through running your fridge on gas (see fridge section below).



Plug Socket

- The plug socket will only work if you are connected to a 240V electrical hook-up source or a Just go generator.
- Note: The plug socket will not work when you are travelling.



Combi Heater System

The motorhome has a combi system and both hot water and the heating are controlled via the same switch. The outer rotary switch is the main control, while the dial inside the rotary switch is the temperature thermostat control used when the heating is on.

- When the outer grey dial is at the 3 O'clock position & pointing to the 'O' symbol the system is off..
- **To switch on hot water:** Turn on gas and water pump. Move the outer rotary switch anti-clockwise to either the 40°C or 60°C symbols and the boiler will switch on and begin to heat the water. A green light will appear. It will take approximately 20 mins to heat it up. Switch both the boiler and water pump off when finished.
- **To switch on heating:** Turn on gas. Make sure the inner thermostat dial is turned down to the lowest setting. Then turn the outer rotary switch clockwise down one click, to the 4 O'clock position to the flame only symbol to ignite the heating system. Once ignited, you can turn the thermostat dial to the desired setting.
- **To switch on heating and hot water:** Turn on gas and water pump. Turn the outer rotary switch clockwise down one click to the flame symbol. Wait 10 seconds or so until the boiler ignites. Once ignited, you can then move the outer rotary switch clockwise down one more click to the bottom flame symbol with 60°C next to it. This will heat the hot water to 60°C only, the heating can be regulated with the thermostat dial. Hot water will take longer to heat on this setting.
- **Failure to work:** If after a few minutes a red light appears, then the combi system is not working! Please don't confuse this with an orange light as this means the boiler is heating up. Sometimes there can be an airlock in the gas pipe so re-set the dial to 'off' (3 o'clock position) & then turn it back on again. It can take up 3 or 4 attempts to start it. If this fails then either, the gas has not been switched on/needs refilling, or there is no water in the boiler, or the temperature dial is not set to its lowest setting. Turn the water pump on by pushing the 'water tap' switch, on the control panel to get water into the boiler. Make sure there is water in the fresh water tank in order to do this. (see *control panel water tank sections*). If you are trying to get heating N.B. The combi system will not work if the leisure battery is flat. You will need to connect to an electrical hook-up or turn the engine on to charge the battery first.
- Turn off when not in use. **Never leave the combi boiler on (including heating) whilst the motorhome is moving, unattended or you are asleep!**



Frost Protection Switch

During the colder months when the temperature drops the frost protection switch will automatically drop down and empty the water from the boiler to stop it freezing. The location of the switch is next to the boiler as pointed out during your tour. In order to get water from the fresh water tank you need to reset this valve.

- Open the rear wardrobe and look open the floor in front of the boiler.
- To reset the frost protection valve hold the blue button in.
- Note: If you have your water pump switched on and the frost protection valve drops down it will empty all of the water out of the fresh water tank and burn out the pump.
- To avoid this keep your water pump switched off when not in use.



Push blue button in to reset

No Water? Check this device out first if you experience water running underneath your motorhome

Window Operations – open, close, fly screen & blind

- **To open:** Undo all latches; push window out until it clicks into the extended position desired.
- **To close:** Push window all the way out and let window fall back to closed position. This should never be forced.
- **Fly screen:** Carefully squeeze together the central plastic catch and pull gently down until it clicks into the 'night blind' securely.
- **Night blind:** Ensure fly screen is clicked into place on the night blind, then carefully squeeze together plastic catches either side of fly screen catch and pull the blind gently up.
- **All windows must be closed when vehicle is in motion**



open



Fly Screen



Night

Roof vent window operation

- Gently rotate arm to open roof vent
- Secure in place with plastic strap.
- To close, gently rotate the plastic handle in opposite direction to close the vent firmly.
- **All sky windows need to be closed when vehicle is in motion.**



Vent Closed




To Open



Vent Open

Bathroom - Toilet

- The seat swivels to give extra leg room. (See pic 1 below)
- Lever underneath bowl opens and closes the vent to the loo cassette below. We recommend this is closed when not in use, and especially whilst travelling. (see pic 2 below)
- **Flush:** make sure water pump is on (see 'control panel' section) press and hold blue button.
- To empty the toilet cassette, (see 'Toilet cassette' section)
- The orange light illuminates when the toilet cassette is full & needs emptying. We recommend you do not leave it till this happens as it can be very heavy and too full by this stage. Dependent on how often you use the toilet, always empty every other day if there is only two of you or every day if more people are onboard. (see pic 3 below)
- After emptying add the toilet chemicals sachet to the cassette by dropping one down the toilet from the inside of the motorhome and releasing it to the cassette below. This will keep everything smelling fresh and will break down the contents.

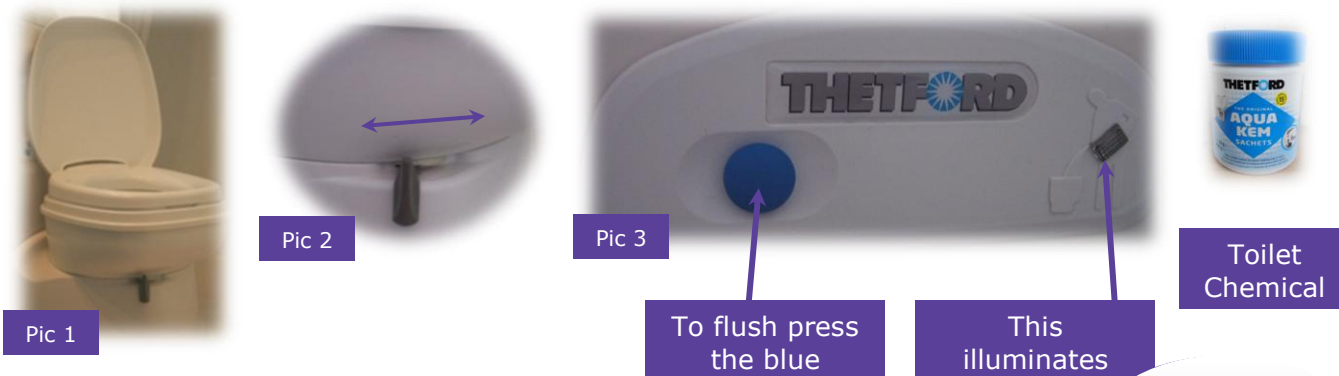

Shower Operation

- Make sure water pump is on (see 'control panel')
- Operates like a normal shower
- You will only get hot water, if the boiler has been turned on. This will take approximately 20 minutes to heat up, (see *hot water control*).
- The shower head is located as part of the tap on the sink. In order to use as a shower you need to pull the shower head out of the sink and then pull out enough to place in the holder located on the ceiling.
- Once fitted in place you can use the shower curtain to run around the shower rails to create a circular shower area.

Remember you need to switch your water pump on to use your taps, shower & toilet flush



Sink Operation

- Make sure water pump is on (see 'control panel')
- Operates like a normal mixer tap.
- You will only get hot water, if the boiler has been turned on. This will take approximately 20 minutes to heat up, (see *hot water control*).
- When using the sink please make sure no food waste, oils etc are emptied down the plug hole as this may cause a blockage and will cause the grey water tanks to become clogged. A plunger is provided should this happen.

TV System

Please follow the guidelines below to use the TV system onboard.



Please note:

Light switch number 2 on the control panel will need to be on for the TV to be able to receive any signal

- Turn the TV on by using the TV remote & pressing the round on/off button
- Again using the TV remote Select the menu button
- Manually select the Auto scan option by using the arrows on the remote and selecting OK
- You will be asked to enter the country that you are currently in, select by pressing OK
- The TV will now tune into the channel available for that region.
- **Please Note this can take up to 15 minutes.**

You will be able to keep an eye on the process of the search by the below display which will appear on the screen




- Use remote P+/P- buttons to go up/down through the different channels
- Alternatively Click the EPG button on the remote which will bring up the channel program guide in greater detail



Fridge

- Turn the fridge on by pressing and holding down the grey On/Off button for a few seconds. The display will flash when the power is on
- The fridge can run on 2 different power supplies;
 - 240v hook-up socket, use when connected to the electric hook-up (plug symbol)
 - 12v leisure battery, only works when the engine is running! (battery symbol)
- Press and hold the grey select button for a few seconds until the power display flashes
- Using the left/right buttons select either the battery symbol or the plug symbol
- Press and hold the grey select button again to make confirm the setting
- The Temperature gauge will now flash, using the left/right buttons you can turn the temperature up or down
- Press and hold the grey select button once more to confirm the setting and your fridge will now be ready to use

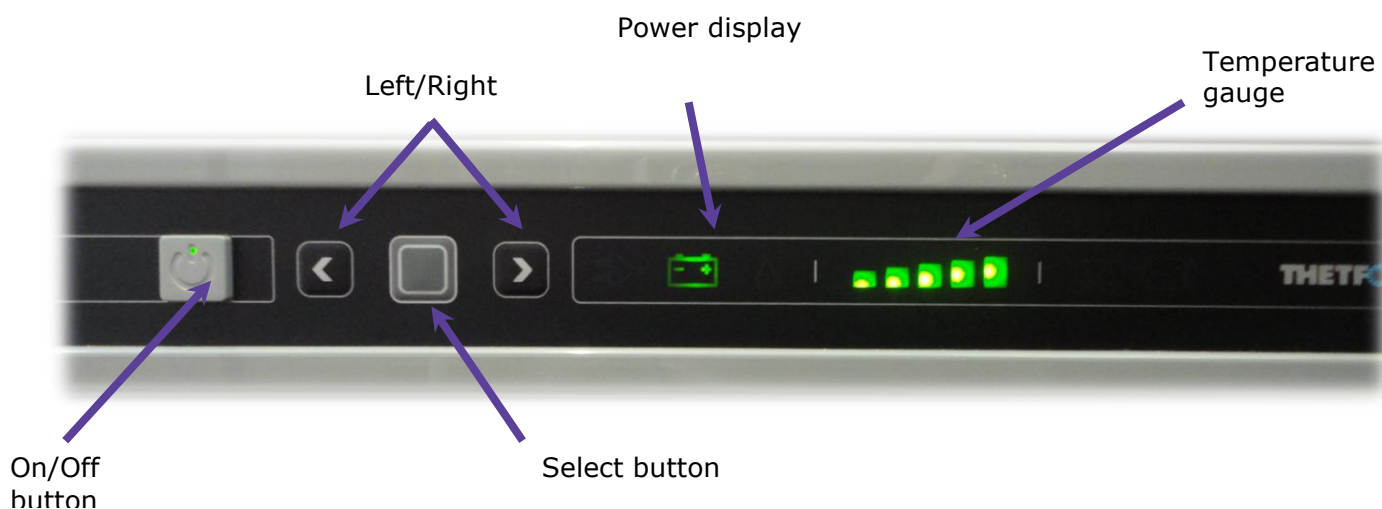

- The RHS knob controls the temperature, rotate clockwise for coldest temperature settings.
- The fridge can also work on gas, Just go isolates this for safety reasons. If you find you are without power for the whole duration of your hire i.e Festivals, you can phone the office and we can guide you through running your fridge on gas.
- Just go advises that you turn your gas off whilst the vehicle is moving, left unattended and whilst you are sleeping.
- Please make sure you park the vehicle on level ground, any kind of incline and the fridge will not work.
- If the weather is really hot in the late 20's to 30°C, the fridge will not be able to work.
- When loading the fridge try and put as much pre chilled items in as possible as this helps to bring the internal temp down quickly.

Door handles / Cupboards


- Please be careful when opening the cupboard doors especially overhead cupboards, make sure you use your other hand to stop items i.e. glass/cups falling out as items dislodge when the vehicle moves.
- Make sure all cupboards are closed whilst vehicle is moving.
- To access the cupboards you need to push the button in and it will pop out.







Bed conversion

- Dining area behind the driver's seat:**




To start, place all the seat belts into their holders to keep them out of the way.

<p>i. Depress the button found mid-way down leg of the table and rotate the bottom half of the leg upwards, to make a right angle.</p>	<p>ii. Tilt the whole table upwards and lift free from the back brackets.</p>	<p>iii. Rest table top down on the wooden ledges between the two seats to fill the gap.</p>	<p>iv. Use cushions from the rear of the seat to cover the table area and form the mattress.</p>
			

- If the bed is to be enlarged into a full double:**

<p>i. With both hands pull the side extenders out evenly to create a large double bed</p>	<p>ii. Fill these gaps with the 3 spare cushions.</p>	<p>iii. Fill middle gap where table top is between the two bench seats, by pulling the table top forward, level with the edge of the other support boards, and fit the spare support board (found in the wardrobe), between the table top and the wall.</p>	<p>iv. Use the three spare cushions on the Luton bed above the cab to complete the mattress.</p>
			

- Luton bed over the cabin:**
 To put the bed back just reverse the below instructions.

i. Pull the bed out towards you, making sure you pull the bed inline/square.	ii. Push the mattress into position.	iii. Always use the ladder provided to climb up and down.
 iiiii. Do not pull extension board all the way out. If it comes out too far it will flex in the middle		

ZZZZZ...
 No need to worry about sleepless nights with our bed conversion instructions

Remember to remove all footwear when climbing on the beds & seating around the dinette table