

# **8L DEHUMIDIFIER**

# **OPERATING INSTRUCTIONS**



**Attention:** This Dehumidifier is rated to extract 8L per day in an environment of 80% humidity and temperature of 30°C. This is the world-wide standard for rating dehumidifiers. In New Zealand we do not have climatic conditions with this humidity and high temperature. Accordingly the extraction levels will be lower.

Model: CELDH80

WARNINGS AND SAFEGUARDS Use only the voltage specified on the rating 17. Always unplug appliance when not in use.

label of the appliance.

3.

4

5

6.

7

8.

9.

Keep all objects at least 1 metre from the front, sides and rear of the appliance. Do not 19. Do not twist, kink or wrap the cord around the place appliance close to radiant heat source. Do not operate in areas where petrol, paint or

other flammable liquids are used or stored. Do not insert or allow foreign objects to enter any ventilation or exhaust opening, as this may cause an electric shock, fire or damage 20.

Do not operate this appliance with a damaged cord, plug or after the appliance malfunctions

to the appliance. Do not sit on the appliance.

or has been dropped or damaged in any manner. Return to a qualified electrical person for examination, electrical service or repair. This appliance is intended for household use only and not for commercial or industrial use. Use this appliance only as described in this manual. Any other use is not recommended

by the manufacturer and may cause fire, 22. When the appliance has been unpacked, electrical shock or injury. The common cause of overheating is deposits of dust or fluff in the appliance. Ensure these deposits are removed regularly by unplugging the appliance and vacuum cleaning the air vents and grills. Do not use abrasive cleaning products on this

appliance. Clean with a damp cloth (not wet) rinsed in hot soapy water only. Always remove plug from the mains supply before cleaning. until completely assembled and adjusted.

10. Do not connect the appliance to mains supply 11. Switch off and use handles provided when movina. 12. Do not operate with cord set coiled up as a heat build up is likely, which could be

sufficient to become a hazard. 13. It is recommended that this Dehumidifier is plugged directly into the wall socket. Power boards are not rated to supply power to high wattage appliances.

14. A correctly specified, undamaged extension cord may be used with this Dehumidifier provided it is used in a safe manner. 15. Do not remove plug from power socket until the appliance has been switched off.

16. Do not remove plug from power socket by 30. It is important that you do not cover this pulling cord; always grip plug. SUPPORT AND TECHNICAL ADVICE celsius Celsius - New Zealand Monday - Friday 8am-5pm Phone +64 (0)9 917 4000

info@celsius.co.nz

parts have been delivered. If parts are missing or the appliance has been damaged, contact

23.

the Celsius Customer Services Team. If your appliance does not work, or is not working properly, contact the place purchase or the Celsius Customer Services Team. Repair work on the appliance by unqualified persons can cause serious risk to the user.

be immersed in any liquids.

24. There are no user serviceable parts installed in the unit. 25. Do not place the unit in wardrobes or other enclosed spaces as this may cause fire hazards. 26. This unit is not supposed to be used in or around locations where foodstuffs, works of

18. Do not locate the dehumidifier directly below

appliance, as this may cause the insulation to

weaken and split. Always ensure that all cord

has been removed from any cord storage area

This appliance is not intended for use by

persons (including children) with reduced

physical, sensory or mental capabilities or lack

of experience and knowledge, unless they are

supervised or have been given instruction

concerning the use of the appliance by a

Do not use this appliance in the immediate

surrounds of a bath, a shower, or a swimming

pool or other liquids. The appliance must not

check it for transport damage and ensure all

person responsible for their safety.

any power socket during operation.

and is unrolled before use.

art or delicate articles of science, etc are stored. 27. Indoor use only. 28. Children should be supervised to ensure that they do not play with the appliance.

29. Ensure dehumidifier is on a flat, stable, heat-

dehumidifier.

Celsius – Australia Monday - Friday 8am-5pm

Phone +61 (0)3 9336 4423


Phone 1300 465 324

info@celsius.co.nz

resistant surface.

Phone 0800 232 633

## **COMPONENTS**

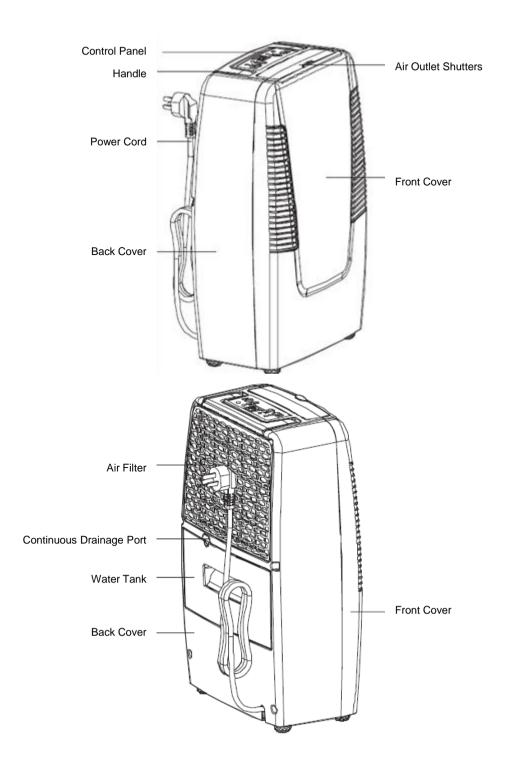

#### OPERATING INSTRUCTIONS

Always choose a safe location for the Dehumidifier, keeping in mind the safety precautions outlined. Ensure all packaging has been removed from the unit before use. This appliance requires no installation, it should be used solely as a portable appliance.

WARNING Keep all objects at least 1 metre from the front, sides and rear of the appliance.

Leave the appliance to stand for one hour after transport or after the unit has been on its side before connecting it to the mains supply to let the refrigerant settle.

Ensure that the water container is positioned correctly.

Ensure all external windows and doors are closed before turning on the unit.

Plug into power supply and switch on at the mains. The dehumidifier will display the current humidity level on the control panel. The POWER indicator light will illuminate to show power to the unit.

To turn the Dehumidifier on, press the POWER button.

Use the FAN SPEED button to switch between High and Low fan speeds.

As long as the water container is not full, the Dehumidifier will continue to operate until it is switched off manually. If the Dehumidifier is switched off manually and then switched back on, the compressor will start to

To turn the Dehumidifier off, press the POWER button.

operate after three minutes.

The louvre can be adjusted manually by lifting the Louvre at the opening and pushing it upward or

pressing it back down to closed. This Dehumidifier is designed to provide an optimum performance. It is not recommended to operate

in ambient temperature exceeding 35°C or Lower than 15°C. Press the HUMIDITY SET Button to set the desired humidity level in the room, each press of the

HUMIDITY SET button will adjust in 5% increments from 40-80%. Once you have set the desired humidity level, the LED will display the room humidity level again and will adjust as the room humidity level increases or decreases.

When the relative humidity in the room is lower then the selected humidity, the unit will automatically

stop dehumidifying until the humidity level increases again.

## TIMER OFF

When the unit is operating press the TIMER button to set the length of time that you would like the unit to run for before turning off. Each press of the TIMER button will adjust the length of time by 1 hour increments from 1 - 24hours. To turn off the Timer function, set the Timer back to "00" hours or simply turn the unit off.

#### TIMER ON When the unit is Off press the TIMER button to set the length of time that you would like the unit to

remain off before turning on. Each press of the TIMER button will adjust the length of time by 1 hour increments from 1 – 24hours. To turn off the Timer function, set the Timer back to "00" hours or simply turn the unit on manually.

WARNING! Take care in positioning your dehumidifier, using the timer will mean the unit will come on automatically. Fire may result if placed next to combustible material.

WATER TANK FULL A beep signal will sound 15 times. The WATER FULL indicator light will illuminate on the control

panel. The compressor will stop automatically, and the unit will stop dehumidifying.

Empty the water container and replace it in the correct position. The Dehumidifier will continue dehumidifying when the compressor automatically restarts after approximately three minutes.

#### PERMANENT WATER DRAINAGE

It is possible to connect a drainage tube (not supplied) to the unit for permanent water drainage. If this option is desired, you will need to purchase a suitable tube from your local hardware retailer. (Celsius does not hold tubes as spare parts).

Ensure that the end of the tube is lower than the drain opening, otherwise the water will not drain and flooding may occur. Also ensure the water tank is in position (in the unit) otherwise the continuous drainage will not operate.

Place the end of the drainage tube in a drainage outlet. When you no longer wish to use the permanent water drainage, disconnect the drainage tube from the device.



1. Remove the water tank



2. Remove the rubber stopper from the water outlet port



3. Connect the plastic tube onto the water outlet port



4. Replace the water tank

#### CARE AND CLEANING

Do not attempt to dismantle the Dehumidifier. There are no user serviceable parts. For service or repair, contact an authorised electrical service technician.

Unplug the Dehumidifier from the mains supply before cleaning.

Ensure that the Dehumidifier has been allowed to cool down completely before cleaning.

Use a damp cloth (not wet) to wipe the exterior of the Dehumidifier to remove dust and dirt.

Use a vacuum cleaner to remove dust and fluff from around the grills.

Never use solutions such as benzene, thinners or polishing agents.

Ensure the Dehumidifier is dry before plugging back into the mains supply.

#### TO CLEAN THE AIR FILTER:

Unplug the Dehumidifier from the mains supply. Remove the filter. Clean the filter with a vacuum cleaner to remove dust or if it is exceptionally dirty, wash it with warm water and a mild detergent. Ensure the filter is completely dry before placing back in the unit. Never use unit without the air filter.

Do not attempt to dismantle the dehumidifier. There are no user serviceable parts. For service or repair, contact an authorised electrical service technician.

Do not use this Dehumidifier with a programmer, separate timer, separate remote-control system or any other device that switches the Dehumidifier on automatically.

#### **STORAGE**

To store the unit, remove the plug from the socket and empty the water tank. Allow the container and the Dehumidifier to dry completely. Clean the air filter. Store the device in a dust-free location, preferably covered with a sheet of plastic.

#### IMPORTANT! NEVER COVER THIS DEHUMIDIFIER!

#### TROUBLE SHOOTING YOUR DEHUMIDIFIER

Problem	Cause	Solution
The Dehumidifier will not turn on	The power is not connected	Insert plug into mains power supply and turn unit on
The Dehumidifier is not extracting water	The water tank is full	Remove the water tank and empty water
	The water tank is not in its correct position	Remove water tank and replace it correct position
	The air filter is clogged	Clean the air filter as per instructions in user manual
	The temperature or relative humidity in the room is too low	It is normal for the Dehumidifier not to operate in low humidity or low temperatures
The Dehumidifier operates, but reduces the relative humidity in the room by small amounts	The room which the Dehumidifier is operating in is too large	Recommend using a Dehumidifier with a larger capacity
	There are too many sources of humidity	Recommend using a Dehumidifier with a larger capacity
	The room has too much ventilation	Reduce the number of ventilation sources (i.e. close windows, doors, etc.

#### TECHNICAL SPECIFICATIONS

Model No: CELDH80

Supply: 220-240VAC 50Hz

Wattage: 200W

Unit Capacity: 8L/day max (30°C/80%RH)

Tank Capacity: 1.5L

Refrigerant: R134a/90g

### PROOF OF PURCHASE

To receive warranty retain receipt as proof of purchase. (Refer to back of booklet).



# One Year Warranty

Thank you for purchasing this Celsius product. Your product is warranted against faults and manufacture when used in normal domestic use for a period of **one year**. In non-domestic use Celsius limits the voluntary warranty to **three months** 

Celsius undertake to repair or replace this product at no charge if found to be defective due to a manufacturing fault during the warranty period.

This warranty excludes damage caused by misuse, neglect, shipping accident, incorrect installation, or work carried out by anyone other than a qualified electrical service technician.

PLEASE KEEP YOUR RECEIPT AS THIS WILL HELP VERIEV YOUR WARRANTY

The benefits given to you by this warranty are in addition to other rights and remedies available to you under law in relation to the goods or services to which this warranty relates.

In Australia, our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

In New Zealand this warranty is additional to the conditions and guarantees of the Consumers Guarantee Act (1993).

#### Celsius - New Zealand

PO Box 100-707 N.S.M.C Auckland

Phone +64 (0)9 917 4000 Phone 0800 232 633 info@celsius.co.nz Celsius – Australia

PO Box 574 South Morang Victoria, 3752

Phone +61 (0)3 9336 4423 Phone 1300 465 324

into@ceisius.co.nz	into@ce	eisius.co.nz
Celsius One Year Warranty (IMPORTANT: Please complete and retain	n this warranty card)	
Name		
Address		
Place Of Purchase	Date Of Purchase	
Name Of Product	Model Number	
Attach a copy of the purchase receipt to this warranty card		

Due to continual design improvements, the product illustrated in this User Manual may differ slightly from the actual product.