



The Possible Of Impossible

ATI 690G/690C

Socket AM2 Processor Mainboard

ATI 690 Series

User Manual

Website: <http://www.jwele.com>

Rev: 1.00, Aug 2007
P/N: 80ENATI690

Disclaimer

The intellectual property of this manual belongs to our company. The ownership of all of the products, including accessories and software etc. belong to our company. No one is permitted to copy, change, or translate without our written permission.

We compiled this manual based on our careful attitude, but we can not guarantee the accuracy of the contents. This manual is purely technical documentation, without any hint or other meanings, and we won't commit users' misunderstanding of the typesetting error.

Our products are in continuous improvement and updating, Therefore, we retain the right that we won't give notice to the users in future.

Copyright

All of the trademark in this manual belong to their own registered company.

All of the products name is only for identification, its title belongs to its manufacturer or brand owner.

Table of Contents

Chapter 1 Introduction	3
1.1 Package Checklist	3
1.2 Specifications	4
1.3 Mainboard Layout	5
1.4 Connecting Rear Panel I/O Devices	6
Chapter 2 Hardware Setup	7
2.1 Choosing a Computer Chassis	7
2.2 Installing Mainboard	7
2.3 Installation of the CPU and CPU Cooler.....	8
2.3.1 Installation of the CPU	8
2.3.2 Installation of the CPU Cooler	9
2.4 Installation of Memory Modules.....	9
2.5 Connecting Peripheral Devices.....	10
2.5.1 Floppy and IDE Disk Drive Connectors	10
2.5.2 Serial ATA Connectors	10
2.5.3 PCI and PCI Express slots	10
Chapter 3 Jumpers & Headers Setup	11
3.1 Checking Jumper Settings	11
3.2 CMOS Memory Clearing Header	11
3.3 Keyboard Power Function	11
3.4 FAN Power Connectors	12
3.5 Front Panel Switches & Indicators Headers	12
3.6 Additional USB Port Headers	13
3.7 Serial Port Headers	13
3.8 IR Connection Headers	13
3.9 Front Panel Audio Connection Header.....	14
3.10 Internal Audio Connectors	15
3.11 ATX Power Input Connectors	15
Chapter 4 BIOS Setup Utility	16
4.1 About BIOS Setup	16
4.2 To Run BIOS Setup	16
4.3 About CMOS.....	16
4.4 The POST (Power On Self Test).....	16
4.5 BIOS Setup — CMOS Setup Utility.....	17
4.5.1 CMOS Setup Utility	17
4.5.2 Control Keys	18
4.5.3 Standard CMOS Features	19
4.5.4 Advanced BIOS Features	21
4.5.5 Advanced Chipset Features	23
4.5.6 Integrated Peripherals	25
4.5.7 Power Management Setup	28
4.5.8 PnP PCI Configuration	29
4.5.9 PC Health Status	30
4.5.10 Frequency/Voltage Control	31
4.5.11 Load Fail-Safe Defaults	32
4.5.12 Load Optimized Defaults	32
4.5.13 Set Supervisor/User Password	32
4.5.14 Save & Exit Setup	33
4.5.15 Exit Without Saving	33
Chapter 5 Driver Installation	34

Chapter 1 Introduction

1.1 Package Checklist

Thank you for choosing our product.

Please check the following packing and accessories, if there is any broken or part missing, please contact with your franchiser.


- HDD Cable X 1
- Serial ATA Cable X 1
- Rear I/O Panel X 1
- User's Manual X 1
- Driver/Utility CD X 1
- FDD Cable X 1 (Optional)
- Serial ATA Power Cable X 1 (Optional)

The items listed above are for reference only, and are subject to change without notice.

1.2 Specifications

CPU	- Socket AM2 for AMD® Athlon™ 64/Ahtlon™ 64 FX/Athlon™ 64 X2/ Sempron™ Processor - AMD 64 Architecture enables 32 and 64 bit computing - Supports up to 1GHz Bandwidth - Supports Hyper Transport - Supports AMD CPU Cool 'n' Quiet Technology
Chipset	- Based on AMD RS690G/690C+SB600 chipset
Graphics	- Integrated ATI Radeon X1250 graphics (for RS690G chipset only) - Integrated ATI Radeon X1200 graphics (for RS690C chipset only)
Main Memory	- 4 x 240-pin DIMM slots support - Maximum memory capacity up to 4GB - Supports Dual Channel DDRII 533/667/800MHz
BIOS	- Supports Plug&Play - Supports Advanced Power Management ACPI - CPU temperature, Fan speed, System Voltage monitoring
Integrate Ports	- 1 x PS/2 Keyboard port - 1 x PS/2 Mouse port - 1 x VGA port - 1 x DVI port (optional) (for RS690G chipset only) - 1 x RJ45 port - 8 x USB 2.0 ports, USB 1.1 is compliant - 1 x COM port - 1 x IR port (optional) - 4 x SATA 3Gb/s supports SATA RAID 0,1,10 - 1 x IDE connector, 2 x IDE devices could be connected, support ATA 66/100/133 - 1 x Floppy Drive, supports 360K/720K/1.2M/1.44M/2.88M floppy disk
Sound	- Onboard 6-channel/8-channel HD Audio Codec (Optional) - Supports 16 bit Audio Codec - Positioning Audio Support A3D, I3DL2 - Front Panel Jumper, provides stereo MIC port on front panel
Onboard LAN	- Onboard 10/100/1000Mb compatible LAN (Optional)
Expansion Slots	- 1 x PCI Express x16 slot - 2 x PCI slots - Support PCI Bus interface v2.2 compliant
Form Factor	- Micro-ATX


1.3 Mainboard Layout

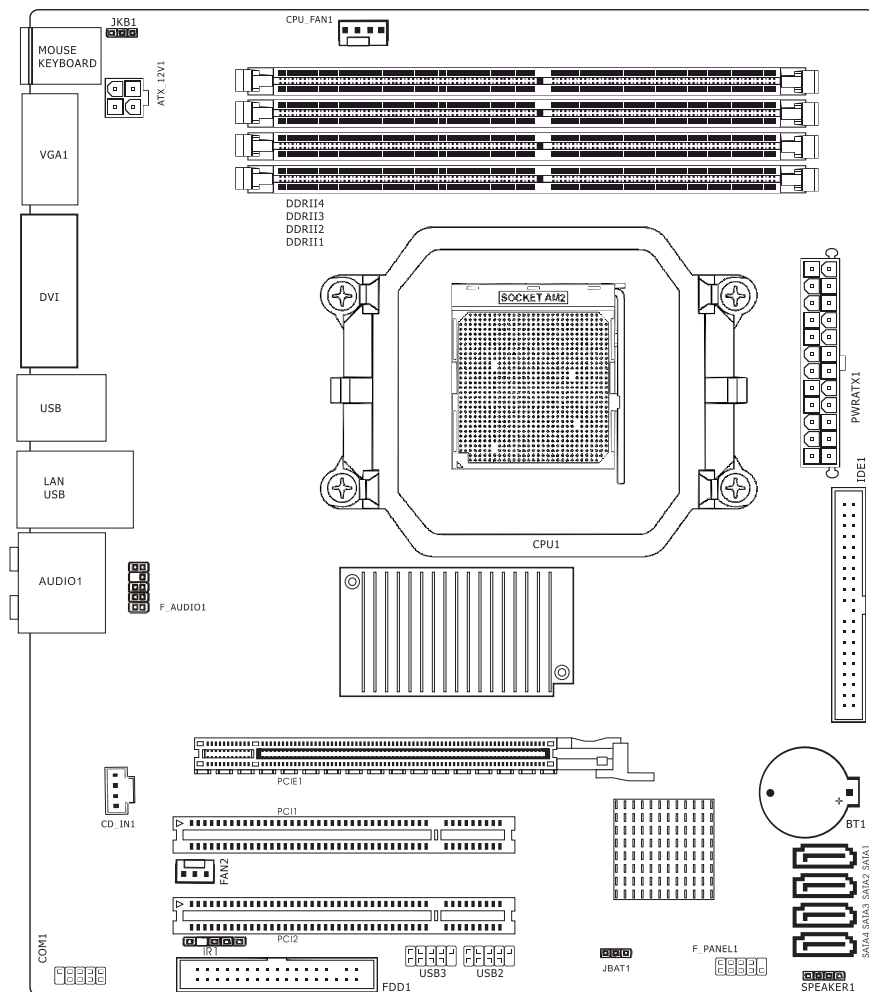

(This picture is only for reference)

1.4 Connecting Rear Panel I/O Devices

The rear I/O part of this mainboard provides the following I/O ports:

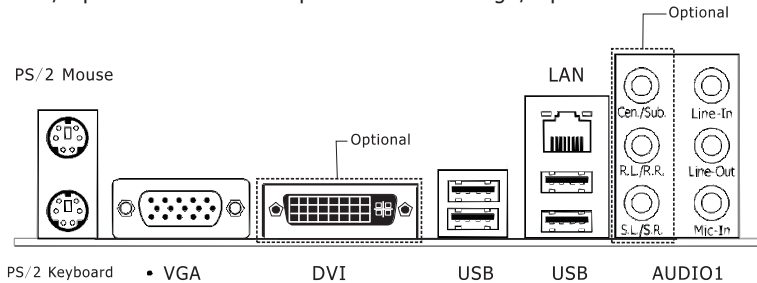

- **PS/2 Mouse:** Connect to PS/2 mouse.
- **PS/2 Keyboard:** Connect to PS/2 keyboard.
- **VGA:** Connect to monitor input.
- **DVI:** Connect to monitor input. (Optional)
- **LAN:** Connect to Local Area Network.
- **USB:** Connect to USB devices such as scanner, digital speakers, monitor, mouse, keyboard, hub, digital camera, joystick etc.
- **AUDIO1:**
 - Cen./Sub. (Center / Subwoofer): Connect to the center and subwoofer channel in the 7.1 channel audio system.
 - R.L./R.R. (Rear Left / Rear Right): Connect to the rear left and rear right channel in the 7.1 channel audio system.
 - S.L./S.R. (Surround Left / Surround Right): Connect to the surround left and surround right channel in the 7.1 channel audio system.
 - Line-In: Connect to the line out from external audio sources.
 - Line-Out: Connects to the front left and front right channel in the 7.1-channel or regular 2-channel audio system.
 - Mic-In: Connect to the plug from external microphone.

Chapter 2 Hardware Setup


2.1 Choosing a Computer Chassis

- Choose a chassis big enough to install this mainboard.
- As some features for this mainboard are implemented by cabling connectors on the mainboard to indicators and switches or buttons on the chassis, make sure your chassis supports all the features required.
- If there is possibility of adopting some more hard drives, make sure your chassis has sufficient power and space for them.
- Most chassis have alternatives for I/O shield located at the rear panel. Make sure the I/O shield of the chassis matches the I/O port configuration of this mainboard. You can find an I/O shield specifically designed for this mainboard in its package.

2.2 Installing Mainboard

Most computer chassis have a base with many mounting holes to allow the mainboard to be securely attached, and at the same time, prevent the system from short circuits. There are two ways to attach the mainboard to the chassis base: (1) with studs, or (2) with spacers.

Basically, the best way to attach the board is with studs. Only if you are unable to do this should you attach the board with spacers. Line up the holes on the board with the mounting holes on the chassis. If the holes line up and there are screw holes, you can attach the board with studs. If the holes line up and there are only slots, you can only attach with spacers. Take the tip of the spacers and insert them into the slots. After doing this to all the slots, you can slide the board into position aligned with slots. After the board has been positioned, check to make sure everything is OK before putting the chassis back on.

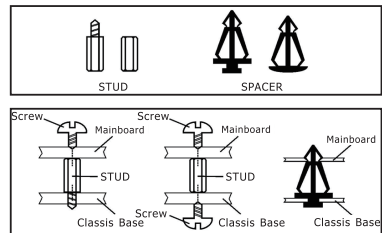

 Always power off the computer and unplug the AC power cord before adding or removing any peripheral or component. Failing to do so may cause severe damage to your mainboard and/or peripherals. Plug in the AC power cord only after you have carefully checked everything.

To install this mainboard:

1. Locate all the screw holes on the mainboard and the chassis base.
2. Place all the studs or spacers needed on the chassis base and have them tightened.
3. Face the mainboard's I/O ports toward the chassis's rear panel.
4. Line up all the mainboard's screw holes with those studs or spacers on the chassis.
5. Install the mainboard with screws and have them tightened.

 To prevent shorting the PCB circuit, please REMOVE the metal studs or spacers if they are already fastened on the chassis base and are without mounting-holes on the mainboard to align with.

2.3 Installation of the CPU and CPU Cooler

Before installing the CPU, please comply with the following conditions:

1. Please make sure that the mainboard supports the CPU.
2. Please take note of the one indented corner of the CPU. If you install the CPU in the wrong direction, the CPU will not insert properly. If this occurs, please change the insert direction of the CPU.
3. Please add an even layer of heat sink paste between the CPU and CPU cooler.
4. Please make sure the CPU cooler is installed on the CPU prior to system use, otherwise overheating and permanent damage of the CPU may occur.
5. Please set the CPU host frequency in accordance with the processor specifications. It is not recommended that the system bus frequency be set beyond hardware specifications since it does not meet the required standards for the peripherals. If you wish to set the frequency beyond the proper specifications, please do so according to your hardware specifications including the CPU, graphics card, memory, hard drive, etc.

2.3.1 Installation of the CPU

1. Unlock the socket by pressing the lever sideways, then lift it up to a 90°.

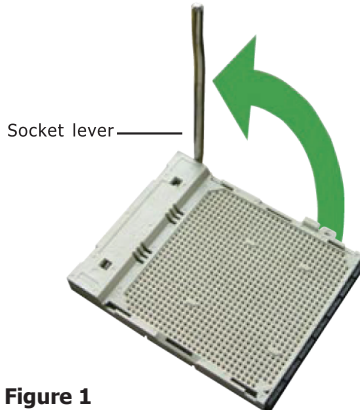


Figure 1

4. When the CPU is in place, push down the socket lever to secure the CPU. The lever clicks on the side tab to indicate that it is locked.

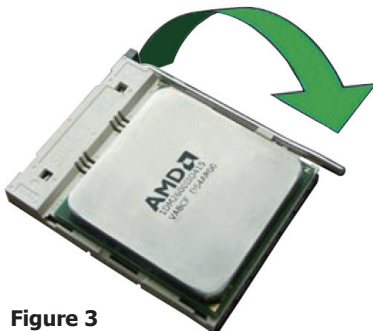


Figure 3

2. Position the CPU above the socket such that the CPU corner with the gold triangle matches the socket corner with a small triangle.
3. Carefully insert the CPU into the socket until it fits place.

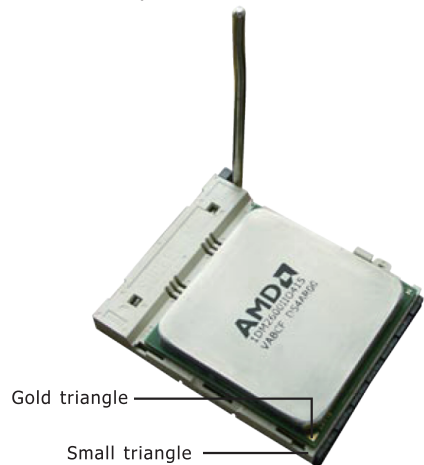


Figure 2

2.3.2 Installation of the CPU Cooler

For proper installation, please kindly refer to the instruction manuals of your CPU Cooler.

2.4 Installation of Memory Modules

This mainboard provides four 240-pin DDRII (Double Data Rate) DIMM slots, and supports Dual Channel Memory Technology. For dual channel configuration, you always need to install two identical (the same brand, speed, size and chip-type) memory modules in the DDRII DIMM slots to activate Dual Channel Memory Technology. Otherwise, it will operate at single channel mode.

To reach the performance of Dual Channel DDR2, the following rules must be obeyed:

For 2-DIMM dual-channel installation:

Populate DIMM modules of the same type and size on slots [DDRII1]+[DDRII3], or slots [DDRII2]+[DDRII4].

For 4-DIMM dual-channel installation:

Populate 2 DIMM modules of the same type and size on slots [DDRII1]+[DDRII3], and another 2 DIMM modules of the same type and size on slots [DDRII2]+[DDRII4].

[DDRII1] and [DDRII3] slots are made of the same color.


[DDRII2] and [DDRII4] are made of another same color.



Static electricity can damage the electronic components of the computer or optional boards. Before starting these procedures, ensure that you are discharged of static electricity by touching a grounded metal object briefly.


To install system memory:

1. Power off the computer and unplug the AC power cord before installing or removing memory modules.
2. Locate the DIMM slot on the board.
3. Hold two edges of the DIMM module carefully, keep away from touching its connectors.
4. Align the notch key on the module with the rib on the slot.
5. Firmly press the module into the slots until the ejector tabs at both sides of the slot automatically snap into the mounting notch. Do not force the DIMM module in with extra force as the DIMM module only fits in one direction.
6. To remove the DIMM modules, push the two ejector tabs on the slot outward simultaneously, and then pull out the DIMM module.

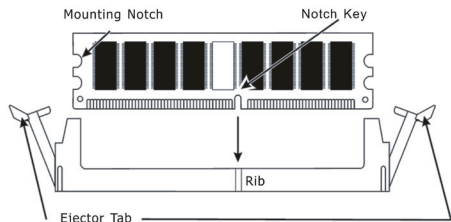

2.5 Connecting Peripheral Devices

2.5.1 Floppy and IDE Disk Drive Connectors

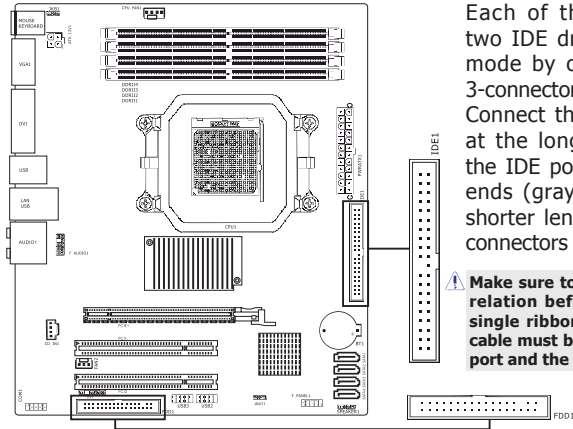

Each of the IDE port connects up to two IDE drives at Ultra ATA 66/100/133 mode by one 40-pin, 80-conductor, and 3-conductor Ultra ATA/66 ribbon cables.

Connect the single end (blue connector) at the longer length of ribbon cable to the IDE port of this board, the other two ends (gray and black connector) at the shorter length of the ribbon cable to the connectors of your hard drives.


Make sure to configure the "Master" and "Slave" relation before connecting two drives by one single ribbon cable. The red line on the ribbon cable must be aligned with pin-1 on both the IDE port and the hard-drive connector.

The FDD connector connects up to two floppy drives with a 34-wire, 2-conductor floppy cable. Connect the single end at the longer length of ribbon cable to the FDD on the board, the two connectors on the other end to the floppy disk drives connector. Generally you need only one floppy disk drive in your system.

The red line on the ribbon cable must be aligned with pin-1 on both the FDD port and the floppy connector.

2.5.2 Serial ATA Connectors

Each SATA connector serves as one single channel to connect one SATA device by SATA cable.

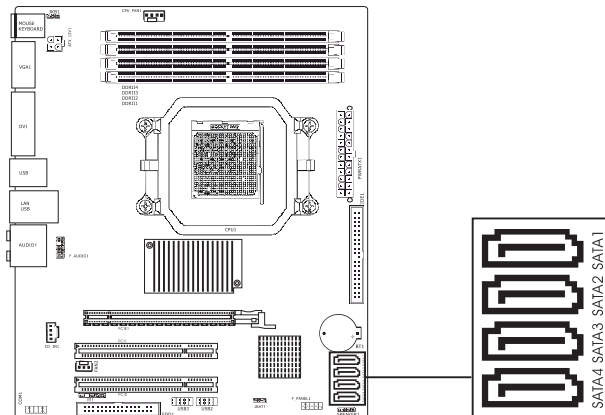

2.5.3 PCI and PCI Express slots

Install PCI Express X16 graphics card into slot "PCIE1".
Install PCI card into slots "PCI1" or "PCI2".


Chapter 3 Jumpers & Headers Setup

3.1 Checking Jumper Settings

- For a 2-pin jumper, plug the jumper cap on both pins will make it CLOSE (SHORT). Remove the jumper cap, or plug it on either pin (reserved for future use) will leave it at OPEN position.
- For 3-pin jumper, pin 1~2 or pin 2~3 can be shorted by plugging the jumper cap in.

How to identify the PIN1 jumpers?

Please check the mainboard carefully, the PIN1 is marked by "1" or white thick line.


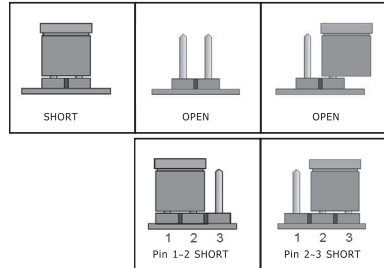


3.2 CMOS Memory Clearing Header

The time to clear the CMOS memory occurs when (a) the CMOS data becomes corrupted, (b) you forgot the supervisor or user password preset in the BIOS menu, (c) you are unable to boot-up the system because the CPU ratio/clock was incorrectly set in the BIOS menu, or (d) whenever there is modification on the CPU or memory modules.

This header uses a jumper cap to clear the CMOS memory and have it reconfigured to the default values stored in BIOS.

- Pins 1 and 2 shorted (Default): Normal operation.
- Pins 2 and 3 shorted: Clear CMOS memory.

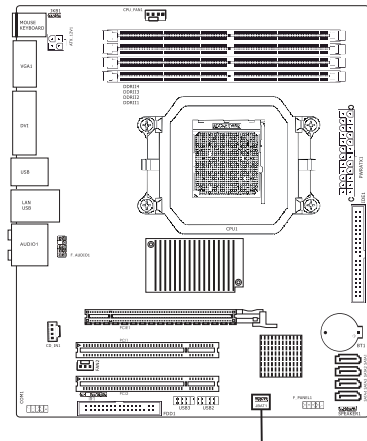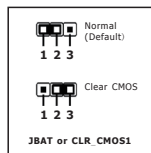


To clear the CMOS memory and load in the default values:

- Power off the system.
- Set pin 2 and pin 3 shorted by the jumper cap. Wait for a few seconds. Set the jumper cap back to its default settings --- pin 1 and pin 2 shorted.
- Power on the system.
- For incorrect CPU ratio/clock settings in the BIOS, press key to enter the BIOS setup menu right after powering on system.
- Set the CPU operating speed back to its default or an appropriate value.
- Save and exit the BIOS setup menu.

3.3 Keyboard Power Function(JKB1)

Pin 1-2 short: Disabled power on by keyboard
Pin 2-3 short: Support power on by keyboard

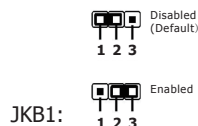


3.4 FAN Power Connectors


These connectors each provide power to the cooling fans installed in your system.

CPU_FAN1: CPU Fan Power Connector

FAN2: System Fan Power Connector

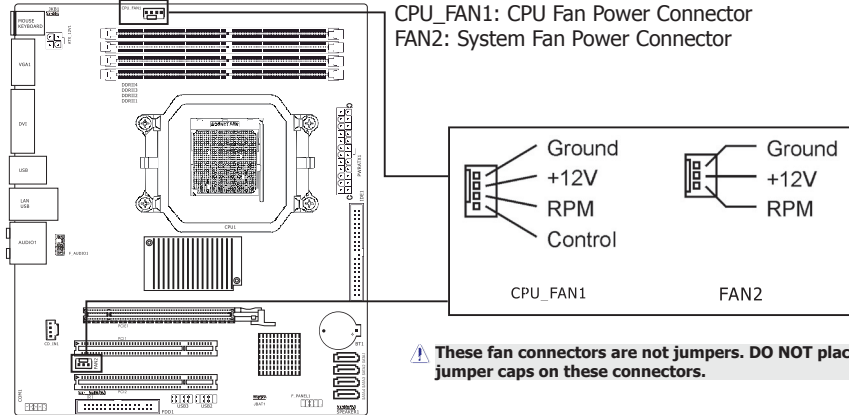

3.5 Front Panel Switches & Indicators Headers

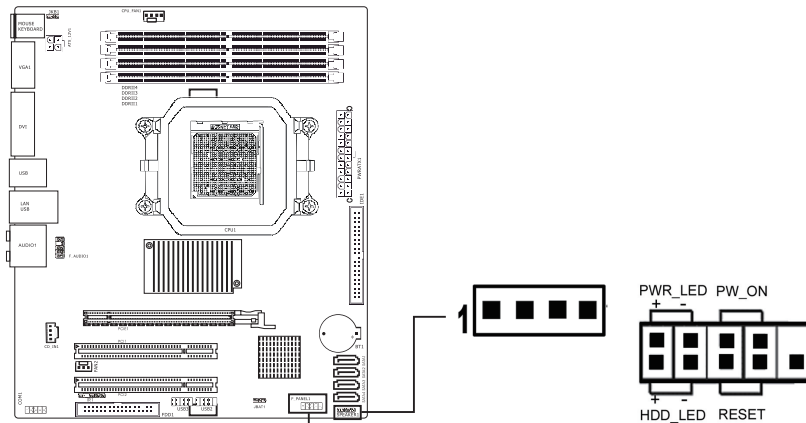

HDD_LED (Hard Driver LED Header)

Connect the HDD LED cable to these PINs, in order to see the HDD status

RESET (Reset Control)

This connector connects to the case-mounted reset switch for rebooting your computer without having to turn off your power switch. This is a preferred method of rebooting in order to prolong the life of the system's power supply.


PWR-ON (Power Button)

This connector connects to the case-mounted power switch to power ON/OFF the system.

SPEAKER (Speaker)

This 4-pin connector connects to the case-mounted speaker. You should follow the instruction of the speaker cable.

3.6 Additional USB Port Headers

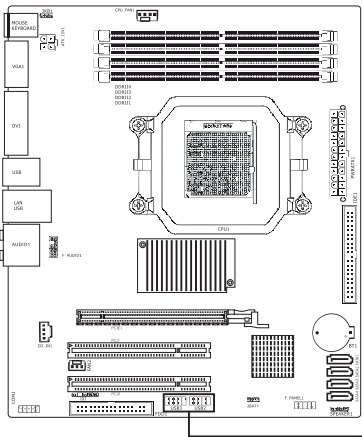


Pin	Pin Assignment	Pin	Pin Assignment
1	VCC	2	VCC
3	Data 0-	4	Data 1-
5	Data 0+	6	Data 1+
7	Ground	8	Ground
		10	NC



3.7 Serial Port Header

This COM1 header supports a serial port module.

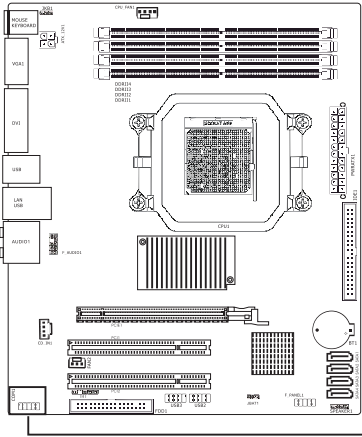


Pin	Pin Assignment	Pin	Pin Assignment
1	DCD	2	RXD
3	TXD	4	DTR
5	GND	6	DSR
7	CTS	8	RTS
9	RI		




3.8 IR Connection Header

Connect the IrDA cable (if available) to this IR connector.

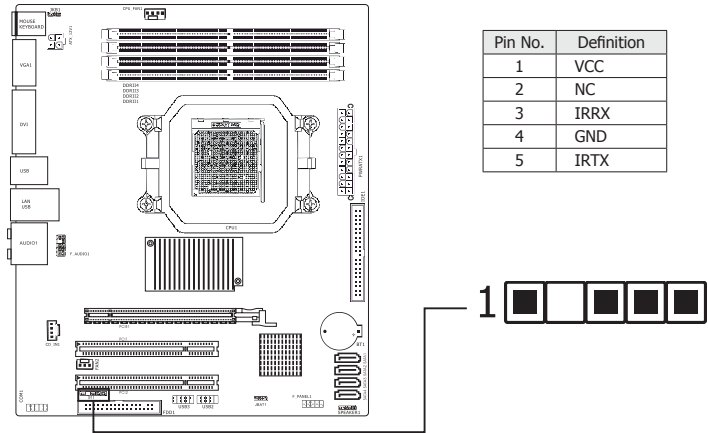


3.9 Front Panel Audio Connection Header

This header provides the connection to audio connector at front panel.

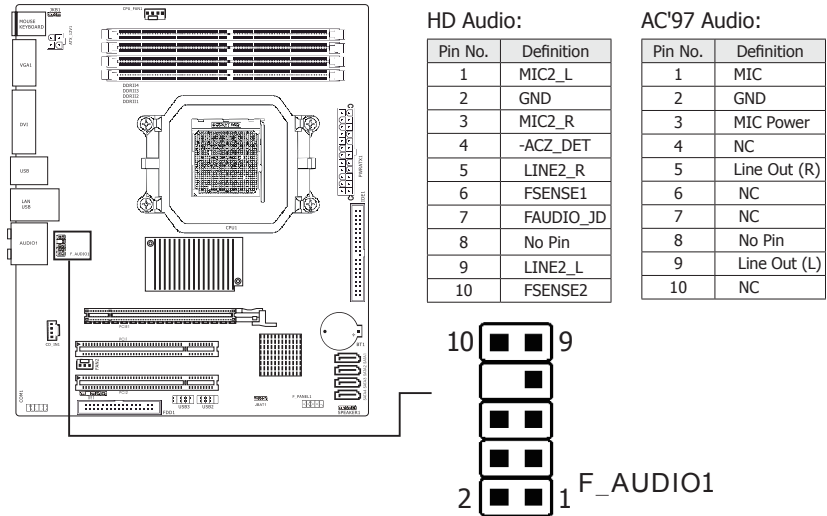


3.10 Internal Audio Connectors

Connect CD-ROM or DVD-ROM audio out to the connector.

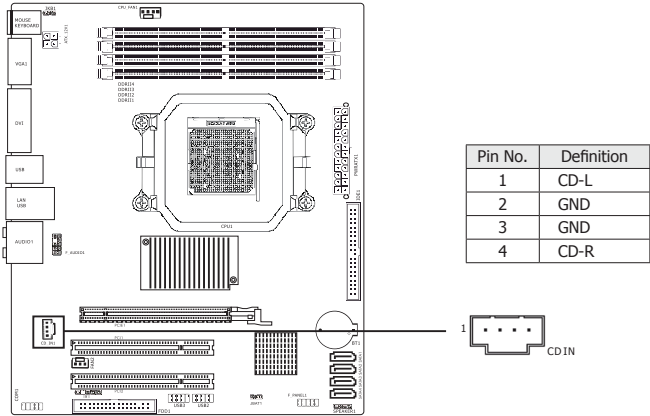

3.11 ATX Power Input Connectors

This mainboard provides two power connectors to connect power supplier.

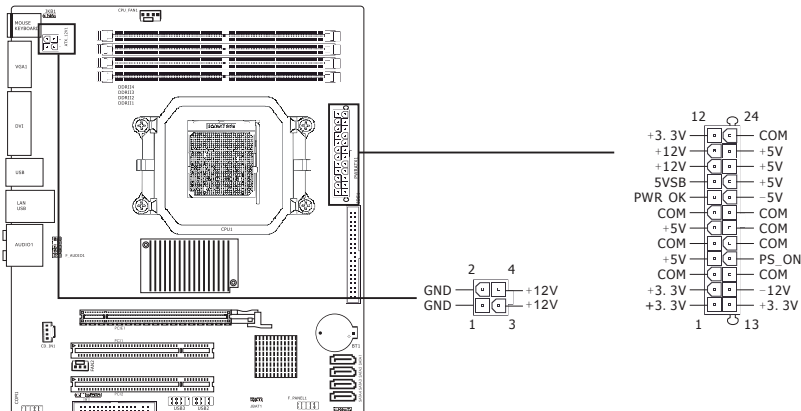

Chapter 4 BIOS Setup Utility

BIOS stands for Basic Input and Output System. It was once called ROM BIOS when it was stored in a Read-Only Memory (ROM) chip. Now manufacturers would like to store BIOS in EEPROM which means Electrically Erasable Programmable Memory. BIOS used in this series of motherboard is stored in EEPROM, and is the first program to run when you turn on your computer.

BIOS performs the following functions:

1. Initializing and testing hardware in your computer (a process called "POST", for Power On Self Test).
2. Loading and running your operating system.
3. Helping your operating system and application programs manage your PC hardware by means of a set of routines called BIOS Run-Time Service.

4.1 About BIOS Setup

BIOS Setup is an interactive BIOS program that you need to run when:

1. Changing the hardware of your system. (For example: installing a new Hard Disk etc.)
2. Modifying the behavior of your computer. (For example: changing the system time or date, or turning special features on or off etc.)
3. Enhancing your computer's behavior. (For example: speeding up performance by turning on shadowing or cache)

4.2 To Run BIOS Setup

First access BIOS setup menu by pressing key after "POST" is complete (before OS is loaded). BIOS will then display the following message:



DEL: SETUP

4.3 About CMOS

CMOS is the memory maintained by a battery. CMOS is used to store the BIOS settings you have selected in BIOS Setup. CMOS also maintains the internal clock. Every time you turn on your computer, the BIOS looks into CMOS for the settings you have selected and configures your computer accordingly. If the battery runs out of power, the CMOS data will be lost and POST will issue a "CMOS invalid" or "CMOS checksum invalid" message. If this happens, you have to replace the battery and check and configure the BIOS Setup for the new start.

4.4 The POST (Power On Self Test)

POST is an acronym for Power On Self Test. This program will test all things the BIOS does before the operating system is started. Each of POST routines is assigned a POST code, a unique number which is sent to I/O port 080h before the routine is executed.

4.5 BIOS Setup — CMOS Setup Utility



- ***In order to increase system stability and performance, our engineering staff is constantly improving the BIOS menu. The BIOS setup screens and descriptions illustrated in this manual are for your reference only, and may not completely match with what you see on your screen.***
- ***Do not change the BIOS parameters unless you fully understand its function.***


4.5.1 CMOS Setup Utility

After powering up the system, the BIOS message appears on the screen, the memory count begins, and then the following message appears on the screen:

Press DEL to enter SETUP

If this message disappears before you respond, restart the system by pressing <Ctrl> + <Alt>+ keys, or by pressing the Reset button on computer chassis. Only when these two methods should be fail that you restart the system by powering it off and then back on.

After pressing key, the main menu screen appears.

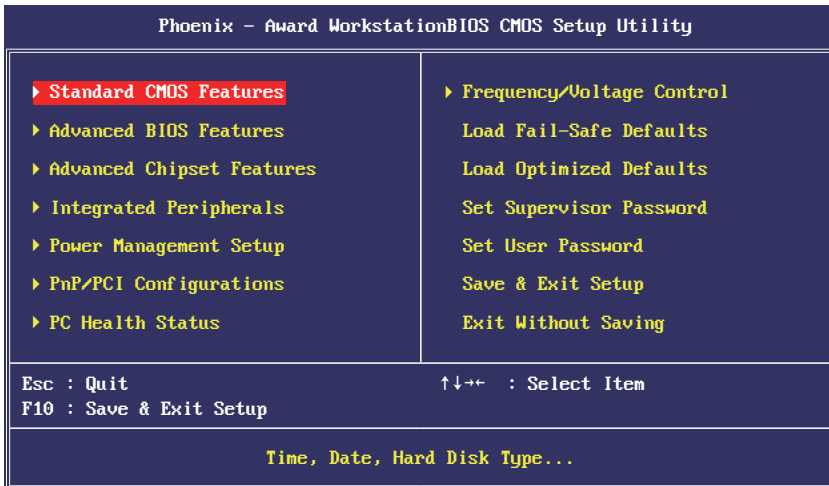

- **Standard CMOS Features**
This setup page includes all the items in standard compatible BIOS.
- **Advanced BIOS Features**
This setup page includes all the items of Award special enhanced features.
- **Advanced Chipset Features**
This setup page includes the Chipset features.
- **Integrated Peripherals**
This setup page includes all onboard peripherals.
- **Power Management Setup**
This setup page includes all the items of Green function features.
- **PnP/PCI Configurations**
This setup page includes all the configurations of PCI & PnP ISA resources.

- **PC Health Status**

This setup page is the System auto detect temperature, voltage, fan, speed.

- **Frequency/Voltage Control**

This setup page is control CPU clock and frequency ratio.

- **Load Fail-Safe Defaults**

Fail-Safe Defaults indicates the value of the system parameters which the system would be in safe configuration.

- **Load Optimized Defaults**

Optimized Defaults indicates the value of the system parameters which the system would be in best performance configuration.

- **Set Supervisor Password**

Change, set, or disable password. It allows you to limit access to the system and Setup, or just to Setup.

- **Set User Password**

Change, set, or disable password. It allows you to limit access to the system.

- **Save & Exit Setup**

Save CMOS value settings to CMOS and exit setup.

- **Exit Without Saving**

Abandon all CMOS value changes and exit setup.

4.5.2 Control Keys

Press F1 to pop up a small help window that describes the appropriate keys to use and the possible selections for the highlighted item.

Please check the following table for the function description of each control key.

Control Key(s)	Function Description
← / →	Move cursor left or right to select Screens
↑ / ↓	Move cursor up or down to select items
+ / - / PU / PD	To Change option for the selected items
<Enter>	To bring up the selected screen
<ESC>	Main Menu - Quit and not save changes into CMOS Status Page Setup Menu and Option Page Setup Menu - Exit current page and return to Main Menu
<F1>	General help
<F2>	Item Help
<F5>	Restore the previous CMOS value from CMOS, only for Option Page Setup Menu
<F6>	Load the fail-safe default CMOS value from BIOS default table
<F7>	Load the Optimized Defaults
<F10>	Save all the CMOS changes

4.5.3 Standard CMOS Features

Phoenix - Award WorkstationBIOS CMOS Setup Utility		
Standard CMOS Features		
Date (mm:dd:yy)	Mon, Jun 11 2007	Item Help Menu Level ▶ Change the day, month, year and century
Time (hh:mm:ss)	13 : 19 : 44	
▶ IDE Channel 0 Master	[MAXTOR STM380215A]	
▶ IDE Channel 0 Slave	[None]	
▶ IDE Channel 2 Master	[None]	
▶ IDE Channel 2 Slave	[None]	
▶ IDE Channel 3 Master	[None]	
▶ IDE Channel 3 Slave	[None]	
Drive A	[1.44M, 3.5in.]	
Halt On	[All Errors]	
Base Memory	640K	
Extended Memory	1047552K	
Total Memory	1048576K	
↑↓→←:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults		

- **Date (mm:dd:yy)**

This item sets the date you specify (usually the current date) in the format of [Month], [Date],and [Year].

- **Time (hh:mm:ss)**

This item sets the time you specify (usually the current time) in the format of [Hour], [Minute],and [Second].

- ▶ **IDE Channel 0/2/3 Master/Slave**

Click <Enter> key to enter its submenu:

Phoenix - Award WorkstationBIOS CMOS Setup Utility		
IDE Channel 0 Master		
IDE HDD Auto-Detection	[Press Enter]	Item Help Menu Level ▶▶ To auto-detect the HDD's size, head... on this channel
IDE Channel 0 Master	[Auto]	
Access Mode	[Auto]	
Capacity	80 GB	
Cylinder	38309	
Head	16	
Precomp	0	
Landing Zone	38308	
Sector	255	
↑↓→←:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults		

IDE HDD Auto-Detection

This item allows you to detect the parameters of IDE drives by pressing <Enter> key. The parameters will be shown on the screen automatically.

IDE Channel 0/2/3 Master/Slave

When set to [Auto], the BIOS will automatically check what kind of IDE or SATA hard drive you are using. If you want to define your own drive yourself, set it to [Manual] and make sure you fully understand the meaning of the parameters. Please refer to the instruction manual provided by the device's manufacturer to get the setting right.

Access Mode

This item selects the mode to access your IDE or SATA devices. Leave this item at its default [Auto] setting to detect the access mode of your HDD automatically.

Capacity

This item displays the approximate capacity of the disk drive. Usually the size is slightly greater than the size of a formatted disk given by a disk-checking program.

Cylinder

This item configures the numbers of cylinders.

Head

This item configures the numbers of read/write heads.

Precomp

This item displays the number of cylinders at which to change the write timing.

Landing Zone

This item displays the number of cylinders specified as the landing zone for the read/write heads.

Sector

This item configures the numbers of sectors per track.

• Back to Standard CMOS Features Setup Menu**• Drive A**

This item sets the type of floppy drives installed.

• Halt On

This item determines whether the system stops if an error is detected during system boot-up.

[All Errors]: The system-boot will stop whenever the BIOS detect a non-fatal error.

[No Errors]: The system-boot will not stop for any error detected.

[All, But Keyboard]: The system-boot will stop for all errors except a keyboard error.

[All, But Diskette]: The system-boot will stop for all errors except a diskette error.

[All, But Disk/Key]: The system-boot will stop for all errors except a diskette or keyboard error.

• Base Memory

This item displays the amount of base memory installed in the system. The value of the base memory is typically 640K for systems with 640K or more memory size installed on the mainboard.

• Extended Memory

This item displays the amount of extended memory detected during system boot-up.

• Total Memory

This item displays the total memory available in the system.

4.5.4 Advanced BIOS Features

Phoenix – Award WorkstationBIOS CMOS Setup Utility		
Advanced BIOS Features		
▶ Hard Disk Boot Priority	[Press Enter]	Item Help
Virus Warning	[Disabled]	Menu Level ▶
CPU Internal Cache	[Enabled]	
External Cache	[Enabled]	
Quick Power On Self Test	[Enabled]	
First Boot Device	[CDROM]	
Second Boot Device	[Hard Disk]	
Third Boot Device	[LS120]	
Boot Other Device	[Enabled]	
Boot Up Floppy Seek	[Enabled]	
Boot Up NumLock Status	[On]	
Gate A20 Option	[Fast]	
Typematic Rate Setting	[Disabled]	
× Typematic Rate (Chars/Sec)	6	
× Typematic Delay (Msec)	250	
Security Option	[Setup]	
APIC Mode	[Enabled]	
MPS Version Control For OS	[1.4]	
OS Select For DRAM > 64MB	[Non-OS2]	
HDD S.M.A.R.T. Capability	[Disabled]	
Delay For HDD (Secs)	[2]	
Full Screen LOGO Show	[Enabled]	
Small Logo(EPA) Show	[Enabled]	
↑↓←→:Move Enter:Select +/~/PU/PD:Value F10:Save ESC:Exit F1:General Help F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults		

- **Hard Disk Boot Priority**

This item selects the hard disks booting priority. By pressing <Enter> key, you can enter its submenu where the hard disks detected can be selected for the booting sequence to boot up system.

- **Virus Warning**

Allow you to choose the VIRUS Warning feature for IDE Hard Disk boot sector protection. If this function is enabled and someone attempt to write data into this area, BIOS will show a warning message on screen and alarm beep.

- **CPU Internal Cache**

Enables or Disables the Level-1 Internal Cache memory. Generally, this would only be Disabled for troubleshooting purposes.

- **External Cache**

Enables or Disables the Level-2 External Cache memory. Generally, this would only be Disabled for troubleshooting purposes.

- **Quick Power On Self Test**

When set to [Enabled], this item speeds up the Power On Self Test (POST) after powering on the system. The BIOS shorten or skip some check during the POST.

- **First Boot Device/Second Boot Device/Third Boot Device/Boot Other Device**

Select the drive to boot first, second and third in the [First Boot Device], [Second Boot Device], and [Third Boot Device] items respectively. The BIOS will boot the operating system according to the sequence of the drive selected. Set [Boot Other Device] to [Enabled] if you wish to boot from another device other than these three items.

- **Boot Up Floppy Seek**

During POST, BIOS will determine if the floppy disk drive installed if choose [Enable].

- **Boot Up NumLock Status**

This item defines if the keyboard Num Lock key is active when your system is started.

- **Gate A20 Option**

[Normal]: The A20 signal is controlled by keyboard controller or chipset hardware.

[Fast]: (default) The A20 signal is controlled by port 92 or chipset specific method.

- **Typematic Rate Setting**

Keystrokes repeat at a rate determined by the keyboard controller. When enabled, the typematic rate and typematic delay can be selected.

- **Typematic Rate (Chars/Sec)**

Set the number of times a second to repeat a keystroke when you hold the key down. The settings are: 6, 8, 10, 12, 15, 20, 24, and 30.

- **Typematic Delay (Msec)**

Set the delay time after the key is held down before it begins to repeat the keystroke. The settings are 250, 500, 750, and 1000.

- **Security Option**

This item determines when the system will prompt for password - every time the system boots or only when enters the BIOS setup.

[Setup]: The password is required only when accessing the BIOS Setup.

[System]: The password is required each time the computer boots up.

Note: Don't forget your password. If you forget the password, you will have to open the computer case and clear all information in the CMOS before you can start up the system. But by doing this, you will have to reset all previously set options.

- **APIC MODE**

This field is used to enable or disable the APIC (Advanced Programmable Interrupt Controller). Due to compliance with PC2004 design guide, the system is able to run in APIC mode. Enabling APIC mode will expand available IRQ resources for the system.

- **MPS Version Control For OS**

This item specifies which version of MPS (Multi-Processor Specification) this mainboard will use. Leave this item at its default setting.

- **OS Select For DRAM > 64MB**

Allow OS2 to be used with >64MB or DRAM. Settings are Non-OS/2 (default) and OS2. Set to OS/2 if using more than 64MB and running OS/2.

- **HDD S.M.A.R.T. Capability**

This feature allows your hard disk to report read/write errors and to issue warnings when third party hardware monitor utility is installed.

- **Delay For HDD (Secs)**

This item allows the BIOS to support some old or special IDE devices by prolonging this delay time. A larger value will give more delay time to the device for which to initialize and to prepare for activation.

- **Full Screen LOGO Show**

This item determines to show the full screen logo when booting.

- **Small Logo(EPA) Show**

EPA Logo is the sign at the top of the screen when POST. If you don't want to show this logo, please set "Disabled".

4.5.5 Advanced Chipset Features

Phoenix - Award WorkstationBIOS CMOS Setup Utility		
Advanced Chipset Features		
▶ LDT & PCI Bus Control	[Press Enter]	Item Help
PCIE GFX Core Payload Size	[64 Bytes]	Menu Level ▶
PCIE GPP Core Payload Size	[64 Bytes]	
GFX0 Link Width	[x16]	
ASPM GFX	[Disabled]	
ASPM GPP	[Disabled]	
ASPM NB-SB	[Disabled]	
PCIE GFX Clock Gating	[Disabled]	
PCIE GPPSB Clock Gating	[Disabled]	
PCIE Common Clock	[Disabled]	
GFX0 Slot Power Limit,Watt	[75]	
GPP Slot Power Limit,Watt	[25]	
GFX Multi Function Mode	[Disabled]	
Internal Video Mode	[UMA]	
UMA Frame Buffer Size	[Recommended]	
Current UMA Size	64 MB	
AGP Aperture Size	[64MB]	
× MCLK Spread Spectrum	Disabled	
Dynamic CKE	[Enabled]	
↑↓←→:Move Enter:Select +/~/PU/PD:Value F10:Save ESC:Exit F1:General Help		
F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults		

▶ LDT & PCI Bus Control

Click <Enter> key to enter its submenu:

Phoenix – Award WorkstationBIOS CMOS Setup Utility		
LDT & PCI Bus Control		
LDT Configuration	[Enabled]	Item Help
Upstream LDT Bus Width	[16 bit]	Menu Level »
Downstream LDT Bus Width	[16 bit]	
LDT Bus Frequency	[Auto]	
PCIE Reset Delay	[Disabled]	
↑↓←→:Move Enter:Select +/~/PU/PD:Value F10:Save ESC:Exit F1:General Help		
F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults		

LDT Configuration

This item enables or disables the LDT configuration.

Upstream LDT Bus Width

This item allows users to manually adjust the upstream LDT bus width to be 8 bit or 16bit.

Downstream LDT Bus Width

This item allows users to manually adjust the downstream LDT bus width to be 8 bit or 16 bit.

LDT Bus Frequency

This item allows users to manually adjust the LDT Bus Frequency.

PCIE Reset Delay

This item enables or disables the PCIE reset delay.

- **Back to Advanced Chipset Features Setup Menu**
- **PCIE GFX Core Payload Size**
This item allows users to manually adjust the PCIE GFX Core Payload size.
- **PCIE GPP Core Payload Size**
This item allows users to manually adjust the PCIE GPP Core Payload size.
- **GFX0 Link Width**
This item allows users to manually set the GFX Link Width.
- **ASPM GFX**
We suggest you to keep the default.
- **ASPM GPP**
We suggest you to keep the default.
- **ASPM NB-SB**
We suggest you to keep the default.
- **PCIE GFX Clock Gating**
We suggest you to keep the default.
- **PCIE GPPSB Clock Gating**
We suggest you to keep the default.
- **PCIE Common Clock**
We suggest you to keep the default.
- **GFX0 Slot Power Limit,Watt**
We suggest you to keep the default.
- **GPP Slot Power Limit,Watt**
We suggest you to keep the default.
- **GFX Multi Function Mode**
We suggest you to keep the default.
- **Internal Video Mode**
We suggest you to keep the default.
- **UMA Frame Buffer Size**
This item allows users to manually adjust the UMA frame buffer size, from 16 MB to 256MB.
- **Current UMA Size**
This item shows the current UMA Frame Buffer Size.
- **AGP Aperture Size**
This item allows users to manually adjust the AGP aperture size, from 32 MB to 2 GB.
- **MCLK Spread Spectrum**
This item allows users to enable or disable the MCLK spread spectrum function.
- **Dynamic CKE**
This item allows users to enable or disable the Dynamic CKE function.

4.5.6 Integrated Peripherals

Phoenix – Award WorkstationBIOS CMOS Setup Utility		
Integrated Peripherals		
▶ Onboard Devices	[Press Enter]	Item Help
▶ South OnChip IDE Device	[Press Enter]	
▶ South OnChip PCI Device	[Press Enter]	Menu Level ▶
Init Display First	[PCIEx]	
× Surroundview	Disabled	
USB EHCI Controller	[Enabled]	
OnChip USB Controller	[Enabled]	
OnChip USB KBC Controller	[Disabled]	
USB Mouse Support	[Disabled]	
IDE HDD Block Mode	[Enabled]	
Onboard Lan Boot ROM	[Enabled]	
POWER ON Function	[BUTTON ONLY]	
× KB Power ON Password	Enter	
× Hot Key Power ON	Ctrl-F1	
Onboard FDC Controller	[Enabled]	
Onboard Serial Port 1	[3F8/1RQ4]	
PWRON After PWR-Fail	[Off]	
↑↓→←:Move Enter:Select +/~/PU/PD:Value F10:Save ESC:Exit F1:General Help F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults		

▶ Onboard Device

Click <Enter> key to enter its submenu:

Phoenix - Award WorkstationBIOS CMOS Setup Utility		
Onboard Devices		
Onboard PCIE SIL3132 SATA		Item Help
Onboard SIL3132 SATA Type IDE Controller		
Onboard PCIE LAN	[Enabled]	Menu Level ▶▶
↑↓←→:Move Enter:Select +/~/PU/PD:Value F10:Save ESC:Exit F1:General Help		
F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults		

Onboard PCIE LAN

Available options: [Disabled] [Enabled].

• Back to Integrated Preipherals Setup Menu

▶ South OnChip IDE Device

Click <Enter> key to enter its submenu:

Phoenix - Award WorkstationBIOS CMOS Setup Utility		
South OnChip IDE Device		
IDE DMA transfer access	[Enabled]	Item Help
OnChip IDE Channel0	[Enabled]	
Primary Master PIO	[Auto]	Menu Level »
Primary Slave PIO	[Auto]	
Primary Master UDMA	[Auto]	
Primary Slave UDMA	[Auto]	
↑↓←→:Move Enter:Select +/~/PU/PD:Value F10:Save ESC:Exit F1:General Help		
F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults		

IDE DMA transfer access

This item allows you to enable the transfer access of the IDE DMA then burst onto the PCI bus and nonburstable transactions do not.

OnChip IDE Channel 0

The mainboard chipset contains a PCI IDE interface with support for two IDE channels. Select "Enabled" to activate the first and/or second IDE interface. Select "Disabled" to deactivate an interface if you are going to install a primary and/or secondary add-in IDE interface.

Primary Master/Slave PIO

Each IDE channel supports a master device and a slave device. These four items let you assign the kind of PIO (Programmed Input/Output) were used by the IDE devices. Choose Auto to let the system auto detect which PIO mode is best, or select a PIO mode from 0-4.

Primary Master/Slave UDMA

Each IDE channel supports a master device and a slave device. This mainboard supports UltraDMA technology, which provides faster access to IDE devices. If you install a device that supports UltraDMA, change the appropriate item on this list to Auto. You may have to install the UltraDMA driver supplied with this mainboard in order to use an UltraDMA device.

- **Back to Integrated Peripherals Setup Menu**

- ▶ **South OnChip PCI Device**

Click <Enter> key to enter its submenu:

Phoenix – Award WorkstationBIOS CMOS Setup Utility		
South OnChip PCI Device		
HDMI Azalia Audio	[Disabled]	Item Help Menu Level >>
ATI AC97 Audio	[Auto]	
ATI SATA Controller	[Enabled]	
ATI SATA Type	[Native IDE]	
SB600 Spread Spectrum	[Disabled]	
↑↓←→:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults		

HDMI Azalia Audio

Available options: [Disabled] [Enabled].

AC97 Audio/HD Audio(Optional)

Available options: [Disabled] [Enabled].

SATA Controller

This item allows you to control Serial ATA controller.

SATA Type

Allow you to select onChip SATA type.

SB600 Spread Spectrum

Available options: [Disabled] [Enabled].

- **Back to Integrated Peripherals Setup Menu**

- **Init Display First**

Use this item to specify whether your graphics adapter is installed in one of the PCI slots or is integrated on the mainboard. If a PCI graphics card is installed, the onboard VGA will be disabled.

- **Surroundview**

This item allows you to enable or disable Surroundview function. Surroundview™ provides the power and convenience of multiadapter, multimonitor support for computers that use an AGP or PCI-E based graphics card in conjunction with ATI integrated graphics processors.

- **USB EHCI Controller**

Available options: [Disabled] [Enabled].

- **OnChip USB Controller**

Available options: [Disabled] [Enabled].

- **OnChip USB KBC Controller**

Available options: [Disabled] [Enabled].

- **USB Mouse Support**

This item allows you to select [BIOS] for using USB mouse in DOS environment, or [OS] in OS environment.

- **IDE HDD Block Mode**

Enable this field if your IDE hard drive supports block mode. Block mode enables BIOS to automatically detect the optimal number of block read and writes per sector that the drive can support. It also improves the speed of access to IDE devices.

- **Onboard Lan Boot ROM**

Available options: [Disabled] [Enabled].

- **POWER ON Function**

This item selects the way you want your system to power on.

[Password]: Use a password to power on the system, select this option then press <Enter>. Enter your password. You can enter up to 5 characters. Type in exactly the same password to confirm, and then press <Enter>.

[Hot KEY]: Use any of the function keys between <Ctrl+F1> to <Ctrl+F12> to power on the system.

- **KB Power ON Password**

If you select [Password], this function will be activation.

Press 'Enter', and input your password (1-5 characters), then press 'Enter' again.

- **Hot Key Power ON**

If you select [Hot Key], this function will be activation.

Available options: Ctr-F1~F12

- **Onboard FDC Controller**

This option enables or disables the onboard FDC controller.

- **Onboard Serial Port 1**

This item determines which I/O addresses the onboard Serial Port controller will access.

[Auto]: The system automatically select an I/O address for the onboard Serial Port.

[3F8/IRQ4, 2F8/IRQ3, 3E8/IRQ4, 2E8/IRQ3]: Allow you to manually select an I/O address for the onboard Serial Port.

[Disabled]: Disables the onboard Serial Port.

- **PWRON after PWR-Fail**

This item enables your computer to automatically restart or return to its last operating status after power returns from a power failure.

4.5.7 Power Management Setup

Phoenix - Award WorkstationBIOS CMOS Setup Utility			
Power Management Setup			
ACPI Function	[Enabled]	Item Help	
ACPI Suspend Type	S1(POS)		
Power Management	[User Define]	Menu Level ▶	
Video Off Method	[DPMS Support]		
HDD Power Down	[Disabled]		
HDD Down In Suspend	[Disabled]		
Soft-Off by PWR-BTIN	[Instand-Off]		
WOL(PME#) From Soft-Off	[Disabled]		
WOR(RI#) From Soft-Off	[Disabled]		
Power On by Alarm	[Disabled]		
x Date(of Month) Alarm	0		
x Time(hh:mm:ss) Alarm	0 : 0 : 0		
↑↓←→:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults			

- **ACPI Function**

This item allows you to Enabled/Disabled the Advanced Configuration and Power Management (ACPI).

- **ACPI Suspend Type**

This item allows you to select ACPI Suspend Type.

- **Power Management**

This option is for choose ACPI mode (or grade) etc.

Min Saving	If system activity is not detected for 1 hour, all devices except CPU will be shut off. If this item is selected, Doze/Standby/Suspend Mode are not available.
Max Saving	If system activity is not detected for 10 seconds, all devices except CPU will be shut off.

- **Video off Method**

V/HSYNC+Blank	This selection will cause the system to turn off the vertical and horizontal synchronization ports and write blanks to the video buffer.
Blank Screen	This option only writes blanks to the video buffer.
DPMS Support	Initial display power management signaling.(default)

- **HDD Power Down**

When enabled, the hard-disk drives will power down after a set time of system inactivity. All other devices remain active.

- **HDD Down In Suspend**

This option allows you to enabled or disabled the HDD power down function in suspend mode.

- **Soft-Off by PWR-BTTN**

Pressing the power button for more than 4 seconds forces the system to enter the Soft-Off state.

- **WOL (PME#) From Soft-Off**

When enabled, NV LAN activity awakens the system from soft-off state.

- **WOR(RI#) From Soft-Off**

This item allows you to enable or disable Wake On Ring from Soft-Off function.

- **Power -On by Alarm**

When set to Enable alarm resume, you can set the date (of month) and time (hh:mm:ss), that will awaken a system which has been powered down.

- **Day (of Month) Alarm**


[0]: This option power-on the system everyday according to the time set in the "Time (hh:mm:ss) Alarm" item.

[1-31]: This option selects a date you would like the system to power-on. The system will power-on on the date set, and the time set in the "Time (hh:mm:ss) Alarm" item.

- **Time (hh:mm:ss) Alarm**

This item sets the time you would like the system to power-on.

4.5.8 PnP PCI Configuration

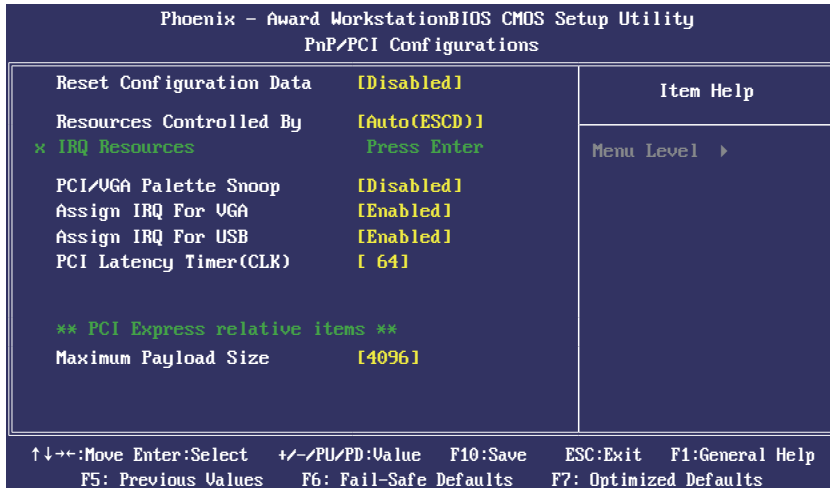

- **Reset configuration data**

Usually you'd better keep this setting [Disabled].

- **Resource controlled by**

The plug and play bios from Award can configure all the booting devices and plug and play devices automatically.

- **IRQ Resources**

Press <Enter> to enter the sub-menu. When "Resources Controlled By" sets to [Manual], this field is adjustable.

- **PCI/VGA Palette Snoop**

If this option sets to [Enabled], different VGA devices which work in different bus will manage the data from CPU with different palettes.



Note: This option can fix some issue that the VGA card is not standard .We suggest you to keep the default setting.

- **Assign IRQ For VGA**

When Enabled, the system automatically assigns an IRQ for the VGA card installed. Your VGA card will need an IRQ only when using the video capture function of the card. If you are not using this function and a new device requires an IRQ, you can set this field to Disabled. The IRQ (previously occupied by the VGA card) will be available for your new device.

- **Assign IRQ For USB**

When Enabled, the system automatically assigns an IRQ for the USB device connected to your system. However, if you are not using USB devices and an ISA slot requires an IRQ, set this field to Disabled. The IRQ previously occupied by the USB device will be available for the ISA slot.

- **PCI Latency Timer (CLK)**

This feature is used to select the length of time each PCI device will control the bus before another takes over. The larger the value, the longer the PCI device can retain control of the bus. Since each access to the bus comes with an initial delay before any transaction can be made, low values for the PCI Latency Timer will reduce the effectiveness of the PCI bandwidth while higher values will improve it.

- **Maximum Payload Size**

This setting specifies the maximum TLP payload size for the PCI Express devices. The unit is byte.

4.5.9 PC Health Status

Phoenix - Award WorkstationBIOS CMOS Setup Utility		
PC Health Status		
Shutdown Temperature	[Disabled]	Item Help Menu Level ▶
Current System Temp	28°C / 82°F	
Current CPU Temp	30°C / 86°F	
SYS FAN	0 RPM	
CPU FAN	3096 RPM	
Vcore	1.33 V	
DIMM VCore	1.88 V	
NB VCore	1.21 V	
SB VCore	1.24 V	
+3.3V	3.36 V	
+5 V	5.16 V	
VBAT (V)	3.21 V	
5USB (V)	5.15 V	
Smart Fan Temperature	[Disabled]	
✕ Fan Tolerance Value	5	
Sensor Show On Post	[Disabled]	
↑↓←→:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults		

- **Shutdown Temperature**

You can set the processor shutdown temperature here. If the processor temperature exceeds the settings value, system will force to shutdown to protect the processor not overheat.

- **All Voltages, Fans Speed and Thermal Monitoring**

These unchangeable items list the current status of the CPU and environment temperatures, fan speeds, and system power voltage.

- **Smart FAN Control**

This item allows you to control the CPU fan speed. When set to [Enabled], the following items become selectable.

- **Fan Tolerance Value**

According to tolerance value configuration adjustable CPU Fan speed.

- **Sensor Show On Post**

Show the system status when post.

4.5.10 Frequency/Voltage Control

Phoenix – Award WorkstationBIOS CMOS Setup Utility		
Frequency/Voltage Control		
▶ CPU Feature	[Press Enter]	Item Help
▶ DRAM Configuration	[Press Enter]	
▶ Onboard VGA Clock	[Press Enter]	Menu Level ▶
CPU Voltage Regulator	[Auto]	
DRAM Voltage Regulator	[Auto]	
Auto Detect PCI Clk	[Enabled]	
CPU Clock	[200MHz]	
↑↓→←: Move Enter: Select +/-/PU/PD: Value F10: Save ESC: Exit F1: General Help F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults		

▶ CPU Feature

Click <Enter> key to enter its submenu:

Phoenix – Award WorkstationBIOS CMOS Setup Utility		
CPU Feature		
NPT Fid control	[Auto]	Item Help
NPT Vid control	[Auto]	
AMD K8 Cool&Quiet control	[Disabled]	Menu Level ▶▶
↑↓→←: Move Enter: Select +/-/PU/PD: Value F10: Save ESC: Exit F1: General Help F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults		

NPT Fid control

This item is for setting the CPU Fid.

NPT Vid control

This item is for setting the CPU Vid.

AMD K8 Cool&Quiet control

This option enables or disables the AMD K8 cool and quiet function.

● **Back to Frequency/Voltage Control Setup Menu**

● **DRAM Configuration**

Click <Enter> key to enter its submenu. You may manually set the DRAM timing parameters through its sub-items, or leave them at their default settings according to the SPD (Serial Presence Detect) data stored in the DRAM.

● **Onboard VGA Clock**

This option can adjust VGA clock.

● **CPU Voltage Regulator**

This option is for setting the voltage of CPU.

● **DRAM Voltage Regulator**

This option is for setting the voltage of DIMM.

● **Auto Detect PCI Clk**

This setting allows auto detect PCI slots. When select [Enabled], the PCI clock will be disabled in order to reduce the EMI.

● **CPU Clock**

This option can adjust CPU clock.



Incorrectly using these features may result in system instability or corruption. Doing a overclock or overvoltage on CPU, chipsets and memory modules may result in damages or shortened life expectancy to these components. Please be aware that the menu items are for power users only.

4.5.11 Load Fail-Safe Defaults

This option opens a dialog box that lets you install fail-safe defaults for all appropriate items in the Setup Utility. Press <Y> and the <Enter> to install the defaults. Press <N> and then <Enter> to not install the defaults. The fail-safe defaults place no great demand on the system and are generally stable. If your system is not functioning correctly, try installing the fail-safe defaults as a first step in getting your system working properly again. If you only want to install fail-safe defaults for a specific option, select and display that option, and then press <F6>.

A screenshot of a red dialog box with a double border. The text inside is "Load Fail-Safe Defaults (Y/N)? N".

Load Fail-Safe Defaults (Y/N)? N

4.5.12 Load Optimized Defaults

This option opens a dialog box that let you install optimized defaults for all appropriate items in the Setup Utility. Press <Y> and then <Enter> to install the defaults. Press <N> and then <Enter> to not install the defaults. The optimized defaults place demand on the system that may be greater than the performance level of the components, such as the CPU and the memory. You can cause fatal errors or instability if you install the optimized defaults when your hardware does not support them. If you only want to install setup defaults for a specific option, select and display that option, and then press <F7>.

A screenshot of a red dialog box with a double border. The text inside is "Load Optimized Defaults (Y/N)? N".

Load Optimized Defaults (Y/N)? N

4.5.13 Set Supervisor/User Password

When this function is selected, the following message appears at the center of the screen to assist you in creating a password.

A screenshot of a red dialog box with a double border. The text inside is "Enter Password:".

Enter Password:

Type the password, up to eight characters, and press <Enter>. The password typed now will clear any previously entered password from CMOS memory. You will be asked to confirm the password. Type the password again and press <Enter>.

A screenshot of a red dialog box with a double border. The text inside is "Confirm Password:".

Confirm Password:

You may also press <Esc> to abort the selection.

To disable password, just press <Enter> when you are prompted to enter password. A message will confirm the password being disabled. Once the password is disabled, the system will boot and you can enter BIOS Setup freely.



PASSWORD DISABLED !!!
Press any key to continue...

4.5.14 Save & Exit Setup

Highlight this item and press <Enter> to save the changes that you have made in the Setup Utility and exit the Setup Utility. When the Save and Exit dialog box appears, press <Y> to save and exit, or press <N> to return to the main menu.



SAVE to CMOS and EXIT (Y/N)? Y

4.5.15 Exit Without Saving

Highlight this item and press <Enter> to discard any changes that you have made in the Setup Utility and exit the Setup Utility. When the Exit Without Saving dialog box appears, press <Y> to discard changes and exit, or press <N> to return to the main menu.




Quit Without Saving (Y/N)? Y

Chapter 5 Driver Installation

Check your package and there is Driver CD included. This CD consists of all drivers you need. In addition, this CD also include an auto detect software which can tell you which hardware is installed, and which drivers needed so that your system can function properly.

Insert CD into your CD-ROM drive and the menu should appear as below. If the menu does not appear, double-click My Computer / double-click CD-ROM drive or click Start / click Run / type X:\AUTORUN.EXE (assuming X is your CD-ROM drive).

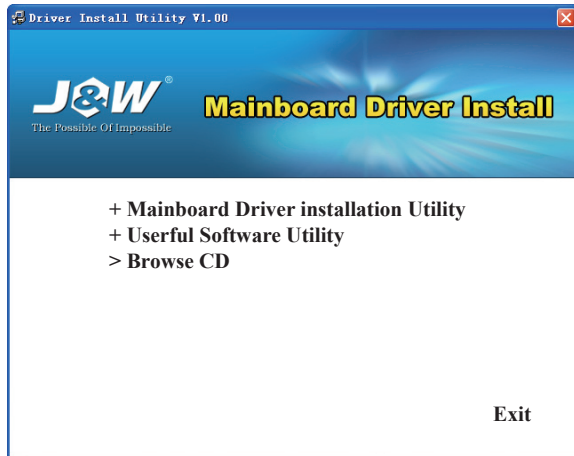


(This picture is only for reference)

From the Main MENU you may make 4 selections:

1. **+Mainboard Driver installation Utility:** Click to enter the driver installation menu.
2. **+Useful Software Utility:** Click to enter the utilities installation menu.
3. **>Browse CD:** Click to browse the contents of this "Driver & Utility CD".
4. **Exit:** Click to exit this installation menu.

When you choose **Mainboard Driver installation Utility**, the drivers menu should appear as below:

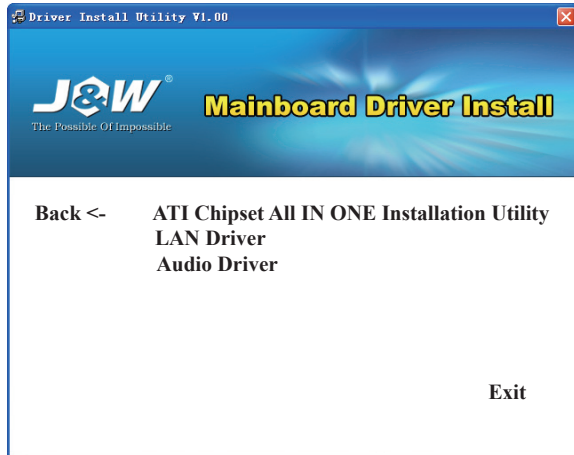

(This picture is only for reference)

From the Drivers MENU you may make 3 selections:

1. **ATI Chipset All IN ONE Installation Utility**
2. **LAN Driver**
3. **Audio Driver**