

SAFETY-FLY 700 P

FLYING INSTRUMENT
FOR ULTRALIGHT AIRCRAFTS



NR.1017.2 MIT



USER MANUAL

UK

Preface

Manufacturer : MC elettronica S.r.l.
Address : Via E. fermi, 450/486
Fiesso Umbertiano (ROVIGO) - ITALY
Tel. +39 0425 754713 Fax +39 0425 741130
E-mail: info@mcelettronica
Internet: www.mcelettronica.it

Document num: : 101700.2
Edition : April 2013

- *MC elettronica S.r.l. is not obliged to give notice of any further modifications to the product.*

- The descriptions provided in this manual do not allow unauthorised personnel to tamper with the product in any way.

- The guarantee on the equipment will no longer be valid if tampering should be detected.

© Copyright MC elettronica 2013

1. REGULATIONS AND GENERAL WARNINGS

1.1 Premise

- This manual gives all the specific information that you need for proper use of the equipment in your possession.
- After buying the instrument, read the manual carefully and refer to it any time you have doubts on how to use the equipment or when you have to carry out maintenance operations.
- Keep the manual on board the aircraft or, at least, when this is not possible, keep it in a known location that is ready at hand.

ALL RIGHTS RESERVED.

**THIS MANUAL IS INTENDED FOR CUSTOMER USE ONLY. ANY THE
OTHER USE IS FORBIDDEN**

1.2 Terms of guarantee

- *SAFETY-FLY 700 P* is guaranteed for a period of 2 years from the date of purchase, upon presentation of a till receipt or purchase invoice.

The guarantee does not apply in the event of:

- accidental damage;
- incorrect use, modifications that have not been authorised, improper installation (or setting up);
- damage caused when a non-*MC elettronica* equipment, which is mechanically and electrically connected to our instruments, breaks or does not function properly;
- acts of God (lightning, floods, fire or any other causes which do not depend on *MC elettronica*).

Repairs covered by the warranty (within 2 years of the date of purchase) carried out at the workshops of our authorised centres, are fully free of charge as long as the instrument is sent carriage free. Transport charges and risks are entirely borne by the Customer.

The above-mentioned guarantee is valid unless otherwise stated between *MC elettronica* and the Customer.

NOTE



MC elettronica declines any liability for damage or direct or indirect charges, as a consequence of improper use or inability by the Customer to use the equipment separately and/or together with other instruments.

1.3 Assistance service

Service is available in all the countries where the equipment is officially supplied by *MC elettronica* (during and after the guarantee period), or directly at the MC elettronica manufacturing company.

1.4 General description



REF.	DESCRIPTION
A	FUEL indicator light to CHECK fuel circuit valves and pressure alarm
B	High cylinder head temperature alarm indicator light (CHT).
C	Dual-purpose indicator light; when permanently lit, it means that the motor oil temperature is correct. When flashing it means that the timer is running, setting off the buzzer every 2 minutes, to be used to return to position or for various uses, such as, for example, to provide a reminder of closed valves in flight.
D	High motor oil temperature alarm indicator light
MANUAL	Motor oil pressure alarm indicator light; at its maximum in flashing mode, minimum in steady mode.
F	Button for several functions; it silences the buzzer, it turns on the timer, it programmes alarm thresholds.
G	3-level flap indicator, T/O - ½ - FULL with timer buzzer at 1 minute, also for programming the fuel alarm thresholds.

1.5 Instrument assembly

Install *SAFETY-FLY 700 P* where it is most comfortable for the pilot; in the picture it is installed on the bottom right hand area of the motor instrument dashboard.



Safety Fly 700 P

Fig. 1 – *SAFETY-FLY 700 P* installed on the motor instrument dashboard.

1.6 Electrical connections

Set the connections up as shown in the table, observing the colours of the cables, and referring to the STC 1017.1 connection board on page 24-25

8-POLE Input/Output CONNECTOR	
8-pole connector wire colours	Description of connections
Orange	Input (-) cylinder head temperature CHT
Black	Input (-) Motor oil temperature
Red	Input (-) motor pressure temperature
Green	Input (-) Flaps sensor
Yellow	Input (+) fuel pressure transducer
Grey	Input R, to be brought up to +12V when the fuel transducer is not connected to the fuel pressure instrument.
Brown	Buzzer output (-)
Blue	Buzzer output (+)

Example of the connection between the orange wire and the CHT cylinder head temperature instrument,
solution A: replace the original female terminal with a new one, connecting the orange wire to the pre-existing one

Solution A

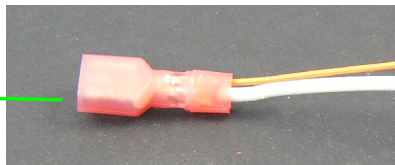
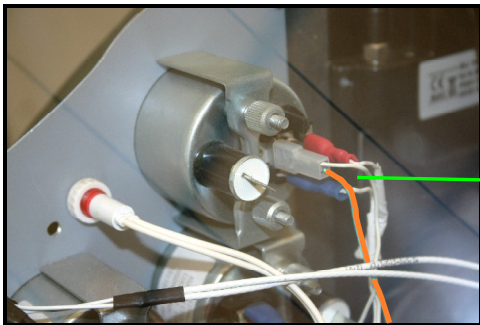


Fig. 2 detail – Orange wire connected to the CHT cylinder head temperature instrument

Otherwise, connect the orange wire to the pre-existing one using an ELECTRO-TAP connector (solution B)

Solution B

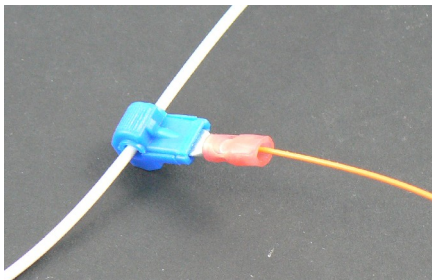


Fig. 3 detail - orange wire connected to the pre-existing one by an ELECTRO-TAP connector

Connect the supplied buzzer in a position that is possibly in front of the pilot, observing the polarity, as set up on the STC 1017.1 connection board on page 24-25



Fig. 4 Buzzer installed on the motor instrument dashboard.

4-POLE POWER SUPPLY CONNECTOR	
4-pole connector wire colours	Description of Connection
Black	Positive (+12) power supply (optional)
Red	Positive (+12) power supply
Green	Negative (GND) (optional)
Yellow	Negative (GND)


The Black (+12) and yellow (GND) wires are optional, however we suggest connecting them as illustrated in the diagram ref. STC 1017.1 at the bottom of the page.

2. PROGRAMMING

SAFETY-FLY 700 P can be programmed in two phases and in two different ways; motor and flap alarm programming mode and fuel pressure alarm programming mode.

2.1 PROGRAMMING MOTOR AND FLAP ALARMS.

Programming must be carried out when the motor is cold, with motor and cylinder head oil temperature indicators below 50°C. Temporarily detach the wire for the motor oil pressure bulb, as shown in figure 5

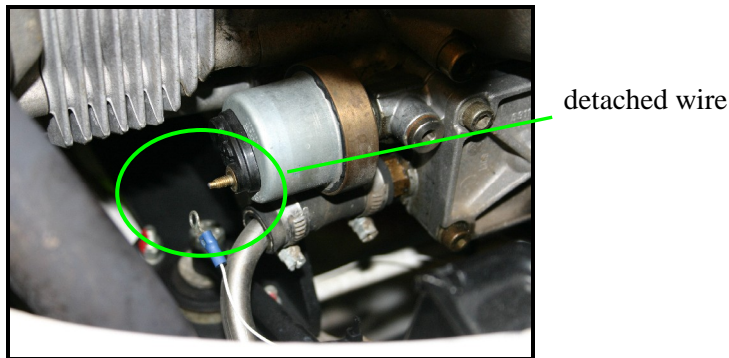

-Fig. 5 Oil pressure bulb with temporarily detached wire

PROGRAMMING.

To start programming the *SAFETY-FLY 700 P* instrument must be off and disconnected from the power.

2.1 PROGRAMMING MOTOR AND FLAP ALARMS.

To start programming, press the red RESET button, and hold it down (for approximately 4 seconds) to power the instrument, releasing the button when the first red CHT indicator light (ref. B) turns on.

Programming will now begin in a cyclical semi-automatic mode, i.e. the pilot will interact manually with the instruments for the movement phase.

Programming starts with calibrating the cylinder head temperature alarm indicator light (CHT), followed by the motor oil temperature (OIL TEMP), Min and Max motor oil pressure (OIL PRESS), and display of the FLAPS.

The start and end programming sequence is shown in the table below, with the exception of fuel pressure calibration, which is carried out in a following step using a different mode, explained in chap. 2.2

During programming *SAFETY-FLY 700 P* generates an electric output signal simulating the movement of the motor instrument indicators located on the dashboard.


To store the required alarm point, press the red RESET button, and when the indicator for the instrument is in the required position, press the key down until the buzzer beeps 3 times, indicating that programming has been carried out correctly. Then, release the button and continue programming the next value.

If the index relative to the instrument that requires programming moves beyond the level requiring programming, it is possible to go back by pressing the red button a few short times.

Continue programming all of the values, as shown in the table below.

Order of the programming cycle	DESCRIPTION ALARMS
1st	Flashing red LED (ref. B) CHT Cylinder Head Temperature
2nd	Steady green LED (ref. C) Minimum OIL temperature
3rd	Flashing red LED (ref. D) Maximum OIL temperature
4th	Flashing red LED (ref. E) Maximum OIL pressure
5th	Flashing red LED (ref. E) Maximum OIL pressure
6th	1st Steady orange LED (ref. G) (T/O) FLAP
7th	2nd Steady orange LED (ref. G) (1/2) FLAP
8th	3rd Steady orange LED (ref. G) (FULL) FLAP

At the end of programming, turn the instrument off and reconnect the previously detached motor oil pressure bulb wire, as shown in figure 6.

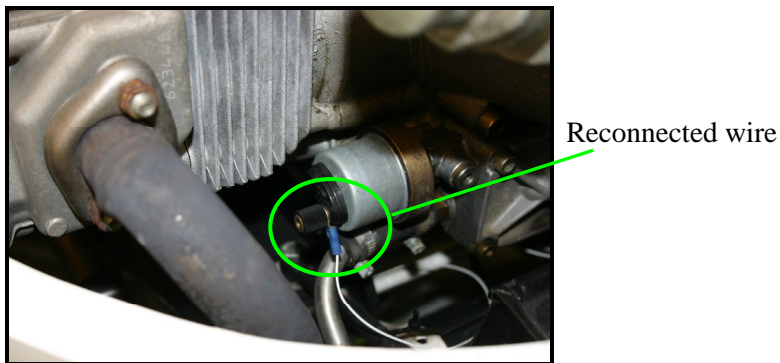

-Fig. 6 Reconnected oil pressure bulb wire.

If you need to re-program one or more alarms without changing the correct thresholds, start the programming phase as described above, let the cycle run, and only when it is necessary to re-program the new threshold, press the button corresponding to the required value.

2.2 PROGRAMMING THE FUEL PRESSURE ALARM.

The fuel pressure alarm threshold must be programmed with the motor running.

When the pressure of the fuel system is considered regular, press the RED button for approximately 7 seconds until the flashing red Fuel indicator light ref. A, and the acoustic buzzer, come on. Next, release the button and determine the fixed 3-level operation percentage; 7, 16, 25%.

To determine the alarm operation percentage, the 3 LED flaps (G) are used and defined as follows: led-T/O = $\pm 7\%$, led - $\frac{1}{2}$ = $\pm 16\%$, led-Full = $\pm 25\%$.

Each LED will remain lit for 5 seconds, and if in that time the red button (F) is pressed, the corresponding percentage will be programmed.

The programmed alarm threshold, based on the voltage level that is read at the time of calibration, and the alarm will be triggered when the voltage value drops below or rises above the percentage value of the programmed voltage.

3. OPERATION.

Once *SAFETY-FLY 700 P* is powered, it will perform a brief test by turning on all of the indicator lights for 2 seconds and the buzzer for 4 seconds. It is now ready for use by controlling all levels of the inputs in Real-time if they deviate from the programmed values.

3.1 FUEL INDICATOR LIGHT.

The FUEL indicator light carries out two distinct and different controls;

a) CHECK OPEN VALVES BEFORE TAKE-OFF.

Following the test that runs when it is switched on, as described above in point 3 and with the motor running, the FUEL indicator light (ref. A) will flash, telling the pilot that he/she must check whether the fuel valves are open prior to take-off.

If the valves are open, the indicator light and the red button will switch off (ref. F).

b) **FUEL CIRCUIT PRESSURE ALARM**

When the fuel pressure falls below or rises above the value of the programmed percentage (ref. Chapter 2.2), the Fuel indicator light will flash as the buzzer sounds.

3.2 MOTOR ALARM OPERATION.

The CHT cylinder head temperature (ref. B) and oil temperature (ref. D) alarm indicator lights come on when the temperatures exceed the programmed thresholds, as well as the relative indicator light and buzzer.

The red motor oil pressure indicator light (ref. E) comes on in two different ways;

- a) **FLASHING** - when the pressure exceeds the programmed threshold.
- b) **STEADY ON** - when the pressure is below the programmed threshold.

The photo in fig.7 illustrates an example of a cylinder head temperature alarm (CHT).

To silence the buzzer during an alarm, simply press the red RESET button (F).

3.3 GREEN INDICATOR LIGHT OPERATION.

The green indicator light (ref. C) works in two modes;

- a) **STEADY ON** - when the motor oil temperature is correct and therefore ready for take-off.
- b) **FLASHING** - when the timer has been switched on from the red button. The timer will set the buzzer off every 2 minutes for 2 seconds. To turn the timer off simply press the button. Every time the timer is switched on, the buzzer will sound for 2 seconds.



Fig. 7 example of cylinder head temperature alarm

3.4 FLAP LEDs.

The 3 orange FLAP LEDs (ref. G) indicate the 3 positions of the FLAPS:

- a) Flaps T/O – 1 LED on steady
- b) Flaps at half-run – 2 LEDs on steady.
- c) FULL Flaps completely extended – 3 LEDs on steady

FLAP LEDs - TAKE-OFF PROCEDURE.

When the flaps are extended from the T/O position (one LED on), an acoustic timer will come on where, for the first 2 minutes at 1-minute intervals, the buzzer will sound for one second, telling the pilot that he/she must retract the flaps after take-off to avoid them from getting damaged.

If, however, after 3 minutes the flaps are still extended, the buzzer will sound continuously at regular intervals.

The same happens during landing, and should this procedure last for more than 3 minutes, the buzzer will sound continuously at regular intervals, and can be silenced by pressing the red RESET button.

3.5 ALARM PANEL ON.


If the key is left in the dashboard with *SAFETY-FLY 700 P* running, the buzzer will sound continuously after 8 seconds, reminding the pilot to turn the dashboard off, avoiding use of current and also protecting the hour-counter.


IMPORTANT NOTE

We would like to specify that *SAFETY-FLY 700 P* is intended to be an instrument that aids navigation, however, it in no way replaces pilot controls. Accordingly, the pilot must strictly observe the rules of flight and use of the aircraft, as reported in the aircraft manual.

The pilot must always be exclusively in charge of navigation, regardless of the installed *SAFETY-FLY 700 P* instrument.

STC 1017.1

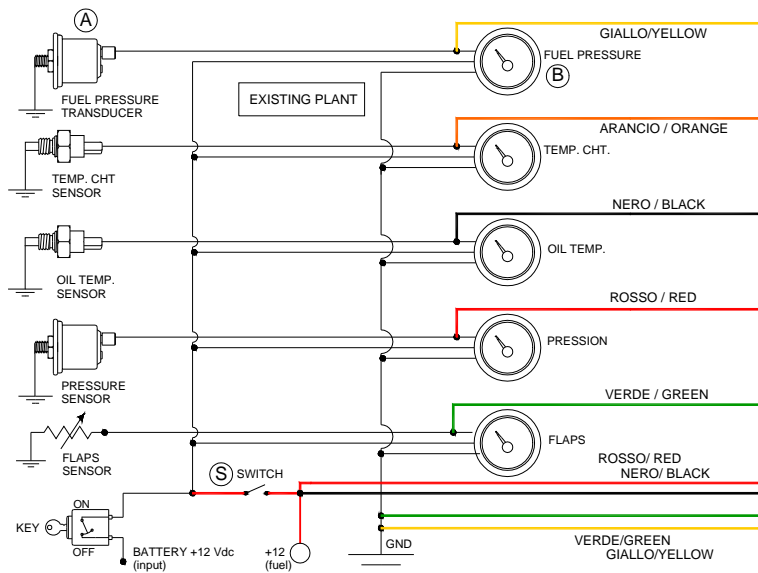

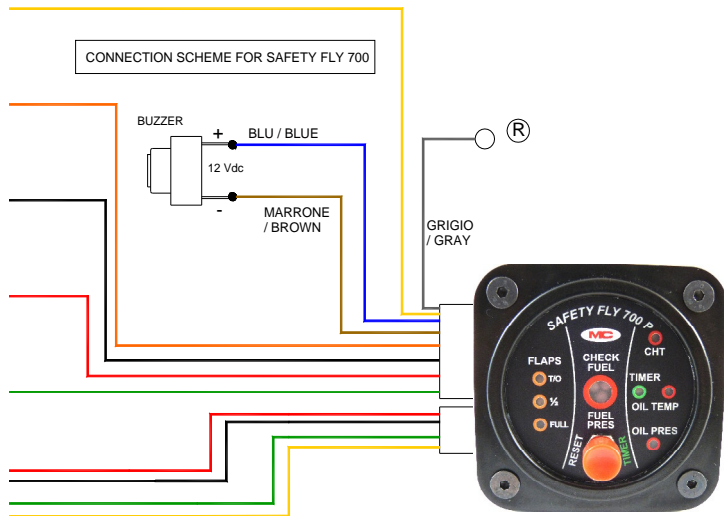

(R) = Do NOT connect when the fuel transducer (A) is connected to the fuel pressure instrument (B)

(R) = connect to +12(fuel) when the fuel transducer (A) is NOT connected to the fuel instrument (B)

(S) = switch that must be installed on the aircraft dashboard

+

TECHNICAL FEATURES	
Power supply voltage	From 9 to 16 Vdc
Maximum absorption	150 mA @ 16 Vdc
Operating temperature	-20°C ÷ +75°C
IP Protection degree	IP55 (front) IP45 (rear)
Mechanical resistance	2 g
Material	Black ABS

NOTES

