

Mitsubishi General-Purpose AC Servo

Sales and Service

No. 08-10E

Version Upgrade (Windows Vista-compliant) of Mitsubishi General-Purpose AC Servo MR-Configurator (Setup Software)

Thank you for your continued patronage of the Mitsubishi general-purpose AC servo.
The Mitsubishi general-purpose AC Servo MR-Configurator will be complied with Windows Vista to improve our services.
We ask for your understanding in this matter.

Whereas

1. Windows Vista-compliant Version

MRZJW3-SETUP221E Version C1 (English version) or later

2. Schedule

The upgrade will be made from August 2008 production. (There is a possibility that both Windows Vista-compliant and non-Windows Vista-compliant versions are distributed as long as the non-Windows Vista-compliant version is in stock.)

Differentiating Non-Windows Vista-compliant from Windows Vista-compliant version

The first two digits of the alpha-numeral after the "DATE" printed on the CD label indicate the product version.

Example. DATEC062 → Version C0

The product versions B0 to C0 are non-Windows Vista-compliant.

3. Version Upgrades of MR-Configurator in Windows Vista Personal Computers

Please consult your local Mitsubishi representative.


Date of issue	September 2008	Title	Version Upgrade (Windows Vista-compliant) of Mitsubishi General-purpose AC Servo MR-Configurator (Setup Software)	Mitsubishi Electric Corp., Nagoya Works 5-1-14 Yada-minami, Higashi-ku, Nagoya 461-8670 Tel.: +81 (52) 721-2111 Main line
----------------------	----------------	--------------	---	---

3.1. Precautions on installing MR-Configurator with Non-Windows Vista-compliant CD-ROM


Make sure to exit all Windows programs before installing MR-Configurator.

When a USB cable is connected to a servo amplifier, install MR-Configurator after disconnecting the USB cable.



1) Executing the Setup.exe displays the User Account Control screen. Select “Allow” (in the screen).

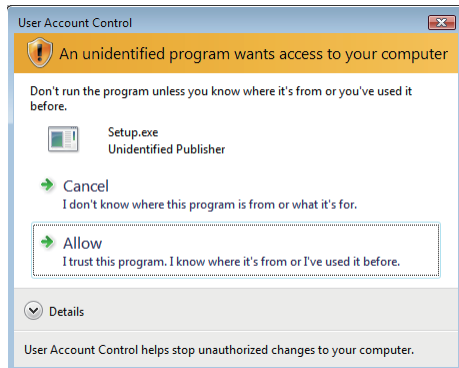

2) The screen for verifying the publisher appears three times during installation. Select “Install this driver software anyway” each time.

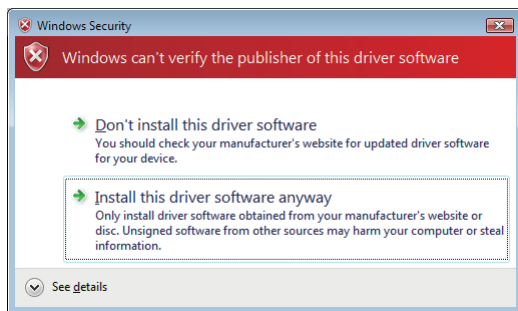


3) The WDREG.exe Error screen appears during the installation. Select the “OK” button.

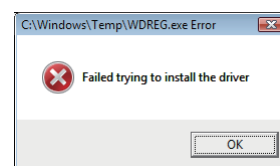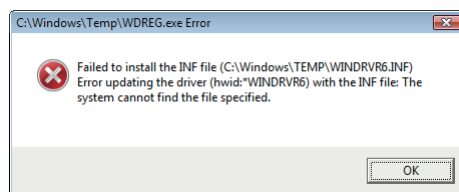


3.2. Precautions on Extracting Update Files

1) Extracting downloaded files displays the User Account Control screen. Select “Allow” (in the screen).

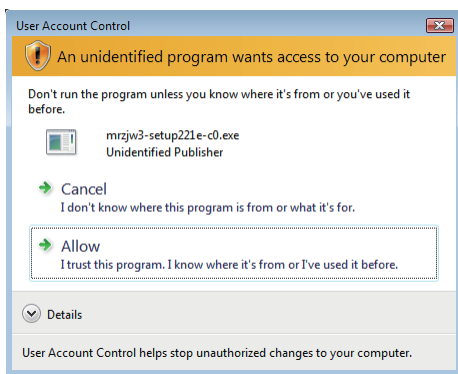

2) After extracting the downloaded file, the Program Compatibility Assistant screen. Select “This program installed correctly”.

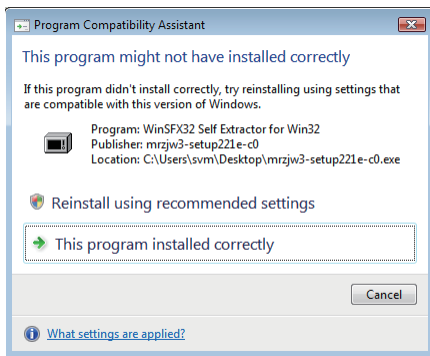


3.3. Precautions on Upgrade Version


Make sure to exit all Windows program before installing MR-Configurator.

When a USB cable is connected to a servo amplifier, install MR-Configurator after disconnecting the USB cable. (For the details on the installation method, refer to the user's manual stored in the upgraded file.)

1) Executing the Setup.exe displays the User Account Control screen. Select "Allow" (in the screen).

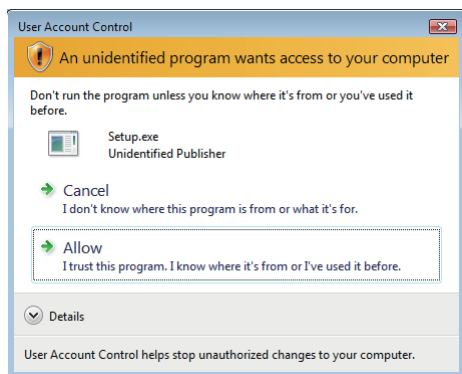

2) The screen for verifying the publisher appears three times during installation. Select "Install this driver software anyway" each time.

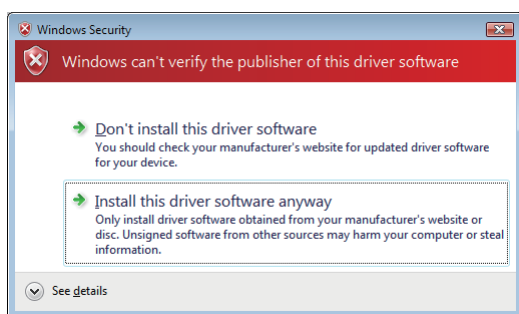

The personal computer using virus security software may display the alert screen during the installation. Disable the virus security software temporarily or select "Allow" in the "Confirm the Program Status before Executing the Program alert" screen.

*We will take no responsibility for any damages to the network or virus-infected computer when virus security software are temporarily disabled.

Windows Vista® is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.