


## AVIAMATIC SUB. AND SUB.2 SERIE 1270

### User Manual

#### GENERAL DESCRIPTION

MIYOTA quartz movement Caliber OS21

Functions : Hours, minutes, chronograph and date.

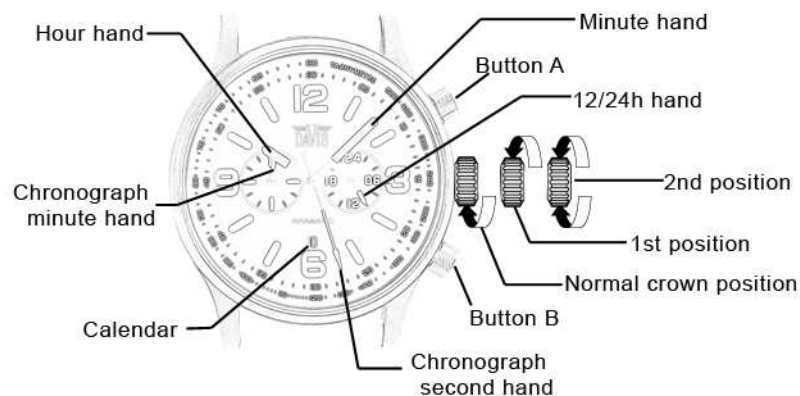

#### GENERAL USE

To unscrew the crown in normal position, turn it anticlockwise.

##### Setting the time

Pull the crown out to the 2<sup>nd</sup> position.

Adjust the hour by turning the crown in the desired direction.

##### Setting the date

Pull the crown out to the 1<sup>st</sup> position.

Turn the crown anticlockwise to set the date.

When the date is correctly set push back the crown on normal position. Important : Date setting MUST UNDER NO CIRCUMSTANCES be carried out between 22.00 h (10 P.M.) and 2.00 h (2 A.M.).

##### Use of the chronograph

This chronograph is able to measure and display time in 1/1 second united up to maximum of 59 minutes 59 seconds.

Measuring time with chronograph

##### Button A :

1<sup>st</sup> pressure : sets off the time measurement. Chronograph second hand begins to run. 2<sup>nd</sup> pressure : stops the time measurement. Chronograph second hand stops.

##### Button B :

(To use only when the chronograph has stopped).

Only one pressure reset the chronograph hand second to zero.

##### Resetting the starting position of the chronograph second hand

Pull the crown out to the 2<sup>nd</sup> position.

Push button A to set position of the chronograph second hand.

Once the hand has been set push back the crown on normal position.

##### Water resistance

Your watch is waterproof 50 meters. Once the setting finished, screw the crown back in order to guarantee perfect water resistance. For this, push the crown to normal position by turning clockwise simultaneously. The crown and buttons must never be handled under water.

##### Maintenance

It is advisable to rinse the watch and its strap carefully with fresh water after contact with sea water. It also recommended that the water resistance of your watch is serviced every two years