

# **Shooting Sports Timer User Manual**

## Model TS1000




#### WELCOME TO THE QUICKDRAW ELECTRONICS SHOOTING SPORT TIMER.

THE BASIC SYSTEM (TS1000-0001-1001) CONSISTS OF;


- 2 SOUND SENSORS
- 2 LIGHT ASSEMBLIES
- 1 TIMER BOX
- 2 TIMER TO LIGHT CABLES
- 2 SENSOR TO LIGHT CABLES
- 1 PUSHBUTTON
- 1 POWER CORD

THE TS1000-0001-1002 SYSTEM INCLUDES 2 TARGET ASSEMBLIES ALONG WITH THE COMPLETE TS1000-0001-1001 SYSTEM.

#### **SETUP**

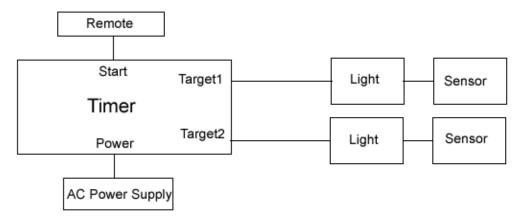

Single Timer Setup

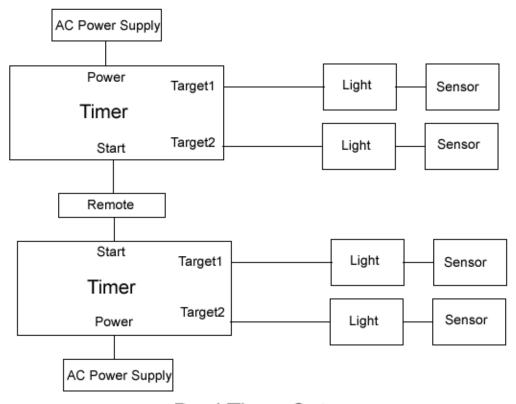

**Dual Timer Setup** 

SET UP IS QUICK AND EASY.

START BY ATTACHING A SOUND SENSOR AND A LIGHT ASSEMBLY TO THE BACK OF EACH TARGET. MAKE SURE THE LIGHTS ARE CLEARLY CENTERED ON THE TARGET WINDOW. PLUG IN THE SENSOR TO LIGHT CABLE TO EACH UNIT. PLUG ONE END OF THE LIGHT TO TIMER CABLE INTO THE LIGHT BOX – PLUG IN THE OTHER END TO THE BACK OF THE TIMER BOX. PLUG IN THE PUSHBUTTON JACK TO THE BACK OF THE TIMER BOX. PLUG IN THE POWER CORD TO THE POWER JACK ON THE BACK OF THE TIMER BOX – PLUG INTO POWER SOURCE. YOU ARE READY TO START!

#### **MODES**

#### **NORMAL MODE**

WHEN THE UNIT IS PLUGGED IN, IT WILL GO THROUGH A SELF TEST PROCESS. THE DIGITAL DISPLAY WILL RUN UNTIL IT REACHES 9.999. DURING THIS CYCLE TIME THE LIGHT BOXES WILL BE CONSTANTLY LIT. WHEN THE CYCLE IS COMPLETE THE LIGHTS

WILL FLASH BRIEFLY AND THEN GO OUT. AT THIS POINT THE SYSTEM IS READY. TO START THE TIMER RANDOM DELAY, PRESS THE PUSHBUTTON AND RELEASE (THE DISPLAY WILL READ '0.000). WHEN THE LIGHT ILLUMINATES THE TIMER STARTS. A HIT ON THE TARGET WILL STOP THE TIMER. IF YOU ARE SHOOTING WITH A SINGLE TARGET A HIT WILL CAUSE YOUR LIGHT TO GO OUT, IF YOUR ARE SHOOTING WITH TWO TARGETS THE WINNING TARGET LIGHT WILL FLASH. TO RESTART SYSTEM – PRESS PUSHBUTTON.

#### PRACTICE MODE

TO TOGGLE TO THE PRACTICE MODE – HOLD THE PUSHBUTTON DOWN FOR 12 SECONDS – THE DISPLAY WILL READ 'PPPP'. A DELAY BEGINS – THE SYSTEM WILL THEN SOUND A 'BEEP' (THIS WOULD BE THE SHOOTER SET SIGNAL) – <u>AFTER A RANDOM DELAY</u>, THE LIGHT WILL ILLUMINATE AND THE TIMER WILL BEGIN. A HIT ON THE TARGET WILL STOP THE TIMER – OTHERWISE THE TIMER WILL RUN TO 9.999 AND START THE CYCLY OVER AGAIN. THE RECYCLE DELAY DEPENDES ON THE NUMBER OF LIGHTS PLUGGED INTO THE TIMER. IF BOTH LIGHTS ARE PLUGGED IN, THE TIMER WAITS 16 SECONDS AND THEN RESTARTS THE CYCLE. IF ONE LIGHT IS PLUGGED IN THEN THE TIMER WAITS 4 SECONDS BEFORE STARTING THE CYCLE.


TO EXIT PRACTICE MODE AND GO TO SLAVE MODE, PRESS THE PUSHBUTTON FOR 12 SECONDS (UNTIL DISPLAY READS SSSS).

#### **COMPETITION MODE**

TO TOGGLE TO THE COMPETITION MODE, HOLD THE PUSHBUTTON DOWN FOR 12 SECONDS WHEN IN THE PRACTICE MODE. THE DISPLAY WILL READ SSSS. WHEN IN THE COMPETITION MODE, THE TIMER WILL TURN ON THE LIGHTS AND START THE TIMER EXACTLY 2 SECONDS AFTER THE RELEASE OF THE REMOTE SWITCH. THE USER DETERMINES THE RANDOM DELAY TIME BY WAITING TO RELEASE THE REMOTE BUTTON. THE USER CAN CONCEAL THE REMOTE SWITCH FROM THE SHOOTERS SO THAT THEY CAN NOT ANTICIPATE THE 'LIGHT ON' EVENT. A HIT ON THE TARGET WILL STOP THE TIMER. IF YOU ARE SHOOTING WITH A SINGLE TARGET, A HIT WILL CAUSE YOUR LIGHT TO GO OUT. IF YOU ARE SHOOTING WITH TWO TARGETS, THE WINNING TARGET LIGHT WILL FLASH.

THIS MODE IS INTENDED TO ALLOW MULTIPLE TIMERS TO BE SLAVED TOGETHER. AN OPTIONAL COMPETITION CONTROLLER IS AVAILABLE TO AUTOMATE THE RANDOM PUSH BUTTON.

TO EXIT COMPETITION MODE AND RETURN TO NORMAL MODE, PRESS THE PUSHBUTTON FOR 12 SECONDS (UNTIL DISPLAY READS 0.000).

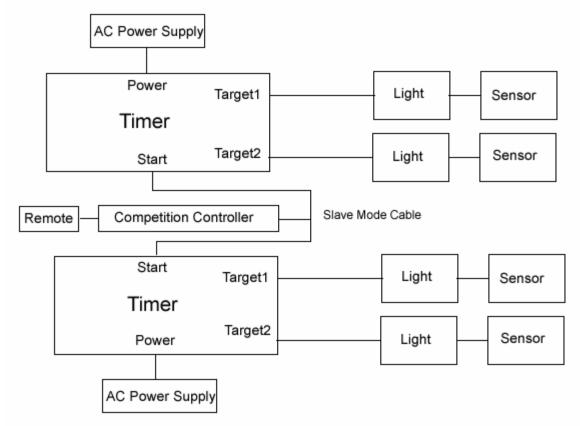

**Dual Timer Setup with Competition Controller** 

#### **BALLOON SWITCH OPERATION**

WHEN THE TIMER IS USED WITH A BALLOON SWITCH, THE USER INSTALLS A BALLOON IN THE BALLOON TARGET AND THEN PRESSES THE START BUTTON. IF TWO BALLOON TARGETS ARE USED, THE WINNERS LIGHT WILL FLASH. A NEW BALLOON MUST BE INSTALLED IN THE BALLOON TARGET AFTER EACH SHOT. IF A BALLOON IS NOT PRESENT, THE TIMER ASSUMES THAT THE TARGET IS NOT PRESENT AND WILL NOT FLASH THE LIGHTS DECLARING A WINNER. THE BURSTING OF THE BALLOON SIGNALS THE TIMER TO STOP THE TIME.

#### OPTIONAL EQUIPMENT

THE OPTIONAL FOOT SWITCH MAY BE PLUGGED INTO THE TIMER BOX IN LIEU OF THE PUSHBUTTON.

THE OPTIONAL DC POWER CABLE MAY BE USED WITH AN AUXILLARY POWER UNIT/ OR BATTERY.

.

## Options, Extras, and Spares Cash, Check or Money Order Discount Price

Description	Price Each
Timer System	\$399
Balloon Timer System	\$429
Slave mode cable set connects up to four timers together	\$39
Slave mode cable set connects two timers together	\$14
Foot Switch	\$49
Hand Switch (Remote Start)	\$19
Shot Sensor	\$29
Light Box includes Sensor to Light Cable	\$99
Balloon Switch Light Box	\$99
Balloon Switch long handle gold contacts	\$15
Target	\$150
Light Box to Timer Cable 50 feet	\$29
Sensor to Light Cable	\$6
Flip up Bale for Timer Tilts units for easy viewing on Bench	\$29
AC Power Supply	\$19
DC Power Adapter operate timer from a battery	\$12
Storage Case	\$39
Target Shipping each	\$50
Timer System Shipping	\$20
Shoot! Timer Replacement Impact Sensors	\$29

## **Credit Card , Debit Cards or Paypal Price**

Description	Price Each
Timer System	\$411
Balloon Timer System	\$442
Slave mode cable set connects up to four timers together	\$40
Slave mode cable set connects two timers together	\$15
Foot Switch	\$50
Hand Switch (Remote Start)	\$20
Shot Sensor	\$30
Light Box includes Sensor to Light Cable	\$102
Balloon Switch Light Box	\$102
Balloon Switch long handle gold contacts	\$16
Target	\$155
Light Box to Timer Cable 50 feet	\$30
Sensor to Light Cable	\$6
Flip up Bale for Timer Tilts units for easy viewing on Bench	\$30
AC Power Supply	\$20
DC Power Adapter operate timer from a battery	\$13
Storage Case	\$40
Target Shipping each	\$52
Timer System Shipping	\$21
Shoot! Timer Replacement Impact Sensors	\$31