

# 9.7 Inch Android MID



**User manual**

Thanks:

Dear User

Thank you for purchasing our product.

These operational guidelines for the user, to ensure you a quick and convenient to use, read the instructions carefully before use.

## Contents:

### Attention

1. appearance and button
2. First use
  - 2.1 Battery management and charge
  - 2.2 Connection with PC
3. Equipment operation interface
  - 3.1 Main interface describe
  - 3.2 status bar describe
  - 3.3 Use touch panel
4. Equipment basic set
  - 4.1 Basic setting
  - 4.2 Application
  - 4.3 Privacy
  - 4.4 Storage
  - 4.5 Language & keyboard
  - 4.6 Date & time setting
  - 4.7 USB Mode Select
  - 4.8 About device
5. Apps Install and manage
6. Operation
  - 6.1 Network
  - 6.2 Music
  - 6.3 Video
  - 6.4 Picture
  - 6.5 Wallpaper
  - 6.6 Camera
7. Hardware Specifications
8. Problem solution

Attention:

This handbook contains important security measures and the correct use of the product information, in order to avoid accidents. Please make sure to reading the manual carefully before use the device.

 
- I Please don't be in high temperature, moisture or very dust place
- I Please don't be in high temperature, Especially in summer don't put the device in the car when Windows closed.
- I Avoid fall or Violent collision of the device, don't make the TFT display screen were violent tremor, This could cause TFT display screen abnormal or damage.
- I Please choose the appropriate volume, Use headphones should not be too big volume, If feel tinnitus, Lower the volume or stop using it
- I please charge In the following condition,
  - A、 The battery power ICONS shows have no power
  - B、 The system automatically shut off, startup after power off soon
  - C、 Operation buttons no response
  - D、 The machine that the top right corner show red icons
- I When the device in the format or ongoing upload and download file, please do n't suddenly disconnect, This could cause application error.
- I For those who because of damage to the product, repair, or other causes of erased the memory, The company shall not be liable for any responsibility, please follow the user manual for the standardized operation to use the device.
- I Don't disassemble the product, don't use alcohol、 Thinner or benzene to scrubbing products
- I Don't use the device one of the place of prohibit to use electronic equipment in regional (such as the plane)
- I Please don't using the Tablet PC when you in driving or walking down the street,
- I USB just only be used for data transmission

The company reserves the right to improve product, products specification and design have any change, The information is subject to changes without prior notice.

(This tablet is no waterproof function)

**【Remark】** All pictures in this manual is just for your reference. products specification and design have any change, The information is subject to changes without prior notice.

## 1. appearance and button:

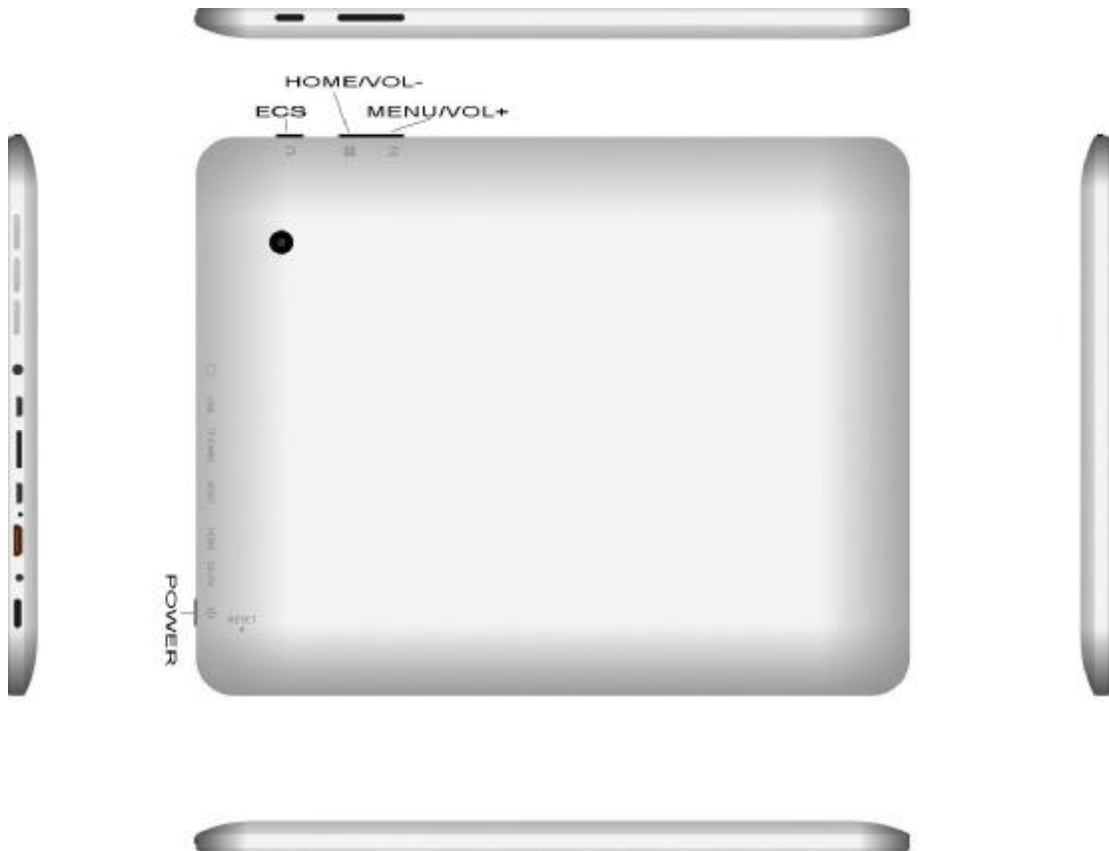

### 1.1 Touch panel

9.7" Capacitive touch panel: In The Operation, to click, dragging on the touch panel

### 1.2 POWER

startup: Long Press and hold the power button, the system will enter the main in terface

shutdown: In the main menu interface, Press the power button about 5 second to shutdown, The system can hint "power off" option, Clিকে "ok". you can safely shut down.

Lock screen: Short press Power button to lock screen or unlock screen.

Remark 1. When power is empty, system will shut down automatically.

2. Illegal turn off the device, restart will scan and restore the disk, it may take longer time to enter into system

### 1.3 ESC

Short Press ESC button will return the last interface, long Press ESC button will return the main interface

### 1,4 Menu/VOL+

the Tablet under normal operating conditions, short press M button will Back to the home screen; Long Press Menu/VOL+ achieve changes in the volume.

### 1.5 Home/VOL--

Short Press Home button back to the home screen; Long Press Home button achieve changes in the volume

#### 1.6 earphone jack

3.5 mm standard earphone jack

#### 1.7 Video output interface

HDMI output interface

#### 1.8 TF card

TF-CARD slot: external T-FLASH card

#### 1.9 Micro USB(HOST)

Charging and external connection USB flash drive

#### 1.10 Micro USB(OTG)

You can use it to connect the computer for data transmission,

#### 1.10 Reset

When the Tablet under the condition of the crash, use the small objects to short press RESET button, Tablet will force to shutdown.

**【Remark】** : unless unable to shutdown, otherwise don't use the reset, suggest you to shutdown by normal, if no will easy to damage the machine system.

## 2. First use

### 2.1 Battery management and charge

Before first use, please set the device's battery is fully charged

Just need to connect the adaptor or USB interface, then you can charge

The first two times charging please keep about 10 hours, after that you just need 8 hours to charge.

**【Remark】** : This tablet using Built-in type polymer battery, Charge must be to choose standard adaptor (Input: AC110~240V 50/60Hz Max: 180MA.. Output: DC5.0~5.5V/2.5A), this device without supply DC charging, USB interface can charge, Choose USB interface to charger

During the charging, the battery icon will scroll

When finished charging, battery icon will become green and stop rolling

In order to prolong the service life of the machine, suggest use out battery power before charge it

**【Remark】** : 1. If you long time don't to use this Tablet, ,in order to avoid power consumption caused damage,pls charge/play the battery once a month.

 
2、 After low battery shut down, connect DC adaptor, device will remind low battery, charging, need to wait some time until the battery is enough power to enter into main menu.

3. Device charging should be in standby status for reach normal charging time.

Because with device and screen consumption,it may cause longer charging time.

### 2.2 Connection with PC

Use USB cable to connect device to PC, device will pop up the USB connection window, click Turn on USB storage to connect to PC

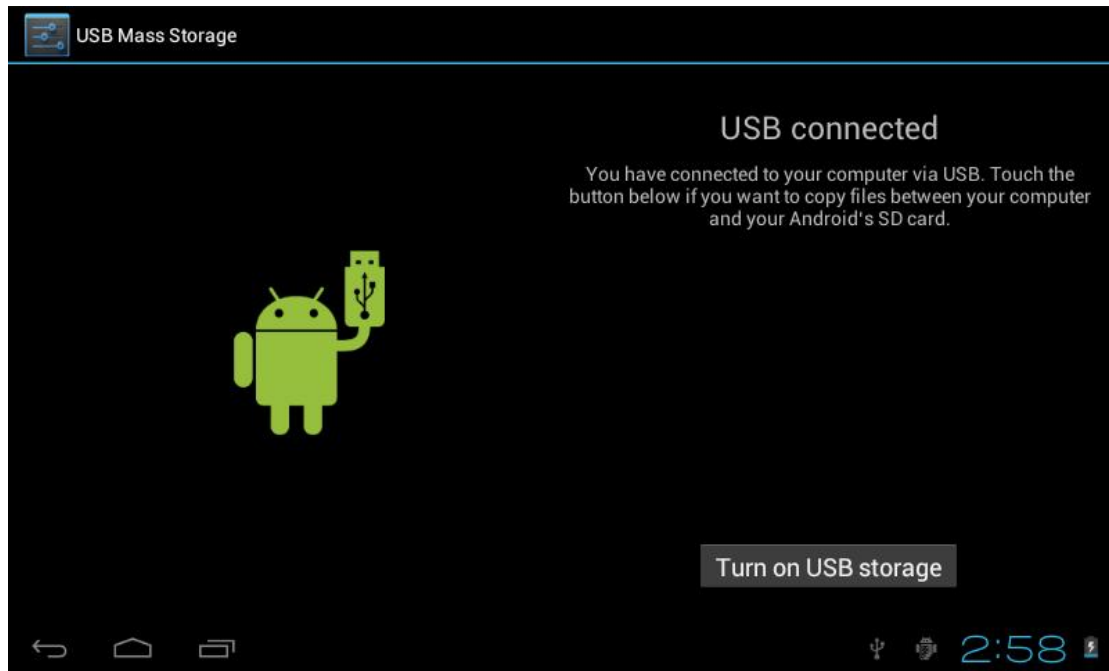


Into the load mode, you can copy, delete the file on the device and the file on the memory card.

### 3. Equipment operation interface

 
#### 3.1 Main interface describe

After startup will enter the main interface

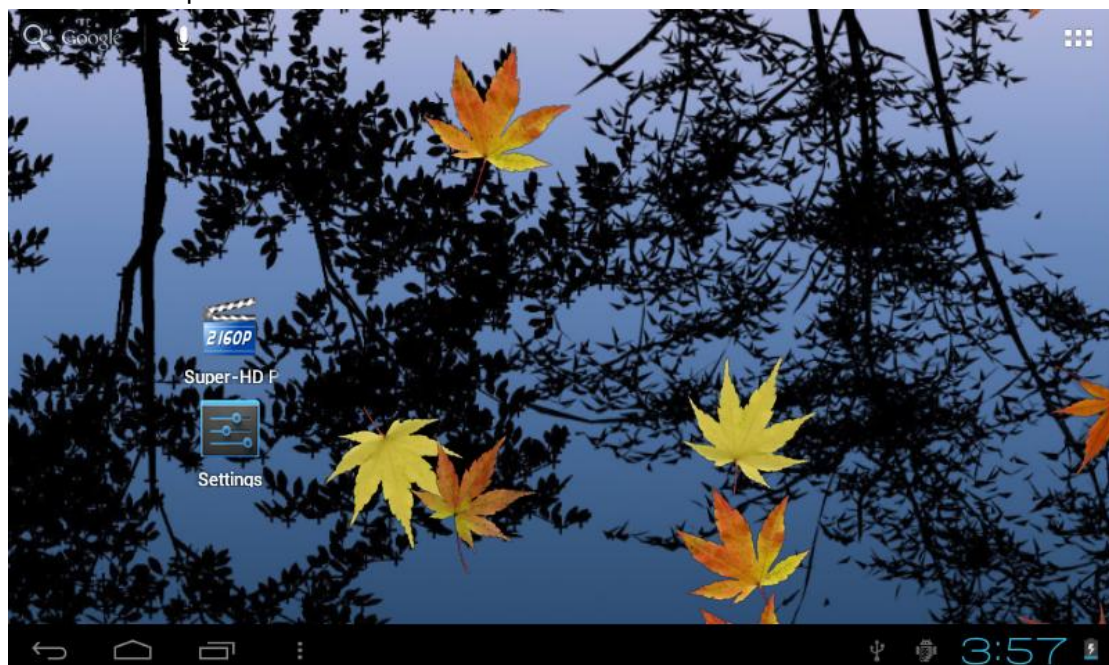


In the main interface, you can :

 Management main interface software ICONS: long press the icons 3 second, after the icons will bigger, then you can drag anywhere in the interface.

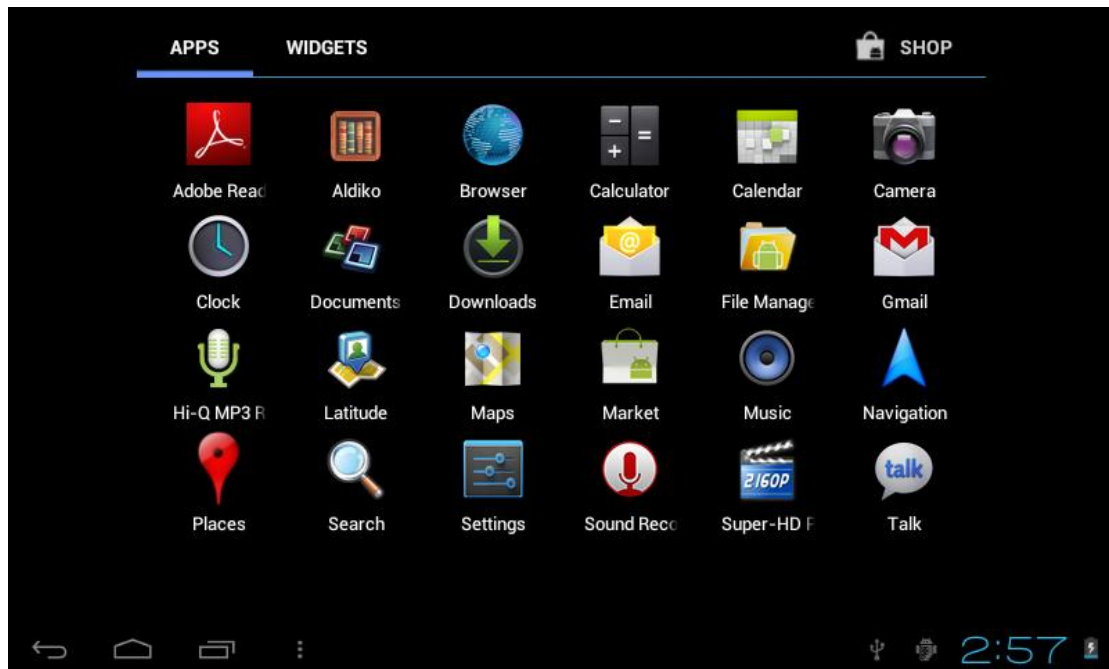

Delete icons: long press the icons 3 second, drag the icons to the Recycle Bin icon, once it become red, Loosen your hand, after that you can delete icon

 You touch the screen keep a time, appear the dialog box"Add yo Home screen" as shown below:

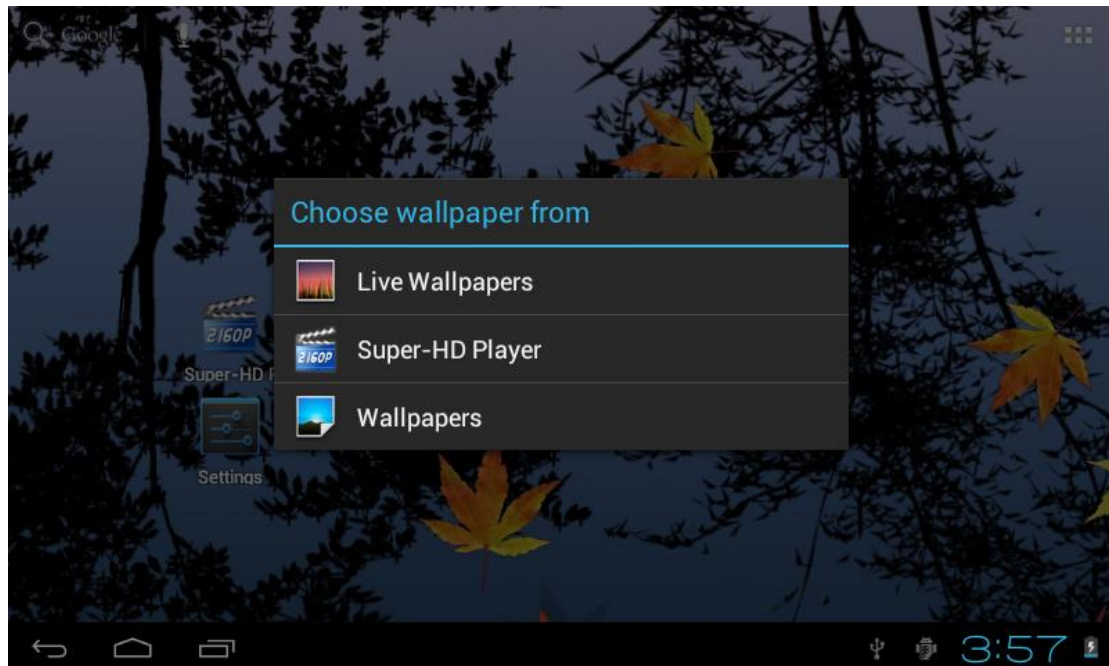

### 3.2 status bar describe




- I The status bar above of the screen  
Top left display main interface software, T-Flash card, USB connection status and so on


Top right display the battery, battery charge icons, current time, set time, Settings Menu, ESC button.


### 3.3 Use touch panel

Device equipped with a 9.7 " touch screen. Following the main touch screen area is described, and describes some of the tips for how to use the touch screen.

 
No matter which interface you are on the screen, can go back to main screen through pressing the soft key  on the bottom right corner of the main screen.

**【Attention】** The main screen soft key  functions as the machine back key 

In different applications, by tapping the back soft key  on the bottom right corner on the touch screen, you can return to its interface on the upfloor.

In different applications, by tapping the menu key  on the upper right corner of touch screen, the screen will appear the operation setting interface as follows,


**【Remark】** : The main screen soft key  functions as the machine manu 

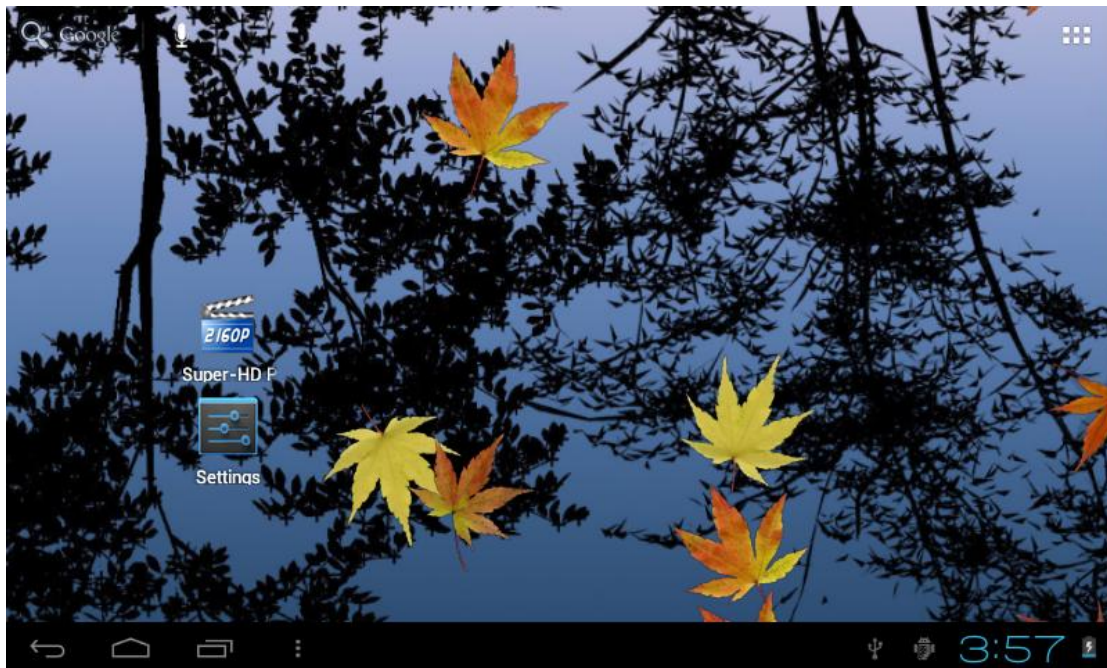


In the main interface, you can touch the icon to open the APPs

In different browser(file, music, video, pictures), You shift and drag the scroll bar, so that the file list can up or down to roll.


### 4. Equipment basic set

 Setting: Click setting icons , enter setting interface



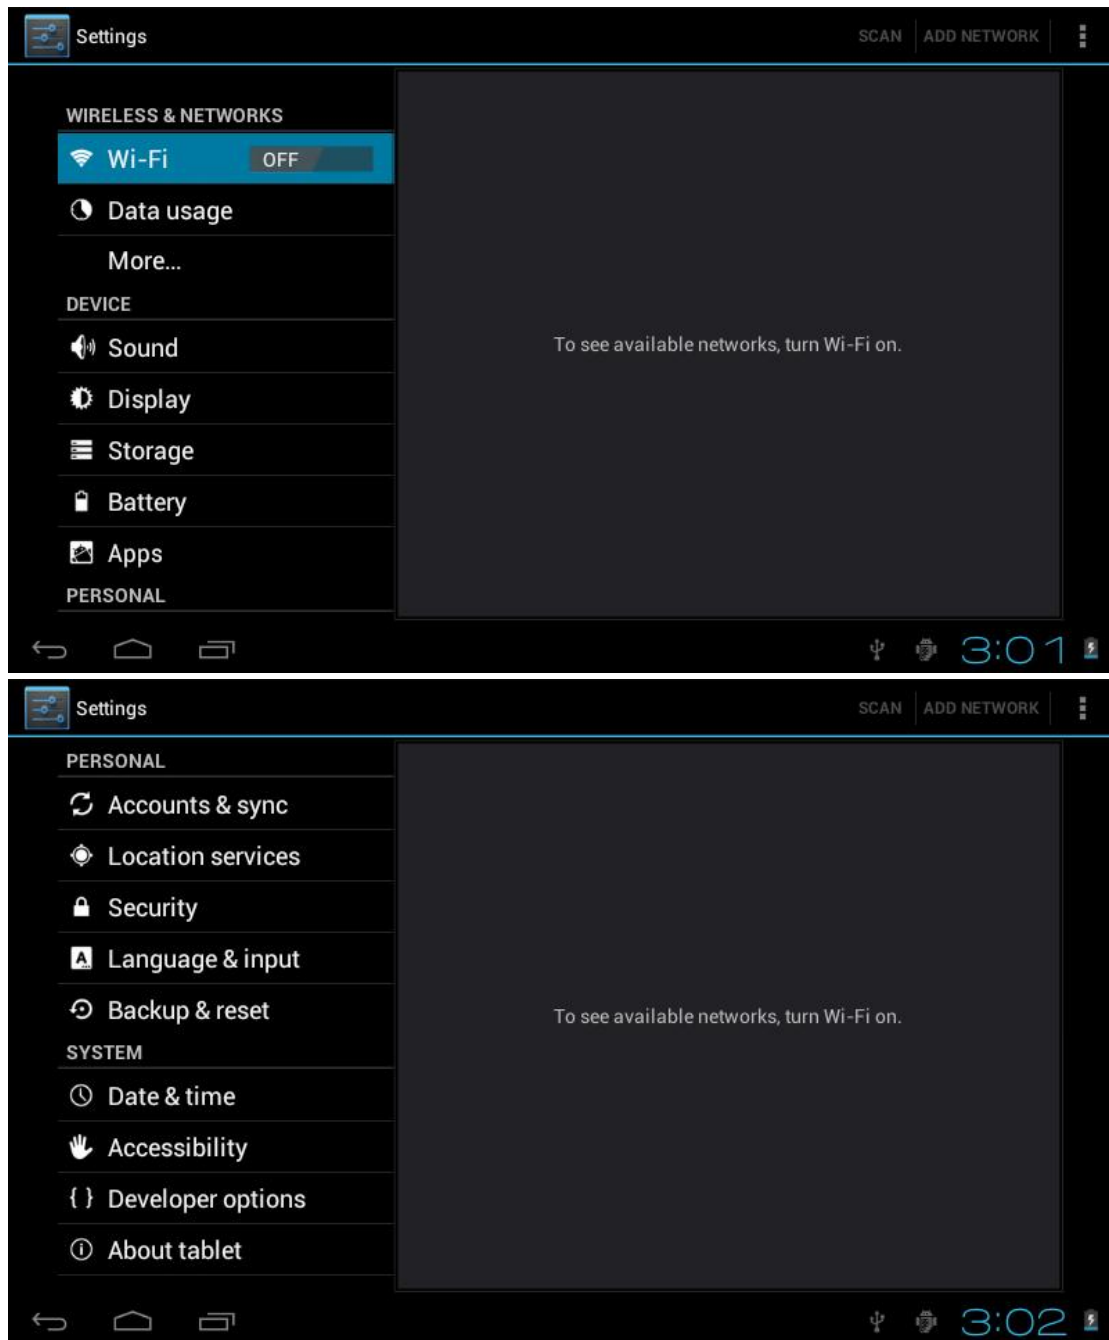


 4.1 Basic setting: Silent mode, Volume, Notification ringtone, Audible selection, Screen lock sounds,

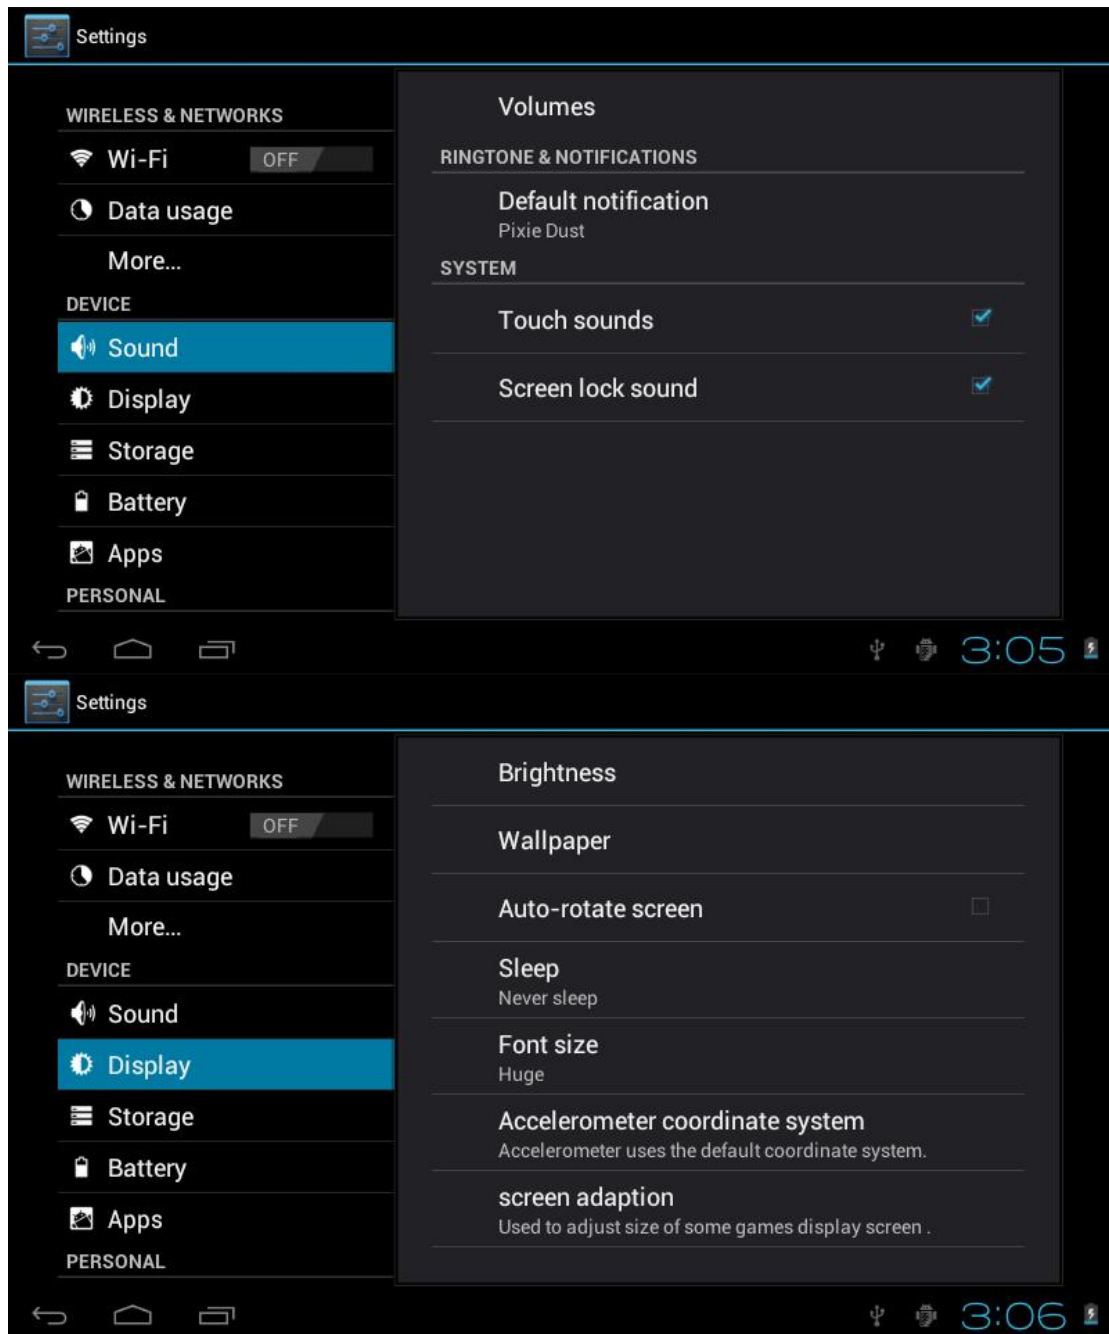

#### 4.2 Application

 
Manage applications

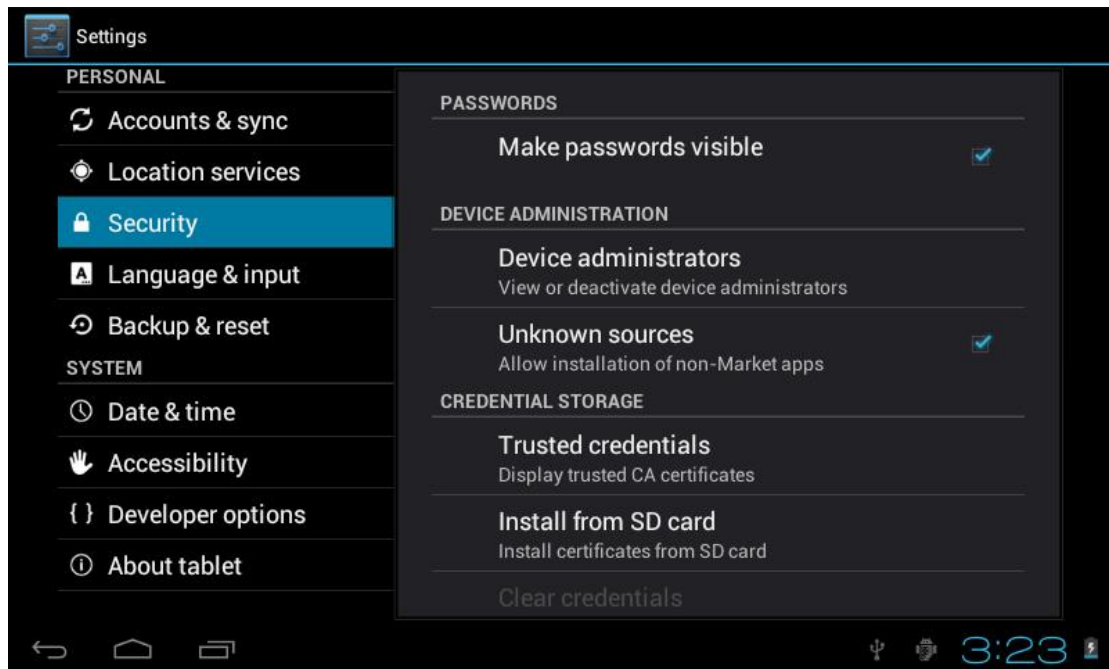


Unknown sources: Click “Unknown Sources”, then click “OK”  
 Manage application: manager and uninstall Application

**【Remark】** : when you Firmware Upgrade, pls close the USB connect

 
How to uninstall?

 1. enter  “setting”>”Application”>”Manage application” And then there will be installed the program list
2. Click you want to uninstall icons, will enter the following interface
3. Click Uninstall, then you can felete the application

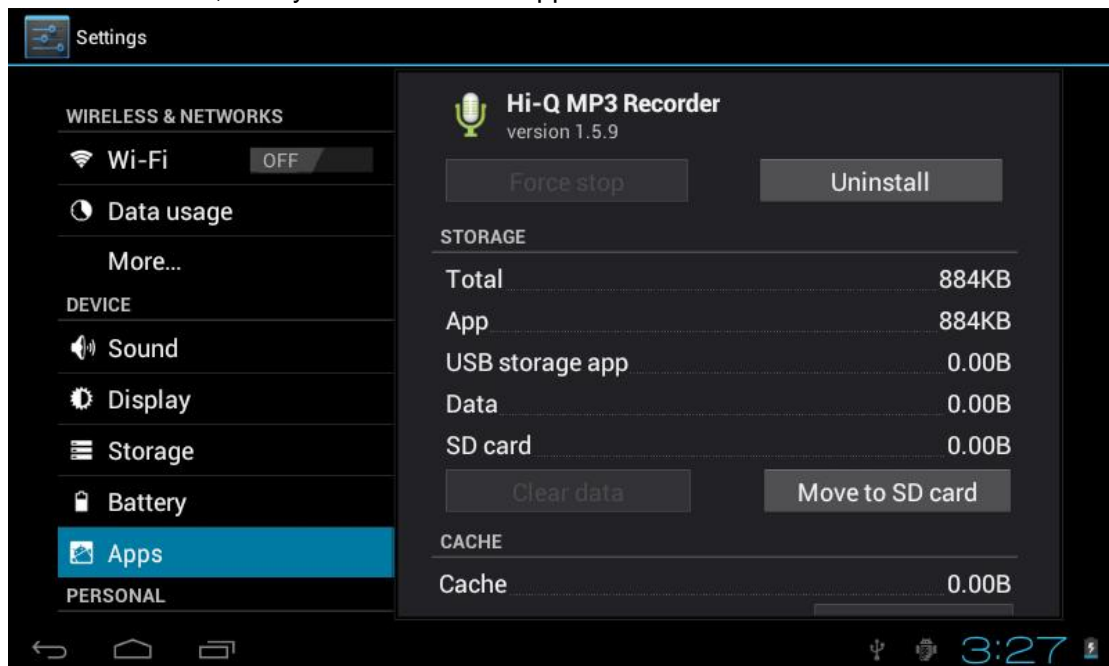


#### 4.3 Privacy
 
## Factory data reset

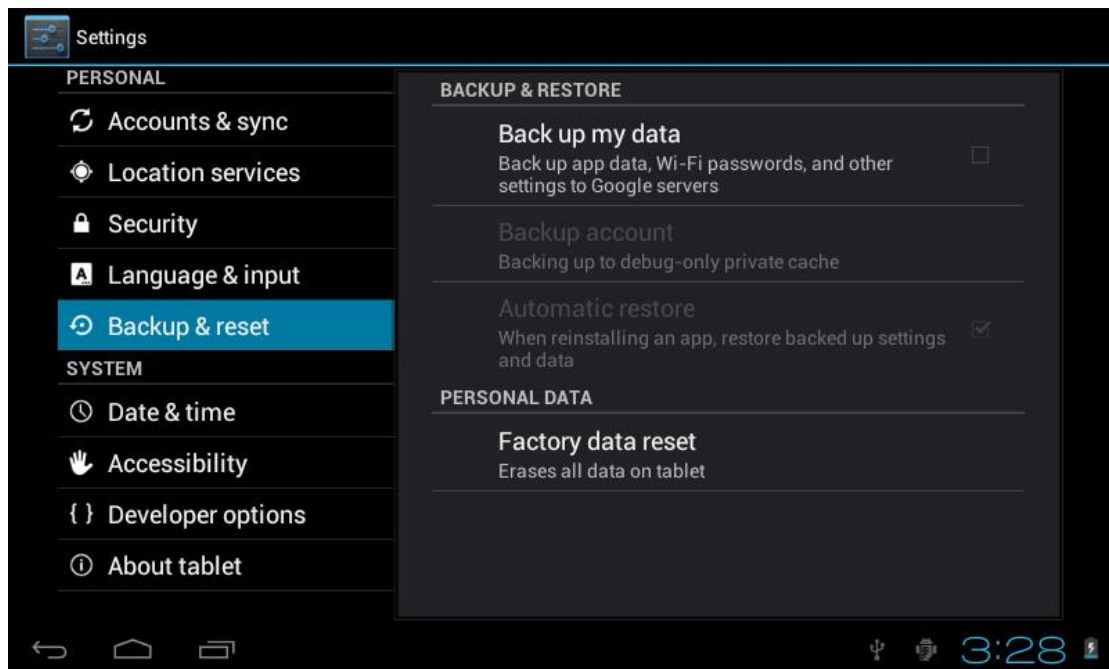

## 4.4 Storage

 
Remove TF card, view of the available storage space

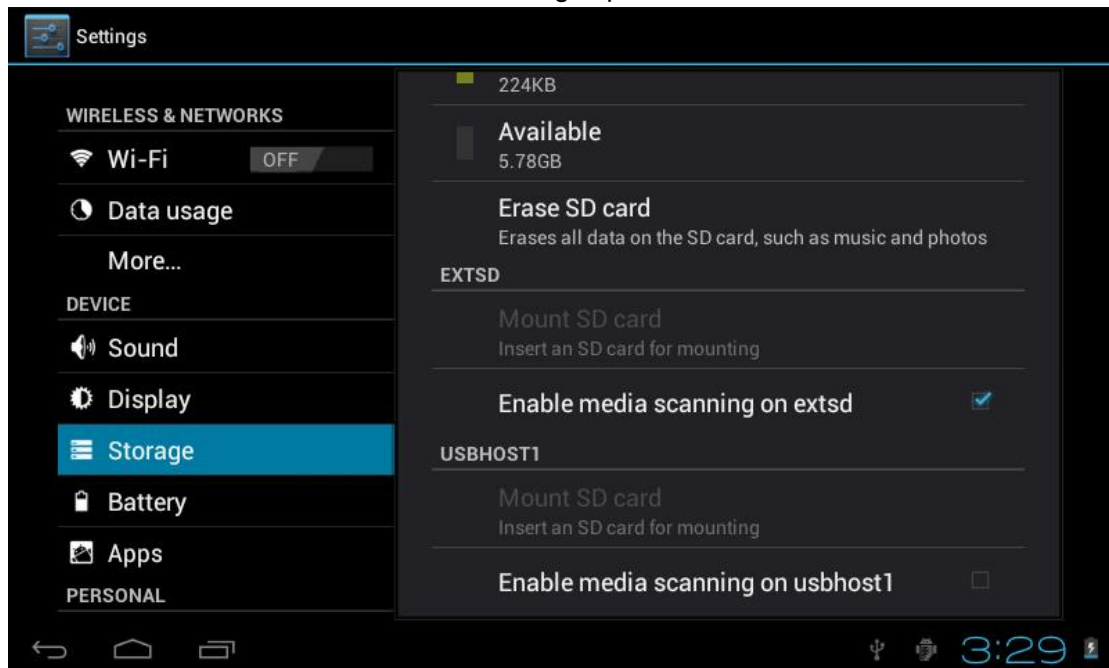

【Remark】 : pls touch option "delete SD card", so that can safety to remove SD card

#### 4.5. Language & keyboard

 Setting: (Language), text input and automatic error correction options;

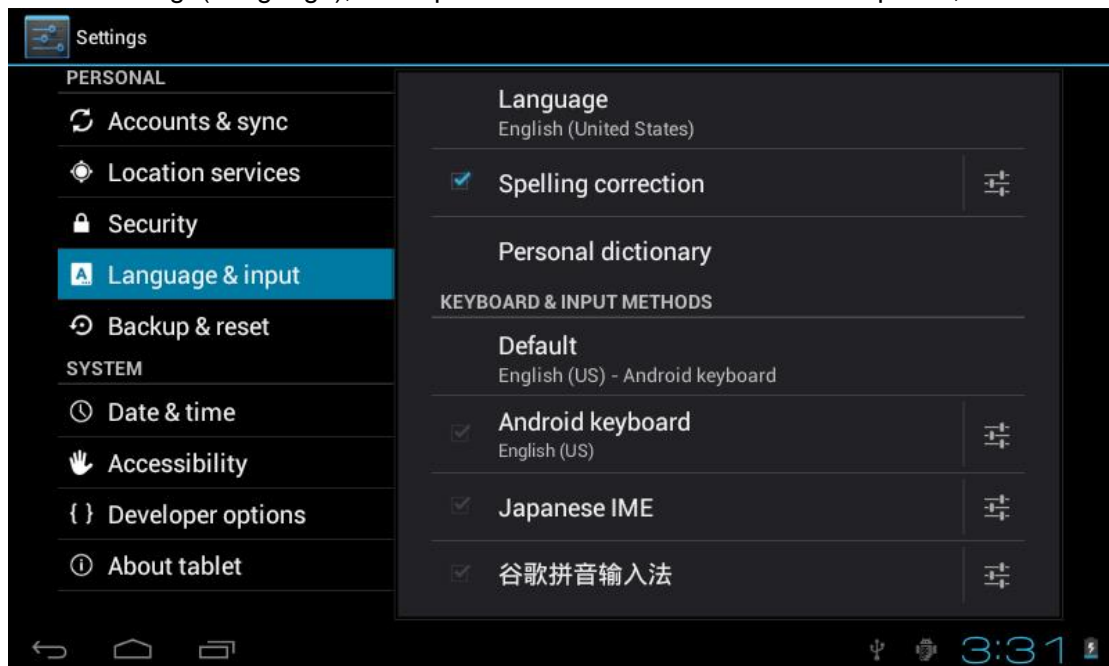

Select Language: 54 kind of national languages are available

Remark: Android system can support 54 kind of language, now manu interface just support 14 language,

Android keyboard: Android keyboard setting

Sound on Key-press


Auto-capitalisation

Show suggestions: Display suggested words while typing

Auto-complete: Specebar and punctuation automatically insert highlighted word

#### 4.6. Date & time setting

 
Set date, set time, Select time zone and select date format

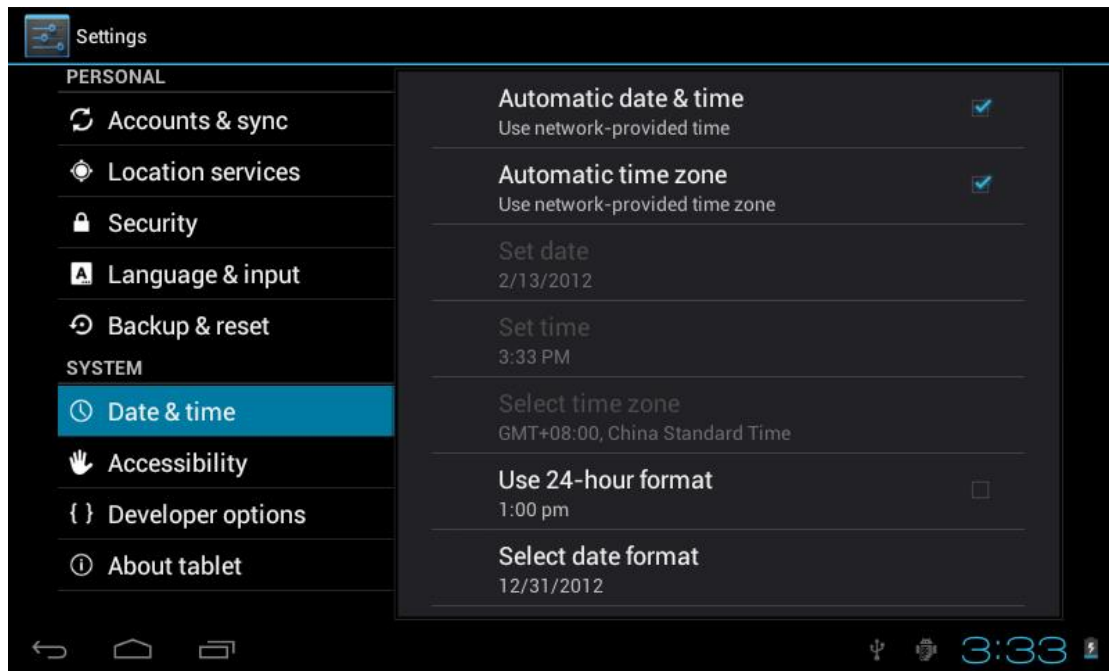

#### 4.7 USB Mode Select

Choose USB work pattern: OTG/HOST/SLAVE.....
 
#### 4.8 About device

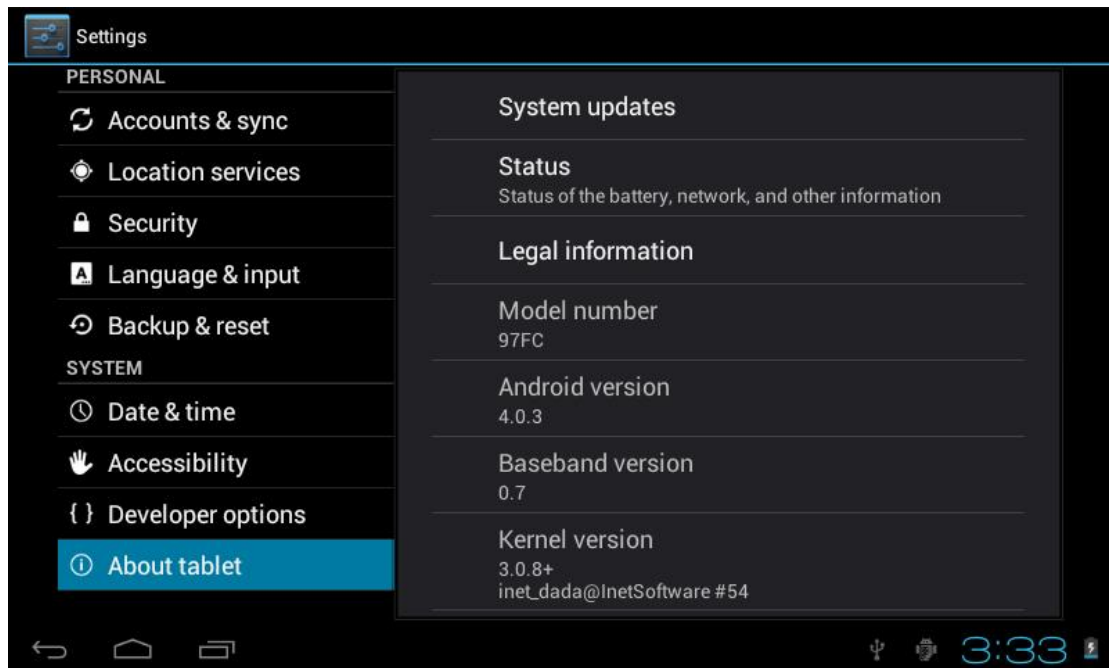

### 5. Apps Install and manage

#### 5.1 Appinstaller

This Tablet can support Android APP in market by third party, most Apps can install in the network, can copy to NAND FLASH or SD card.

Click Appinstaller icon, will appear Install, manage, Exit options.

Install: Click install, enter Apk install interface

Separately for Internal Memory disk and SD Card disk.

Select the APK you would like to install, click it to install, go back to main menu, will display the installed app you just selected.

Remark: some 3<sup>rd</sup> APP must install properly by memory card, downloaded 3<sup>rd</sup> party app may not install properly on device.

Manage: click manage, enter third party interface

 
Click install icon, will enter Action interface

## 6. Operation

### 6.1 Network:

Web browsing:

When the connected network, open the Web browser enter the URL, you can quickly browse the Web; or through the main desktop search bar enter the URL, open the web page.

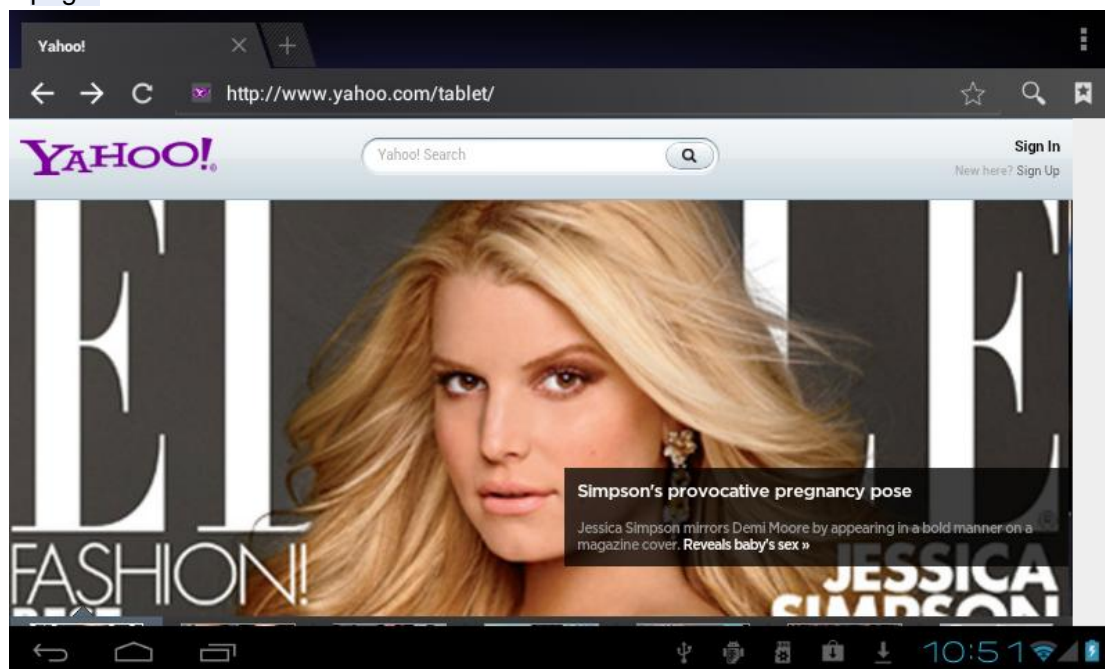


Online video:

Through "Android market" or other means to download online video player software, online TV player, online music software, then install to this MID. Open the software installed, you can watch online video or online TV, listening to online radio stations.

Users can also download other third-party Web applications, including web browsing, video playback, Web client, instant messaging software, etc.


### 6.2 Music:

 Click the "music" icon in main menu, you can enter the music player interface. Here lists the system default user data area of all audio files. As shown below:

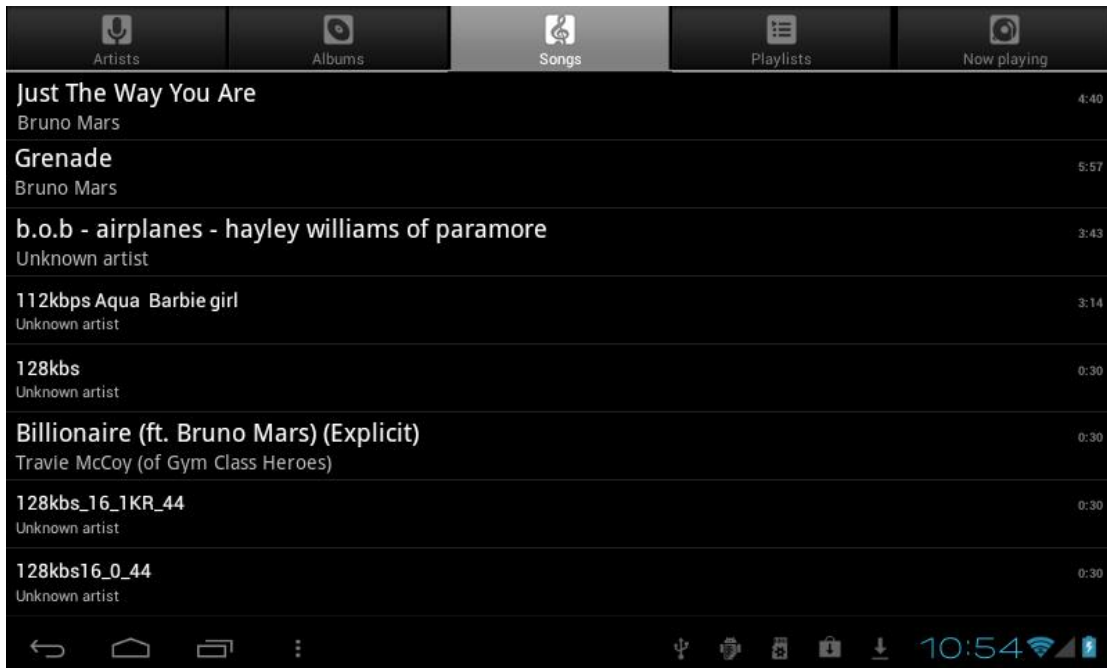

We can spread through the USB audio files synchronized manner, or by inserting the MICRO SD card with audio files were audio files, you can also download the audio files via the network.

 Select the appropriate tab key, you can see for example "Artist", "album", "songs" and other interfaces. Select song to play.

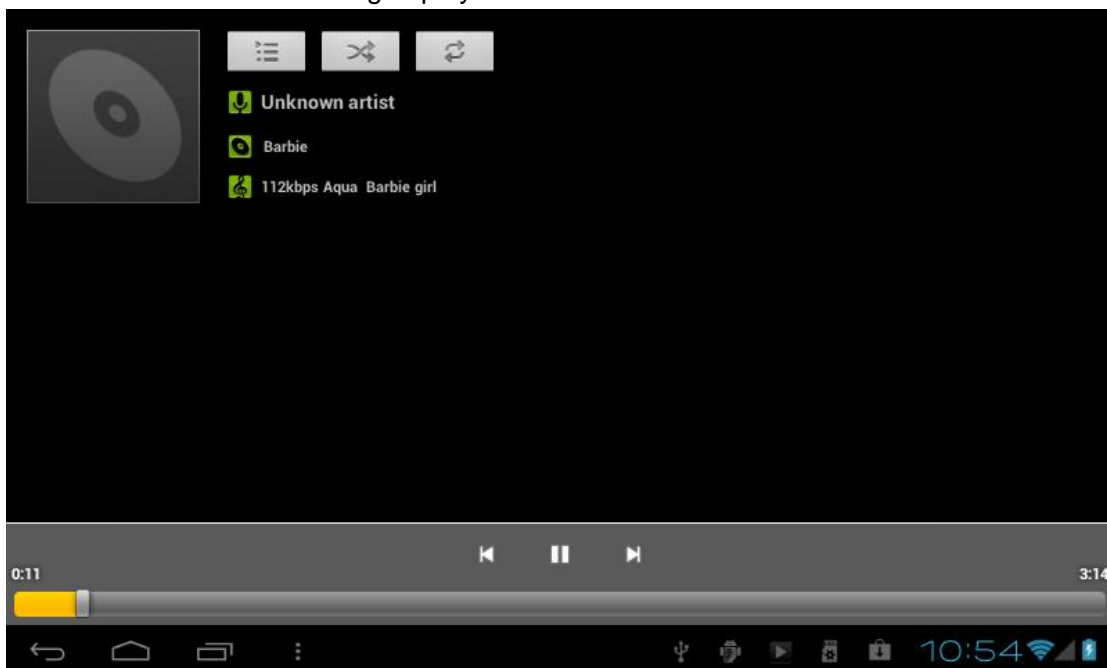


### 6.3 Video:


Click the main menu in the " Video Player  " into the "Video Player" the main



 interface, there will list all the video files. As shown below:

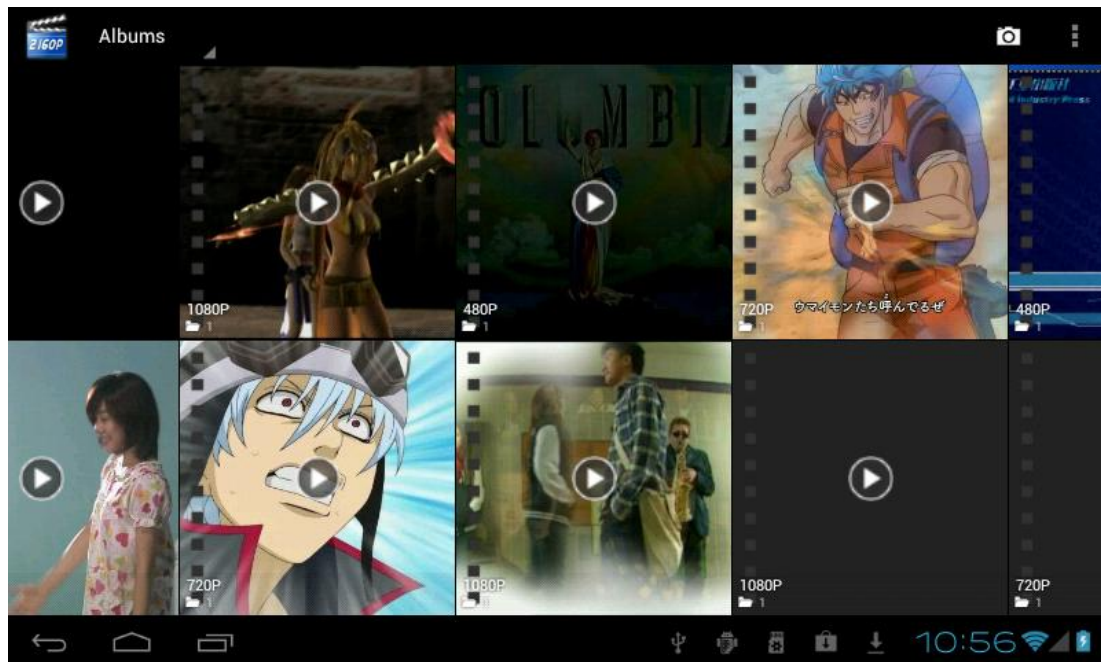

 Select video file into the video player interface, as shown below. Can select "Play", "stop", "Volume +", "Volume -", "fast forward", "rewind", "progress bar" and control keys to control playback of the progress.

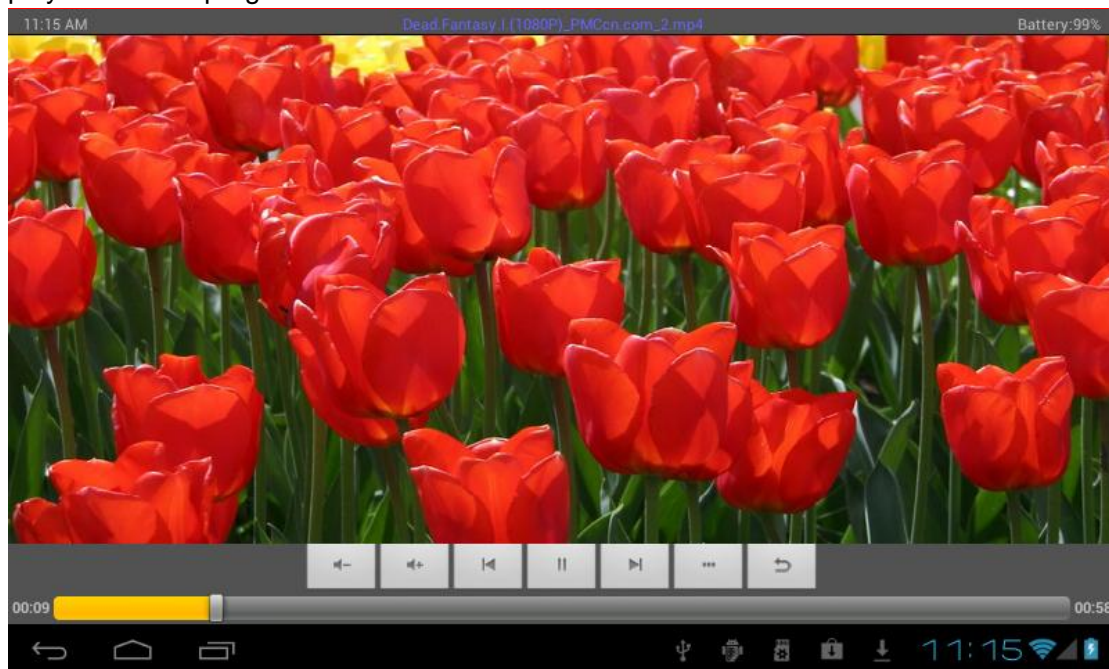

#### 6.4 Photo Browse:



Click the main menu in the "2160P", there will list all the picture files and video files.

As shown below:




Select a picture file which you need, enter the picture play interface, as shown below.


 
### 6.5 Recording:



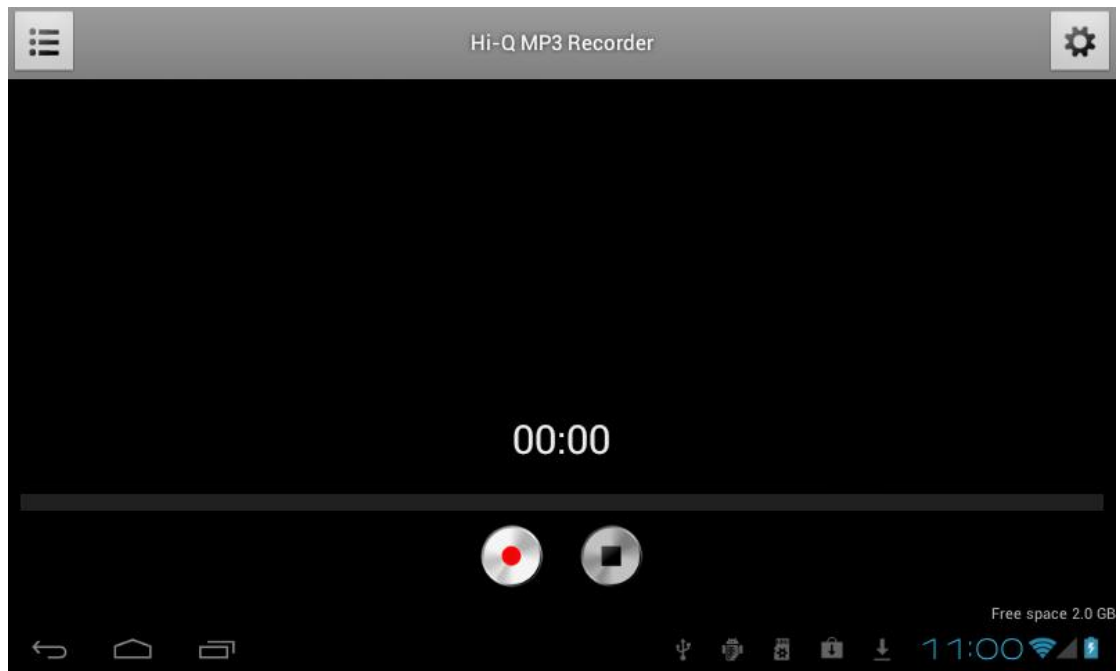

Click the main menu in the "HI-Q MP3 F" icon into the "recorder" the main interface. As shown below:




Note: when recording, audio file will be saved in the local Storage.


Select "Record" button recording, recording is completed, select "Stop" button.

Click  icon , will show all record files.


Click  icon , you can setting recording Bitrate,minimum disk space,Gain etc.

#### 6.6 Camera:

  Click the main menu in the "  " icon into the "Camera" the main interface. As shown below:

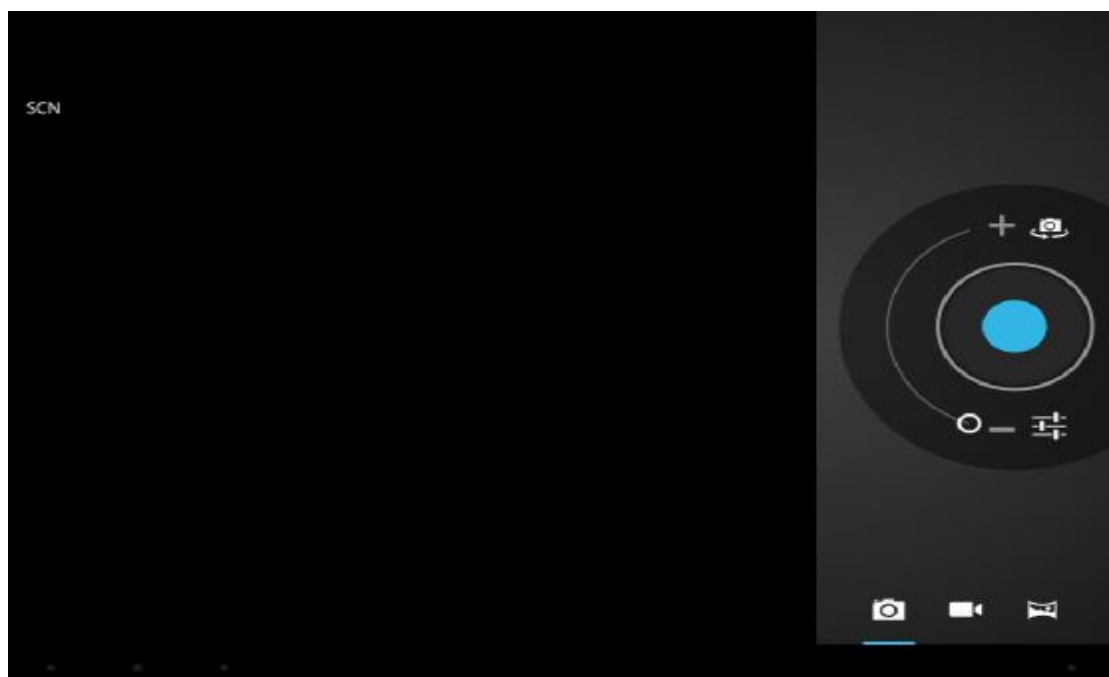

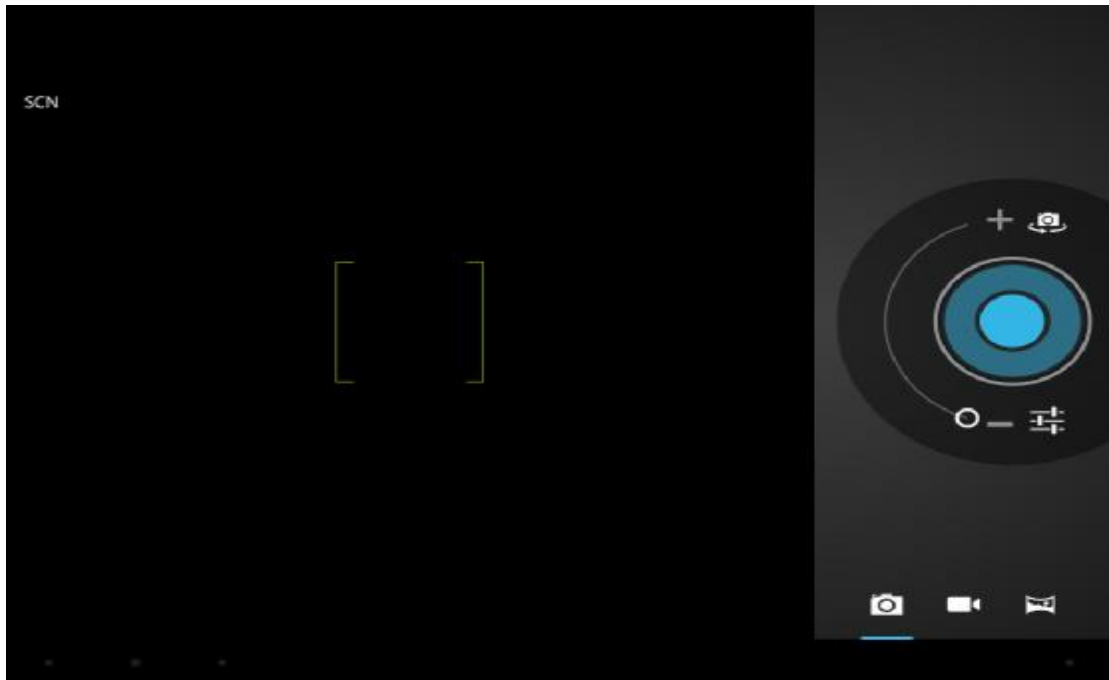

Click the camera shutter, as shown below:



Note: Insert a TF card before using the camera.

Click  to take photo,

Click  to record vidoe

Click  to change lens

## 7.Hardware Specifications

MID hardware parameters	
Processor	ALLWINNER TECH A10 : ARM Cortex A8, Frequency 1.2GHz
Memory	1GB DDR3 RAM
Storage	Memory built-in 8GB-16GB (optional) Support Micro SD card to expand memory up to 16GB
Wireless	IEEE802.11b/g/n wireless network

USB	USB2.0 OTG high speed interface and USB1.1	
Video output	HDMI 1.3 Full HD Video Output Interface	
Audio	3.5mm headphone jack High-quality stereo loud speaker Built-in microphone Headset maximum output power of 40mW Frequency response: 20Hz-20KHz SNR: greater than 90db	
Screen	Size	9.7 inch
	Resolution	WVGA 1024*768
	Color	16 million colors
	Operating	<b>Capacitive</b> touch panel
Other	Size	<b>243 x191 x 10.5mm</b>
	Color	Aluminium silver casing
	Weight	About 600g
	Battery	Built-in lithium polymer battery 7600AH
Accessories	1pc Power adapter(DC V/A) 1pc Micro USB cable 1pc OTG cable 1pc Instruction manual	

## 8. Problem solution

### 1.Device can't to open

1. Check the battery power
2. Connect adaptor first, then check again
3. After charging then can't to open, pls contacy with the supplier

### 2. After startup the screen or the opening picture has been appear , the the device appear shutdown

1. Power is not enough, please charge

### 3.Headset can't hear the voice

1. Pls check the volume whether set to 0
2. Check the music file whether damaged. Try playing other music, if the file have damaged may lead to serious noise or hop sounds.

4.Can copy file or paly music and so on

1. Pls check between computer and device is correct connection
2. check the memory storage space is already full
3. checl the USB cable is good or not
4. USB connection is disconnected