

# Table of Contents

<b>1.</b>	<b>Safety Precautions and Warnings .....</b>	<b>1</b>
<b>2.</b>	<b>Using the Auto Computer .....</b>	<b>2</b>
<b>2.1</b>	<b>Tool Descriptions .....</b>	<b>2</b>
<b>2.2</b>	<b>Specifications.....</b>	<b>3</b>
<b>2.3</b>	<b>Accessories.....</b>	<b>3</b>
<b>2.4</b>	<b>Navigation Characters .....</b>	<b>3</b>
<b>2.5</b>	<b>Connecting to the Vehicle .....</b>	<b>4</b>
<b>2.6</b>	<b>Setup.....</b>	<b>6</b>
<b>2.7</b>	<b>Fill-up .....</b>	<b>12</b>
<b>2.8</b>	<b>Speed.....</b>	<b>14</b>
<b>2.9</b>	<b>Tool Information .....</b>	<b>16</b>
<b>3.</b>	<b>Trip Computer .....</b>	<b>17</b>
<b>4.</b>	<b>Gauges .....</b>	<b>19</b>
<b>5.</b>	<b>Scan Tool.....</b>	<b>20</b>
<b>5.1</b>	<b>Reading and Erasing Codes.....</b>	<b>20</b>
<b>5.2</b>	<b>Retrieving I/M Readiness Status .....</b>	<b>21</b>
<b>5.3</b>	<b>Reading Freeze Frame Data .....</b>	<b>22</b>
<b>5.4</b>	<b>Viewing VIN Number .....</b>	<b>22</b>
<b>6.</b>	<b>Vehicle Black Box.....</b>	<b>23</b>
<b>7.</b>	<b>Warranty and Service.....</b>	<b>25</b>
<b>7.1</b>	<b>Limited One Year Warranty .....</b>	<b>25</b>
<b>7.2</b>	<b>Service Procedures .....</b>	<b>25</b>


# 1. Safety Precautions and Warnings

**To prevent personal injury or damage to vehicles and/or the auto computer, read this instruction manual first and observe the following safety precautions at a minimum whenever working on a vehicle:**

- I Always keep attentive while driving.
- I DO NOT try to make any adjustments while driving.
- I DO NOT mount the auto computer in a position which can obstruct the view of the driver.
- I DO NOT mount the auto computer in a manner which could cause it to be propelled through the vehicle during an accident causing injury, such as over or near an airbag.
- I DO NOT route the cable in a manner which would interfere with the operation of the vehicle controls.
- I Keep the auto computer dry, clean, free from oil/water or grease. Use a mild detergent on a clean cloth to clean the outside of the auto computer, when necessary.

## 2. Using the Auto Computer

### 2.1 Tool Descriptions

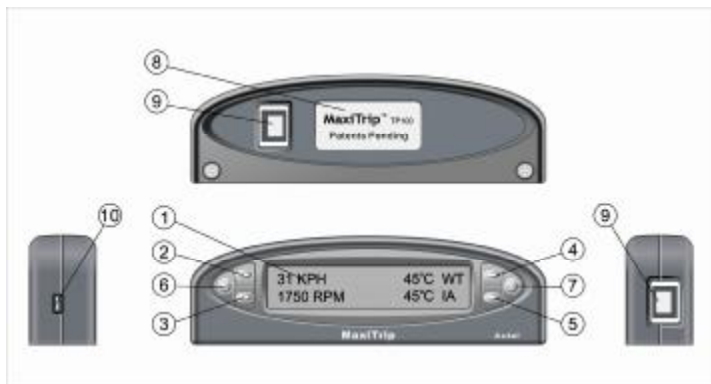

- ① **LCD Display** – Displays retrieved data.
- ② ③ ④ ⑤ **Menu Selection Buttons** -- When there is ► or ◀ icon on the screen next to the button, press it to do what is displayed next to it or to change to next available items. When viewing trip information or gauge readings, the ► or ◀ icon may not show.
- ⑥ ◀ **Button** -- Returns to previous screen, exit a menu or wake up the tool from sleep mode.
- ⑦ ▶ **Button** -- Moves to next screen; it is also used to enter time setup screen, and to reset **CURRENT** and **VBB (Vehicle Black Box)** data.
- ⑧ **Rear Label** -- Provides model number of products.
- ⑨ **OBDII Connector Port** -- Connects the tool to vehicle's DLC with the OBDII cable supplied.
- ⑩ **USB Port** -- Connects the tool to a computer with the USB cable supplied to update the tool.

## 2.2 Specifications

- 1) Display: Backlit, 2 lines \* 16 character display
- 2) Operating Temperature: 0 to 60°C (32 to 140 F°)
- 3) Storage Temperature: -20 to 70°C (-4 to 158 F°)
- 4) Power: 8 to 16 volts provided via vehicle battery
- 5) Dimensions:

Length	Width	Height
--------	-------	--------

140 mm (5.51")	*43.6 mm (1.72")	*26.6 mm (1.05")
----------------	------------------	------------------

- 6) NW: 0.2kg (0.44lbs) GW: 0.5kg(1.11lb)

## 2.3 Accessories

- 1) **User's manual** -- Instructions on tool operations
- 2) **OBD2 cable** -- Provides power to tool and communicates between the tool and vehicle.
- 3) **USB cable** -- Connects the tool to a computer for software updates.
- 4) **CD software** -- Contains update tool, DTC lookup software and etc.
- 5) **Sticker** -- Used to attach the tool to the position you have chosen in your vehicle.

## 2.4 Navigation Characters


Characters used to help navigate the auto computer are:

- 1) “▶ or ◀” -- Indicates the button next to it can be used and presses it to do what is displayed next to it.
- 2) “⏪ or ⏩” -- Indicates more information is available on previous/next screens.
- 3) “Pd” -- Identifies a pending code when viewing DTCs.
- 4) “←” -- Moves to previous digit.
- 5) “→” -- Moves to next digit; Indicates an option is selected.
- 6) “+” -- Increase digit value.
- 7) “-” -- Decrease digit value.
- 8) “⊕” -- Indicates average speed and fuel economy.
- 9) “⊗” -- Indicates fuel volume.
- 10) “---” -- Indicates invalid data or an item is not supported.


## 2.5 Connecting to the Vehicle

Follow steps below to connect the tool to the vehicle:


- 1) Connect the OBD II cable to the tool.
  - 2) Place the tool to the position you have chosen.
  - 3) Locate DLC on vehicle.
- *The DLC is usually located 12 inches from the center of the instrument panel (dash), under or around the driver's side for most vehicles. If Data Link Connector is not located under dashboard, a label should be there telling location. For some Asian and European vehicles, the DLC is located behind the ashtray and the ashtray must be removed to access the connector. A plastic DLC cover may be found for some vehicles and you need to remove it before plugging the OBD2 cable. If the DLC cannot be found, refer to the vehicle's service manual for the location.*

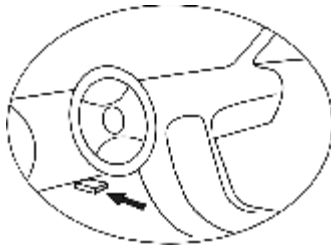

- 4) Plug OBD II cable to the vehicle's DLC.
  - 5) Turn the ignition on. Engine can be off or running.
  - 6) The auto computer starts to communicate with the vehicle.
- ⌋ ***If the vehicle is not OBDII compliant, a "Not Support" message shows, and the auto computer goes to VIEW MODE after 2 seconds. In VIEW MODE you are allowed to view trip information and perform setups only.***

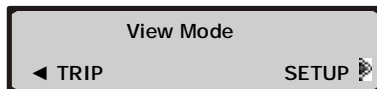


- u *If the auto computer fails to communicate with the vehicle's ECU (Engine Control Unit), a "Link Error" message shows as below:*

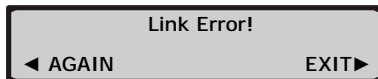


- u *Use the button next to AGAIN to try to connect to the vehicle, and the tool re-attempts to communicate with the ECU. If there is still no communication between them, a "CHECK MANUAL" message comes up prompting you to refer to user's manual of the tool for troubleshooting tips.*

*Follow steps below to troubleshoot it:*

- ü Verify that the ignition is ON;
  - ü Check if the OBD II connector is securely connected to the vehicle's DLC;
  - ü Verify that the vehicle is OBD2 compliant;
  - ü Turn the ignition off and wait for about 10 seconds.  
Turn the ignition back to on and repeat the procedure from step 5.
  - ü If the auto computer still fails to communicate with the ECU, contact the manufacturer.
- u *Or press the button next to EXIT to enter VIEW MODE. The auto computer keeps trying to connect to the control module in VIEW MODE till communication is established.*

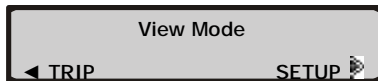

- u *If the engine is off for about 20 seconds or there is no communication between the tool and the vehicle for about 20 seconds the trip computer automatically goes to SLEEP mode. To wake up the tool from SLEEP mode, press .*
- 7) When communication is established, it shows the **HOME** screen.



- 1) The **HOME** screen is defaulted to display 4 menu options as shown in the figure above. It can be set to show the **CURRENT** trip information also. **HOME** screen hereafter in the manual refers to the default setting.


## 2.6 Setup

The auto computer allows you to make following adjustments and settings:

- 1) **Fuel:** Selects the fuel type your vehicle uses.
  - 2) **Engine:** Sets up engine size.
  - 3) **Size:** Selects tank size of the vehicle
  - 4) **Unit:** Changes unit of measure.
  - 5) **Time:** Adjusts time displayed by the auto computer.
  - 6) **Rate:** Sets sampling and recording rate.
  - 7) **Display:** Sets contrast, display mode and home screen of the tool.
  - 8) **Default:** Resets all units, engine displacement, engine type, tank size, gauge settings, trip data and screen settings to manufacturer defaults. But **VBB** will not be cleared.
- *The auto computer uses flash memory to save settings, so they will not be lost when the tool is disconnected from the vehicle.*

### To enter setup menu

- 1) Press the button next to **SETUP** to perform various setups.

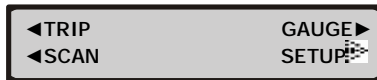


### A. Vehicle Setup

**NOTE:** In order to get accurate data of fuel economy, distance to empty, time to empty and etc., always perform vehicle setups if it is the first time to use the auto computer in a vehicle, it is


**used in another vehicle and then return it back to this one, or it is reset to factory defaults.**

## **Fuel**


- 1) Press the button next to **FUEL** to enter fuel setup menu.

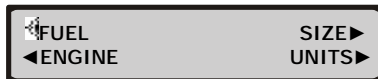

- 2) Use the button on the upper left or upper right to select the fuel type your vehicle uses.

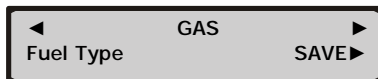

- 3) Press **SAVE** button and an “→” icon appears on the screen indicating the type is selected.

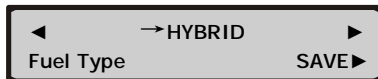

- ***DIESEL<sub>a</sub>** and **DIESEL<sub>b</sub>** do not refer to different types of diesel fuel. They only affect the way fuel consumption is computed and are selected based on the way the vehicle computer reports its sensor information. Most diesel vehicles use **DIESEL<sub>a</sub>**. Do the following to determine which your diesel vehicle uses: **set engine size**→**choose DIESEL<sub>a</sub>**→**warm up the engine and idle in neutral or park**→**select TRIP->CURRENT->GPH and note the GPH reading**→**step on the accelerator pedal**. If the GPH reading increases, you have a **DIESEL<sub>a</sub>** vehicle. If the GPH drops or stays the same, you have a **DIESEL<sub>b</sub>** vehicle.*

## **Tank Size**

- *The limits of tank size are 0 -150L (0 - 39G).*
- 1) Press the button next to **SIZE** to set the tank size of your vehicle.





- 2) Use the button next to “-” or “+” to change the tank size, and press **SAVE** button to save, and return to previous menu.



## Engine

- *The limits of engine size are 0-9.9L (0-2.6G)*

- 1) Press the button next to **ENGINE**.



- 2) Use the button next to “-” or “+” to change engine size, and press **SAVE** button.




## Units of Measure

- 1) Press the button next to **UNITS** to change units of measure.




- 2) Use the upper left or upper right button to change between metric and English unit of measure, and press **SAVE**.

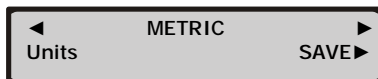


## B. Tool Setup


### Time


- 1) Press  from home screen.






- *If the home screen is set to display information of current trip, use  first and then press  button.*

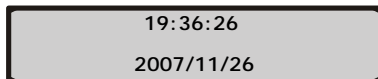- 2) Press the button next to **TIME**.

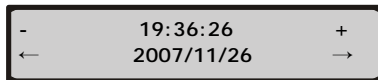


- 3) Press  to enter time adjustment screen.



- 4) Use the button next to “←” or “→” to select a digit, and then use the button next to “-” or “+” to increase or decrease value.
- 5) Press  to finish and save the setup, and a “SET OK” message show. If you do not wish to save the adjustment press  to exit.

### Rate


- 1) Press  from home screen.



- 2) Press the button next to **RATE**.




- 3) To change data update rate, press the button next to **SMP RATE**.

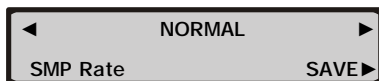

- 4) Use the upper left or upper right button to select a sampling rate between “NORMAL” and “SLOW”, and press **SAVE** button.
  - *NORMAL is the factory default rate. If this causes some updates to be skipped or irregular operation, SLOW should be used. NORMAL can be used in PWM and all the CAN vehicles, and SLOW should be used in VPW, ISO and KWP vehicles. Observe the protocol type of your vehicle detected by the auto computer in the screen when it links to the vehicle.*
- 5) To change recording rate, press the button next to **REC RATE**.




- 6) Use the upper left and upper right button to change, and press **SAVE** button to save the setup.

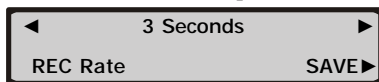


- *When the recording rate is set to “2 Seconds” the auto computer is able to record up to 150 hours of driving data; when it is set to “3 Seconds” it can record a maximum of 300 hours of data.*

## Display


- 1) Press  from home screen twice.




- 2) Press the button next to **DISPLAY**.

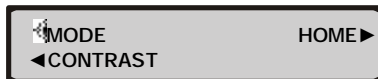


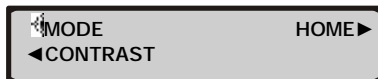
- 3) To change the display of trip items, press the button next to **MODE**.

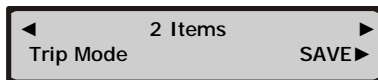


- 4) Use the upper left or upper right button to change between “2 Items” and “4 Items”, and press **SAVE**.
- 1 “X Items” indicates how many items are displayed in one screen when viewing trip information.
- 5) To change the display of home screen, press the button next to **HOME**.

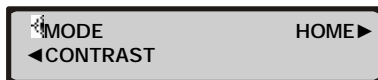


- 6) Use the upper left or upper right button to select **MENU** to show 4 menu options in one screen, or to set the screen to show current trip information by selecting **CURRENT TRIP**, and press **SAVE**.
- *It is advisable to set the home screen to show current trip information if you use the trip computer in one vehicle only.*
  - *If the trip computer is set to show information of current trip, use  to exit current trip display before viewing other information, or performing setups.*
- 7) To change the contrast of display, press the button next to **CONTRAST**.




- 8) Use the button next to “-” or “+” to adjust, and press **SAVE**.

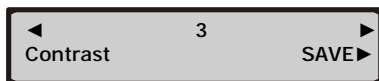


### Default

- 1) To reset the auto computer to factory defaults, press  from home screen twice.

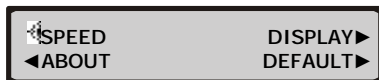

- 2) Press the button next to **DEFAULT**.

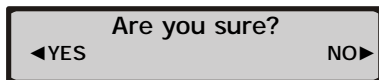


- 3) Press **YES** to reset the tool to factory defaults, or press **NO** to exit.


## 2.7 Fill-up

**NOTE:** In order to get more accurate fuel consumption readings, and to get valid TANK information, use the FILLUP function every time when your vehicle is refueled. Make sure the tank size and fuel types are properly set before using this function.

- 1) Fill the tank in gas station and let the pump shut off automatically.
- 2) Press the button next to **FILLUP**, and press **DONE** without adjusting the indicated fuel on the first fill-up after connecting the auto computer to the vehicle.
- 3) Drive your vehicle normally with the auto computer connected.
- 4) When the tank is around 1/4 full, drive to the same gas station, use the same fuel pump, fill up the tank at the same rate and let it shut off automatically.
- 5) Press the button next to **FILLUP**.

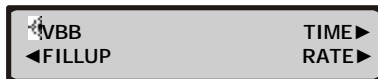

- 6) Use the button next to “-” or “+” to change the adjustment factor in 0.1% step till the number to the right of “→” agrees with the value reported by the fuel dispenser.

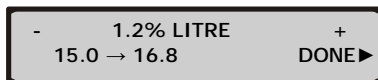

- I The number to the left of “→” is the amount of fuel the auto computer believes was used since last fill-up; the number to the right of “→” is the amount of fuel reported by fuel dispenser. Before changing the adjustment factor, these two numbers are the same.
- 7) Press **DONE** to finish the adjustment and the fuel economy will be immediately affected by the adjustment.
- *Record the adjustment factor for your vehicle if you use it in another vehicle and then return it back to this one, so you can later adjust it back to the recorded one by doing the following: use **FILLUP** with engine off → press **DONE** to clear **TANK data** → when refuel, press **FILLUP** again → use “-” or “+” to enter the adjustment factor manually.*
  - *It is advisable to use the **FILLUP** function immediately after refuel. When you forget to do so, you can also change the adjustment factor directly if less than 1 gallon/liter has been used since the previous fill-up sequence was done.*

**IMPORTANT: Do not rely on a low reading of **DISTANCE TO EMPTY** to decide when the next fill-up should be, as the absolute accuracy is limited by following variables:**

- λ Different shutoff levels of fuel pumps;
- λ Different tilt of the vehicle at the fuel pump due to ground slope or vehicle loading;
- λ Different temperature of the fuel (changes density – best to refill in the morning when the fuel is colder);

- $\lambda$  Variations in vehicle sensors due to temperature and time;
- $\lambda$  Pump accuracy limits.

## 2.8 Speed

### A. To Do Speed Correction

**Speed and distance adjustments are used to compensate for changes in tire size, gears, tire wear, etc...**

There are several means of speed correction:

- A. For tire changes, use the formula below to compute an approximate percentage.

Approximate percentage=

$$\left( \frac{\text{Diameter of New tire}}{\text{Diameter of Original Tire}} - 1 \right) \times 100\%$$

For example, if the diameter of the of original tire is 30 inches, and that of the new tire is 40 inches, the percentage should be

$$\left( \frac{40}{30} - 1 \right) \times 100\% = 33\%$$

So setting the value to 33% will compensate for the tire change.

- B. For gear changes, use the formula below to compute an approximate percentage.

Approximate percentage =

$$\left( 1 - \frac{\text{New ratio}}{\text{Old ratio}} \right) \times 100\%$$

For example, if the old ratio is 2.75, the new one is 3.25, the percentage should be

$$\left( 1 - \frac{3.25}{2.75} \right) \times 100\% = -18\%$$

So setting the value to -18% will compensate for the gear change.


- 1) Press the button next to **SPEED**.



- 2) Use the button next to **ADJUST** to enter speed correction screen.



- 3) Use the button next to “-” or “+” to adjust in 1% step till the adjustment factor reaches the computed percentage, and press **SAVE** button.

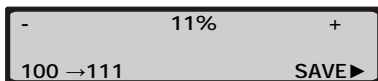

- I The number to the left of “→” is the speed reported by the vehicle. The number to the right of “→” is the speed which is displayed by the auto computer by applying this correction.
- C. To set the speed accurately, you need a handheld GPS. One person observes the speed displayed on the GPS and adjusts the percentage till the number to the right of “→” agrees with the speed indicated on the GPS while the other is driving. Set both the GPS and the auto computer to display the same unit of speed (KPH or MPH) to make more accurate adjustments.
- D. Drive at an auto computer indicated speed of 60 MPH and measure the time between mile marker posts on a highway. For every second more than 60 it takes to go 1 mile, subtract 1% from the adjustment with the upper left button. Repeat this a few times until it takes 60 seconds plus or minus a second to go 1 mile.
- *The adjustment does not affect the vehicle speedometer or odometer readings, but the auto computer indicated speed and distance only.*




## B. To Set Speed Limit

To make the **TIME OVER SPEED** data in **VBB** valid, you need to set a speed limit for the vehicle being tested.

- 1) Use the button next to **LIMITED**.




- 2) Use the button next to “-” or “+” to adjust in 1KPH(MPH) step or use the button next to “+10” to change in 10 KPH(MPH) step till the limit reaches your desired one and press **SAVE** button.

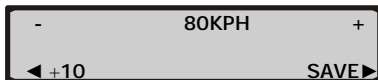


## 2.9 Tool Information

This function is used to view software version of the tool and look up unit conversions between metric and English unit of measure.


- 1) Press  twice from home screen.



- 2) Use the button next to **ABOUT**.

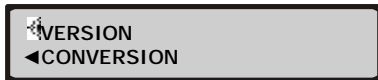


- 3) Press the button next to **VERSION** to view software version on screen.

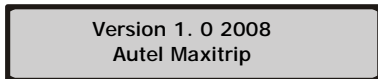


- 4) Press  to exit.

- 5) To lookup unit conversions, press the button next to **CONVERSION**.




- 6) View the conversion results on screen, and Press  to exit.

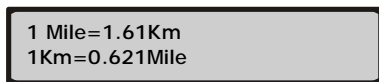

### 3. Trip Computer

A trip is a process that driving data is recorded. The auto computer automatically records trip data when the engine is started. If the engine is off for more than 30 minutes, it starts recording a new trip.

The auto computer records information about **CURRENT**, **TODAY**, **TOTAL** and **TANK** trip data.

**CURRENT** records trip data since engine is started and it is able to save up to 24 hours of data. **CURRENT** data can be cleared by holding  for about 3 seconds and then pressing **YES**.

**TODAY** records driving data in one day and it saves a maximum of 24 hours of data. The auto computer starts a new trip recording at 00:00.

**TOTAL** saves up to 100 hours of data. The **TOTAL** information includes data recorded since last time the tool is reset. When it records more than 100 hours of data, the driving distance exceeds 9,999km (6,213 miles) or the fuel used is over 999L (263.85gal), **TOTAL** data will be cleared automatically, and it starts recording a new trip.

**TANK** saves trip data since last fill-up.

Displayed items are as follow:

Ø KPH (MPH): Current vehicle speed

Ø L (GAL): Fuel used of current trip

- Ø LK  $\phi$  (MG  $\phi$ ): Average fuel economy per 100 kilometer/mile
- Ø LHK (MPG): Fuel economy per 100 kilometer/mile
- Ø XX:XX: Time driven
- Ø KM (MI): Distance driven
- Ø KM  $\bar{\bar{\square}}$  (MI  $\bar{\bar{\square}}$ ): Distance remaining before tank is empty
- Ø KH  $\phi$  (MH  $\phi$ ): Average speed
- Ø KPH (MPH): Maximum speed

**NOTE: When vehicle speed is 0, LHK (MPG), Fuel economy per 100 kilometer/mile, is automatically changed to LPH (GPH), fuel used per hour.**

**TANK data shows the following items:**


- Ø L (GAL): Fuel used since last fill-up
- Ø L  $\bar{\bar{\square}}$  (GAL  $\bar{\bar{\square}}$ ): Fuel remaining
- Ø KM(MI): Distance driven since last fill-up
- Ø KM  $\bar{\bar{\square}}$  (MI  $\bar{\bar{\square}}$ ): Distance remaining before tank is empty
- Ø XX:XX: Time driven since last fill-up
- Ø XX:XX  $\bar{\bar{\square}}$ : Time remaining before tank is empty
- Ø LK  $\phi$  (GK  $\phi$ ): Average fuel economy per 100 kilometer/mile
- Ø LH  $\phi$  (GH  $\phi$ ): Average fuel economy per hour.


**IMPORTANT: DO NOT disconnect the auto computer from the vehicle while driving; otherwise trip data may be lost or inaccurate.**


- 1) Use any of the menu selection buttons to select a set of trip data to view.



- 2) View detailed trip information on the screen. Use any of the menu selection buttons to view information of next available items, or use  $\bar{\bar{\square}}$  to view additional data on next screen(s), or press  $\bar{\bar{\square}}$  to exit.

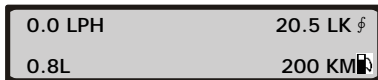

- 1) If the selected items are displayed for about 12 seconds, the trip computer records them automatically and it shows these items directly when viewing trip information next time.
- 3) When viewing current trip information, hold  button for about 3 seconds to reset current trip data manually.

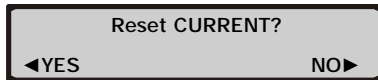

- 4) Press **YES** to clear data of current trip or use the button next to **NO** to exit.
- *TODAY and TOTAL information will not be reset by doing this.*

## 4. Gauges

**The auto computer can be configured to measure and monitor up to four different sets of information simultaneously, providing real-time engine performance analysis to allow you to adjust driving behavior and improve fuel economy.**

**Displayed items are as follows:**


- Ø KPH (MPH): Vehicle speed
- Ø CWT (FWT): Engine coolant temperature
- Ø RPM: Engine RPM
- Ø CIA (FIA): Intake air temperature
- Ø MAP: Intake manifold absolute pressure
- Ø LOD: Calculated LOD Value
- Ø TPS: Absolute Throttle Position
- Ø FPR: Fuel Rail pressure
- Ø IGN: Ignition timing spark for #1 cylinder
- Ø VLT: Voltage of battery
- Ø LP: Fuel system 1 status

- 1) Press the button next to **GAUGES** from home screen.



- 2) View currently selected gauges on screen.




- 3) Use the button next to a gauge or use  to change to next available gauges until they return to the starting ones.
- I The information available varies from vehicle to vehicle. If the information is not available for a certain gauge, or a reading is invalid, the trip computer shows “---”.
  - I If the selected gauges are displayed for about 12 seconds, the trip computer records them automatically, and shows these gauges directly when viewing gauge readings next time.

## 5. Scan Tool

### 5.1 Reading and Erasing Codes


- 1) Press the button next to **SCAN** to start scanning.

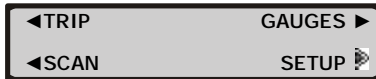

- 2) Press the button next to **DTC** to view codes.




- I If no codes were found, the screen will show “No Codes Found!”
- 3) If more than one code is detected, use the lower left or lower right button to view previous or next codes.

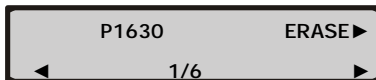


- I “x/x” in the screen indicates sequence of currently displayed code and the total number of retrieved DTCs.


- I If a pending code is detected, a “Pd” icon appears.

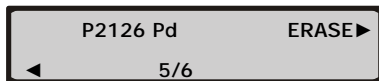

- 4) To erase codes, use the button next to **ERASE**.

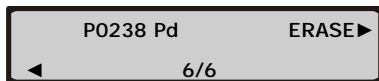

- 5) A warning message comes up asking for your confirmation.

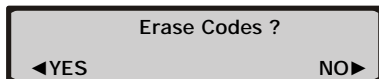

- 6) If you wish to erase codes, press **YES**. When codes are cleared successfully, an “Erase Done!” message comes up and the tool rescans the vehicle to verify. If codes are not cleared, a “Failed!” message appears.
- 7) If you do not wish to erase code, press **NO** button to exit, and a “Canceled” message comes up in the screen.


***CAUTION:*** Erasing the Diagnostic Trouble Codes may allow the trip computer to delete not only the codes from the vehicle’s on-board computer, but also “Freeze Frame” data and manufacturer enhanced data. Further, the I/M Readiness Monitor Status for all vehicle monitors is reset to Not Ready or Not Complete status. Do not erase the codes before the system has been checked completely by a technician.

## 5.2 Retrieving I/M Readiness Status

I/M Readiness function is used to check the operations of the Emission System on OBD2 compliant vehicles.



- ü “OK” -- Indicates that a particular monitor being checked has completed its diagnostic testing.
- ü “NC” -- Indicates that a particular monitor being checked has not completed its diagnostic testing.
- ü “NA” -- The monitor is not supported on that vehicle.

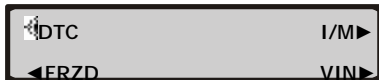- 1) Press the button next to **I/M** to view I/M readiness status.




- 2) View I/M readiness status on screen.




- 3) Use the button next to any of the items or use  button to view additional information.
- 4) Press  button to exit.


## 5.3 Reading Freeze Frame Data

- 1) To view freeze frame data, press **FRZD** button.

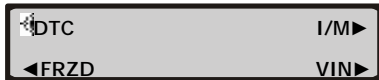

- 2) Use the lower left or right button to view previous or next PID data.

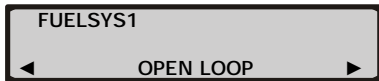


- 1) If there is no freeze frame data available, a “No FRZD” message shows on the screen. Press **BACK** or wait a few seconds to return.
- 3) Press  to exit.


## 5.4 Viewing VIN Number

**The tool is able to retrieve Vehicle Identification No. on 2002 and newer vehicles that support Mode 9.**

- 1) Press the button next to **VIN** to view vehicle information.

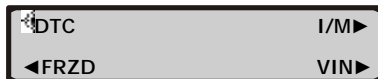

- 1) If the vehicle does not support this mode, a “Not Supported!” message comes up on the display. Press **BACK** or wait a few seconds to return.
- 2) View VIN no. on screen.

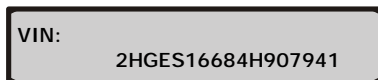


- 3) Press  to exit.

## 6. Vehicle Black Box

The tool works as a vehicle black box (VBB), which is able to save up to 300 hours of your driving data. The information it records includes:

- Ø Time and date for each trip starts and ends
- Ø Distance travel each trip
- Ø Maximum speed during trip
- Ø Time over-speed
- Ø Number of times of acceleration limit exceed during trip
- Ø Number of times of deceleration limit exceed during trip
- Ø Number of times of hard acceleration
- Ø Number of times of hard brake

- 1) Press  from home screen.



- 2) Press the button next to **VBB**.




- 1) If no data recorded, a “**No Data**” message shows.




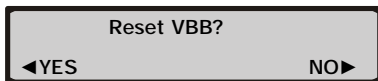
- 3) Select a set of trip information to view.



- 4) Use  to view trip information in next screen.



- 5) When viewing recorded data, hold  for about 3 seconds to clear **VBB** manually.



- 6) Press **YES** to clear data and a “**Reset OK**” message shows; or use **NO** to exit if you do not wish to clear **VBB** data.

## **7. Warranty and Service**

### **7.1 Limited One Year Warranty**

Autel warrants to its customers that this product will be free from all defects in materials and workmanship for a period of one (1) year from the date of the original purchase, subject to the following terms and conditions:

- 1) The sole responsibility of Autel under the Warranty is limited to either the repair or, at the option of Autel, replacement of the auto computer at no charge with Proof of Purchase. The sales receipt may be used for this purpose.
- 2) This warranty does not apply to damages caused by improper use, accident, flood, lightning, or if the product was altered or repaired by anyone other than the Manufacturer's Service Center.
- 3) Autel shall not be liable for any incidental or consequential damages arising from the use, misuse, or mounting of the auto computer. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.
- 4) All information in this manual is based on the latest information available at the time of publication and no warranty can be made for its accuracy or completeness. Autel reserves the right to make changes at any time without notice.

### **7.2 Service Procedures**

If you have any questions, please contact your local store, distributor or visit our website at [www.auteltech.com](http://www.auteltech.com).

If it becomes necessary to return the auto computer for repair, contact your local distributor for more information.