

Operating Instructions







85037-544-92

Vers. 10 | 2014

Contents

1.	Abo	ut this	S Document	5
	1.1	Funct	ion	5
	1.2	Target	t Group	5
	1.3	Notes	on Using these Instructions	5
	1.4	Symb	ols Used	5
	1.5	Struct	ture of the Manual	6
2.	Safe	ety Inst	tructions	7
	2.1	Gener	al Information	7
	2.2	Autho	orized Personnel	7
	2.3	Intend	ded Usage	7
	2.4	Limita	ations of Use and Misuse	7
	2.5	Electr	ical safety	7
3.	Intr	oducti	on	9
	3.1	Conce	epts	9
	3.2	Syster	n Components Overview	10
		- /	3.2.1 Probe	10
		3.2.2	BioPAT [®] ViaMass Connect Hub	10
		3.2.3	Software	10
			3.2.3.1 Futura Tool	11
4.	Quic	k Setu	n Guide	12
	4.1	Typica	al System Checklist	12
	4.2	Gettir	ng Started	12
		421	Unpacking	12
		422	Software Installation	12
		423	Connecting Probes and Cables	12
		42.5	Connecting the Single Lise Sensor Patch	13
		т.2.т 125	Power - BioPAT [®] VioMoss Connect Hub 1	13
		4.2.5	$Probe \rightarrow Rio PAT® Via Mass Connect Tub T Rio PAT® Via Mass$	14
		4.2.0	Connect Hub 1	14
		4.2.7	Connecting Your BioPAT [®] ViaMass to a PC	14
		4.2.8	Assembly Connection of BioPAT [®] ViaMass Elektronics	
			to a BIOSTAT [®] RM	15
		4.2.9	First start-up with control unit	16
5.	Syst	tem Ch	eck	17
	, 5.1	Using	Futura Tool	17
	5.2	Svster	m Check with DCU Integration	18
	5.3	Displa	ying System Information on the BioPAT [®] ViaMass	20
6.	Sof	tware l	Installation	21
	6.1	Futura	a Tool	21
	6.2	Minin	num System Requirements	
	6.3	Instal	ling	
		6.3.1	Microsoft [®] .Net Framework 4.0	
		6.3.2	FTDI Drivers	

7.	BioP	AT [®] ViaMass System Components	24
	7.1	BioPAT [®] ViaMass Care and Maintenance	24
	7.2	How to Store Your BioPAT [®] ViaMass	25
	7.3	How to Clean Your BioPAT [®] ViaMass	25
	7.4	Firmware Upgrades	25
		7.4.1 Prerequisites	25
		7.4.2 Firmware Upgrade Instructions	25
	7.5	Earthing the BioPAT [®] ViaMass	26
	7.6	BioPAT [®] ViaMass Cables	27
8.	Me	surement Options	
	8.1	Measurement Modes – Description	28
		8.1.1 Measurement Modes Available	28
		8.1.1.1 Cell Culture Mode	28
		8.1.1.2 Bacterial Mode	28
		8.1.1.3 Microbial Mode	29
		8.1.1.4 Custom Mode	29
		8.1.1.5 Signal Simulator Mode	29
		8.1.2 Selecting a Measurement Mode	29
		8.1.2.1 Futura Tool	30
		8.1.2.2 Selecting the Measurement Mode via DCU	31
	8.2	Zeroing	33
		8.2.1 Zeroing Using Futura Tool	33
		8.2.2 Zeroing Readings on the DCU	34
	8.3	Converting the Capacitance Value to Cells per Milliliter (C/ml)	34
	8.4	Settings for Alarm Limits	35
	8.5	Polarization Correction	36
	8.6	Filters	36
		8.6.1 Rocking Motion Monitoring	36
0	Heir	a Futura Tool	27
5.	031	Connecting to BioPAT® ViaMass	37
	5.1	9.1.1 "I know which COM Port my BioPAT [®] ViaMass is connected to"	37
		9.1.2 "Lam not sure which COM Port my BioPAT [®] ViaMass	
		is connected to"	37
		9.1.3 Futura Tool Menu	
		9.1.4 Futura Status Tab	
	9.2	Probe Status Tab.	
	9.3	Operating Modes Tab	39
		9.3.1 Hardware Settings	39
		9.3.1.1 USB Only Mode	39
		9.3.1.2 Futura Connect Mode	40
		9.3.1.3 Rocker Bag Mode	42
		9.3.2 Measurement Settings	42
		9.3.3 Clean and Zero Functions	43
		9.3.4 Live Readings.	44
	9.4	Quick Readings Tab	44
	9.5	Futura Updates Tab	46
10	т	hlada a dina	47
10	10 1	Noisy or Uppypagtad Pagdings	4/ م
	10.1	Noisy Canaditance Readings	/4
	10.2	lid Lock Warning (E10 Error)	/4
	10.3	RioPAT® ViaMass Rusy (FA2 Error)	/+ ۸٦
	10.4	RioPΔT [®] ViaMass Not Recognized by Computer	/۸۰
	10.5	bior Ar viaiviass not needynized by computer	+0
11	. Det	iled Theory of Operation	49
	11.1	The Electrical Properties of Living Systems	49
	11.2	Beta Dispersion	50
	11.3	Conductivity	52

1. About this Document

1.1 Function

This operating manual describes the safe installation and use of the BioPAT[®] ViaMass. The operating personnel must read these instructions prior to operational startup. These instructions should always be available at the workplace.

1.2 Target Group

These operating instructions are designed for qualified personnel. Only qualified personnel may set up the BioPAT[®] ViaMass, connect it to the bioreactor or perform in-process operation or maintenance.

1.3 Notes on Using these Instructions

All information in these operating instructions considers the state of the art, the applicable standards and guidelines, and our many years of experience and know-ledge.

These operating instructions provide you with all the information necessary to install and operate the BioPAT $^{\circ}$ ViaMass.

The operating instructions must be read and used by all persons entrusted with the operation, service, cleaning, and troubleshooting of the device. This applies particularly to the safety instructions listed.

- Please read these operating instructions carefully and completely before using this device.
- These instructions are part of the product. Keep them in a safe and easily accessible place near the device's site of installation.
- If the instructions should be lost or misplaced, you can order new ones.

1.4 Symbols Used

As a means of instruction and direct warning against hazards, all text statements to be particularly noted in these operating instructions will be marked as follows:



This symbol denotes a possible danger with risk that moderate or minor injury may result if it is not avoided.



This symbol denotes a danger with low risk that could result in property damage if the risk is not avoided.



- is an indication of a function or setting on the device.
- that caution should be exercised while working.
- identifies useful information.

This symbol

The following presentations will also be used:

- Texts that follow this mark are lists.
- Texts that follow this mark describe activities that must be carried out in the specified order.
- ▷ Texts that follow this mark describe the result of an action.
- " " Texts in quotes are references to other chapters or sections.

1.5 Structure of the Manual

The aim of this manual is to provide both a practical guide to setting up your BioPAT $^{\circ}$ ViaMass system and a comprehensive reference for each element of the BioPAT $^{\circ}$ ViaMass system.

If you are familiar with our technology and general software installation, we recommend that you read the rest of this introductory section, the "4 Quick Setup Guide", Seite 12 and System Check ("5 System Check", Seite 17) as a minimum, referring to later chapters where necessary. Other chapters include more detailed descriptions of the individual components in your BioPAT[®] ViaMass system and the various measurement options available to you. Comprehensive guides for setting up your BioPAT[®] ViaMass as a standalone system or as part of a larger control or measurement system are also included. Technical Specifications, Software Licence Agreements and EMC Regulatory Information sections can all be found towards the end of this manual.

Please read this manual fully and carefully before starting to use this equipment. Failure to comply with the appropriate safety guidelines may cause severe injury or property damage.

IMPORTANT!

This symbol on BioPAT[®] ViaMass equipment warns the user to consult the appropriate parts of the User Manual before making any connections. Wrong connections, voltages or currents outside the specified operating ranges could cause danger or permanent damage to the equipment.

2. Safety Instructions

2.1 General Information

Sartorius Stedim Biotech GmbH supplies the BioPAT[®] ViaMass after careful testing in ready-for-operation condition. This manual contains instructions for the safe operation of the BioPAT[®]ViaMass. You may only operate the device under conditions that comply with the specificationsstated in this manual and the information on the manufacturer's ID label.

2.2 Authorized Personnel

The following persons may carry out the actions described herein:

Operations	Persons
Montage und Anschluss am Bioreaktor, function test during servicing and mainte- nance	Trained and qualified personnel of the operator or service technicians of Sartorius Stedim Biotech GmbH
Operation	Personnel who has read this documentation and is familiar with the operation of bioreactors
Factory maintenance and service	Service Department of Sartorius Stedim Biotech GmbH or the sensor manufacturer

2.3 Intended Usage

The BioPAT[®] ViaMass is a compact system for determining the living biomass in the concentration range and under the conditions as described in the technical data. It is used for monitoring and evaluation of metabolic processes of biological processes, e.g. cultivations.

2.4 Limitations of Use and Misuse

	Possible damage to equipment!
IMPORTANT!	The medium must not cause corrosion of the sensors. Otherwise the reliability and
	lifetime of the sensors will be affected!
	- The BioPAT [®] ViaMass sensors are not allowed to connect to amplifiers of third party
	vendors.
	 Sensors from other vendors are not allowed to connect to BioPAT[®] ViaMass
	amplifiers.

2.5 Electrical safety

If the device is not used in accordance with the instructions, this can affect the product liability for the device.

- Make sure that the voltage rating printed on the AC adapter is identical to your local line voltage. The wall outlet must have a protective grounding conductor!
- Do not switch on the equipment if the AC adapter or power cord are damaged.
- If the BioPAT[®]ViaMass itself, the AC adapter or any cables of the system are damaged, disconnect the equipment from the power supply and secure it that it cannot be turned on.
- Chemicals (e.g. gases or liquids) that can corrode and damage the inside or outside of the BioPAT[®]ViaMass, AC adapter or any cable or peripherals must be kept away from the equipment.

Installation Notes

The operator shall be solely responsible for any modifications to the equipment and for connecting any cables or equipment not supplied by Sartorius. Information on operational quality is available upon request from Sartorius. You should only use peripherals and options supplied by Sartorius!

3. Introduction

One of the most requested parameter in industrial cell cultivation is the monitoring of biomass. The knowledge of the biomass progress during a fermentation process gives deeper process knowledge and understanding. Therefore it enables the control of the biomass and helps to define feeding, harvesting or infection points. Offline methods like visual cell counting or semi-automated systems still dominate the biomass measurement in industrial cell cultivation. But these offline methods based on taking a representative sample cannot monitor the process continuously.

The radio frequency (RF) impedance method for online in-situ detection of viable biomass has already become well established in biopharmaceutical applications using traditional reusable fermenter equipment. But, industrial cell cultivation tends more and more to single-use (SU) fermentation solutions. In order to follow these, an easy to use online biomass monitoring system is a basic necessity. BioPAT[®] ViaMass is the first standardized online biomass measurement solution for single use fermenter systems which is fully integrated into the standard fermenter control system and tailored to the single-use fermentation bags such as the Flexsafe RM and Flexsafe STR.

3.1 Concepts

The BioPAT[®] ViaMass system measures an electrical property of cell suspensions called Capacitance. Academic and industrial research has demonstrated a correlation between this property and live biomass. A detailed theory of operation can be found in chapter "11 Detailed Theory of Operation", page 49.

Electrical capacitance is measured in the SI unit farads, although picofarads are more common in practical use. For cell suspensions capacitance is usually quoted in pF/cm and as a rule of thumb, one pF/cm equates to one gram per litre of dry weight for microbial or 1×106 cells per milliliter of live cells for cell culture.

The BioPAT[®] ViaMass' patented technology converts capacitance into a live biomass reading, normally cells/ml or g/l for spun solids dry weight. However, other units can be derived from the raw capacitance measurements; these may be more relevant to the chosen application and are covered later in the manual.

Your BioPAT[®] ViaMass also measures the conductivity of the medium, in millisiemens per centimeter (mS/cm). Conductivity is not used to measure biomass but is indicative of the production or utilization of ions by the cell suspension, e.g. pH control and other fermentation processes.

3.2 System Components Overview

The BioPAT[®] ViaMass system consists of the electronics as the main measurement and evaluation unit and the sensor connector which also has an amplifier on board. In order to complete the measurement system, the electronics is connected to the single use sensing patch.





Figure 1: BioPAT[®] ViaMass sensor patch connected to the patch connector

Figure 2: BioPAT® ViaMass electronics

3.2.1 Probe

The probe is the part of the instrument that is placed into the solution under test. It can be physically separated from the rest of the system for cleaning or replacement.

3.2.2 BioPAT® ViaMass Connect Hub

BioPAT[®] ViaMass Connect Hub 1 allows the connection of a BioPAT[®] ViaMass probe | sensor patch in combination with the corresponding electronics. For the connected BioPAT[®] ViaMass the BioPAT[®] ViaMass Connect Hub can simultaneously output Current Loop and Modbus RTU signals for use with PLCs and other control systems whilst optionally interfacing with a PC over a single USB cable, allowing independent control, calibration, monitoring and logging of the BioPAT[®] ViaMass probe connected to the system using BioPAT[®] ViaMass software.

Modbus and Current Loop signals from the BioPAT[®] ViaMass Connect Hub provide third party control systems (e.g. PLCs) with both capacitance and conductivity readings for evaluation in control functions. Once configured using BioPAT[®] ViaMass software, the BioPAT[®] ViaMass modules can be operated independently without needing to be connected to a PC.

In addition to capacitance and conductivity readings, Modbus also has the facility to provide a viable biomass reading and offers control and configuration over the system.

3.2.3 Software

You should have received a USB flash drive with your BioPAT[®] ViaMass system. This contains a copy of Futura Tool (for system configuration) and data recording. If this is missing from your package, please contact Sartorius Stedim Biotech or your authorized distributor for assistance.

3.2.3.1 Futura Tool

Futura Tool is required to configure your BioPAT[®] ViaMass system for use. It provides details on the BioPAT[®] ViaMass system, calibration and operating mode options, a quick readings mode for ascertaining operating status and other advanced functions.

mechani tor	HAS	09009										
two fitnes	Pop	o fista	â	perating	Plote .	94	Readings A	dversed Engra	NO Anvertation			
Andream Sch	mqa -									Our of Dec Anders		
Hardw	are N	odes i	whe	na Ge	onnect N	łode	Alt Hallows	Made (Antonio	natives Mode	Quar Rylan		
Garre	nt Loo	Setting		_		1m	albus Saltings			Set Jan	r Jans	
E		CHARME	-	Cand	la Treffy	E	Deut-ster	20400		Condition Halls Zanic Builliage		
	and o prime o antion			Panton GAN	Line Readings							
	No.	200 0	them.	40	etion	L	Altern	-0		Live Reading	95	
4	(March	6 #1	ye.		ntion		man Factors	10000-000 G	Name of Case		-	
	CAR	1		1	1	E				Capacitance (pit/cmp		
0	erenta La erenta Ha	per the	and in		loaded					Conductivity (seli/cm)	9	
	-									Capacitance Zers (pF/cm)	0	
Heaters	ment P	ader	0410	ih.e			Heaturement Ha	en (unteret. tra	saurenant Rode	Biomass Randing (CPM)	6.000E+000	
meaning	Prepuer	9	580								_	
2011941			04	_						Probe Temperature (C)	.0	
riter.			30									
										Sent Lesong Aug Miles All links		

For further details on Futura Tool, including system requirements and installation instructions, please refer to section "6.1 Futura Tool", page 21.

4. Quick Setup Guide

This section assumes the user is familiar with BioPAT[®] ViaMass technology and is also familiar with the installation of software within the Microsoft[®] windows framework. Details on the workings of BioPAT[®] ViaMass technology and the installation of software are expanded upon in following chapters.

The following is a description of a typical system and allows the user to unpack, recognize each element, install the software onto a PC, connect it together and check that it functions properly.

4.1 Typical System Checklist

A typical BioPAT[®] ViaMass system consists of the following

- SU Probe welded into a Flexsafe RM or Flexsafe STR bag
- BioPAT[®] ViaMass electronics
- Two Signal Simulators (0 pF/cm, 0 mS/cm and 100 pF/cm, 40 mS/cm)
- USB flash drive containing Futura Tool
- BioPAT[®] ViaMass System Manual (this document)

Accessory for service and retrofit versions only

- BioPAT[®] ViaMass Connect Hub 1
- External Power Supply Unit
- Mains power cable
- Set of green phoenix connectors for Current Loop and Modbus
- USB cable

4.2 Getting Started

4.2.1 Unpacking

It is recommended that you unpack all the items and lay them out in a clear space. Check all items for signs of damage. If you suspect an item to be damaged, or if anything appears to be missing, contact the shipper and Sartorius Stedim Biotech or your local distributor within three days of receipt of the shipment.

The packaging in which the items were dispatched is specially designed to protect them during transport. We recommend that the packaging be retained for use in the unlikely event that any item needs to be.

4.2.2 Software Installation

IMPORTANT!

Do not connect your BioPAT[®] ViaMass system to a PC until all required software has been installed.

The Futura Tool is required to configure your system and ascertain that it is functioning correctly. It is also capable of data logging and real time measurement. You may not need to install this if you are using our control system. The Futura Tool installation also installs the drivers required to connect your BioPAT[®] ViaMass system to your PC.

The Futura Tool must be installed prior to connecting the BioPAT[®] ViaMass system to the PC as Futura Tool contains the drivers required to interface to the BioPAT[®] ViaMass hardware. If you are unsure about any steps in the installation process please refer to Chapter "6 Software Installation", page 21.

4.2.3 Connecting Probes and Cables

It is easy to connect BioPAT[®] ViaMass cables and probes. Simply line up the colored dot on the connector with the colored dot on the socket and push in. However, the connectors feature a special ring lock device that will not allow them to be removed unless the correct technique is used, as described below.



The plug collar indicated must be pulled out a short distance (the distance is almost imperceptible; less than 1mm) from the socket to disengage the lock. Continue to pull on the plug collar to uncouple the plug from the socket. For a cable, hold the collar as shown and pull away from the socket.

4.2.4 Connecting the Single Use Sensor Patch

Each disposable sensor has four platinum electrodes and a pair of plastic 'ears' on the reverse of the sensor which locate in the 'front end' sensor connector enclosure of the BioPAT[®] ViaMass. This enclosure features a locking ring which contains a guide groove that, when rotated to the Lock position, grips the locating tabs on the ears to hold the sensor patch securely onto the BioPAT[®] ViaMass connector for a reliable connection.

To connect a disposable sensor patch, first ensure that the locking ring on the connector is in the Unlock position.

Next, line up the BioPAT[®] ViaMass connector over the sensor. Ensure that the sensor's ears align with the slots in the locking ring. The probe can be fitted either way round. Carefully place the BioPAT[®] ViaMass connector squarely onto the sensor so that the tabs on the sensor's ears are just hidden by the connector's locking ring.



There should be a gap of approximately 3 mm between the probe and the BioPAT[®] ViaMass connector.







Twist the locking ring fully round to the Lock position. This will pull the probe securely onto the connector ready for use. To release the disposable sensor, simply rotate the locking ring to its Unlock position. This will release and push off the disposable probe.

IMPORTANT!

Always disconnect the sensor connector of the BioPAT[®]ViaMass from the bag before it will be removed from the bag holder. Ignoring this procedure may result in the destruction of the cables or the bag.

4.2.5 Power → BioPAT[®] ViaMass Connect Hub 1

If you are using a BioPAT[®] ViaMass Connect Hub 1, plug in the mains power cable to the external power supply unit and then attach the power supply unit to the BioPAT[®] ViaMass Connect Hub 1. Tighten the locking ring on the power supply plug by hand to ensure that it does not come dislodged from the unit when in use. Ensure that the mains power supply is switched on.

The power indicator light on the front of your BioPAT[®] ViaMass Connect Hub 1 will flash when the unit is initially switched on. This should settle to a steady green light to indicate that the unit is powered and operating correctly.

4.2.6 Probe → BioPAT[®] ViaMass Electronics → BioPAT[®] ViaMass Connect Hub 1

Connect a probe or Signal Simulator to your BioPAT[®] ViaMass and connect the BioPAT[®] ViaMass electronics to a socket on the front of your BioPAT[®] ViaMass Connect Hub 1, ensuring that the colored dots on all plugs and sockets are aligned.

The status indicator light will display a steady green light once a connection between the BioPAT[®] ViaMass and BioPAT[®] ViaMass Connect Hub 1 has been successfully established. Please note that it may take several seconds for a connection to be establishhed. If the light does not come on or illuminates red, the BioPAT[®] ViaMass electronics is probably in the incorrect hardware mode. Use Futura Tool (Chapter "9 Using Futura Tool", page 37) to change the Hardware Mode if required.

You are now ready to connect your BioPAT° ViaMass system to a PC or system controller.

4.2.7 Connecting Your BioPAT® ViaMass to a PC

Once Futura Tool has been successfully installed (Software Installation section above), take the USB cable provided and connect it between the orange USB socket on the BioPAT[®] ViaMass Connect Hub 1 and a spare USB port on your PC.

If connecting the BioPAT[®] ViaMass Connect Hub 1 to your computer for the first time, please allow up to a minute for it to be registered by the PC before attempting to connect to the device using Futura software. This extended hardware discovery time is only necessary when connecting your BioPAT[®] ViaMass Connect Hub 1 to your PC for the first time.

4.2.8 Assembly | Connection of BioPAT[®] ViaMass Elektronics to a BIOSTAT[®]RM

- Contraction of the second seco
- Ensure that the equipotential bonding cable is connected to the electronics bracket as pictured below.

Connect the equipotential bonding cable to the equipotential bonding point at the control unit or your local installation.



► Snap the electronics into the illustrated holder. It should be retained as shown in the picture.

Connect the data cable to the electronics unit.



4.2.9 First start-up with control unit

After the BioPAT[®] ViaMass electronics is connected to the control unit and is supplied with power, it requires a warm up time of about 30 minutes.

Press the touch button "CAP-#" in the "Calibration" menu. The submenu "ViaMass CAP-#" opens.

BIOSTAT B	08:13:37	2014-09-15
AIR ViaMass CAP-1 Mode X		
Wating For Stable Test Temperature Measurmert Mode PVEIGHT 41 Measure PVEIGHT 51 Measure Of		pH-2 pH-2 inactive pO2-2 inactive
Main Calibration Controller Trend Softings 1 All 2	Periole	Alarm (Q)

While "Waiting for stable temperature" is displayed in the "ViaMass CAP-#" submenu, the electronics is in the warm-up phase. The rotating clock indicates that the warm-up phase is running.

5. System Check

This chapter outlines the steps required to check that your BioPAT[®] ViaMass system is functioning correctly and assumes the software mentioned is installed and working. You can perform these tests using Futura or, if included in your system, our local control unit. Tests using the supplied Signal Simulators in a standard conductivity solution and with living biomass are detailed on the following pages.

5.1 Using Futura Tool

After the BioPAT[®] ViaMass was connected, click on the "Quick Readings" tab. Set the measuring frequency to 1000 kHz (single frequency) and the Probe Calibration to "Factory Cal". Check the "Continuous Readings" checkbox then press the "Get Reading" button to start taking readings. You are now ready to perform the checks detailed in the remainder of this chapter. Once you have finished checking the system press the "Stop Timed Reading" button.

The two Signal Simulators supplied are used to check the system is functioning correctly. A Signal Simulator pair consists of a high and zero value to test the full range of the BioPAT[®] ViaMass.

When using a BioPAT[®] ViaMass system, the BioPAT[®] ViaMass Signal Simulators (Sartorius part number BPV0011) must be used. Plug these simulators in the BioPAT[®] ViaMass connector in the same way you do it with a sensor patch. The only difference is that the locking procedure is not needed to establish the connection. However, the BioPAT[®] ViaMass Signal Simulators require a different calibration file to operate correctly. Disposable probes do not contain the memory required for storing settings and calibration files. This Signal Simulator calibration file is, instead, stored in the BioPAT[®] ViaMass electronics and is selected automatically when the BioPAT[®] ViaMass measures a conductivity of greater than 36 mS/cm and detects that a 2-terminal device is connected (such as a Signal Simulator, but unlike a probe).

The high value Signal Simulator must, therefore, be inserted first in order to trigger this mode change. The Signal Simulator mode will remain active for 90 seconds, during which time a value using the zero value Signal Simulator must also be recorded. The BioPAT[®] ViaMass will then revert to its previous mode. Connecting the BioPAT[®] ViaMass to Futura Tool software will cause both BioPAT[®] ViaMass and software will automatically switch to their respective Signal Simulator modes (BioPAT[®] ViaMass firmware 2335-07-118 onwards).

Note that the BioPAT[®] ViaMass will remain in this mode regardless of what is connected to it. You must therefore ensure that it is reverted to the standard operational mode when finished with the Signal Simulators, since the Signal Simulator calibration file will give incorrect readings with real disposable probes.





BioPAT[®] ViaMass Signal Simulators Use with BioPAT[®] ViaMass

Directions

- Plug in, switch on the power and wait until the Capacitance reading is steady; allow at least 20 minutes warm up time. BioPAT[®] ViaMass run hot so do not be alarmed!
- Check that the Simulator settings give the correct display readings as below.
 - First with the 100 pF/cm, 40 mS/cm simulator, followed by 0 pF/cm, 0 mS/cm

Signal Simulator		BioPAT [®] ViaMass Readings		
Capacitance	Conductivity	Capacitance pF/cm	Conductivity mS/cm	
100	40	100 ±3	40 ±1	
0	0	0 ±1	0 ±0.5	

5.2 System Check with DCU Integration

Both accompanying signal simulators can be used to check whether the system is functioning correctly. A signal simulator pair consists of one very high value and a zero value (or low value) for checking the entire BioPAT[®] ViaMass measuring range. When using a BioPAT[®] ViaMass system, the BioPAT[®] ViaMass Signal Simulators (Sartorius part number BPV0011) must be used. Plug these simulators in the BioPAT[®] ViaMass connector in the same way you do it with a sensor patch. The only difference is that the locking procedure is not needed to establish the connection

Once you have created the connection to your BioPAT[®] ViaMass and the DCU is ready for operation, switch to the calibration mode

- Press the touch button "CAP-#" in the "Calibration" menu. The submenu "ViaMass CAP-#" opens.
- ▶ Press the touch button "Measure" in the submenu "ViaMass CAP-#".



ViaMass CAP-1 Mode	×
	Signal Test
	Measument Mode
	Zero Now

▶ Press the touch button ,Signal Test' in the submenu "ViaMass CAP-# Mode".

The submenu "ViaMass Signal Simulation CAP-#" for checking the BioPAT[®] ViaMass electronics opens.

ViaMass Sigr	nal Simulation CAP-1	×
C	onnect high Signal Simulator	Č.
Cap	97.9pF/cm	_
Cond	39.9mS/cm	

► Connect the signal simulator for the high value to the electronics. As soon as the electronics detect the high-simulator, the capacity reading appears in the "Cap" field and conductivity in the "Cond" field.

If the expected measurement values are within the acceptable range (see the following table, then they are displayed in black.

► Confirm this check by pressing the "ok" key.

If the measurement values are not within the acceptable range, the results are displayed in red. In this case, check whether you have connected the right high simulator that matches your electronics unit. If the value is not within the acceptable range despite the correct simulators, please contact your local Sartorius service partner.

Signal simulator		BioPAT [®] ViaMass Readings		
Capacitance	Conductivity	Capacitance pF/cm	Conductivity mS/cm	
100	40	100 ±3	40 ±1	
0	0	0 ±1	0 ±0,5	



► After confirming the high simulator value, repeat the procedure with the signal simulator for the zero value (zero or low value).

As soon as the low simulator is detected by the electronics, the capacitance reading appears in the field "Cap" and the conductivity reading in the field "Cond".

If the readings are in the acceptable range, they are displayed in black.

► Confirm this check by pressing the "ok" key.

If the measurement values are not within the acceptable range, the results are displayed in red. In this case, check whether you have connected the right low simulator that matches your electronics unit. If the value is not within the acceptable range despite the correct simulators, please contact your local Sartorius service partner.

5.3 Displaying System Information on the BioPAT[®] ViaMass

To display the system data of your BioPAT° ViaMass, proceed as follows:

- Press the touch button "CAP-#" in the "Calibration" menu. The submenu "ViaMass CAP-#" opens.
- ▶ Press the touch button "Info" in the submenu "ViaMass CAP-#".

The submenu "Info CAP-#" is displayed.

Field	Function
Zero	Last-configured zero value
Temp.	System temperature of the electronics
Probe	Name of the probe
SN	Serial number of the electronics
FW	Firmware number
Bootl.	Bootloader number



6. Software Installation

This section contains the technical requirements and procedures for installing the software Futura Tool.

6.1 Futura Tool

Futura Tool contains all of the configuration and calibration tools you will require to set up your BioPAT[®] ViaMass system. It includes functions for reading BioPAT[®] ViaMass status information, setting operating modes, taking real time readings for system testing, a diagnostics function to aid problem solving and the facility to upgrade BioPAT[®] ViaMass firmware.

This section contains installation instructions for Futura Tool. See Chapter "9 Using Futura Tool", page 37 for usage instructions.

6.2 Minimum System Requirements

- Microsoft[®] Windows XP Service Pack 3, Microsoft[®] Windows Vista or Microsoft[®] Windows 7
- 1 GB RAM or higher
- 1.6 GHz Intel Atom or higher
- At least 20% free hard drive space, 1 GB minimum
- At least one free USB 2.0 port

6.3 Installing

To set up Futura Tool on your PC you need to install Futura Tool Installer, which is provided as part of your BioPAT[®] ViaMass order. Futura Tool requires Microsoft[®].Net and FTDI drivers to be installed for it to work properly. The installation software will check if those are installed and if not, it will install them. The pre-requisite installation wizard will only be activated if the installation software cannot find previously installed software or if the previous prerequisites are out of date. Follow the instructions on the installation software wizard.



6.3.1 Microsoft[®].Net Framework 4.0

Futura Tool requires Microsoft[®].Net 4.0 framework. The installation software will check if the correct version of the framework is installed and if it is not found, the installation software will provide instructions on how to install it. The framework is included in the installation software so an active internet connection is not required. Tick the box when you have read the terms and conditions of the Microsoft[®] Software, click on "Install" and the installation process will begin. Once the installation is complete click on "Finish" and Wizard FTDI × 32 Setup should appear, click "Next".

It is highly recommended that you make sure that the latest .Net 4.0 framework updates and service packs that Microsoft[®] provide are installed. Consult the Windows manual on keeping the operating system and related applications up to date.



6.3.2 FTDI Drivers

The installation software will check if FTDI virtual COM port drivers supplied by Sartorius Stedim Biotech have been installed and will not continue until they are installed. No user information is required; simply follow the installation wizard to install the drivers.

The installation software will add FTDI \times 32 application entry on 32-bit Windows and add FTDI \times 64 application entry on 64-bit Windows systems. If it becomes necessary to uninstall the drivers, find the application entry below in Control Panel > Add or Remove Programs (or the equivalent) and uninstall that application.



See Windows help for more information on removing applications.

FTDI virtual COM port drivers are required in order for Futura Tool to recognize and be able to connect to a BioPAT[®] ViaMass through USB. The drivers supplied as part of the installation software have been tested to ensure that they work with BioPAT[®] ViaMass hardware. Newer drivers may be available in future from Windows Update but there is no guarantee that the newer drivers will be as stable and work as well as the ones supplied.

The Setup Wizard will install Futura Tool on your PC once you have clicked "Next", accepted the terms and conditions and checked you have the right folder for installation again. This will take several minutes, click on "Finish" to complete the Futura Tool Setup Wizard. You may be prompted to restart your computer.



You must unplug all BioPAT[®] ViaMass Connect Hubs from the computer before installing Futura Tool.







7. BioPAT[®] ViaMass System Components



The BioPAT[®] ViaMass is designed for use with Sartorius Stedim Biotech's range of disposable probes that are suited to be used with Flexsafe RM or Flexsafe STR.



BioPAT[®] ViaMass comprises of a primary RFI shielded copolymer enclosure for the main electronics and a second copolymer enclosure for the probe connector on a 1 m umbilical cable, both enclosures being RFI shielded and rated to IP41. The 'front end' probe connector enclosure is a lightweight design to minimize stress on the probe and bag.

Note that, as the BioPAT[®] ViaMass is designed for use with disposable probes, BioPAT[®] ViaMass signal simulators must be used for system checks as the standard signal simulators will not fit. See section "5 System Check", page 17 for further details on using signal simulators.



There is no Clean Pulse function present on the BioPAT° ViaMass single use system.

Care must be taken when handling the BioPAT[®] ViaMass. The 1 m link cable between the two enclosures should not be bent, kinked, coiled tightly or repeatedly flexed as it may weaken the cable and cause it to fail. Nor should any other BioPAT[®] ViaMass cables be excessively bent or kinked. If placed into a rocking system it is recommended that you use the provided holder for the electronics so the movements have an effect on the replaceable extension cable.

7.1 BioPAT[®] ViaMass Care and Maintenance

This section describes how to care for and maintain the BioPAT[®] ViaMass system.

7.2 How to Store Your BioPAT[®] ViaMass

If you need to store your BioPAT[®] ViaMass for any significant time, place it in its original protective packaging and store it in a cool, dry, dark place.



7.3 How to Clean Your BioPAT[®] ViaMass

Ensure items are completely disconnected before cleaning. It is very important to disconnect all cables in order to reduce the risk of electric shock.

Use a soft slightly damp cloth to carefully clean any parts. Do not use any type of abrasive pad, alkaline cleaner, scouring powder, solvent or other cleaning agents. These may damage the enclosures.

Please refer to section "7.6 BioPAT° ViaMass Cables", page 27 for cable care instructions.

7.4 Firmware Upgrades

Below are instructions to update the firmware in your BioPAT[®] ViaMass. You should only update the firmware in your BioPAT[®] ViaMass if you have been instructed to do so by Sartorius Stedim Biotech or your authorized distributor.

7.4.1 Prerequisites

- 1. New firmware file supplied by Sartorius Stedim Biotech or your authorised distributor.
- 2. A PC with Futura Tool installed (see section "6.1 Futura Tool", page 21, for installation instructions) and at least one free USB 2.0 port.
- 3. A BioPAT[®] ViaMass Connect Hub 1 connected to the above computer.
- 4. The BioPAT[®] ViaMass in need of new firmware.
- 5. Futura Bootloader version 234207p10 or higher (see Firmware Upgrade Instructions below).

If the Futura Bootloader version is less than p10 you will need to return your BioPAT[®] ViaMass to Sartorius Stedim Biotech to perform the firmware upgrade.

7.4.2 Firmware Upgrade Instructions

- Connect the BioPAT[®] ViaMass you wish to upgrade to your computer via the BioPAT[®] ViaMass Connect Hub 1. You may have to wait for the hardware drivers to be installed if this is the first time connecting the equipment to your PC.
- 2. Run the Futura Tool software. On the "Connect to Futura" dialog, choose search and wait for the computer to find your connected BioPAT[®] ViaMass. Select and connect to it. Futura Tool will show you information about the BioPAT[®] ViaMass.





3. Choose the "Futura Updates" tab and then click the "Futura Firmware" button. This will show you the Firmware currently inside the BioPAT[®] ViaMass and the controls needed to update it.

- 4. Check that the Boot Loader Version ends in p10 or higher. If the version number is lower than p10, disregard the remainder of these instructions as you will need to return the BioPAT[®] ViaMass to Sartorius Stedim Biotech to perform the firmware upgrade.
- 5. Click "Browse" and carefully choose the new firmware file (file extension .bin). Then click "Update" and wait for the process to finish.
- 6. Close Futura Tool. Then unplug your BioPAT[®] ViaMass from the hub, wait a few seconds and plug it back in again. This power cycles the BioPAT[®] ViaMass.
- 7. Start Futura Tool again and connect to the BioPAT[®] ViaMass. The Firmware section will show you that the BioPAT[®] ViaMass has the new version inside it.

If you require assistance, please contact Sartorius Stedim Biotech or your authorized distributor.

7.5 Earthing the BioPAT[®] ViaMass

Electro-magnetic interference from nearby electrical machinery can manifest as noise in the BioPAT[®] ViaMass' readings. The Capacitance measurement is especially susceptible to this. In order to minimize measurement error, the BioPAT[®] ViaMass' casing has to be securely bonded to the dedicated plant ground using the supplied earth strap cable.

The BioPAT[®] ViaMass electronics and probes should be located as far away as possible from any machinery likely to cause electrical interference, such as large motors.

The graph below shows the difference between a poorly and well earthed system:



As seen in the graph above, the Capacitance reading fluctuates by up to ± 6 pF/cm when the earth strap is removed in an electrically noisy environment, even though the system has high filtering on it. The amount of fluctuation will vary depending on the environment.

7.6 BioPAT[®] ViaMass Cables



Care must be taken when handling the BioPAT[®] ViaMass units. The 1m link cable between the two enclosures should not be bent, kinked, coiled tightly or repeatedly flexed as it may weaken the cable and cause it to fail. If placed into a rocking system it is recommended that both enclosures are placed on the platform so that a replaceable extension cable takes any repetitive flexing that may occur.

Please follow good layout practice and avoid tight bends in the cable, especially near the BioPAT[®] ViaMass enclosure and connectors. During routine disconnection of the BioPAT[®] ViaMass from the probe ensure that the BioPAT[®] ViaMass is stored in such a way that the cables are not stretched or folded in any way. If required, create a generous coil for the cabling.

The BioPAT[®] ViaMass cables must NEVER be cut. The connectors must not be removed. The cables should be protected from mechanical damage. The connectors should be protected from excessive water and corrosives. Sartorius cables should never be excessively bent or kinked.

As a precaution, the BioPAT[®] ViaMass cabling should avoid close parallel proximity to cables associated with electronic variable speed motor controllers or inverters. While the BioPAT[®] ViaMass is immune to permissible levels of electrical interference, some inverter installations radiate rather more than they should.

It is good practice to regularly check for cable integrity using the Signal Simulator for capacitance and conductivity. If you see any significant deviation from the norm, you should disconnect the BioPAT[®] ViaMass from your system completely and request assistance from your distributor or Sartorius.

If, during normal operation, with the probe fully immersed in media and at operational temperature, any of the following issues are observed, immediately disconnect the BioPAT[®] ViaMass from the probe and investigate:

- The Conductivity is at a significantly different value than expected.
- Any signs of galvanic corrosion are visible on the probe body or close to it.

Due to the electronic nature of the dielectrics measurement, it is possible to have a fault condition where a small DC current is present on an electrode. This manifests itself as bubbles forming on the electrode when a Clean Pulse is not in progress. In the unlikely event that you see bubbles under these conditions, completely disconnect the BioPAT[®] ViaMass from your system immediately to prevent any possible damage and request assistance from your distributor or Sartorius.

8. Measurement Options

8.1 Measurement Modes – Description

The BioPAT[®] ViaMass can be used with a variety of different cell suspensions and Sartorius provides optimized preset measuring modes for common solutions. A custom measurement mode is also provided for tailoring the BioPAT[®] ViaMass to your exact requirements.

8.1.1 Measurement Modes Available

This section describes in further detail what happens inside the BioPAT[®] ViaMass when each mode is being used.

Cells come in all shapes and sizes and respond differently when exposed to radio frequencies. However, they always fit a model around the beta dispersion, explained in the theory section of this manual (see Chapter "11 Detailed Theory of Operation", page 49).

There is also a set of filtering options that the BioPAT[®] ViaMass system can be configured to use. Some will suit highly aerated vessels; others suit very thick suspensions, etc.

If you want to select your own settings, you can choose custom mode. There is also a Signal Simulator mode which is used to test your BioPAT[®] ViaMass system with the supplied Signal Simulators. The operating modes are described below.

8.1.1.1 Cell Culture Mode

Cell Culture mode is optimized for larger cells such as animal or plant cells, for example CHO cultivation with a diameter of approximately 10 micrometers.

All metal-liquid boundary probes (such as BioPAT[®] ViaMass probes) are affected by an unwanted electrochemical effect at low frequencies called "Polarization". Therefore this mode uses a technology called "Polarization Correction" (see section "8.5 Polarization Correction", page 36) for technical details regarding this technology).

In this mode, the biomass is measured at 0.6 MHz with polarization correction. Noise filtering is at a medium level of 30 in this mode by default; in some circumstances you can manually increase or reduce it as required. Typically 0.1 pF/cm resolution on the instrument represents 105 Cells/ml.

8.1.1.2 Bacterial Mode

Bacterial Mode is optimized for bacteria cells (e.g. E.Coli which is around 3 micrometers in length).

In this mode, the biomass is measured in dual frequency at \sim 1.12 MHz and then \sim 15 MHz. Most cells are not polarized at 15 MHz so the 15 MHz reading is used as a form of auto zero and subtracted from the 1.12 MHz figure. Therefore, the capacitance of background matter is automatically subtracted from the signal.

Noise filtering is at a high level of 90 in this mode by default, although in some circumstances you can manually increase it or reduce it as required. 0.1 pF/cm resolution on the instrument will typically represent 109 Cells/ml, or 2 grams per liter.

8.1.1.3 Microbial Mode

Microbial Mode is optimized for microbe cells, for example yeasts and fungi, with a typical cell diameter of around 6 micrometers.

In this mode the biomass is measured at ~0.6 MHz and then ~15 MHz. Cells like these do not give much biomass reading at 15 MHz so the 15 MHz reading is used as a form of auto zero and subtracted from the 0.6 MHz figure. Therefore, the capacitance of background matter is automatically subtracted from the signal.

Noise filtering is at a high level of 90 in this mode by default, although in some circumstances you can manually increase or reduce it as required.

All metal-liquid boundary probes (such as BioPAT[®] ViaMass probes) are affected by an unwanted electrochemical effect at low frequencies called "Polarization". Therefore this mode uses a technology called "Polarization Correction" (see section "8.5 Polarization Correction", page 36) for technical details regarding this technology).

0.1 pF/cm resolution on the instrument typically represents 106 Cells/ml, or 0.5 grams per litre.

8.1.1.4 Custom Mode

The default settings for Custom mode are: single frequency measurement at 1 MHz, no polarization correction, no dual frequency and low filtering.

You can adjust any settings in this mode. It is mainly used for experimentation and with guidance from Sartorius support staff.

8.1.1.5 Signal Simulator Mode



The signal simulator mode is only available in the Futura Tool software. For checking the electronics with signal simulators during a DCU integration, please read section"5.2 System Check with DCU Integration", page 18.

This mode should be used when you are checking the operation of your BioPAT[®] ViaMass system with a BioPAT[®] ViaMass Signal Simulator.

The Signal Simulator measurements will only be valid when it is measured in this mode. You cannot change any settings in this mode. Any zero that may be available is temporarily bypassed and if possible the measurement speed is increased in order to improve the response time.

8.1.2 Selecting a Measurement Mode

Modes can be selected using Futura Tool or a Sartorius control unit. Modes set using Futura Tool or a control unit are stored in the BioPAT[®] ViaMass and are used when calculating the measurements for Modbus and Current Loop outputs. This allows two different sets of measurement modes to be configured: one for the Modbus or Current Loop outputs for PLC control and the other for monitoring of the system using Futura Tool software.

8.1.2.1 Futura Tool

Start the Futura Tool software, connect to the BioPAT[®] ViaMass-probe combination desired in the usual manner and select the "Operating Modes" tab.

In order to change the Measurement Mode, the BioPAT[®] ViaMass must be configured to "Futura Connect" Hardware Mode. If it is not already, configure the BioPAT[®] ViaMass to this Hardware Mode (see section "9.3.1 Hardware Settings", page 39 for details).

A Measurement Settings pane (highlighted in the red box) will now be displayed in the "Operating Modes" tab:

Ura Status Pro	be Status	Operating Modes	Quick Readings Adva	ced Diagnostics Futura Upd	ates		
ardware Settings					Gean and Zero Functions		
Hardware I	tode: Fi	utura Connect M	tode Edit Hardware Hod	e Refresh Hardware Mode	Clean Pulse		
Current Lo	op Settings	10	Modbus Settings		Set Zero Cear	Zero	
	Capacitas	ce Conductivity	Baudrate:	38400	Enable Hub Zero B	noth	
4mA	AmA 0 pP/cm 0 mS/cm 20mA 200 pF/cm 0 mS/cm 0 mS/cm Offset 0 pF/cm 0 mS/cm Game 1 1 1 1		Parity:	Cdd	Uve Readings		
20mA			Address:	42			
Offset			Francis Factor - 0.0	Statute City our stirm		1000	
Gain			Contractors with	Action Comparprise	Capacitance (pF/cm)	0	
Currents Currents	Lower Than 4 Higher Than 2	mA: Disabled IOmA: Disabled			Conductivity (mS/cm)	0	
saurement Settin	gs.		_		Capacitance Zero (pF/cm)	0	
Measurement	Mode: Cr	il Culture	Edit Measurement Mode	Refresh Measurement Mode	Biomass Reading (CPM)	0.000E+000	
Measuring Freque	ncy [580					
		on			Probe Temperature (C)	0	
220 Pul C							

Next, click on the "Edit Measurement Mode" button to display the Measurement Modes dialog. You should see something like this:

urement Settings		
Measurement Mode:	Cell Culture	•
Important: Press Save Changes button to	set new settings to the Putur	
Measuring Frequency	580	
Dual Frequency Enable		
220 Pol C	on 👻	
Filter	30	
Refresh	Save Changes	

Use the "Measurement Mode" drop-down list to select from the preset Measurement Modes, Signal Simulator Mode or Custom Mode. The Measuring Frequency, Dual Frequency, Polarization Correction and Filtering options will be initialized and editable according to the chosen Measurement Mode (see section "8.1.1 Measurement Modes Available", page 28).

These settings will be stored in the BioPAT[®] ViaMass itself and used for both Modbus and Current Loop output measurements when connected to a BioPAT[®] ViaMass Connect Hub (Current Loops only).

8.1.2.2 Selecting the Measurement Mode via DCU



In the following, you will find recommendations for configuring the system parameters as pre-configured settings. You can also adapt the system parameters to your application via the Customer Mode.

Once you have created the connection to your BioPAT[®] ViaMass and the DCU is ready for operation, switch to the calibration mode.

- ▶ Press the touch button "CAP-#" in the "Calibration" menu. The submenu "ViaMass CAP-#" opens.
- ▶ Press the touch button "Measure" in the submenu "ViaMass CAP-#".



- ViaMass CAP-1 Mode
- ▶ Press the touch button "Measurement Mode" in the submenu "CAP-# Mode".

The submenu "Mode" for selecting measurement modes opens (see section"8.1.1 Measurement Modes Available", page 28).

ViaMass CAP-1 Measure	ement Mode
	Cell Culture Mode
	Bacterial Mode
	Microbial Node
	Custom Mode

▶ Select the measurement mode that suits your application.

	Cell Culture Mode	
Frequency	580kHz	
Moving Average	30	
Dual Frequency	OFF	
High Frequency	OKHz	
Pol. Correction	220 Pol C	
Rocker Filter		OFF

Cell Culture Mode

The submenu "Cell Culture" Mode displays the configurations for the cell culture mode.

To use the BioPAT[®] ViaMass in a BIOSTAT[®] RM, you must activate the rocker filter: ► Touch the button "Rocker Filter". The field now displays the value "ON".

Confirm these changes with "ok".

_	Bacterial Mode	
requency	1120kHz	_
Icving Average	90	
ual Frequency	ON	
igh Frequency	15650kHz	
ol. Correction	No Pol C	
locker Filter		OFF

Bacterial Mode

The submenu "Bacterial Mode" displays the configurations for the bacterial mode.

To use the BioPAT[®] ViaMass in a BIOSTAT[®] RM, you must activate the rocker filter: ► Touch the button "Rocker Filter". The field now displays the value "ON".

Confirm these changes with "ok".

	Microbial Mode	
Frequency	580kHz	_
Moving Average	90	
Dual Frequency	ON	
High Frequency	15650kHz	
Pol. Correction	220 Pol C	
Rocker Filter		OFF

Microbial Mode

The submenu "Microbial Mode" displays the configurations for the microbial mode.

To use the BioPAT[®] ViaMass in a BIOSTAT[®] RM, you must activate the rocker filter: ► Touch the button "Rocker Filter". The field now displays the value "ON".

Confirm these changes with "ok".

Custom Mode



Only use the Custom Mode if you have received training from Sartorius or under the supervision of a Sartorius expert. Wrong configuration of Custom Mode parameters can lead to erroneous or imprecise measurements. Under normal circumstances, one of the three modes is used for cultivation or fermentation.

The Custom Mode can by switching back to one of the factory-set modes, in case one of these has been activated inadvertently.

_	Custom Mode	
Frequency	500kHz	
Moving Average	200	
Dual Frequency		OFF
High Frequency	OkHz	
Pol. Correction	220 Pol C	
Rocker Filter		ON

The submenu "Custom Mode" displays the configurations for the user-defined mode.

To use the BioPAT[®] ViaMass in a BIOSTAT[®] RM, you must activate the rocker filter: ► Touch the button "Rocker Filter". The field now displays the value "ON".

Confirm these changes with "ok".

8.2 Zeroing

The Zero function simply "tares" the capacitance output of the instrument. For example, if you have a signal that is 7 pF/cm and, during the course of the experiment, it rises to 12 pF/cm, then the total change is 5 pF/cm. This 5 pF/cm change equates to the viable biomass measurement.

The Zero function allows you to remove the 7 pF/cm offset.

So if you zero the instrument in the initial 7 pF/cm solution, the output will rise from 0 pF/cm to 5 pF/cm during the course of the experiment.

The BioPAT[®] ViaMass has a built-in Zero function which can be triggered over Modbus or in the Futura Tool.

8.2.1 Zeroing Using Futura Tool

- Connect to your BioPAT[®] ViaMass using Futura Tool in the usual manner
- Navigate to the "Operating Modes" tab
- Press the "Set Zero" button in the "Clean and Zero Functions" section of the screen

Set Zero Clear Zero	

8.2.2 Zeroing Readings on the DCU

×

Signal Test

Measurment Mode Zero Now

- Press the touch button "CAP-#" in the "Calibration" menu. The submenu "ViaMass CAP-#" opens.
- ▶ Press the touch button "Measure" in the submenu "ViaMass CAP-#".

▶ Press the touch button "Zero Now" in the submenu "CAP-# Mode".

The submenu "ViaMass CAP-#" for zeroing the BioPAT [®] ViaMass electronics appears.

Mass CAP-1	>
Cap	0.0pF/em
Zerc	-3.3pF/cm
	Set Zero

ViaMass CAP-1 Mode

- Press the "Set Zero" button. Next, the field for the capacitance value "Cap" shows the zero value. The "Zero" field displays the current offset, also called the deduction value. This offset is the value that is deducted from the respectively running measurement.
- Pressing the "Clear Zero" button deletes the offset value and the current offset value of the system is displayed in the field "Cap". Unlike when zeroing the Futura Tool software, the DCU remembers the offset value so that the last pre-zeroing status is not lost.

8.3 Converting the Capacitance Value to Cells per Milliliter (C/ml)

- Press the touch button "CAP-#" in the "Calibration" menu. The submenu "ViaMass CAP-#" opens.
- Press the touch button "CPM Factor" in the submenu "ViaMass CAP-#". The submenu for entering the conversion factor opens.



▶ Enter the conversion factor in the input field "CPM Factor".

The conversion factor is used to convert the measured capacitance value into cells per milliliter (C/ml). To determine this conversion factor, you must draw one sample in the exponential phase of the process to be monitored and record the related capacitance value. The conversion factor can be determined using the value determined by the laboratory in cells per milliliter and the recorded capacitance values. The conversion factor "CPM Factor" is calculated with the help of the follwowing equation:

$$CPM \ Factor = \frac{C_{Cell \ density}}{Cap-1} = \frac{\left[\frac{Cells}{ml}\right]}{\left[\frac{pF}{cm}\right]}$$

C_{Cell density}Reference value for cell densityCap-1Capacity value from BioPAT®ViaMass



The biomass value "BMass" calculated using the CPM factor only correlates with the reference value for the density of living cell during the exponential phase. In the stationary phase, the capacitance value continues to rise because the volume of living cellular keeps growing, although the cell density no longer does. As a result of this, the reference value for cell density no longer agrees with the biomass value. The BioPAT[®] ViaMass system determines the living cellular volume which only correlates with the cell density in the exponential phase.

8.4 Settings for Alarm Limits

Press the touch button "CAP-#" in the "Main" menu. The submenu "Alarm CAP-#" opens.



Set the upper and lower alarm limit according to your application.

Switch the alarm for the capacitance value on or off.

8.5 Polarization Correction

This correction is used to correct an electrochemical effect that occurs with all metal-liquid boundary probes. This affects low frequency capacitance readings. The capacitance versus frequency curve looks similar to a 1/x 2 curve, almost asymptotic at low frequency, settling to a horizontal straight line at high frequency.

In order to compensate for this, two additional biomass measurements are made at low frequencies and from this, the shape of the curve can be estimated. The offset added by this effect is then subtracted from the actual biomass measurement.

This removes the effect of changing polarization on the biomass signal.

8.6 Filters

BioPAT[®] ViaMass includes the facility to output measurements based on the mean average of a number of readings. This filter is accessible from Futura Tool software and over Modbus from a control unit.

A filter value of 0 or 1 equates to no filtering, while a value of 180 (maximum) takes the mean average of 180 readings.

Once the specified number of readings has been taken, the upper 5% and lower 5% magnitude readings are removed before the mean average is taken. This creates an suppression of interfering signals.

8.6.1 Rocking Motion Monitoring

The rocking motion of the rocker causes signal fluctuations of the measurement signal due to the variation of the liquid level over the sensor in the Flexsafe RM bag. For this reason, appropriate optimization filters are implemented in the system's electronics including different rocking motion parameters. Using these filters enables the biomass evolution monitoring continuously in rocking motion cell cultivation.

When in Rocker Bag Mode (Flexsafe RM Bag), the BioPAT[®] ViaMass filters out the variation in readings caused by the probe electrodes becoming uncovered due to the bag rocking back and forth. Only use this filter if you are measuring in a situation where the liquid level above the electrodes varies and is 3cm or less.

9. Using Futura Tool

9.1 Connecting to BioPAT[®] ViaMass

First plug in your BioPAT[®] ViaMass to a BioPAT[®] ViaMass Connect Hub and connect this to your PC via USB. Click on the 'Futura Tool' icon on the desktop or launch the program from the start menu: Start > Programs > Aber Instruments > FuturaTool > FuturaTool.



The Connection screen is displayed automatically when Futura Tool is launched. Use the Screen to connect to any single BioPAT[®] ViaMass that is attached to your computer. The channels on your BioPAT[®] ViaMass Connect Hub will appear as COM ports in Microsoft[®] Windows.

9.1.1 "I know which COM Port my BioPAT® ViaMass is connected to"

If you already know which COM Port you have connected your BioPAT[®] ViaMass to, you can save time by selecting the port in the "Quick COM Port Selection" list. If you connect your BioPAT[®] ViaMass and | or hub to your computer after you have launched this screen, click "Refresh Port List" for new COM Ports to be listed in the "Quick COM Port Selection" list. After a selection is made, the "Connect" button becomes active; click on it to connect to the BioPAT[®] ViaMass.

9.1.2 "I am not sure which COM Port my BioPAT® ViaMass is connected to"

The search facility can be used to find all BioPAT[®] ViaMass connected to the PC but not in use by other applications. The Connection screen above shows an example of a completed search on a PC that had two BioPAT[®] ViaMass devices connected through a BioPAT[®] ViaMass Connect Hub. The search facility's speed varies depending on the number of COM Ports available on the PC. A computer with more COM Ports (that are connected but not in active use) will take longer to complete the search. Click on the BioPAT[®] ViaMass you want to use then click on the "Connect" button. Futura Tool will only work with one BioPAT[®] ViaMass at a time. After successful connection, the other BioPAT[®] ViaMass found in the search will be released for use by other applications.

õ. F	uturaTo	ol - HAR	S09014 (
File	Futura	Help	
	Disconnect		
Con	Futur	ra Reset	09014
Fut	ura Statu	s Prot	e Status

9.1.3 Futura Tool Menu

The "Futura" menu has two entries. The first is "Disconnect | Connect" which enables connection and disconnection of a single BioPAT[®] ViaMass. The second item is "Futura Reset" which reinitializes the connected BioPAT[®] ViaMass by forcing the firmware to reboot without physically disconnecting the BioPAT[®] ViaMass.

9.1.4 Futura Status Tab

When a BioPAT[®] ViaMass has been successfully connected to Futura Tool, the software will display the "Futura Status" tab. Other accessible tabs are: "Probe Status", "Operating Modes", "Quick Readings", "Advanced Diagnostics" and "Futura Updates", all of which are explained later in further detail. The "Futura Status" tab displays details about the currently connected BioPAT[®] ViaMass, including the Serial Number and Part Number of the BioPAT[®] ViaMass, what type of BioPAT[®] ViaMass it is, the date it was made, the minimum and maximum temperatures that the BioPAT[®] ViaMass has internally experienced so far (your BioPAT[®] ViaMass can run very hot so do not be alarmed). This tab also displays other details which provide information regarding the connected BioPAT[®] ViaMass' state and history.

e Eutura Help				
Futura Status Probe Status	Operating Modes Qui	ck Readings	Advanced Diagnostics Fut	ura Updates
Refresh				
Serial Number:	HA509009	N	amber of Probe Connections:	37
Part Number:	233000	N	amber of Clean Pulses:	16536
Futura Type:	Standard Putura	164	est 10 Connected Probes:	
Date of Manufacture:	25/06/2010 15:40:03	5	5210010	
Minimum Temperature: (C)	18.4	5	5210010	
Maximum Temperature: (C)	207	5	5000007	
Operating Time: (Itrs)	921	5	S210006 ONA10023	
Number of Power Cycles:	596	\$	\$230006 \$230010	
Number of Readings:	2099929	_		
Number of Firmware Hashes:	83	-		

9.2 Probe Status Tab

e Eutura Help mnected to: HAS09009		
Viura Status Probe Status Ope	ating Modes Quick Reads	ngs Advanced Diagnostics Future Updates
Refresh		
Serial Number:	TCNA30023	Collination Information:
Part Number:	65325200	Process Calibration
Probe Type:	Probe	Prove Canadation
Date of Manufacture:	16/12/2010 13:57:48	
Hinimum Temperature: (C)	16.9	
Maximum Temperature: (C)	26.73	
Operating Time: (Hrs)	35	
Number of Readings:	152133	
Number of Clean Pulses:	3	
Number of Peake Leak Detections	0	

The "Probe Status" tab is very similar to the Futura Status but looks at information taken from the probe instead. The only extra information shown is the number of probe leak detections and calibration details.

Each probe has an internal moisture sensor. If this senses any moisture inside the probe casing, the Number of Probe Leakage Detections value will increment. If it shows any value other than 0, the probe's integrity may be compromised and should be checked. Contact your distributor or Sartorius Stedim Biotech for advice.

9.3 Operating Modes Tab

The "Operating Modes" Tab is the main area for configuring your BioPAT[®] ViaMass. It is split into four sections: "Hardware Settings", "Measurement Settings", "Clean and Zero Functions" (Futura Connect Hardware Mode only) and "Live Readings".

Eutura Help ected to: HAS	09017				
Hardware H	iode: Fub	ira Connect M	ode (Edit Hardware Mode) Editesh Hardware Mode	Clean and Zero Functions	
Current Loo	p Settings		Modbus Settings	Sector Cos	100
	Capacitance	Conductivity	Beudrate: 19200	E Drable Hub Zero B	dise.
4mA	0 př/cm	0 mS/cm	Parity: Even	Live Readings	
30mA	200 p#jom	50 m5/cm	Address: 6	Live Reading	js .
Offset	0 pH/cm	0 m5/cm	Biomass Factor: 0.0000+000 CPH per pFjcm	Canacitance (of Icm)	
Currents L Currents H	over Than 4mJ Igher Than 20m	Disabled A: Disabled		Conductivity (m5/cm)	-0.1
asurement Setting				Capacitance Zero (pf/cm)	-3.7
Measurement P	Nodec Micro	bal	(Edit Heasurement Hode) (Refresh Heasurement Hode	Biomass Reading (CPH)	0.000E+000
Resouring Prequer	ky SBC				
Aul mequency	19	50		Probe Temperature (C)	20.8
120 Pel C	OA.				
liber	90			Constructions And Effort all free	
				Cr[Documents and Settings]/indev[Di Live_Baselings[Log = 180711-2142.cm	aktop/f-stureTool
				and the second second	-

9.3.1 Hardware Settings

The Hardware Settings area displays the current hardware mode of the connected BioPAT[®] ViaMass and any associated settings. Hardware modes available are:

- USB Only Mode: Used when connected to a BioPAT[®] ViaMass Hub when not using the Modbus interface or Current Loop outputs.
- Futura Connect Mode: Used when connecting to a Futura Connect when using the Modbus interface and | or Current Loop outputs
- Rocker Bag Mode: Used when connecting a BioPAT[®] ViaMass and using a rocker bag

To change hardware modes, click on the "Edit Hardware Mode" button in the Hardware Settings pane. This will bring up the Hardware Modes screen. The contents of this screen will vary depending on the currently selected Hardware Mode and is described in the following sections.

9.3.1.1 USB Only Mode

If selecting this mode, no additional settings are required.

• Hardware Modes		×
Hardware Settings		
Hardware Hode:	USB Only Mode 🔍 🗸	
Important: Pres Same Changes button to set new settings to the connected Future When the mode is set, the following functions are deabled: -> Communication with V350 -> Modeus -> Camera Loops		
Note: USB based communications will operate as normal Refresh Hardware Mode		Save Changes

Click the "Save Changes" button to confirm your selection.

Your selection will be displayed in the "Operating Modes" tab in the main Futura Tool. The Measurements Settings will no longer be visible as the only way to obtain readings from the BioPAT[®] ViaMass is now through Futura Tool software which feature software-based Measurement Settings, such "Quick Readings" tab in Futura Tool.

Connected to: HAS09	999			
Putura Status Probe St	thus Operating Modes	Quick Readings	Advanced Diagnostics	
Hardware Mode In this mode, the follow the Communication with	USB Only Hode ong functions are doubled. V350	Edit Hardware Mod	in Antonio Partura Pad	
-> Current Loops				

9.3.1.2 Futura Connect Mode

If selecting this mode, you may need to enter Current Loop and | or Modbus settings, depending on your application.

ware seconds						
		Hardware Mo	de: Noura C	Connect Mode 💌		
ortant:			_			
s Save Changes button to set	t new settings	to the connected Ful	tura -			
Capacitance: 4mA (pFigm)	0	20mA (pF/cm)	200	Beud Rate:	38400	~
Conductivity: 4mA (m5/cm)	0	20mA (m5/cm)	40	Paritys	Odd	~
Annual Current Loop Settin				Sleve Address:	42	
Enable currents less than 4m	A 🗆			other Settings		_
Inable currents greater than	20mA			Biomass Factor (CPH	t per pF/cm) 0	
Capacitance Offset Trim (pF)	um) 0		reset			
Capacitance Gain Trim				-		
	-					
Conductivity Offset Trim (mS)	(m) 0		reset			
		00				

To use Current Loops, enter the capacitance and conductivity values that will correspond to currents of 4 mA and 20 mA in the Current Loop Settings area. The current through the Current Loop outputs will then vary linearly in proportion to the measured capacitance and conductivity values.

Capacitance: 4mA (pF/cm)	0		20mA (p#/cm)	200	
Conductivity: 4mA (m5/cm)	0		20mA (m5/cm)	40	
Advanced Current Loop Settin	qs	_			
Enable currents less than 4mil	4				
Enable currents greater than 2	20mA				
Capacitance Offset Trim (p#/o	m)	0	••	reset	
Capacitance Offset Trim (pF/c Capacitance Gain Trim	m)	0	••	reset reset	
Capacitance Offset Trim (pF/c Capacitance Gain Trim Conductivity Offset Trim (m5/	om) icm)	0	••	reset reset	

The Advanced Current Loop Settings will enable you to choose whether you wish to allow currents less than 4 mA or greater than 20 mA. This will depend on whether the control system reading the Current Loops is tolerant to currents outside of these limits.

The Offset Trim and Gain Trim for both Capacitance and Conductivity are also configurable in the Advanced Current Loop Settings area. These allow you to alter the offset and gain of the Current Loop outputs in relation to the actual capacitance and conductivity values in a 'y=mx + c' fashion, m being gain and c being the offset.



This is a useful feature if trying to adjust the outputs of two or more BioPAT[®] ViaMass to match one another. Although, in practice the Current Loop outputs of two identical BioPAT[®] ViaMass are typically within two decimal places of each other with no correction applied.

To use the Modbus interface, enter the baud rate and parity settings that your system controller uses. Set the Slave address to an unallocated address number.



Each BioPAT[®] ViaMass must use a different Modbus address. If address conflicts occur, the Futura Connect status lights of the conflicting channels will turn red.

Baud Rate:	38400	Y
Parity:	Odd	~
Slave Address:	42	

The Biomass Factor is a scaling factor that is applied to the capacitance reading to calculate a viable biomass figure. This viable biomass reading is calculated within the BioPAT[®] ViaMass and is available over Modbus and Futura Tool software.

Click the "Save Changes" button to confirm your selection. A summary of your settings will be displayed in the "Operating Modes" tab in the main Futura Tool window.

		beautions !	door seeale and a second relations has
dware Settings			
Hardware	Hodes Fub	ara Connect N	Hode Edt merdvare Hode Rahesh Hardvare H
Current Lo	op Settings		Modbus Settings
	Capacitance	Conductivity	Beudrate: 30400
- 4mA	0.07/01	a militer	Party: Odd
20mA	200 pH/cm	40 m5/cm	Altes: 4
Offuet	+ after	0 mSizm	
Gem	1	1	month factor comparison
Currents Currents	Lover Than 4nd Higher Than 20r	k Duabled	
surmers Lette	nga .		

9.3.1.3 Rocker Bag Mode

The settings for this mode are the same as those available in Futura Connect Mode (Current Loop, Advanced Current Loop, Modbus and Biomass Factor settings). Please refer to the Futura Connect Mode section "9.3.1.2 Futura Connect Mode", page 40.

		Hardware Mos	des lacker	Bag Hode 🛛 🛩		
portant: ss Save Changes button to set	t new settings (is the connected Fut				
Current Loop Settings				Modbus Settings		
Capacitance: 4mA (pF/cm)	0	20mA (p#/cm)	200	Baud Rate:	29200	~
Conductivity: 4mA (mS/cm)	0	20mA (md/om)	50	Parity:	Even	~
Advanced Current Loop Settin				Slave Address:	6	
Enable currents less than 4m	A 🔲			Other Settings		
Enable currents greater than	20mA			Borrass Factor (CPM	per pF/cm) 0.000E	+000
Capacitance Offset Trim (pF)	em) 0		reset			
Annual Color Raine	-		reset			
Capacitance Gain Trim						
Capacitance Gain Trim Conductivity Offset Trim (mS	icm) 0	••	reset			

When in Rocker Bag Mode, the BioPAT[®] ViaMass attempts to filter out the variation in readings caused by the probe electrodes becoming uncovered due to the bag rocking back and forth. Only use this filter if you are measuring in a situation where the liquid level above the electrodes varies and is 3 cm or less.

9.3.2 Measurement Settings

If available in the selected hardware mode, the Measurement Settings pane in the "Operating Modes" tab allows you to select a measurement mode based on your application.

Measurement Mode:	Cell Culture	Edit Measurement Mode Refresh Measurement M
Measuring Frequency	580	
220 Pol C	ON	
Filter	30	

To change the Measurement Mode used, press the "Edit Measurement Mode" button in the Measurement Settings area of the "Operating Modes" tab in the main Futura Tool window. You should now see the following screen:

remerit settings	
Measurement Mode:	Cell Culture
Important: Press Save Changes button to r Measuring Prequency	Col Culture Bacterial Microbial Signal Simulator Custom
Dual Frequency Enable	
220 Pol C	on 👻
Filter	30
Refresh	Save Changes

The available measurement modes are:

- Cell culture
- Bacterial
- Microbial
- Signal simulator
- Custom

These are described in detail in Chapter "8 Measurement Options", page 28). Click the "Save Changes" button to confirm your selection. A summary of your settings will be displayed in the "Operating Modes" tab in the main Futura Tool window.

9.3.3 Clean and Zero Functions

This section is only available when in Futura Connect Hardware Mode.

L	Clear	1 Pulse
C	Set Zero	Clear Zero
5	Enable Hul	b Zero Button

The "Set Zero" button sets the current capacitance value in BioPAT[®] ViaMass as the zero value. "Clear Zero" removes any zero value that was previously set. See section "8.2 Zeroing", page 33 for more details on zeroing your BioPAT[®] ViaMass.

"Clean Pulse" is not available for the BioPAT[®] ViaMass single use sensor.



9.3.4 Live Readings

The Live Reading panel shows the output of BioPAT[®] ViaMass with all Hardware and Measurement Settings applied. It is a useful tool when tuning Measuring Modes, problem solving and matching values to a PLC.

To log readings taken with the Live Readings feature, select the data logging interval using the Log Filter then click the "Start Logging" button in the Log Live Readings area. This will ask you for a filename to store the readings. Logging will start as soon as the "Save" button is pressed.

Logging produces a .CSV file with the following format: Time Stamp, Run Time (Decimal Hours), Biomass, Capacitance (pF/cm), Conductivity (mS/cm), , , Capacitance Zero Value (pF/cm), Messages, , , Dual Frequency, Polarization Correction, Filter, Measuring Frequency (KHz), High Frequency (KHz)

It is also possible to recall previously logged data by clicking on the "View Log Data on Graph" button in the Live Readings pane. Navigate to the previously saved .csv file and click "Open" in the file dialog to view the data on a graph.



9.4 Quick Readings Tab

This tab enables you to get quick capacitance and conductivity readings from the BioPAT[®] ViaMass. This is typically used for system checking and problem solving and may be used to generate log files to send to Sartorius Stedim Biotech. Both Single Frequency and Dual Frequency Modes are supported. The Measurement Settings stored in the BioPAT[®] ViaMass itself (configured in the "Operating Modes" tab above) are not used.

onnected to: HAS090	09				
Futura Status Probe Sta	tus Operating Modes	Quick Readings	Advanced Diagnostics	Futura Updates	1
Measure Freq. (KHz) High Freq. (KHz) Dual Freq? Probe Calibration	1000 V		Capacitance (pF/	'cm) 1	11.08
Continuous Readings	Get Reading		Conductivity (m5	5/cm) 3	9.86
Enable Logging					

Enable the "Continuous Readings" checkbox to make the application repeat readings automatically.

Checking the "Enable Logging" checkbox will automatically prompt for a filename under which to save the readings. Once you have selected a filename, start logging by pressing the "Get Reading" button. Enable the "Continuous Readings" checkbox before pressing the "Get Reading" button if you wish to log multiple readings.

Logging produces a .CSV file with the following format:

Time Stamp, Run Time (Decimal Hours), Capacitance (pF/cm), Conductivity (mS/cm), Measuring Frequency (KHz), , , Dual Frequency, High Frequency (KHz), Capacitance at Measure Frequency (pF/cm), Capacitance at High Frequency (pF/cm), Conductivity at High Frequency (mS/cm)

Some fields are not populated depending on the settings used, e.g. High Frequency is left blank when Dual Frequency is off.

Press the "Stop Timed Reading" button at any point to stop the readings (and logging, if enabled).

9.5 Futura Updates Tab

Ele Eutura Help				
Connected to: HAS09	009			
Futura Status Probe St	atus Operating Modes	Quick Readings	Advanced Diagnostics	Futura Updates
Improper use of funct Futura Firmware	ions on this tab can caus	e permanent da	mage to Futura hardw	are.
Futura Firmware Update Boot Loader Version:	234207e10			
Firmware Version:	233007p73			
Firmware Update File				
				Browse

The "Futura Updates" tab facilitates updating the firmware of a connected BioPAT[®] ViaMass. Click the "Futura Firmware" button to activate the update screen. Click the "Browse" button and carefully select the upgrade file for the BioPAT[®] ViaMass then click "Update". Futura Tool will then perform the update unaided.

In order to perform a firmware update, the existing Bootloader version must be 234207p10 or higher. If the Futura Bootloader version is less than p10 you will need to return your Futura to Sartorius Stedim Biotech to perform the firmware upgrade.



If, for any reason, the update fails, you can try again. A BioPAT[®] ViaMass with no firmware or which has a failed firmware update cannot be used. Before starting, it is important to ensure that the update file is a valid BioPAT[®] ViaMass firmware update.

If Futura Tool is started and connected to a BioPAT[®] ViaMass that has no firmware or has experienced a failed update, it will only display the "Futura Updates" tab. The BioPAT[®] ViaMass can then be updated using valid firmware. If this completes successfully, the BioPAT[®] ViaMass will be usable again; if it does not complete, contact Sartorius Stedim Biotech for further information.

10. Troubleshooting

This chapter covers some technical difficulties that you may encounter while using your BioPAT $^{\circ}$ ViaMass system.

10.1 Noisy or Unexpected Readings

If you are experiencing unusual readings you should try the following:

- Check probe placement. Readings can be affected by obstructions in the probe's field of view.
- Check the Measurement Options. One of several Measurement Modes may be selected, depending on the application and cell type being measured. Ensure you use the correct Measurement Mode (or settings, if using Custom Mode) for your application. See Chapter "8 Measurement Options", page 28 for further details.
- Check that the BioPAT[®] ViaMass is correctly earthed. See section "7.5 Earthing the BioPAT[®] ViaMass", page 26 for further details.
- Check probe calibration settings. It is possible to create custom probe calibrations to cancel the effect of obstructions in the probe's field of view. Check that the correct calibration is being applied for the equipment being used.

10.2 Noisy Capacitance Readings

A high level of noise on the Capacitance measurement in particular is typical of a poorly earthed BioPAT[®] ViaMass. Check that the BioPAT[®] ViaMass casing is properly and securely earthed using the supplied earth strap (see section "7.5 Earthing the BioPAT[®] ViaMass", page 26 and that the BioPAT[®] ViaMass electronics and probe are located as far as possible from any large electrical machinery.

10.3 Lid Lock Warning (E10 Error)

The BioPAT[®] ViaMass features an anti-tamper feature that will disable the BioPAT[®] ViaMass if the lid is removed. Do not open or disassemble the BioPAT[®] ViaMass. Doing so will invalidate the warranty. There is a risk of electric shock and there are no user serviceable parts inside.

If this error is observed under normal conditions, please upgrade to the latest BioPAT[®] ViaMass firmware (see section "7.4 Firmware Upgrades", page 25). If the problem persists, please contact Sartorius Stedim Biotech or your authorized distributor for assistance.

10.4 BioPAT[®] ViaMass Busy (E02 Error)

The BioPAT[®] ViaMass does many tasks internally in order to operate correctly. Occasionally a task is being completed that means a measurement cannot be completed at this instant. Under these circumstances the BioPAT[®] ViaMass will report that it is busy. The system will usually just deal with this situation and you will not be aware of it.

It is possible to observe this error under normal conditions, if it does not clear within a few seconds, please upgrade to the latest BioPAT[®] ViaMass firmware (see section "7.4 Firmware Upgrades", page 25). If the problem persists, please contact Sartorius Stedim Biotech or your authorized distributor for assistance.

10.5 BioPAT[®] ViaMass Not Recognized by Computer

If you are having difficulty connecting your BioPAT[®] ViaMass to Futura tool software, please check the following:

- Ensure that the BioPAT[®] ViaMass is securely connected to the BioPAT[®] ViaMass Connect Hub
- Ensure that the BioPAT[®] ViaMass Connect Hub is connected to its power supply and that the mains supply is switched on
- Ensure that the USB cable is correctly inserted into the \textsc{BioPAT}° ViaMass Connect Hub
- Ensure that the USB cable is correctly inserted into a USB socket on your computer
- Ensure that the drivers and Futura tool software are correctly installed on your computer (see Chapter "6 Software Installation", page 21)
- Ensure that the probe is securely connected to the BioPAT[®] ViaMass electronics

11. Detailed Theory of Operation

The instrument works by measuring the electrical capacitance of the cell suspension at various radio frequencies. The capacitance is strongly affected by the presence of viable cells with an intact, electrically insulating outer membrane envelope. Cells with leaky membranes and other non-cellular solids have a much smaller influence on the capacitance of the suspension.



The illustrations above show a cell with an intact membrane (viable cells only) and the BioPAT[®] ViaMass's electric field charging the membrane. The charge on the membrane is similar to that found on an electrical capacitor and this principle is used to detect and measure the presence of viable cells.

Provided that some measurement conditions are satisfied (conductivity in the normal operating range of 3 mS/cm to 40 mS/cm), the BioPAT[®] ViaMass gives readings in proportion to the total volume of intact cells in the sample. The BioPAT[®] ViaMass can be calibrated to translate this into other measurement units such as grams per liter, cells per ml, spun solids % or PMV.

11.1 The Electrical Properties of Living Systems

If anything is placed between two electrodes, with an alternating voltage applied to the electrodes, one may characterise the so-called "passive" electrical properties of the system by two variables: the electrical capacitance C and conductance G. In SI units, capacitance is measured in farads (F) and conductance in siemens (S). In biological work the values of interest are usually in the picofarad (pF) and milliSiemens (mS) ranges. The capacitance and conductance of typical ionic solutions are for practical purposes independent of frequency between DC and ~1 GHz. If the electrodes are plane-parallel plates of area *A* separated by a distance *d*, the capacitance and conductance measured will be a function of both *A* and *d*. The intrinsic properties of interest which characterise the material are its relative permittivity ε' and its conductivity σ' , which are related to C and G by:

(1) $\sigma' = G \cdot (d/A)$ (2) $\varepsilon' = C \cdot (d/A\varepsilon_0)$

Where (d/A) has the units of cm⁻¹ and is known as the cell constant (K), and ε_0 is known as the permittivity of free space and is equal to the capacitance of a 1 cm cube containing a vacuum, which by experiment is found to have the value 8.854×10^{-14} F/cm. The units of σ' are therefore mS/cm whilst ε' is dimensionless. The value of ε' for water at 298 Kelvin is 78.4, so that it may be calculated from equation (2) that a cell of unit dimensions (therefore K = 1 cm⁻¹) has a capacitance of some 6.94 pF.

Since the electrode geometry does not change during a fermentation, it is suitable (for the purposes of estimating cellular biomass with the BioPAT[®] ViaMass) to talk in terms of C and G alone. However, for purposes of generality, what follows will be described mainly in terms of σ' and ε' . Of course the electrodes used with your

BioPAT[®] ViaMass are not plane-parallel. Nonetheless they possess an effective cell constant (or "probe constant") that may be used to relate the measured C and G to the actual σ ' and ϵ '.

In all BioPAT[®] ViaMass products, the probe type is recognized automatically and software ensures that the correct probe constant is applied and readings are always converted to pF/cm and mS/cm no matter what probe type is plugged in.

11.2 Beta Dispersion

In contrast to those of ionic solutions, the passive electrical properties ("dielectric properties") of cell suspensions are strongly frequency-dependent, a phenomenon known as *dielectric dispersion*. All biological cells possess what is known as a β -dispersion of a magnitude which is both pronounced and dependent upon the amount of cells present. It is the measurement of the magnitude of this β -dispersion which enables the BioPAT[®] ViaMass to distinguish cells from other particulate matter, aqueous solutions and gas bubbles.

All biological cells consist, in electrical terms, of a poorly conducting lipid membrane separating a conducting cytoplasmic volume from the conducting extracellular bulk volume (including any cell wall, if present). The electrical capacitance of this lipid membrane is an order of 1 to 2 μ F/cm², dependent on the type of cell considered. As the frequency of measurement is lowered, the electrical field is more efficient at charging this membrane capacitance. This results in a measured capacitance between the electrodes increasing greatly as the frequency of measurement is lowered. Because the current carriers in the cytoplasm and extracellular fluid are ionic and must reach the cell membrane before they can charge it up, the time taken to do this is called the time constant (τ) and depends on the internal cytoplasmic (σ'_i) and external (σ'_o) conductivities, the (mean) cell radius *r* (taken across the cytoplasmic membrane, excluding the cell wall) and the magnitude of the specific membrane capacitance C_m :

$$^{(3)} \tau = r \cdot C_m \left(\frac{1}{\sigma'_i} + \frac{1}{2\sigma'_o} \right)$$

After correction for the frequency-independent background permittivity (or capacitance) of the suspending medium, a graph of ε' vs. log f (the logarithm of the measuring frequency in Hz) has the appearance of an inverted sigmoid, with a strongly frequency-dependent region separating two plateau regions. The following figure is typical for microbial cell suspensions:



Graph Showing the Beta Dispersion Typical of Microbial Cell Suspensions

Measurement of ϵ' or C in or near the lower-frequency plateau region therefore provides a means of estimating the biomass present. The frequency at which this effect (the β -dispersion) is half completed is known as the characteristic frequency , and:

(4)
$$f_c = 1/2\pi\tau$$

Typical values of many fermentations have characteristic frequencies near \approx 1 MHz for the β -dispersion, as may be discerned from equations (3) and (4) or from the monograph published in J. Bioelectricity 5, 139–144 (1985).

Some cells (especially Gram-positive bacteria) possess an additional dielectric dispersion (the so-called α -dispersion), which occurs due to ionic processes in the cell envelope. However, this dispersion is observed at frequencies lower than that of the β -dispersion. Whilst this effect is also a function of the biomass content present, the nature of the cell envelope can change more than the nature of the cytoplasmic membrane, as a function of physiological state independently of the biomass content. The frequencies of operation of the BioPAT[®] ViaMass are therefore designed to exploit the β -dispersion alone.

The relative density (mass per unit *membrane-enclosed* volume) of biological cells is not thought to be greatly dependent upon physiological status, and since all cells need an intact cytoplasmic membrane to divide, an operational definition of biomass as bio-volume is appropriate. The BioPAT[®] ViaMass effectively measures biovolume, i.e. the volume fraction P of the suspension which is enclosed by the cytoplasmic membrane of the cells.

P is therefore dimensionless, being ml enclosed by the cytoplasmic membrane per ml of cell suspension. For spherical cells, the relationship between the permittivity ε'_{L} (at a frequency of measurement low with respect to f_{O} and the volume fraction *P* is:

(5)
$$\varepsilon'_L = \varepsilon'_{inf} + \frac{9PrC_m}{4\varepsilon_0}$$

Since *r*, C_m and ε'_{inf} are constants for a given set of conditions, ε'_L (and hence the measured capacitance *C*) is linear with *P* and, after subtraction of the background ε'_{inf} is directly proportional to *P*. At values of *P* above about 0.2 and up to about 0.5, electronic correction is necessary to maintain linearity. The dielectric increment measured will also depend upon the mean radii of the cells under study. Typically yeast cells will produce a capacitance of 3 to 6 times that of an equal number of bacteria cells. Similarly, animal cells generate a capacitance of 8 to 16 times that of bacteria cells due to their larger mean radius. For non-spherical cells, the factor 9/4 will differ and the appropriate radius to consider is that of a sphere of equivalent volume.

Note that, in measuring or calculating the volume fraction, the relevant parameter is that enclosed by the cytoplasmic membrane. The radius of this is typically 1.1 to 1.5 times less than the microscopically observed cell radius.

The BioPAT[®] ViaMass therefore provides the means to:

- Measure C at chosen frequencies in the range 0.05 20 MHz
- Correct these for the background prior to inoculation or during the fermentation
- Output the data in a user defined unit like mg/ml after calibration against the method chosen by the user (e.g. cell dry weight)

11.3 Conductivity

The energy in the exciting electrical field can only be stored (as C) or dissipated (as G). For fundamental reasons therefore, any increase in C must be accompanied by a decrease in G. The measuring principle exploited in the BioPAT[®] ViaMass also provides the user with a measurement of the electrical conductance of the cell suspension and will be frequency-dependent, increasing with frequency. Because the cells take up a certain volume fraction, the "low-frequency" conductivity σ'_L of the suspension will be lower than that of the suspending medium (σ'_o)by an amount that depends upon the cellular volume fraction *P*, according to:

(6)
$$\sigma'_L = \sigma'_o \frac{1-P}{1+(P/2)}$$

The conductivity of a fermenter medium may not be constant as it depends upon the uptake, production and excretion of charged metabolites. The conductance signal itself may provide useful information about the metabolic state of the fermenter, an area of study that is at present relatively unexplored. Changes in σ'_o will also affect the characteristic frequency but, under the conditions used, little effect is likely upon the value of ε' (for constant biomass) as measured at a suitable constant frequency. In some situations, using the 'Dual Frequency' measurement mode reduces undesirable variation in the derived biomass signal due to f_c changes.

The BioPAT[®] ViaMass will accurately measure capacitance in media with conductivity up to 40 mS/cm. Values up to 80 mS/cm require a different probe (also providing up to 800 pF/cm capacitance range) and this can be supplied if required.

Sartorius Stedim Biotech GmbH August-Spindler-Strasse 11 37079 Goettingen

Phone +49.551.308.0 Fax +49.551.308.3289 www.sartorius-stedim.com

Copyright by

Sartorius Stedim Biotech GmbH, Goettingen, Germany. No part of this publication may be reprinted or translated in any form or by any means without prior written permission from Sartorius. All rights reserved by Sartorius in accordance with copyright law. The information and figures contained in these instructions correspond to the version date specified below. Sartorius reserves the right to make changes to the technology, features, specifications, and design of the equipment without notice.

Date: October 2014, Sartorius Stedim Biotech GmbH, Goettingen, Germany