

SCH-A950 Series

P O R T A B L E A l l D i g i t a l
T E L E P H O N E

User Guide

Please read this manual before operating your phone, and keep it for future reference.



Intellectual Property

All Intellectual Property, as defined below, owned by or which is otherwise the property of Samsung or its respective suppliers relating to the SAMSUNG Phone, including but not limited to, accessories, parts, or software relating thereto (the "Phone System"), is proprietary to Samsung and protected under federal laws, state laws, and international treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) modify, prepare derivative works of, reverse engineer, decompile, disassemble, or otherwise attempt to create source code from the software. No title to or ownership in the Intellectual Property is transferred to you. All applicable rights of the Intellectual Property shall remain with SAMSUNG and its suppliers.

© 2006 Samsung Electronics Canada Inc. Samsung is a registered trademark of Samsung Electronics Co. Ltd. and its related entities.

Licensed by Qualcomm Incorporated under one or more of the following patents: U.S. Patent No. 4, 901, 307; 5, 056, 109; 5, 099, 204; 5, 101, 501; 5, 103, 459; 5, 107, 225; 5, 109, 390.

Printed in South Korea

Openwave[®] is a registered Trademark of Openwave, Inc.

RSA[®] is a registered Trademark RSA Security, Inc.

The Bluetooth[®] word mark and logos are owned by the Bluetooth SIG, Inc.

The privacy and copyright laws of Canada govern the disclosure, reproduction and distribution of data, media and other content, including music and video content. Certain activities, including downloads or transfer by any means (including, via cable, Bluetooth[®] or otherwise) of such content may be an infringement of privacy or copyright law. Neither Samsung Electronics Canada Inc. nor any of its affiliates shall be liable or responsible for any data or content disclosed, reproduced, downloaded or distributed by the user of this equipment.

Disclaimer of Warranties; Exclusion of Liability

EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED ON THE WARRANTY PAGE ENCLOSED WITH THE PRODUCT, THE PURCHASER TAKES THE PRODUCT "AS IS", AND SAMSUNG MAKES NO EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE; THE DESIGN, CONDITION OR QUALITY OF THE PRODUCT; THE PERFORMANCE OF THE PRODUCT; THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO. NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE OR USE OF THE PRODUCT OR ARISING FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS.

Table of Contents

Important Safety Precautions	1
Your Phone	3
Closed View of Phone	4
Front View of Your Phone	6
Understanding the Display Screens	9
Screen Icons	10
Camera/Camcorder Screen	12
Camera	13
Memory Card	13
Using Your Phone's Micro SD Memory Card	13
Inserting the Micro SD Memory Card	14
Removing the Micro SD Memory Card	14
Using the Micro SD Adapter	15
Getting Started	16
Installing and Charging the Battery	16
Turning Your Phone On and Off	18
Phone Basics	19
Displaying Your Phone Number	19
Making Calls	19
Making Regular Calls	19
Correcting the Number	19
Redial the Last Number	19
Calling Emergency Numbers	20
Adjusting the Volume	20
Dialing and Saving Phone Numbers With Pauses	20
Dialing From Contacts	21
Using One-Touch/Two-Touch Speed Dialing	21
Answering Calls	22
Answering Calls	22
Missed Call Notification	23
In-Call Options	23

Using the Menu Options	23
Making a 3-Way Call	24
Mute/Unmute	25
End-of-Call Options	25
Saving a Phone Number	25
Entering Text	26
Selecting a Character Input Mode	26
Entering Characters Using T9 Text Input	26
Entering Characters by Tapping the Keypad	27
Entering Numbers and Symbols	28
Using Caller ID	28
Responding to Call Waiting	29
Using Call Forwarding	29
Using the Speakerphone	30

Menu Functions 31

Contacts 39

Adding a New Entry	39
Adding a New Entry in Idle Mode	39
Adding a New Entry from the Contacts Menu	40
Finding, Editing or Dialing Contacts	40
Selecting a Ringer Type for an Entry	41
Selecting a Picture for an Entry	41
Groups	42
Assigning a Contact to a Group	42
Sending Messages to a Group	43
Group Options	43
Speed Dials	44
Create Speed Dial Entries	44
Edit Speed Dial Entries	45
Using Speed dial	45
My Name Card	45

Call History 47

Viewing Your Call History	47
Call History Options	48

Erase History	48
Call Timers	49
Messaging	50
Voice Mail	50
Setting Up Your Voice Mail	50
Voice Mail Notification	51
New Voice Mail Message Alerts	51
Retrieving Your Voice Mail Messages	52
Clearing the Message Icon	52
Text & Multimedia Messages	53
Create New	53
Inbox	58
Outbox/Sent	59
Templates	61
Drafts	61
Saved	62
Erase Messages	62
Settings	63
Memory Info	65
Web Alert	65
E-Mail	66
IM & Chat	66
Short Codes	66
Wireless Web	68
Launching the Browser	68
Navigating the Wireless Web	68
Soft Keys	68
Music & Media	71
Music	71
Configure Micro SD Card	71
Playing Music With External Buttons	71
Playing Music With TELUS Music Player	71
Creating A Play List	72
Selecting A Play List	72

Controlling Playback	72
Managing your Song Library	73
Ringtones	74
Wallpaper	74
Video	74
TV & Radio	75
Camera	75
Taking Pictures	75
Camera Options	77
Sending a Picture via Multimedia Messaging	78
Image Album	79
Settings	80
PictBridge Print	81
Camcorder	83
Taking Videos	83
Camcorder Options	84
Video Album	85
Settings	86
My Albums	87
Viewing External Memory	87

Shop	89
------------	----

Games	89
-------------	----

Tools & Apps	90
--------------------	----

New Tools	90
GPS Services	90
Calculator	91
Alarm Clock	91
Planner	92
Using Today Entries	93
Using Scheduler Entries	93
Using the Task List	95
Using Countdown List	96
Notepad	97
Adding a Note	97

Viewing a Note	97
Deleting a Note	97
Setting the Skin of a Note	98
World Clock	98
Voice Service	98
Activating Voice Recognition	98
Call	99
Lookup	101
Send Text	102
Go To	102
Check	102
Changing Voice Dial Sensitivity	103
Configuring Digit Dialing	103
Changing Voice Dial Prompts	104
Changing Voice Launch	105
Voice Memo	105
Recording Voice Memos	105
Recording Phone Call Conversations	106
Voice Memo Options	106
Bluetooth	107
Add New Device	107
Options	108
Other Applications	109

Phone Settings 110

Ringers	110
Voice Calls	110
Messages	111
Meeting / Silent Mode	112
Keypad	112
Volume	113
Alerts	114
Display	115
Changing the Banner	115
Changing the Wallpaper	116
Changing the Backlight Settings	116

Changing the Keypad Light Settings	117
Changing the Front Display Contrast	117
Changing the Time and Date Settings	118
Changing the Menu Style	118
Changing the Dialing Font	119
Games / Apps	120
Backlight	120
Volume	120
Notification	121
Bluetooth	121
GPS	122
Others	123
Configure Nav. Key Shortcuts	123
Call Setup	124
Language	126
TTY Mode	126
Key Guard	127
Data Setup	127
System	128
Phone Info	128
Memory Info	129
System	129
Security	130
Airplane Mode	131
Safety	132
Getting the Most Out of Your Reception	132
Caring for the Battery	137
Acknowledging Special Precautions and Industry Canada Notice	138
Information to User	138
Owner's Record	140
User Guide Proprietary Notice	140
Warranty	141
Index	144

Important Safety Precautions

Please read these guidelines before using your wireless phone. Failure to comply with them may be dangerous or illegal.

Road Safety at All Times

Do not use a hand-held phone while driving; park the vehicle first.

Switching Off When Refueling

Do not use the phone at a refueling point (service station) or near fuels or chemicals.

Switching Off in an Aircraft

Wireless phones can cause interference. Using them in an aircraft is both illegal and dangerous.

Switching Off in Hospitals

Switch your phone off near medical equipment. Follow any regulations or rules in force.

Interference

All wireless phones may be subject to interference, which could affect their performance.


Special Regulations

Follow any special regulations in force in any area and always switch your phone off whenever it is forbidden to use it, or when it may cause interference or danger (in a hospital, for example).

Sensible Use

Only use the phone in the normal position (held to the ear). Avoid unnecessary contact with the antenna when the phone is switched on.

Emergency Call

Ensure the phone is switched on and in-service. Key in the emergency number for your present location, then press the  key. Give all the necessary information as accurately as possible. Do not end the call until given permission to do so.

Water Resistance

Your phone is not water-resistant. Keep it dry.

Accessories and Batteries

Use only Samsung-approved accessories and batteries. Use of any unauthorized accessories could damage your phone and may be dangerous.

Qualified Service

Only qualified service personnel may repair your phone. For more detailed safety information, see "Safety" on page 132.

Your Phone

Congratulations on the purchase of your Samsung SCH-a950 phone. This phone is lightweight, easy-to-use, reliable, and offers many exciting features and service options:

- Mobile Browser™ provides access to the wireless Internet. See "Launching the Browser" on page 68.
- MP3 player with external stereo speakers
- 1.3 Mega Pixel camera with camcorder
- Voice recognition technology for voice-activated dialing and other commands
- Global positioning (GPS) technology for use with emergency and other services (where supported)
- Messaging provides quick and convenient text (SMS) and multimedia (MMS) messaging capabilities. See "Messaging" on page 50.
- E-mail, instant messaging, and chat capabilities
- Downloadable games, music, videos, ringtones, wallpapers, and applications
- A built-in organizer and other useful personal management applications. See "Tools & Apps" on page 90.
- Micro SD memory card slot for additional storage.
- Bluetooth® wireless technology.

Closed View of Phone

Your phone has many features that can be accessed while the phone is closed.




1. **Camera Lens:** The lens of your built-in camera/camcorder.
2. **Flash:** The built-in flash has manual and automatic capabilities.
3. **External Display:** Displays time and date information, incoming calls or messages, and music information.
4. **Jog Dial:** Song selection key.
5. **Rewind Key:** Rewind current song.
6. **Play/Pause Key:** Play or pause music playback.
7. **Stop Key:** Stop music playback
8. **Fast Forward Key:** Fast forward current song.

9. **Micro SD Memory Card Slot:** This expansion slot allows you to insert a Micro SD memory card to add additional memory and storage capacity for your music, video and photos.
10. **Camera/Camcorder Key:** This button is used to launch the integrated digital camera:
 - In idle mode, press to activate the **Camera** menu.
 - In idle mode, press and hold starts the camera's preview mode.
 - When the phone is closed, press and hold to start the camera's preview mode.
11. **Service Light:** Turns red when the battery is being recharged and turns green when the battery has finished recharging. The light also flashing red when you have an incoming call and green when you have a message waiting.
12. **Speaker:** The stereo speakers play music, ringtones, and sounds when headphones are not connected.

Front View of Your Phone



1. **Earpiece:** The earpiece allows you to hear the other caller.
2. **Display Screen:** This screen displays all the information you need to operate your phone.
3. **Headset Jack:** Allows you to plug in an optional headset for safe, convenient hands-free conversations, as well as to listen to your MP3 music.

4. **Volume Key:** Allows you to adjust the ringer volume in idle mode (with the phone open) or adjust the voice volume during a call. The volume key can also be used to scroll up or down to navigate through the different menu options. To mute the ringer during an incoming call, press the volume key up or down.
5. **Left Soft Key:** This key can be used in several different ways.
 - In idle mode, press to access the **Menu**.
 - When using other features, such as the Web Browser, the left soft key performs a context-sensitive action. This action is shown in the bottom-left corner of the Display Screen.
6. **Right Soft Key:** This key can be used in several different ways.
 - In idle mode, press to access your **Contacts**.
 - When using other features, such as the Web Browser, the right soft key performs a context-sensitive action. This action is shown in the bottom right corner of the Display Screen.
7. **OK Key:** Press  when navigating through a menu accepts the highlighted choice in the menu. In idle mode, press and hold the key to launch your Web Browser.
8. **Navigation Keys:** These keys allows you to scroll through the phone menu options and provides a shortcut to phone functions when in idle mode.
9. **SEND Key:** This key can be used in several different ways.
 - Allows you to place or receive a call.
 - In idle mode, press the key once to access the Dialed call log.
10. **Numeric Keypad:** Use these keys to enter numbers, letters, and characters.

7 Your Phone

 
11. **Shift/Asterisk Key:** This key can be used in several different ways.
 - Enters the asterisk [*] character for calling features.
 - In text entry mode, press the key to switch between letter cases when using the input type Alpha (ABC, Abc, abc) or T9 (T9WORD, T9word, T9Word).
 - In idle mode, press and hold to switch your handset to Manner Mode (silent mode with vibration).
12. **Power/Accessory Interface Connector:** The Power/Accessory Interface Connector is used to plug in a travel adaptor, or any available accessory to your phone.
13. **Microphone:** The microphone allows other callers to hear you clearly when you are speaking to them.
14. **Space/Pound Key:** This key can be used in several different ways.
 - Enters the pound [#] character for calling features.
 - In text entry mode, press to enter a space.
 - In idle mode, press and hold to switch your handset to Lock Mode (disables all outgoing calls except for emergency, 911).
15. **BACK Key:** Deletes characters from the display when you are in text entry mode. When in a menu, press to return to the previous menu.
16. **Speakerphone Key:** In idle mode, press and hold this key to say a voice command.
17. **END Key:** This key can be used in several different ways.
 - During a call, press this key to end the call.

- When you receive an incoming call, press this key to reject the call.
- When the phone is off or in idle mode, press and hold this key for a few seconds to turn your phone On or Off.
- When in the main menu, press to return the phone to idle mode and cancel your input.

Understanding the Display Screens

Your phone's display screens provide a wealth of information about your phone's status and options. When the phone is closed, the exterior display screen is dimmed. To illuminate the exterior display screen, press any of the side or front keys.

The interior screen has three areas:

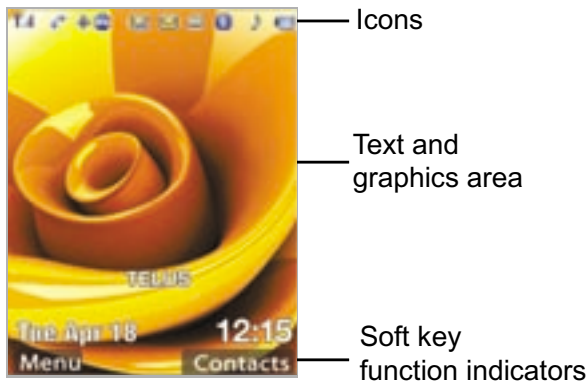

Area	Description
Icons	Displays various icons.
Text and graphics area	Displays messages, instructions and any information that you enter, such as the number you are dialing.

Area	Description
Soft key function indicators	Shows the current functions assigned to the two soft keys.

Screen Icons

This list identifies the symbols you'll see on your phone's display screens:



Shows your current signal strength. The more bars you have, the stronger the signal.



Indicates that there is no service, as your phone cannot find a signal.



Indicates that your phone is in roaming mode.



Indicates that a call is in progress.



Indicates that a data transfer is in progress



Indicates that data is being sent.



Indicates that data is being received.



Indicates that a circuit data transfer is occurring.



Indicates that the phone is in data dormant mode.



Indicates that an alarm is set on your phone.



Indicates that the speaker is enabled.



Indicates that GPS is on and your location is known in the network.



Appears when your phone is receiving digital (non-3G) service.



Appears when your phone is receiving 1X digital service.



Appears when your phone is receiving EV-D0 service.



Appears when the ringer of your phone is turned on



Appears when the ringer of your phone is turned off.



Appears when your phone is in vibration only mode.



Appears when only the ringer is set to vibrate.



Appears when the ringer in High+Vib mode.



Appears when the phone is in meeting mode (no sound and no vibration).



Indicates that you have new voice mail messages waiting.



Indicates that you have new WAP messages waiting.



Indicates that you have new WAP and voice messages waiting.



Indicates that you have new SMS text messages waiting.



Indicates that you have new MMS messages waiting.



Indicates that you have new SMS + MMS messages waiting.



Indicates that a Micro SD memory card has been inserted into the phone.



Appears when Bluetooth® wireless technology is enabled.



Appears when a Bluetooth® device is connected.



Appears when the phone is in secure mode.



Indicates that the music player is currently being used.



Shows the level of your battery. The more bars you have, the more power you have remaining.



Indicates that the battery is low and needs to be recharged.

Camera/Camcorder Screen

This list identifies the symbols you'll see on your phone's interior display screen when in camera/camcorder mode:



Indicates that the camera's flash is on.



Indicates that the camera's timer is on.



Indicates that the white balance has been set to Auto. This is used for taking pictures indoors or outdoors under normal conditions.



Indicates that the white balance has been set to Sunny. This is used for taking pictures outdoors on bright sunny days.



Indicates that the white balance has been set to Cloudy. This is used for taking pictures outdoors under cloudy conditions.



Indicates that the white balance has been set to Tungsten. This is used for taking pictures indoors under normal lighting conditions.



Indicates that the white balance has been set to Fluorescent. This is used for taking pictures indoors under fluorescent lighting conditions.



Indicates that the white balance has been set to Manual. This is used for taking pictures indoors or outdoors using your own custom settings.



Indicates that the phone is in camera mode and will take still pictures.



Indicates that the phone is in camcorder mode and will record video.

Camera

The camera on the front of your phone allows you to take a photo or record a video while on the move. For further details, see "Camera" on page 75.

Memory Card

Your phone allows you to use a Micro SD memory card and an adapter to expand the phone's available memory space. This digital card makes it easy to exchange images, music, and voice data quickly between SD-compatible devices.

Using Your Phone's Micro SD Memory Card

Your phone is equipped with a Micro SD memory (Secure Digital) memory card to expand the phone's available memory space. It allows you to easily store images, videos, music files, and voice data in your phone.

Note: Before you can copy files to the memory card from your PC, you must first insert it into the phone. The phone will format the card for you and create the necessary file folders. The card is formatted with a FAT32 file system that can be read by most computers.

Inserting the Micro SD Memory Card

To insert the Micro SD memory card into your phone:

1. Open the memory card access panel located on the bottom-right side of the phone.
2. Position the Micro SD memory card perpendicular to the opening and gently slide it into place until it is fully inserted and locked.

Note: Be sure to use only recommended memory cards (8 MB–512 MB). Using non-recommended memory cards could cause data loss or damage your phone.

Note: Make sure your battery is fully charged before using the Micro SD memory card. Your data may become damaged or unusable if the battery runs out while reading or writing to the card.

Removing the Micro SD Memory Card

To remove the Micro SD memory card from your phone:

1. Open the memory card access panel located on the bottom-right side of the phone.
2. Eject the card by pushing in and then releasing.
3. Pull the memory card out of the handset.

Warning: DO NOT remove a memory card while files are being accessed or transferred. It could result in loss or damage of data.

Note: If you remove your memory card, the location to save images will automatically default back to the Phone.

Using the Micro SD Adapter

The supplied Micro SD memory adapter allows Micro SD memory cards to be used in SD-compatible devices. Before using with a reader, you will need to insert the Micro SD memory card into the Micro SD memory adapter:

1. With the label side of the Micro SD memory card facing up, insert the card into the supplied Micro SD memory adapter and gently slide the card until it is fully inserted.
2. To remove the Micro SD memory card from the memory adapter:
3. Hold the front edge of the Micro SD memory card and gently pull outward to remove it from the adapter.

Getting Started

Installing and Charging the Battery

Your phone is equipped with a Lithium Ion (Lilon) battery. It allows you to recharge your battery before it is fully drained. When the battery is weak and only a few minutes of talk time remain, a warning tone sounds and a message repeats at regular intervals on the display. If this happens, the display dims to conserve the remaining battery power. When the battery level becomes too low, the phone automatically turns off.

Check the battery indicator icon periodically and recharge as needed to make sure the phone has enough battery power when needed.

 
Important: The battery must be fully charged before you use the phone, otherwise you could damage the battery.

Note: Long backlight settings, searching for service, vibration mode, playing games, camera and browser usage affect the battery's talk and standby times.

Tip: Be sure to watch your phone's battery level indicator and charge the battery before it runs out of power. You can use the phone while the battery is charging, but this causes the phone to charge more slowly.

 
Installing the Battery

1. Insert the bottom end of the battery into the phone housing with the label side down. The gold contacts on the end of the battery should match up with those on the phone.
2. Push the top end of the battery down until it snaps into place.

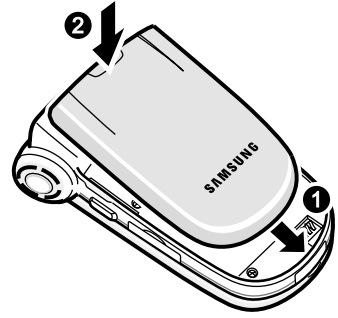



Removing the Battery

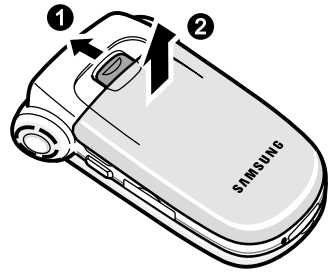1. Make sure the power is off so that you don't lose any stored numbers or messages.
2. Pull the battery release latch toward the top of the phone. The top of the battery should pop up.
3. Use your finger to lift the battery (top end first) up and away from the phone.

 


Charging the Battery with the Travel Adapter

Your phone is powered by a rechargeable standard Li-ion battery. Only use Samsung-approved charging devices and batteries. Samsung accessories are designed to maximize battery life. Using other accessories may invalidate your warranty and may cause damage.


The  icon indicates that the battery is full. If the battery charge is getting too low, the battery icon  blinks and the phone sounds a warning tone.

Warning! Using the wrong battery charger could cause damage to your phone and void the warranty.

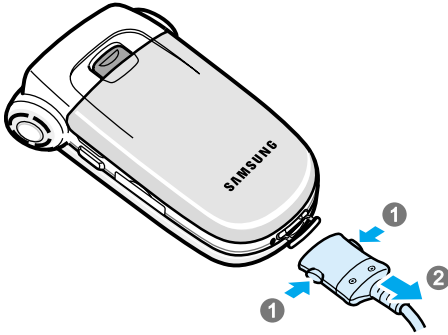


1. Make sure the power is off so that you don't lose any stored numbers or messages.
2. Plug the large end of the travel adapter into a standard 120/220 VAC wall outlet.
3. Insert the smaller end of the adapter into the charger/ accessory connector at the bottom end of the phone.

Turning Your Phone On and Off




1. Open the phone.
2. Press and hold the  key until the phone switches on. Once your phone is On, it displays "Looking for Service". When your phone finds a signal, it automatically enters idle mode. At this point, you are ready to begin making and receiving calls.

If your phone is unable to find a signal after 15 minutes of searching, the phone enters Power Save mode and periodically searches for a signal. When a signal is found, your phone automatically returns to idle mode.

3. To turn your phone off, Press and hold the  key until you see the powering down animation on the display screen.



Phone Basics


Displaying Your Phone Number

In case you forget your phone number, your phone can remind you. To display your phone number, Press the left soft key  for **Menu**, followed by  . Your My Name Card is displayed with your phone number.



Making Calls

Making Regular Calls


From the idle screen, enter the phone number and press the  key. To end the call, press the  key or close the phone.

Note: If the speakerphone is used together with a connecting headset, closing the phone flip cover does not end a call. Instead, press the  key.





Correcting the Number

To clear	Press the
the last digit displayed	 key.
the whole display	 key and hold it.

Redial the Last Number

To redial your last outgoing call, press  twice. See "Call History" on page 47 for further information.

Calling Emergency Numbers

You can place calls to 911 (dial    and press ), even if your phone is locked or your account is restricted.


Adjusting the Volume

During a call, if you want to adjust the earpiece volume, use the Volume keys on the left side of the phone.

- Press the ▲ key to increase the volume level and the ▼ key to decrease the level.
- In idle mode, you can also adjust the ringer volume using these keys.




Dialing and Saving Phone Numbers With Pauses


You can dial or save phone numbers with pauses for use with automated systems, such as Voice Mail or credit card billing numbers. There are two types of pauses available on your phone:

- **Hard pause** sends the next set of numbers when you press .
- **Time Pause** automatically sends the next set of numbers after two seconds.


Note: You can have multiple pauses in a phone number and combine 2-second and hard pauses.


To dial or save phone numbers with pauses:

1. Enter a phone number from idle mode.
2. Press right soft key  for **Options** and select  for **Hard Pause** or  **Time Pause** for a 2-second pause.
3. Enter additional numbers.

4. Press  to dial the number.



— or —


Press right soft key  to **Options** and select **Save** to save the number in your internal Contacts.

- When dialing a number with a hard pause, press  to send the next set of numbers.

Dialing From Contacts

To dial directly from a Contacts entry:

1. Press the right soft key  to display your **Contacts**.
2. Scroll up or down to highlight the desired entry and press  to make the call.

Tip: If the desired entry contains more than one phone number, scroll up or down to display the number you wish to call and press  to make the call.

Using One-Touch/Two-Touch Speed Dialing


You can store up to 98 numbers in your phone's speed dial memory to make contacting friends and family as easy as pressing a few buttons. With this feature, you can dial Speed Dial entries using one key press for locations 2-9 and two key presses for locations 10-99. To use One-Touch Dialing for Speed Dial locations 2-9:

- Press and hold the appropriate key for approximately two seconds. (The display confirms that the number has been dialed when it shows the saved caller ID or number.)

To use Two-Touch Dialing for Speed Dial locations 10-99:

1. Press the first digit.

2. Press and hold the second digit for approximately two seconds. (The display confirms that the number has been dialed when it shows the saved call ID or number.)

Note: Your phone also supports 1 to 4 digit dialing. If you enter a number using the keypad without holding the last number and then press , your phone will dial those digits.

For example, if you enter   and press , it dials 21, not the number stored in memory location 21.







Answering Calls

Your phone notifies you of incoming calls in the following ways:



- The phone rings and/or vibrates.
- The LED flashes.
- The backlight illuminates.
- The screen displays an incoming call message.

If the incoming call is from a number stored in your **Contacts**, the entry's name is displayed. The caller's phone number may also be displayed, if available.

Answering Calls



1. If necessary, open the phone.
2. Press the  key to answer the incoming call.
 - When the **Flip Open** option in the **Call Answer** menu is activated, you can answer a call by opening the phone (**Menu**    ).
3. To end the call, press the  key or close the phone.

The following options are also available to handle an incoming call:

- Press either of the side volume keys to quiet the ringer.
- Press the right soft key  or  key to **Ignore** the incoming call and send it directly to your Voice Mail box.


Missed Call Notification




When an incoming call is not answered, the Missed Call log is displayed on your screen. You have two options:






- Press the left soft key  to **Save** the phone number to your Contacts. See "Call History" on page 47 for further information.
- Press the right soft key  for **Detail** to view information about the missed call.

In-Call Options

Using the Menu Options






Select actions by pressing the right soft key  for **Options** during a call. A list of options is displayed that allows you to perform different actions during the course of a call. The following options are available:

-  **Key Mute** allows you to activate or deactivate DTMF tones. See "DTMF Length" on page 113 for more information.
-  **Contacts** accesses the Contacts menu options. See "Contacts" on page 39.
-  **Messaging** allows you to check for Voice Mail and notifications. See "Messaging" on page 50.


-  **3-Way Call** allows you to talk to two different people at the same time. See "Making a 3-Way Call" on page 24.
-  **Call History** checks your call log for Recent, Dialed, Received and Missed calls. You can also erase the logs and view call times from this menu. See "Call History" on page 47.
-  **Voice Memo** allows you to record the other person's conversation during a call. For more information, see "Voice Memo" on page 105.
-  **Tools & Apps** accesses the Tools & Apps menu options. See "Tools & Apps" on page 90.
-  **Phone Info** displays your phone's hardware and software versions. See "Phone Info" on page 128.

Making a 3-Way Call



With Three-Way Calling, you can talk to two people at the same time. When using this feature, the normal airtime rates will be charged for each of the two calls.

1. Enter a number you wish to call and press .
2. Once you have established the connection, press the right soft key  for **Options**, followed by  for **3-Way Call**.
3. Dial the second number and press .
4. When you're connected to the second party, press  again to begin your three-way call.


If one of the people you called hangs up during your call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all three callers are disconnected.

Tip: You can also begin a Three-Way Call by displaying a phone number stored in your Internal Contacts, Call History, or Messaging. To call the third party, press  .

Mute/UnMute

You can place the current call on hold by pressing the left soft key  for **Mute**. To reactivate your phone's microphone, press the left soft key  again for **UnMute**.

End-of-Call Options

After receiving a call from or making a call to a phone number that is not in your Contacts, the phone number and the duration of the call are displayed. Press the left soft key  to **Save** the number to your Contacts.

If the number is already in your Contacts, press the left soft key  to **Call** the number back.

Note: The End-of-Call options are not displayed for calls identified as Unknown ID or Restricted number.

Saving a Phone Number








Your phone can store up to 500 entries (numbers/e-mails/URLs) in seven categories (Home, Office, Mobile, Pager, Fax, Email1, Email2, Others). The Contacts capacity is based on number of entries, not on number of contacts. (For more information, see "Adding a New Entry" on page 39.)

Entering Text

Selecting a Character Input Mode


Your phone provides convenient ways to enter words, letters, punctuation, symbols, and numbers whenever you are prompted to enter text (for example, when adding a Contacts entry or when sending text messages).

To change the character input mode:

1. When you display a screen where you can enter text, press the right soft key  for **Options**.
2. Select a character input mode:
 -  **Alpha** to enter characters by tapping the keypad (see page 27).
 -  **T9(English)** to enter characters using predictive T9 Text Input (see page 26).
 -  **Symbols** to enter symbols (see page 28).
 -  **Number** to enter numbers (see page 28).
 -  **Quick text** to enter pre-defined sentences.
 -  **www** to enter common letter combinations in URLs (for example, www., .com, or http://).

Entering Characters Using T9 Text Input








T9 Text Input lets you enter text in your phone by pressing keys just once per letter. To select the **T9(English)** mode when entering text, see "Selecting a Character Input Mode" on page 26.

T9 Text Input analyzes the letters you enter using an intuitive word database and creates a suitable word. (The word may change as you type.) If the word you want does not display after you have entered all the letters, press  to scroll through additional word selections.

To accept a word and insert a space, press .



If you make a mistake, press  to erase a single character. Press and hold  to delete an entire entry.

To enter text using T9:






1. From the text entry screen (for example, a new event in scheduler), press the right soft key  for **Options** and select **T9(English)**.
2. Use your keypad to enter the new event. (For example, to enter "Meeting", press  once,  twice,  once,  once,  once, and  once.)

Entering Characters by Tapping the Keypad







To enter characters by tapping the keypad, select the Alpha mode (see "Selecting a Character Input Mode" on page 26). Press the corresponding key repeatedly until the desired character appears.

When the  icon is shown, the first letter of the first word is capitalized and following letters are lowercase. The  key can be used to select the case desired.

To enter text using Alpha:

1. From a text entry screen (for example, a Contacts entry), press the right soft key  for **Options** and select **Alpha**.
2. Use your keypad to enter the contact's name. (For example, to enter "Bill", press  twice,  three times,  three times, and  three times again.)

Characters scroll in the following order:

-  . , - ? ! ' @ : 1  P Q R S 7
-  A B C 2  T U V 8
-  D E F 3  W X Y Z 9

 
•  G H I 4

 0

•  J K L 5

 Space

•  M N O 6

 Change case

After a character is entered, the cursor automatically advances to the next space after two seconds or when you enter a character on a different key.

Entering Numbers and Symbols

To enter numbers:

- Select the **Number** mode and press the appropriate key. (See “Selecting a Character Input Mode” on page 26.)





To enter symbols:

- Select the **Symbol** mode. (See “Selecting a Character Input Mode” on page 26.) To enter a symbol, press the appropriate key displayed above the desired symbol character.

Using Caller ID

Caller ID allows people to identify a caller before answering the phone by displaying the number of the Received call. If you do not want your number displayed when you make a call, just follow these easy steps.

To block your phone number from being displayed for a specific outgoing call:


1. Press   .
2. Enter the number you want to call.
3. Press .

To permanently block your number, call the Customer Service department of your network service provider.

Responding to Call Waiting

When you're on a call, Call Waiting alerts you of incoming calls by sounding two beeps. Your phone's screen informs you that another call is coming in and displays the caller's phone number (if it is available and you are in digital mode).

To respond to an incoming call while you're on a call:

- Press . (This puts the first caller on hold and answers the second call.)

To switch back to the first caller:

- Press  again.

Do Not Disturb Mode

For those calls where you don't want to be interrupted, you can activate Do Not Disturb mode, which disables Call Waiting.

To activate Do Not Disturb Mode:

- Press  followed by    before placing your call.


To disable Do Not Disturb Mode:


- Press  followed by    before placing your call.

Using Call Forwarding

Call Forwarding lets you forward all your incoming calls to another phone number – even when your phone is turned off. You can continue to make calls from your phone when Call Forwarding is activated.

To Activate Call Forwarding

1. Press  followed by  .

2. Enter the area code and phone number to which your future calls should be forwarded.
3. Press . You will see a message and hear a tone to confirm the activation of Call Forwarding.

To Deactivate Call Forwarding

1. Press  followed by   .
2. Press . You will see a message and hear a tone to confirm the deactivation of Call Forwarding.

Note: You may be charged a higher rate for calls you have forwarded.

Using the Speakerphone

The speakerphone allows you to hear audio through the speaker and talk without holding your phone. When the speakerphone is activated, use the volume keys to adjust the sound level. To turn the speakerphone on or off during a call:

- Press .

Warning: Due to higher volume levels, do not place the phone near your ear during speakerphone use.

Menu Functions

The following list shows the menu structure available and indicates the number assigned to each option.

1: Contacts

- 1: List Entries
- 2: New Entry
- 3: Groups
 - 1: Family
 - 2: Friends
 - 3: Colleague
 - 4: VIPs
 - 5: Empty
- 4: Speed Dials
- 5: My Name Card

2: Call History

- 1: Recent Calls
 - Yes
 - No
- 2: Received Calls
 - Yes
 - No
- 3: Dialed Calls
 - Yes
 - No
- 4: Missed Calls
 - Yes
 - No

6: Call Timers

- 1: Last Call
- 2: Recent Calls
- 3: Lifetime
- 4: Data Transferred
- 5: Connection Time
- 6: Reset Timer

3: Messaging

- 1: Voice Mail
 - 1: Dial Voice Mail
 - 2: Clear Icon
- 2: Text and Multimedia
 - 1: Send New
 - 2: Inbox
 - 3: Outbox/Sent
 - 4: Templates
 - 5: Drafts
 - 6: Saved
 - 7: Erase Messages
 - 1: Inbox
 - 2: Outbox
 - 3: Drafts
 - 4: Saved
 - 5: Templates
 - 6: All Messages
- 8: Settings
 - 1: SMS Options
 - 1: CallBack Number
 - 2: Priority
 - Urgent
 - Normal
 - 3: Acknowledge
 - On
 - Off
 - 2: MMS Options
 - 1: Read Report
 - On

- Off
- 2: Delivery Report
 - On
 - Off
- 3: Priority
 - High
 - Normal
 - Low
- 4: Auto Download
 - On
 - Off
- 5: Rejection Settings
 - 1: By Size
 - Off
 - Over 150Kb
 - Over 100Kb
 - Over 50Kb
 - 2: Reject Adv.
 - On
 - Off
 - 3: MIN/Email
 - 1-5: Empty
- 3: Save to Outbox
 - Auto Save
 - Prompt
 - Do not Save
- 4: Auto Delete Inbox
 - On
 - Off
- 5: Default Entry Mode
 - T9 Word
 - Alpha
 - Number
- 6: Quick Text
 - 1: How are you?
 - 2: Hi there!
 - 3: Thanks!
- 4: I'll call you later.
- 5: On my way.
- 6: Busy right now.
- 7: Call me.
- 8: Running late, will be there soon.
- 9: Where are you?
- 10-20: [Empty]
- 7: Auto Scrolling
 - Off
 - 3 Seconds
 - 5 Seconds
 - 10 Seconds
- 8: Message Reminder
 - Off
 - Once
 - Every 2 min
 - 30 minutes
 - Always on
- 9: Alert on call
 - On
 - Off
- 9: Memory Info
- 3: Web Alert
- 4: E-Mail
 - Get New
 - Online E-Mail
- 5: IM & Chat
 - Get New
 - Online IM&CHAT
- 6: Short Codes
 - 1: Short code list
 - 2: Create template
- 4: Wireless Web**
- 5: Music & Media**
 - 1: Music
 - 1: TELUS Music Player

- 2: My Music List
- 2: Ringtones
 - Get New
- 3: Wallpaper
 - Get New
- 4: Video
 - Get New
- 5: TV & Radio
 - Get New
- 6: Camera
 - 1: Take Photo
 - 2: Image Album
 - 1: Photo Gallery
 - 2: MMS
 - 3: Transferred Images
 - 3: Settings
 - 1: Save To
 - In Phone
 - In Memory card
 - 2: View Mode
 - Landscape
 - Portrait
 - 4: PictBridge Print
- 7: Camcorder
 - 1: Take New
 - 2: Video Album
 - 1: Video Gallery
 - 2: MMS
 - 3: Transferred Videos
 - 3: Settings
 - 1: Save To
 - In Phone
 - In Memory card
- 8: My Albums
 - 1: Sound Album
 - 1: Sound Gallery
 - 2: MMS

- 3: Transferred Sounds
- 2: Image Album
 - 1: Photo Gallery
 - 2: MMS
 - 3: Transferred Images
- 3: Video Album
 - 1: Video Gallery
 - 2: MMS
 - 3: Transferred Videos
- 4: Online Album
- 5: External Memory
 - 1: Sounds
 - 2: Pictures
 - 3: Videos
 - 4: Music
 - 5: Memory Info

6: Shop

7: Games

- Get New

8: Tools & Apps

- 1: New Tools
- 2: GPS Services
 - Get New
- 3: Calculator
- 4: Alarm Clock
 - 1: Alarm #1
 - 2: Alarm #2
 - 3: Alarm #3
- 5: Planner
 - 1: Today
 - 2: Scheduler
 - 3: Task List
 - 4: Countdown
- 6: Notepad
- 7: World Clock
- 8: Voice Service
- 9: Voice Memo

- 0: Bluetooth
- *: Other Apps

9: Settings

1: Sounds

1: Ringers

1: Voice Calls

1: Caller ID

- Single Tones
 - Tone 1 to 9
- Ring Tones
 - Ring 1 to 10
- Melodies
 - 3D sound
 - Boardwalk
 - Serenade
 - Classic 1
 - Classic 2
 - Rock 1
 - Rock 2
 - Pop
 - Jazz
 - Blues
- Downloaded

2: Unknown calls

- See Caller ID for options

3: Roaming

- Normal
- Distinctive

2: Messages

1: Voicemail

- See Caller ID for options

2: Text and Multimedia

- See Caller ID for options

3: Wep-Alerts

- See Caller ID for options

3: Meeting / Silent Mode

- On
- Off

2: Keypad

1: Keypad Sound

- Ringer Off
- Level 1 to 8

2: DTMF Length

- Short
- Long

3: Tone Type

- Normal
- Rain Drop
- Xylophone

3: Volume

1: Ringer

- Ringer Off
- Vibrate
- 1-Beep
- Level 1 to 8
- High+Vib

2: Messages

- Ringer Off
- Vibrate
- 1-Beep
- Level 1 to 8
- High+Vib

3: Earpiece

- Level 1 to 8

4: Speaker

- Level 1 to 8

5: Power On/Off

- On
- Off

4: Alerts

- 1: Minute Beep
 - On
 - Off
- 2: Call Connect
 - On
 - Off
- 3: Call Lost
 - On
 - Off
- 4: No Service
 - On
 - Off
- 2: Display
 - 1: Banner
 - 1: Set
 - Off
 - Top
 - Bottom
 - 2: Edit
 - 2: Wallpaper
 - 1: Main Display
 - 1: Preset Images
 - 1: Image Gallery 01 to 10
 - 2: Downloads
 - 3: Photo Gallery
 - 2: Front Display
 - 1: Preset Images
 - 1: Analog 1
 - 2: Analog 2
 - 3: Digital 1
 - 4: Digital 2
 - 2: Main LCD Pic
 - 3: Backlight
 - 1: On
 - 3 Seconds
 - 7 Seconds
- 15 Seconds
- 30 Seconds
- Always On
- Always Off
- 2: Dim
 - 1 Minute
 - 2 Minutes
 - 5 Minutes
 - 10 Minutes
 - Always On
- 4: Keypad Light
 - 8 Seconds
 - 15 Seconds
 - 30 Seconds
 - Always Off
- 5: Front Display Contrast
 - Lowest
 - Low
 - Med
 - High
 - Highest
- 6: Time and Date
 - 1: Main Display
 - Digital Clock
 - Analog Clock
 - Off
 - 2: Front Display
 - Time & Date
 - Time Only
 - Off
 - 3: Display Mode
 - 12 hour
 - 24 hour
- 7: Menu Style
 - Icon
 - List
- 8: Dialing Font

- 1: Color
 - Basic
 - Rainbow
 - Monochrome
 - Hyphenate
- 2: Size
 - Normal
 - Large
- 3: Games / Apps
 - 1: Backlight
 - 8 Seconds
 - 15 Seconds
 - Always On
 - Always Off
 - 2: Volume
 - Ringer Off
 - Level 1 to 8
 - 3: Notification
 - 1: Voice Mail
 - On
 - Off
 - 2: SMS
 - On
 - Off
 - 3: MMS
 - On
 - Off
 - 4: Bluetooth
 - 1: Power
 - On
 - Off
 - 2: Discoverable Mode
 - On for 1 min
 - Off
 - 3: Device Name
 - 4: Device Info
 - 5: GPS

- 1: Status
 - On
 - Emergency Only
- 2: Privacy
 - By Permission
 - Restricted
 - Unrestricted
- 6: Others
 - 1: Nav. Key Shortcuts
 - 1: Left Nav Key
 - None
 - Contacts
 - Call History
 - Messaging
 - Voice Mail
 - Text and Multimedia
 - Inbox
 - Send New
 - Web
 - Music & Media
 - Music
 - My Albums
 - Calculator
 - Alarms
 - Planner
 - Voice Service
 - Voice Memo
 - Sounds
 - Display
 - Bluetooth
 - 2: Call Setup
 - 1: Restriction
 - 1: Dialed Calls
 - Allow All
 - Contacts Only
 - Special# Only
 - 2: Call Answer

- Send Key
- Any Key
- Flip Open
- 3: Auto Answer
 - 2 Seconds
 - 4 Seconds
 - 8 Seconds
 - Off
- 4: Auto Redial
 - On
 - Off
- 3: Language
 - 1: English
 - 2: Français
- 4: TTY Mode
 - Enable TTY
 - Disable TTY
- 5: Key Guard
 - Flip-closed
 - After 5 Seconds
 - Off
- 6: Data Setup
 - 1: Data/Fax
 - Off
 - Fax In Once
 - Fax in Always
 - Data in Once
 - Data in Always
 - 2: PC Connection
 - USB
 - Closed
 - 3: Do Not Disturb
 - On
 - Off
- 7: System
 - 1: Phone Info
 - 1: My Phone Number
 - 2: Software Version
 - 3: Hardware Version
 - 4: ESN
 - 5: PRL
 - 6: Browser Version
 - 7: Serving System
 - 8: Icon Glossary
- 2: Memory Info
 - 1: Total Usage
 - 2: Music & Media
 - 3: My Albums
 - 4: Games
 - 5: Tools & Apps
- 3: System
 - 1: Set Mode
 - Automatic
 - Home Only
 - 2: Set NAM
 - NAM 1
 - NAM 2
 - 3: Call Guard
 - On
 - Off
- 4: Security
 - 1: Lock Phone
 - Unlocked
 - On Power-Up
 - Lock Now
 - 2: Lock Camera
 - On
 - Off
 - 3: Lock Camcorder
 - On
 - Off
 - 4: Change Lock
 - 5: Special #
 - 911

- *911

- #911

6: Erase Contacts

- Yes

- No

7: Erase Downloads

- Yes

- No

8: Erase Image Album

- Yes

- No

9: Erase Sound Album

- Yes

- No

0: Erase Video Album

- Yes

- No

*: Reset Phone

- Yes

- No

8: Airplane Mode

- On

- Off






Contacts

The Contacts menu is used to store your phone numbers and other contact information (Mobile, Home, Office, Pager, Fax, E-mail1, E-mail2, and Other). You can store up to 500 entries.

Adding a New Entry




Adding a New Entry in Idle Mode

To add a new entry while in idle mode:

1. Enter a new phone number and press the right soft key  for **Options**.
2. Using the navigation keys, select **Save** and press .
3. Select the type of the number to be stored: **Mobile, Home, Office, Pager, Fax, E-mail1, or E-mail2**. To select the category, press the Up or Down navigation key and then press .
4. Enter a name and press the left soft key  for **Done**. For information about entering text, see "Entering Text" on page 26.
5. Press the Up or Down navigation keys to edit information in the other categories.
6. Press the left soft key  for **Done** to save the entry.





Adding a New Entry from the Contacts Menu


To add a new entry from the Contacts menu:

1. Press the left soft key  for **Menu**.
2. Press  for **Contacts**.
3. Press  for **New Entry**.
4. Enter the new contact information. See "Adding a New Entry in Idle Mode" on page 39.

Finding, Editing or Dialing Contacts





There are several ways to display your Contacts entries: by name or by entry. To find an entry from the Contacts menu:

1. Press the left soft key  for **Menu**.
2. Press  for **Contacts**.
3. Press  for **List Entries**. A list of all your Contacts is displayed. You can find a specific contact in one of the following ways:
 - Scroll through the list using the Up and Down navigation keys.
 - Enter the first few letters to locate the desired Contact. If more than one Contact appears, scroll through the list using the Up and Down navigation keys.
4. To call the Contact, press .

To edit the Contact, press the right soft key  for **Options**, and select **Edit**. See "Adding a New Entry" on page 39.


Selecting a Ringer Type for an Entry



You can assign a ringer type to a Contacts entry so you can identify the caller by the ringer type.

1. Display the edit screen for the Contact. See "Finding, Editing or Dialing Contacts" on page 40.
2. Press the navigation key down until **Default Ringer** is selected and press the right soft key  for **Edit**.
3. Using the navigation keys, select a ringer category and press .
4. Press the navigation key up or down to highlight and listen to the desired Ringer. Press  to select the desired ringer.
5. Press the left soft key  for **Done** to save the changes to the contact entry.

Selecting a Picture for an Entry

You can assign a picture to a Contacts entry so that it appears on the displays whenever that person phones you.

1. Display the edit screen for the Contact. See "Finding, Editing or Dialing Contacts" on page 40.
2. Press Up navigation key to select the picture and press the right soft key  for **Add**. (If a picture has already been assigned, the right soft key will say **Change**.)
3. Using the navigation keys, select one of the following options:
 - **No Image:** Leave the picture blank.
 - **New Picture:** Use the camera to take a new picture. See "Camera" on page 75.

- **Preset Images:** Assign a preset image of **People**, **Animal**, or **Other**. Select the image and then press the left soft key  for **Select**.
 - **Image Album:** Select an image from your **Photo Gallery**, **MMS**, or **Transferred Images**. See "Image Album" on page 79.
 - **Downloads:** Select an image from your downloaded images.
4. Press the left soft key  for **Done** to save the changes to the contact entry.

Groups





Assigning a Contact to a Group

You can associate a preset group name to your entries to help you sort them easier in the Contacts. Once contacts are organized into groups, you can send text and multimedia messages to all members of a group simultaneously. Additionally, you can assign a unique Picture ID or ringtone to the group.

The preset group names already programmed into your phone are:

- **Family**
- **Friends**
- **Colleague**
- **VIPs**
- **Empty**



To associate an existing number located in your Contacts:

1. Press the left soft key  for **Menu**.
2. Press  for **Contacts**.
3. Press  for **Groups**.
4. Select the desired Group and press .

If no previous Contacts have been added to the group, the







message “No Group Entries. Add new entry?” is displayed.
Select **Yes**.

If previous Contacts have been added, press the right soft key  for **Options** and select **Add New Group**.

5. To add a contact to the group, highlight the desired contact and press  to check/uncheck the contact. Repeat for any additional contacts that you wish to add.
6. When you have finished, press the left soft key  for **Done**.

Sending Messages to a Group






You can send text messages to all the Contacts in a group:

1. Press the left soft key  for **Menu**.
2. Press  for **Contacts**.
3. Press  for **Groups**.
4. Highlight the desired group.
5. Press the left soft key  for **Send Msg**.
6. Highlight the desired contact and press  to check/uncheck the contact. Repeat for any additional contacts that you wish to add.
7. Press the left soft key  for **Next**.
8. Create the text message to send. See "Text & Multimedia Messages" on page 53.

Group Options

You can add and delete groups, as well as rename them:





1. Press the left soft key  for **Menu**.
2. Press  for **Contacts**.

3. Press  for **Groups**.
4. Highlight the desired group, if applicable.
5. Press the right soft key  for **Options**.
6. Select an option:
 - **Add New Group:** Enter the new group name and press the left soft key  for **Done**.
 - **Rename Group:** You can rename existing groups. Use the  key to delete the text. After entering the new name, press the left soft key  for **Done**.
 - **Erase Group:** You can only delete new groups you created, not the built-in ones.

Speed Dials

You can assign up to 98 phone numbers from the Contacts list that you use most frequently to the number keys (2 to 99). You can dial them easily whenever you want, simply by pressing and holding the associated number key.

Create Speed Dial Entries







1. Press the left soft key  for **Menu**.
2. Press  for **Contacts**.
3. Press  for **Speed Dials**. A list of current speed dials is displayed.
4. Using the navigation keys, select a number and press the left soft key  for **Assign**.

Note: Memory location 1 is reserved for your Voice Mail server number.

5. Select an entry from the list and press the left soft key  or  for **Assign**.

Edit Speed Dial Entries

To edit the number:




1. Press the left soft key  for **Menu**.
2. Press  for **Contacts**.
3. Press  for **Speed Dials**.
4. Using the navigation keys, select a number.
5. Select an option:
 - To replace the number with another one, press the left soft key  for **Edit**.
 - To erase the number, press the right soft key  for **Options** and select **Erase**.
 - To erase all the numbers, press the right soft key  for **Options** and select **Erase All**.


Using Speed dial

In idle mode, to speed dial the numbers assigned to the 2 to 99 keys, press and hold the appropriate key. See page 21 for information.

My Name Card

This function is similar to an entry in the Phone Book, except that it contains your contact information, like a business card. You can transfer it to another Bluetooth-enabled device.


1. Press the left soft key  for **Menu**.
2. Press  for **Contacts**.
3. Press  for **My Name Card**.

4. Press the right soft key  for **Options** and select **Send Name Card**. See "Send Name Card: This option lets you send a Name Card from your Contacts list to another device. See "Contacts" on page 39 for information." on page 108.

Call History










With Call History, you can:

- View calls you missed, received, or dialed
- View the length of calls made and received

Note: You can access the most recent numbers in the three types of call records by pressing the  key while in idle mode. Press the Left and Right navigation keys to switch between the different types of calls.


Viewing Your Call History

To view a Call History entry:


1. Press the left soft key  for **Menu**.
2. Press  for **Call History**.
3. Select an option:
 -  **Recent Calls:** View your most recent calls.
 -  **Received Calls:** View your received calls
 -  **Dialed Calls:** View your dialed calls.
 -  **Missed Calls:** View the calls you missed.
 -  **Erase History:** Delete your call history.
 -  **Call Timers:** View the time you spent on the phone. See "Call Timers" on page 49.
4. To call a number, highlight the number and press .


Note: You cannot make calls from Call History to entries identified as Unknown or Restricted.

Call History Options

For additional information on a particular call, highlight a Call History entry and press . The time and date of the call is displayed.






Tip: You can also scroll between Call History categories by pressing the navigation key left or right.



Press the right soft key  for **Options** to select one of the following options for this entry. Depending on the Call History category, not all options may be available.


- **Send Msg:** Send a **Message** or **Postcard** (a picture taken with your camera) to the person. See "Messaging" on page 50.
- **Save:** Save the number to your Contacts as a **New Entry** or **Existing Entry**. See "Contacts" on page 39. You cannot save phone numbers already in your Internal Contacts or from calls identified as Unknown ID or Restricted.
- **Prepend:** Add numbers before the phone number. This is useful if you need to make a call from Call History and you happen to be outside your local area code. You can then dial the new number by pressing the left soft key  for **Call**.
- **Erase:** Remove the number from your Call History.

Erase History

You can use the Erase History menu to delete your call records.












1. Press the left soft key  for **Menu**.
2. Press  for **Call History**.
3. Press  for **Erase History** and select an option:
 -  **Recent Calls:** Delete your most recent calls.
 -  **Received Calls:** Delete your received calls

-  **Dialed Calls:** Delete your dialed calls.
-  **Missed Calls:** Delete the calls you missed.

4. Confirm the deletion: select **Yes** and press .

Call Timers

Call Timers allows you to check the time of the last call or the total air time since your phone was activated on the network. **These times are not meant for billing purposes.**

1. Press the left soft key  for **Menu**.
2. Press  for **Call History**.
3. Press  for **Call Timers**.
4. Select an option:
 -  **Last Call:** Length of the last call.
 -  **Recent Calls:** Length of all the recent calls.
 -  **Lifetime:** Total length of all the calls since the timer was last reset.
 -  **Data Transferred:** The amount of data transferred on your phone.
 -  **Connection Time:** The connection time of your data session.
 -  **Reset Timers:** Reset all the timers. Select **Yes** or **No** and press ,
5. Press the  key to return to the idle screen.

Messaging


You can send and receive a range of different message types from your phone. Your phone has the following messaging options:

- **Voice Mail:** Allows you to access your voice mailbox and check for voice messages.
- **Text and Multimedia:** Allows you to compose and send text and multimedia messages to other phones able to receive the messages.
- **Web Alert:** Allows you to view specific Web alerts from your service provider
- **E-Mail:** Allows you to access your E-mail messages.
- **IM & Chat:** Allows you send and receive messages to and from popular Instant Messaging services and chat.
- **Short Codes:** Allows you to view specific information and links from your service provider.

Voice Mail

Setting Up Your Voice Mail


All unanswered calls to your phone are automatically transferred to your voice mail, even if your phone is in use or turned off. Therefore, you will want to set up your voice mail and personal greeting as soon as your phone is activated.

1. Press and hold the  key.
2. Follow the system prompts to create your passcode, record your greeting, and record your name announcement.

Note: You must request this feature from your service provider for it to work correctly.

Voice Mail Notification



There are several ways your phone alerts you of a new message:

- By displaying a message on the screen.
- By sounding the assigned ringer type.
- By the LED blinking red.
- By displaying  at the top of your screen.

New Voice Mail Message Alerts

When you receive a new voice message, your phone alerts you and prompts you to call your voice mail.

To call your voice mail immediately after a message is received:

1. Press the  key to listen to the message.
2. Press the  key to return to the Idle screen.

Tip: You can also press and hold  to check your voice mail.

To display your Voice Mail:





- Press the left soft key  for **Menu**, followed by  
.

Important: When you are roaming off the network, you may not receive notification of new voice mail messages. It is recommended that you periodically check your voice mail by dialing 1 + area code + your Phone Number. You will be charged roaming rates when accessing voice mail while roaming off the network.

Note: Your phone accepts messages even when it is turned off. However, you are only notified of new messages when your phone is turned on and you are in a Service Area.

Retrieving Your Voice Mail Messages






To dial your voice mail from your phone, you can either speed dial your voice mail by pressing and holding the navigation key up or by using the menu keys.

1. Press the left soft key  for **Menu**.
2. Press  for **Messaging**.
3. Press  for **Voice Mail**.
4. Press  for **Dial Voice Mail**.

Note: You are charged for airtime minutes when you are accessing your voice mail from your phone.

Clearing the Message Icon

Your phone may temporarily continue to display the message icon after you have checked your voice messages. To clear the icon from the display screen:






1. Press the left soft key  for **Menu**.
2. Press  for **Messaging**.
3. Press  for **Voice Mail**.
4. Press  for **Clear Icon**.
5. Press the navigation key up to select **Yes** and press .

Text & Multimedia Messages




Create New


Using your phone you can send text and multimedia messages to other mobile phones in North America and rest of the world, depending on your carrier.




To send a message

1. Press the left soft key  for **Menu**.
2. Press  for **Messaging**.
3. Press  for **Text and Multimedia**.
4. Press  for **Send New**.
5. Enter the phone number or e-mail address. After entering the number or address, press . When you are finished entering numbers or addresses, press the left soft key  for **Next**.

Tip: To change text entry mode, press the right soft key  and select a text entry option. See "Selecting a Character Input Mode" on page 26.




- To send the message to one of your contacts, press the down navigation key to highlight **Contact List** and press . Highlight the desired contact and press the  key. When you are finished adding contacts, press the left soft key  for **Next**.
- If you wish to send your message to multiple numbers or addresses, repeat step 5. Use the navigation keys to move up and down your list of addressees. You can send a message to a maximum of 10 numbers.



6. Create your message using the keypad. For more information on entering text, see "Entering Text" on page 26. When you are finished creating your message, press the left soft key  for **Send**.

- To add a Subject line to your message, highlight the **Subject** box using the navigation keys. Enter the subject text. When you are finished press the left soft key  for **Done**.
- To write the body of your message, highlight the main body box using the navigation keys. Enter the text of the message. When you are finished press the left soft key  for **Done**.
- To send the message, press the left soft key  to **Send**.

To add a sound, picture, or video file to your message



You can add sound clips, pictures, or videos to your message.

1. From the message composition screen, highlight **More** using the navigation keys and press .
2. Highlight **Add Sound**, **Add Picture**, or **Add Video** using the navigation keys and press .
3. Select an option:
 - For audio files, select **Record New** or **Sound Album**.
 - If you selected **Record New**, you will be prompted to record a new voice memo. For more information on recording voice memos, see "Voice Memo" on page 105.
 - If you selected **Sound Album**, highlight the desired clip or voice memo and press .
 - For pictures, select **Take Picture** or **Image Album**.


- If you selected **Take Picture**, the camera will start. For more information, see "Taking Pictures" on page 75.
 - If you selected **Image Album**, highlight the desired clip or photograph and press .
 - For videos, select **Record Video** or **Video Album**.
 - If you selected **Record Video**, the camcorder will start. For more information, see "Camcorder" on page 83.
 - If you selected **Video Album**, highlight the desired clip and press .
4. The file is attached to your message. You can now finish composing and send your message.



To add a slide to your message

For lengthy messages, you can divide your message text among two slides. Each slide presents one screen of information. Each slide can contain its own sound and picture attachments.

1. From the message composition screen, highlight **More** using the navigation keys and press .
2. Highlight **Add Slide** using the navigation keys and press .
3. A new body box appears below the first box. You can move between the first and second slides using the Up and Down navigation keys. You can now finish composing and send your message.

To change the sending options of the message


1. From the message composition screen, highlight **More** using the navigation keys and press the right soft key  for **Options**.

2. If your message contains sounds, images or slides, then your message is an MMS message. Select  for **Sending Options**.
Otherwise, it is likely a SMS message. Select  for **Sending Options**.
3. Select the option you wish to change.

SMS Options






- **CallBack Number:** allows you to change the callback number for this message. The default callback number is your mobile phone number.
- **Priority:** allows you to change the priority of the message between **Normal** and **Urgent**.
- **Acknowledge:** allows you to turn Acknowledge **Off** or **On**.

MMS Options

- **Read Report:** allows you to turn Read Report **Off** or **On**. When On, you will be notified when your message is read by the message's recipient.
 - **Delivery Report:** allows you to turn Delivery Report **Off** or **On**. When On, you will be notified when your message is received by the message's recipient.
 - **Priority:** allows you to change the priority of the message between **High**, **Normal**, and **Low**.
 - **CC:** allows you to add a CC address to your message.
 - **BCC:** allows you to add a BCC address to your message.
 - **Slide Timing:** allows you set the duration (in seconds) of each slide.
4. When finished with your messaging options, press the  key to return to the message window.




To save your MMS message

You can save a draft of your message prior to sending it.

1. From the message composition screen, highlight **More** using the navigation keys and press the right soft key  for **Options**.
 - Press  for **Save To Drafts**. The message is now stored in your **Drafts** folder. Once the message is sent, the draft will be deleted.
 - Press  for **Save Text**. The text of your message is now stored as a **Quick Text** message.
 - Select  for **Save As Template**. Enter a name for the template and press . The message is now stored in your **Templates** folder. Unlike draft messages, templates are not deleted when sent.
2. You can now continue to compose or send your message.






To save your text message

You can save a draft of your message prior to sending it.


1. From the message composition screen, highlight **More** using the navigation keys and press the right soft key  for **Options**.
 - Press  for **Save To Drafts**. The message is now stored in your **Drafts** folder. Once the message is sent, the draft will be deleted.
 - Press  for **Save Text**. The text of your message is now stored as a **Quick Text** message.
2. You can now continue to compose or send your message.

Inbox

This folder contains all your received text and multimedia messages. From this folder, you can view your messages, reply to or forward the message to another destination.






1. Press the left soft key  for **Menu**.
2. Press  for **Messaging**.
3. Press  for **Text and Multimedia**.
4. Press  for **Inbox**. Your messages appear in a list.
5. Highlight the desired message and press . The message appears on screen.

To reply to a message:

1. While the message is open, select the left soft key  for **Reply**.
2. Compose your reply message. For more information, see "To send a message", beginning at step 6.

Note: The address field is already filled in when replying to a message.

To select Inbox options





1. Press the left soft key  for **Menu**.
2. Press  for **Messaging**.
3. Press  for **Text and Multimedia**.
4. Press  for **Inbox**. Your messages appear in a list.
5. Press the right soft key  for **Options**.
 - **Reply with Copy** (SMS) or **Reply to all** (MMS): allows to reply to the sender of the message with the messaged copied into your reply.

- **Forward:** allows you to forward a copy of the message to another person.
- **Move to Saved:** allows you to move the message to the Saved list.
- **Save Address:** allows you to save an address in your Contacts list.
- **Message Details:** allows you to view information about the message, such as date and time.
- **Erase:** allows you to delete the message.
- **Erase Multiple:** allows you to select and delete several messages.
- **Erase All:** allows you to delete all the messages in the list.


Outbox/Sent

This folder contains all the messages you have sent or are waiting to send. From this folder, you can resend your messages.

To forward or resend your message




1. Press the left soft key  for **Menu**.
2. Press  for **Messaging**.
3. Press  for **Text and Multimedia**.
4. Press  for **Outbox/Sent**. Your messages appear in a list.
5. Highlight the desired message and select one of the following options:

If the message was successfully sent previously:




- To resend the message, press the left soft key  for **Re-send**. Your message will be sent to the same recipient.

- To forward the message to a new number, press the right soft key  for **Options** and press  to **Forward**. Enter a new number. See page 53 for information.

If the message failed to be sent previously:

- To forward the message to a new number, press the left soft key  for **Forward**. Enter a new number. See page 53 for information.
- To resend the message, press the right soft key  for **Options** and press  to **Resend**. Your message will be sent to the same recipient.






To select Outbox/Sent options

1. Press the left soft key  for **Menu**.
2. Press  for **Messaging**.
3. Press  for **Text and Multimedia**.
4. Press  for **Outbox/Sent**. Your messages appear in a list.
5. Press the right soft key  for **Options**.
 - **Resend** or **Forward**: allows you to send your message again.
 - **Move to Saved**: allows you to move the message to the Saved list.
 - **Save address**: allows you to save an address in your Contacts list.
 - **Message Details**: allows you to view information about the message, such as date and time.
 - **Message Status**: allows you to view the **Delivery Status** and **Read Status**.
 - **Erase**: allows you to delete the message.

- **Erase Multiple:** allows you to select and delete several messages.
- **Erase All:** allows you to delete all the messages in the list.






Templates

This folder contains predefined templates for multimedia messages. To compose a message using a template:

1. Press the left soft key  for **Menu**.
2. Press  for **Messaging**.
3. Press  for **Text and Multimedia**.
4. Press  for **Templates**. Your templates appear in a list.
5. Highlight the desired template and press .
6. Compose your message. For more information, see "To send a message", beginning at step 5 on page 53. You can modify the message as desired.

Drafts






This folder contains drafts of unfinished or unsent text and multimedia messages. From this folder, you can complete and send your messages.

1. Press the left soft key  for **Menu**.
2. Press  for **Messaging**.
3. Press  for **Text and Multimedia**.
4. Press  for **Drafts**. Your draft messages appear in a list.
5. Highlight the desired draft message and press .

- Complete your message. For more information, see "To send a message", beginning at step 6 on page 54. You can modify the draft message as desired.












Saved

This folder contains saved text and multimedia messages. Saved messages will not automatically expire and must be manually deleted.

- Press the left soft key  for **Menu**.
- Press  for **Messaging**.
- Press  for **Text and Multimedia**.
- Press  for **Saved**. Your saved messages appear in a list.
- Highlight the desired saved message and press .

Erase Messages





You can erase messages at anytime from the Inbox, Outbox/Send, Draft or Saved message folders. To erase the messages from the desired folder:

- Press the left soft key  for **Menu**.
- Press  for **Messaging**.
- Press  for **Text and Multimedia**.
- Press  for **Erase Messages**.
- Press  for **Inbox**,  for **Outbox**,  for **Drafts**, or  for **Saved**,  for **Templates**, or  for **All Messages**.
- Press the navigation key left or right to select **Yes** and press .

Settings

There are several options associated with messages. The Settings menu allows you to customize the options to fit your preferences.

To access the Settings menu:

1. Press the left soft key  for **Menu**.
2. Press  for **Messaging**.
3. Press  for **Text and Multimedia**.
4. Press  for **Settings**.

The following options are available:

SMS Options

- **Callback Number:** allows you to change the callback number for this message. The default callback number is your mobile phone number.
- **Priority:** allows you to change the priority of the message between **Normal** and **Urgent**.
- **Acknowledge:** allows you to turn Acknowledge **Off** or **On**. When **On**, this option allows you to have a return message sent back notifying you that the message was received and read by the recipient.

MMS Options

- **Read Report:** allows you to turn Read Receipt **Off** or **On**. When **On**, you will be notified when your message is read by the message's recipient.
- **Delivery Report:** allows you to turn Delivery Receipt **Off** or **On**. When **On**, you will be notified when your message is received by the message's recipient.

- **Priority:** allows you to change the priority of the message between **High**, **Normal**, and **Low**.
- **Auto Download:** allows you to turn Auto Downloading **Off** or **On**. When **On**, the attachments for multimedia messages will automatically be downloaded to your phone.
- **Rejection Settings:** allows you to adjust the Rejection settings for your phone. The options available are:
 - **By Size:** allows you to reject multimedia messages that over a specified size.
 - **Reject Adv.:** allows you to reject multimedia messages that are labeled as advertising (Adv.)
 - **MIN/Email:** allows you to reject multimedia messages sent from a specific phone number (MIN) or Email address.

Save to Outbox: allows you to adjust whether sent messages are saved in your Outbox. Your options are:

- **Auto Save:** automatically saves a copy of the outgoing message in the filed folder.
- **Prompt:** prompts you to save a copy of the outgoing message.
- **Do not Save:** does not save a copy of the outgoing message.



Auto Delete Inbox: allows you to adjust whether read messages are automatically deleted from your Inbox. Your options are **Off** or **On**.

Default Entry Mode: The Entry Method allows you to set the default character input method for new text messages. You can select between:


- **T9 Word:** is a predictive text entry mode

- **Alpha:** is the standard keypad text entry mode.
- **Number:** is the standard numeric entry mode.

Quick Text: Quick Text messages are used to enter common responses to questions. A Quick Text can be selected and automatically entered into the message. Quick Text can also be customized to whatever you want by editing the 9 pre-set messages already stored in your phone.


To edit a Quick Text message, highlight the desired Quick Text message and press . Edit the message and press the left soft key  for **Select** when finished.

Auto Scrolling: The scroll timer allows you to set the length of time a message takes to scroll across the screen. Options are **Off**, **3 Seconds**, **5 Seconds** or **10 Seconds**.

Message Reminder: This option allows you to configure how often you are notified of new text messages. Options are **Off**, **Once**, or **Every 2 min**. To select **30 minutes** or **Always on**, select **Every 2 min**, press , and then select a different option.




Alert on call: This option allows you to configure whether your phone alerts you to a new message during a phone call. Options are **Off** or **On**.

Memory Info

This menu displays how much memory is available for messages. Press the left soft key  for **Done** to return to the previous screen.




Web Alert

Your phone is capable of receiving web alerts from online providers. Consult with your Service Provider for more details.

1. Press the left soft key  for **Menu**.
2. Press  for **Messaging**.
3. Press  for **Web Alert**.
4. Follow the on-screen instructions.




E-Mail

Your phone is capable of accessing online e-mails. Consult with your Service Provider for more details.

1. Press the left soft key  for **Menu**.
2. Press  for **Messaging**.
3. Press  for **E-Mail**.
4. Select **Get New** or **Online E-Mail** and follow the on-screen instructions.

IM & Chat



Your phone is capable of engaging in online chat sessions. Consult with your service provider for more details.

1. Press the left soft key  for **Menu**.
2. Press  for **Messaging**.
3. Press  for **IM & Chat**.
4. Select **Get New** or **Online IM&CHAT** and follow the on-screen instructions.


Short Codes

Your phone is capable of access pre-configured short codes. Consult with your service provider for more details.

1. Press the left soft key  for **Menu**.

2. Press  for **Messaging**.
3. Press  for **Short Codes**.
4. Select **Short code list** and follow the on-screen instructions.

Wireless Web


Your phone comes equipped with Wireless Web access (**Menu** ) through your browser. You can view specially designed version of popular sites which includes sports, weather, news, stock quotes etc.... as well as downloadable ringtones, wallpapers and games. When you launch the browser, the phone will automatically connect to the Internet.

Note: Rates and pricing vary according to your service plan. Please contact your service provider for additional information.

Launching the Browser

To launch a web connection:

1. Press the left soft key  for **Menu**.
2. Press  for **Wireless Web**. You now are connected to your service provider's Web page.

Hint: In idle mode, launch the browser by pressing and holding the  key.


Navigating the Wireless Web

Navigating through menus and Web sites during a web session is easy once you've learned a few basics. Here are some tips for getting around:

Soft Keys

When browsing the Web, the bottom line of your phone's display contains one or more soft keys. These keys are shortcut controls for navigating around the Web, and they correspond to the soft key buttons directly below the phone's display screen. Depending on

which Web sites you visit, the labels on the soft keys may change to indicate their function.

To use soft keys, simply press the desired soft key button. If an additional pop-up menu appears when you press the soft key button, select the menu items using your keypad (if they're numbered) or by highlighting the option and pressing .


Scrolling

As with other parts of your phone's menu, you'll have to scroll up and down to see everything on some Web sites.

- Press the Up and Down navigation keys to scroll line by line or press the volume buttons on the side of the phone to scroll one page at a time.

Navigating Between Web Pages

Once you've learned how to use soft keys and scroll, you can start navigating Web sites.


- Select on-screen items by using the navigation key to highlight the desired item, then press the desired soft key button (or press .



You'll find that the left soft key  is used primarily for selecting items.

- If the items on a page are numbered, you can use your keypad (number keys) to select an item.

Links, which appear as underlined text, allow you to jump to different Web pages, select special functions, or even place phone calls.

- Select links by highlighting the link and then selecting the appropriate soft key.

Tip: The tenth item in a numbered list may be selected by pressing the  key on your phone's keypad, even though the number 0 doesn't appear on the screen.

- To go back one page, press  on your phone. (Note that  is also used to delete text.)

Music & Media

Music

The TELUS Music Player (**Menu**   ) can be used to play music you have downloaded from your service provider or loaded from your PC to your Micro SD memory card.

Note: The following characters cannot be used in the filename: / \ * ? " < > : | 9. The file name is limited to 47 total characters).

Configure Micro SD Card





Before you can play music, you must insert a blank Micro SD card into the memory slot. See "Memory Card" on page 13.

Playing Music With External Buttons

To quickly play your current playlist, press and hold the **Play** button on the outside of the phone. Use the following keys to control playback:










- **Jog Dial:** Song selection key.
- **Rewind Key:** Rewind current song.
- **Play/Pause Key:** Play or pause music playback.
- **Stop Key:** Stop music playback
- **Fast Forward Key:** Fast forward current song.

Playing Music With TELUS Music Player

1. Press **Menu**    to start the MP3 player.
2. Press  to play the current playlist.







Creating A Play List

You can use playlists to organize your music collection:

1. Press **Menu**    to start the MP3 player.
2. Press the right soft key  for **options** and select **scan for new songs**. Your phone scans your memory card.
3. Press the right soft key  for **options**.
4. Highlight **create new playlist** and press .
5. Using the navigation keys, scroll through the list of music. Press  to select individual songs to add to your play list.
6. Press the right soft key  for **OK**.
7. Enter a name for the play list and press . Your play list has been saved.

Selecting A Play List



To select a play list for playback:

1. Press **Menu**    to start the MP3 player.
2. Press right soft key  for **options** key and select **song library**. Your play lists are displayed.
3. Using the navigation keys, highlight a play list.
4. Press  to display the songs in the play list.
5. Using the navigation keys, highlight the first song to play and press .

Controlling Playback



You can use the following keys to control the music while its playing:

- Press the Left and Right navigation keys to switch to the previous or next song.

- Press  to Pause or Play the song.
- Press the right soft key  for **options**:
 - **repeat song**: Replay the current song.
 - **shuffle songs**: Randomize the current playlist.
 - **song information**: Display information about the current song.
 - **song library**: View all playlists and all songs in your library.
 - **music player home**: Return to the main playback screen.
 - **shop**: Download new MP3s.
 - **help**: Display help about the current screen.

Managing your Song Library





Manage your song library to create new playlists and add or remove songs.

1. From the main playback screen, press the Down navigation key to select **song library**.
2. Select **all songs** and press .
3. Press the right soft key  for **options**:
 - **create new playlist**: Add a new playlist. See "Creating A Play List" on page 72.
 - **sort songs by artist**: Organize the songs by artist name.
 - **sort songs by title**: Organize songs by song title.
 - **shuffle**: Randomize the song order.
 - **song information**: Display information about the currently highlighted song.
 - **delete song**: Delete the currently highlighted song.

- **scan for new songs:** Add new songs to your library.
- **music player home:** Return to the main playback screen.
- **shop:** Download new songs from your service provider.
- **help:** Display help about the current screen.




Ringtones

To download new ringtones:

1. Press the left soft key  for **Menu**.
2. Press  for **Music&Media**.
3. Press  for **Ringtones**.
4. Select **Get New** and press . You now are connected to your service provider's Web page. Follow the on-screen instructions.



Wallpaper



To download new wallpaper:

1. Press the left soft key  for **Menu**.
2. Press  for **Music&Media**.
3. Press  for **Wallpaper**.
4. Select **Get New** and press . You now are connected to your service provider's Web page. Follow the on-screen instructions.

Video

To view or download a video:

1. Press the left soft key  for **Menu**.
2. Press  for **Music&Media**.



3. Press  for **Video**.
4. Select **Get New** and press . You now are connected to your service provider's Web page. Follow the on-screen instructions.

TV & Radio

To view or download TV or radio programs:

1. Press the left soft key  for **Menu**.
2. Press  for **Music&Media**.
3. Press  for **TV & Radio**.
4. Select **Get New** and press . You now are connected to your service provider's Web page. Follow the on-screen instructions.





Camera


Using the camera menu (Menu  ) in your phone, you can take photos of people or events while on the move. Additionally, you can send photos to other people in a multimedia message or set one as a wallpaper.






Taking Pictures

Taking pictures with your phone's built-in Digital Camera is as simple as choosing a subject, pointing the lens, and pressing a button. You can activate Camera mode and take pictures whether the phone is open or closed.


To Take a Picture With the Phone Open

1. Press the left soft key  for **Menu**.
2. Press  for **Music&Media**.
3. Press  for **Camera**.
4. Press  for **Take Photo**.


Shortcut: To activate Camera mode, you can also press and hold the Side Camera button .

5. Using the phone's main LCD as a viewfinder, aim the camera lens at your subject.
 - To change the brightness of the screen, press the Up or Down navigation keys.
 - To zoom in or out, press the Left or Right navigation keys.
6. Hold the camera steady. To take the picture, press  or the Side Camera button  until the shutter sounds.
 - If you wish to save your picture, press the left soft key  to **Save** your photo. The photo is stored in your photo gallery. See "Image Album" on page 79 for more details.
 - If you wish to send your picture to someone via multimedia messaging, press . Your picture is embedded in a new multimedia message. See "Sending a Picture via Multimedia Messaging" on page 78 for more details.
 - If you wish to discard the current picture, press the right soft key  for **Reject**. You can continue to take pictures.

To Take a Picture With the Phone Closed





1. Press and hold the Side Camera button  to activate Camera mode.
2. Point the camera lens at your subject. You can check the picture framing through the external display screen.

Note: If the subject images in reverse on the external display, select inversion using the volume keys to display the image correctly.

3. Press the Side Camera button  to take the picture.
4. Open the handset to view your picture.

Camera Options


There are several settings associated with the full-color digital camera. These settings allow you to customize how the camera operates when taking pictures.

1. Start the camera. For more information, see "Taking Pictures" on page 75.
2. Press the right soft key  for **Options**.
3. Press the number key corresponding to the desired option.
 - **Flash:** Allows you to configure the operation of the flash: **Off**, **On This Shot**, or **Always On**.
 - **Self-Timer:** Allows you to configure a timer for **Off**, **5 Seconds** or **10 Seconds**. To start the timer, press .
 - **Fun Tools:** Allows you to select one of the following options:
 - **Fun Frames:** A frame around the image before the picture is taken. Press the navigation key left or right to select the desired frame. Press  to select and return to camera mode.
 - **Color Tones:** Press the Left and Right navigation keys to select the color of the image: **Auto**, **Monochrome**, **Green**, **Sepia**, or **Blue**. When you find the desired tone, press .
 - **White Balance:** Allows you to set up the white balance of the camera automatically or manually using the different preset modes. The modes available are:
 - **Auto:** Automatically adjusts the lighting.

- **Sunny:** Decreases the light sensitivity for taking pictures in full or mostly sunny conditions.
- **Cloudy:** Increases light sensitivity for taking pictures under cloudy conditions.
- **Tungsten:** Adjusts the white balance to match inside lighting conditions displayed using common household light bulbs.
- **Fluorescent:** Adjusts the white balance to match inside lighting conditions displayed using common fluorescent lighting.
- **Manual:** Allows you to adjust the white balance settings manually.
- **Settings:** Allows you to configure the following settings (when you change these settings, they are saved for all subsequent shots):
 - **Resolution:** Select the size of the picture: **Best: 1280x960, HI: 800x600, Med: 640x480, or Low: 320x240.**
 - **Quality:** Select the detail quality of the picture: **Fine, Normal, or Economy.**
 - **Shutter Sound:** Select the sound the phone makes when a picture is taken: **Shutter1, Shutter2, Shutter3, or Say Cheese.**
 - **View Mode:** Select between **Landscape** or **Portrait** layout.
- **Review Pictures:** View your Photo Gallery. See "Image Album" on page 79.
- **Camcorder:** Switch to Camcorder mode. See "Camcorder" on page 83.

Sending a Picture via Multimedia Messaging

1. Take your picture, as described in "To Take a Picture With the









Phone Open" on page 75, steps 1 to 4. From the Taken Picture screen, press  to send your picture as part of a multimedia message.


2. Compose your multimedia message. Your picture is already attached to the message. For more information, see "To send a message" , beginning at step 6 on page 54.

Note: You will need to add a destination phone number or e-mail address to your message prior to sending it.

Image Album

From your Image Album, you can view all the pictures that you have stored on your phone. Stored pictures can be sent to others as multimedia messages.

1. Press the left soft key  for **Menu**.
2. Press  for **Music&Media**.
3. Press  for **Camera**.
4. Press  for **Image Album**.
5. Select an album:
 -  **Photo Gallery:** Pictures you have taken.
 -  **MMS:** Pictures for multimedia messages.
 -  **Transferred Images:** Pictures you have transferred from the memory card.
6. Using the navigation keys, scroll through the your stored photos and highlight the desired photograph.
 - To view the highlighted picture, press the left soft key  for **Expand** (Photo Gallery only).

- To modify your picture options, press the right soft key  for **Options**. The following options are available:
 - **Send**: Sends the picture to someone via multimedia messaging. For more information, see "Sending a Picture via Multimedia Messaging" on page 78.
 - **Upload**: Allows you to send a picture to an online album.
 - **Print**: Allows you to print the picture. See "PictBridge Print" on page 81.
 - **Assign**: Allows you to use the picture for a wallpaper, picture ID, or incoming caller. In the address book, pictures can be used to identify incoming callers by displaying the image on screen.
 - **Erase**: Deletes the picture from memory.
 - **Erase all**: Deletes all the pictures from memory.
 - **Copy/Move**: Allows you to Copy or Move the picture to your memory card.
 - **Edit**: Allows you to change the name of the picture.
 - **Info**: This option displays the caption, time and date, resolution, size, location and upload status of the image.

Settings

The Settings menu allows you to change the default options for common camera settings.

- **Save To**: Select either **In Phone** or **In Memory card** as the default save location.
- **View Mode**: Allows you to select between **Portrait** and **Landscape** viewing.

PictBridge Print









PictBridge is an industry standard established by the Camera & Imaging Products Association (CIPA) that enables a range of digital photo solutions including direct photo printing from a digital camera to a printer without the need for a PC.

Note: There are many PictBridge devices in the market whose compatibility with your phone cannot be guaranteed.

Printing From Your Phone

Your phone comes equipped with a built-in camera that allows you to print images directly to a printer using the PictBridge technology. A USB cable must be connected between the two devices before any printing can occur.

To use PictBridge to print pictures from your phone:




1. Insert one end of the accessory cable into the USB slot on the printer. (Printer must support PictBridge technology.)
1. Press the left soft key  for **Menu**.
2. Press  for **Music&Media**.
3. Press  for **Camera**.
4. Press  for **PictBridge Print**.
5. Insert the USB cable into your phone.
6. Read the on-screen “Connect Printer” message and press the left soft key  for **OK**.
7. Select the image gallery (**Photo Gallery**, **MMS**, or **Transferred Images**) and press .
8. Highlight the desired image and press the left soft key  for **Next**. (To select multiple images, press  to place a check mark next to each image selected.)

9. Highlight **Copies** and press the navigation key left or right to select the desired number of copies to print.
10. Press the navigation key down to select **Size**. Press the navigation key left or right to select one of the following sizes: **4x6, Letter, A4, or Default**.



Note: These sizes may vary and are dependent on the printer's capabilities.

11. Press the navigation key down to select **Type**. Press the navigation key left or right to select one of the following:
 - **Standard:** prints the standard image.
 - **Index:** prints the index information.

Note: These options may vary and are dependent on the printer's capabilities.

12. Press the navigation key down to select **Border**. Press navigation key left or right to select on or off.
13. Press the navigation key down to select **Date Print**. the navigation key left or right to select **On** or **Off**.
14. Press the right soft key  to **Preview** the image the left soft key  to **Print** the image.
15. Select **Yes** to confirm printing and press .









Camcorder


Using the Camcorder menu (Menu  ) in your phone, you can take videos of people or events while on the move. Additionally, you can set one as a wallpaper.

Taking Videos

Taking videos with your phone's built-in camcorder is as simple as choosing a subject, pointing the lens, and pressing a button.




To Take a Video

1. Press the left soft key  for **Menu**.
2. Press  for **Music&Media**.
3. Press  for **Camcorder**.
4. Press  for **Take New**.
5. Using the phone's main LCD as a viewfinder, aim the camcorder lens at your subject.
 - To change the brightness of the screen, press the Up or Down navigation keys.
 - To zoom in or out, press the Left or Right navigation keys.
6. Hold the camcorder steady. To start the video, press . To stop the video, press  again.
 - If you wish to save your video, press the left soft key  to **Save** your video. The video is stored in your video gallery. See "Video Album" on page 85 for more details.
 - If you wish to send your video to someone via multimedia messaging, press . Your video is embedded in a new multimedia message. See "Sending a Picture via Multimedia Messaging" on page 78 for more details.

- If you wish to discard the current video, press the right soft key  for **Reject**. You can continue to take videos.

Camcorder Options




 



There are several settings associated with the camcorder. These settings allow you to customize how the camcorder operates when taking videos.



1. Start the camcorder. For more information, see "Taking Videos" on page 83.
2. Press the right soft key  for **Options**.
3. Press the number key corresponding to the desired option.
 - **Movie Light:** Allows you to configure the operation of the light: **Off**, **On This Movie**, or **Always On**.
 - **Self-Timer:** Allows you to configure a timer for **Off**, **5 Seconds** or **10 Seconds**. To start the timer, press .
 - **Color Tones:** Press the Left and Right navigation keys to select the color of the video: **Auto**, **Monochrome**, **Green**, **Sepia**, or **Blue**. When you find the desired tone, press .
 - **White Balance:** Allows you to set up the white balance of the camcorder automatically or manually using the different preset modes. The modes available are:
 - **Auto:** Automatically adjusts the lighting.
 - **Sunny:** Decreases the light sensitivity for taking videos in full or mostly sunny conditions.
 - **Cloudy:** Increases light sensitivity for taking videos under cloudy conditions.
 - **Tungsten:** Adjusts the white balance to match inside lighting conditions displayed using common household light bulbs.

- **Fluorescent:** Adjusts the white balance to match inside lighting conditions displayed using common fluorescent lighting.
- **Manual:** Allows you to adjust the white balance settings manually.
- **Quality:** Select the detail quality of the video: **Fine**, **Normal**, or **Economy**.
- **Review Movies:** View your Video Album. See "Video Album" on page 85.
- **Camera Mode:** Switch to Camera mode. See "Camera" on page 75.

Video Album

From your Video Album, you can view all the videos that you have stored on your phone. Videos can be sent to others as multimedia messages.

1. Press the left soft key  for **Menu**.
2. Press  for **Music&Media**.
3. Press  for **Camcorder**.
4. Press  for **Video Album**.
5. Select an album:
 -  **Video Gallery:** Videos you have taken.
 -  **MMS:** Videos for multimedia messages.
 -  **Transferred Videos:** Videos you have transferred from the memory card.

6. Using the navigation keys, scroll through the your stored videos and highlight the desired video.
 - To play the highlighted video, press the left soft key  for **Play** (Video Gallery only).
 - To modify your video options, press the right soft key  for **Options**. The following options are available:
 - **Send**: Sends the video to someone via multimedia messaging. For more information, see "Sending a Picture via Multimedia Messaging" on page 78.
 - **Upload**: Allows you to send a video to an online album.
 - **Assign**: Allows you to use the video for a wallpaper.
 - **Erase**: Deletes the video from memory.
 - **Erase All**: Deletes all the videos from memory.
 - **Copy/Move**: Allows you to Copy or Move the video to your memory card.
 - **Edit**: Allows you to change the name of the video.
 - **Info**: This option displays the caption, time and date, resolution, size, location and upload status of the video.






Settings

The Settings menu allows you to change the default options for common camcorder settings.

- **Save To**: Select either **In Phone** or **In Memory card** as the default save location.










My Albums

The My Albums menu (**Menu**  ) lets you quickly view the multimedia contents of your phone:



-  **Sound Album:** See "Voice Memo" on page 105.
-  **Image Album:** See "Image Album" on page 79.
-  **Video Album:** See "Video Album" on page 85
-  **Online Album:** Launches your Web browser to view your online album. See "Wireless Web" on page 68.
-  **External Memory:** Lets you view the contents of your external memory card.

Viewing External Memory

To view the contents of your external memory card:

1. Press the left soft key  for **Menu**.
2. Press  for **Music&Media**.
3. Press  for **My Albums**.
4. Press  for **External Memory**.
5. Select an option:
 -  **Sounds:** View voice memos stored on the memory card.
 -  **Pictures:** View pictures stored on the memory card.
 -  **Videos:** View video stored on the memory card.
 -  **Music:** View downloaded music stored on the memory card.
 -  **Memory Info:** View the amount of memory (Total and Available) on the memory card.



6. Highlight the file and select an option:

- To view or play the file, press the left soft key  for **View** or **Play**.
- To view options for file, press the right soft key  for **Options**.
 - **Send**: Sends the file to someone via multimedia messaging. For more information, see "Sending a Picture via Multimedia Messaging" on page 78.
 - **Upload**: Allows you to send the file to an online album.
 - **Erase**: Deletes the file from memory.
 - **Erase All**: Deletes all the files from memory.
 - **Copy/Move**: Allows you to Copy or Move the file to your phone.
 - **Rename**: Allows you to change the name of the file.
 - **Info**: This option displays information about the file.

Note: Depending on the type of folder, some of the above options may not be available:

Shop




With your new Web-enabled phone, you have access to a variety of services such as downloadable ring tones, games, images, tools and other applications.

1. Press the left soft key  for **Menu**.
2. Press  for **Shop**. The browser will launch and take you to the download menu.
3. Follow the instructions of the screen for information about downloadable services and products.


Note: Rates and pricing vary according to your service plan. Please contact your service provider for additional information.

Games

You can download and play games already stored on your phone.

1. Press the left soft key  for **Menu**.
2. Press  for **Games**.
3. Highlight **Get New** and press . The browser will launch and take you to the download menu.
4. Follow the instructions of the screen for information about online and downloadable games.




Tools & Apps

Tools & Apps (**Menu** ) provide helpful software applications to help you perform common functions, such as:

- set an alarm so that the phone rings at a specific time, such as to remind you of an appointment.
- view a calendar and organize your schedule.
- use the phone as a calculator for basic mathematical equations or currency exchange operations.
- view times in different parts of the world.
- use a timer or stopwatch.

New Tools

You can download new tools and applications:


1. Press the left soft key  for **Menu**.
2. Press  for **Tools & Apps**.
3. Press  for **New Tools**. The browser will launch and take you to the download menu.

GPS Services

With GPS Services, you can download new applications that use your phone's GPS features.








Note: Feature based on carrier network availability.

1. Press the left soft key  for **Menu**.
2. Press  for **Tools & Apps**.
3. Press  for **GPS Services**.

4. Highlight **Get New** and press . The browser will launch and take you to the download menu.


Calculator



Your phone comes with a built-in calculator.

1. Press the left soft key  for **Menu**.
2. Press  for **Tools & Apps**.
3. Press  for **Calculator**.
4. Enter a number with the keypad. (Press  or  to insert a decimal point and/or  to make the number negative or positive.)
5. Use your navigation key to select a mathematical function:
 - **Left to Subtract**
 - **Up to Multiply**
 - **Right to Add**
 - **Down to Divide**
6. Enter the next number using the keypad. Repeat steps 5 to 7 as necessary.
7. Press  to view the results.


Alarm Clock

Your phone comes with a built-in alarm clock with multiple alarm times. To use the alarm clock:

1. Press the left soft key  for **Menu**.
2. Press  for **Tools & Apps**.
3. Press  for **Alarm Clock**.
4. Press , , or  to select an alarm.








5. Press the navigation key left or right and select **On**.
6. Press the navigation key down once and then use the keypad to enter the alarm time.
7. Press the right soft key  to select **AM** or **PM**.
8. Press the navigation key down once and press  to select an alarm tone from **Single Tones**, **Ring Tones**, **Melodies**, or **Downloaded**. See "Ringers" on page 110.
9. Press the navigation key down once and then press it right or left to select the Repeat interval:

- **Daily**
- **Once**
- **Mon to Fri**
- **Sat & Sun**

10. Press the left soft key  for **Done**.


Planner

Your Planner helps organize your time and reminds you of important events. To add an event to today's schedule:

1. Press the left soft key  for **Menu**.
2. Press  for **Tools & Apps**.
3. Press  for **Planner**.
4. Select a Planner type:
 -  **Today**: Displays today's events.
 -  **Scheduler**: Displays a calendar from which you can select a day.
 -  **Task List**: Displays a to-do list.
 -  **Countdown**: Displays a countdown to a specific time.

Using Today Entries




You can use the Today menu (**Menu**   ) to display all the **Scheduler**, **Task**, and **Count** entries for the current day:



- Press the Left and Right navigation keys to switch between Scheduler, Task, and Countdown.
- Press the right soft key  and select **Jump to date** to view a different day.


Using Scheduler Entries





The Scheduler menu contains a calendar to keep track of your schedule and lets you set alarms to act as reminders.

To Enter a Scheduler Entry

1. Display the **Scheduler** (**Menu**   )
2. If this is the first entry, enter a description of the event. See "Entering Text" on page 26.



Otherwise, press the navigation keys to select a day and press the left soft key  for **View**, then press the left soft key  for **Add New**. Enter a description of the event.

3. Press the left soft key  for **Next**.
4. Press the Left or Right navigation keys to select the amount of warning before the event: **Appointment**, **Business**, **Personal**, **Vacation**, or **Birthday**.
5. Press the navigation key down once and press the Left or Right navigation keys to select the type of event: **10min before**, **30min before**, **1Hr before**, **No Alarm**, or **On Time**.
6. Press the navigation key down once and press the Left or Right navigation keys to select how often the event occurs: **Once**, **Daily**, **Weekly**, **Monthly**, or **Yearly**.

7. Press the navigation key down once and press  to select an alarm tone from **Single Tones**, **Ring Tones**, **Melodies**, or **Downloaded**. See "Ringers" on page 110.
8. Press the navigation key down once and then use the keypad to enter the Start time.
9. Press the right soft key  to select **AM** or **PM**.
10. Press the navigation key down once and then use the keypad to enter the End time.
11. Press the navigation key down once and press  to select a contact.
12. Press the left soft key  to select **Done**.

To View Scheduler Options








You can select the following options in the Scheduler menu by pressing the right soft key  for **Options**:

- **Add New**: Enter a new Scheduler event.
- **View Type**: Switch the Scheduler view to **Monthly**, **Weekly**, or **Daily**.
- **Jump to Date**: View the events for a specific day. Press the Left or Right navigation key to select an option and then press the Down navigation key to enter the date information:
 - **By Date**: Use the keypad to enter a date and press the left soft key  for **OK**.
 - **By Term**: Select either **Before** or **After**, press Down, and use the keypad to enter the number of days. Press the left soft key  for **OK**.
- **Erase All**: Use the Up or Down navigation key to select either **Yes** or **No**.







Using the Task List

You can use the Task function to in the same way you would use a to-do list. When the task has been completed, you can check it off as done. To enter tasks into your Planner, follow these steps:

To Enter a Task

1. Display the **Task List** (**Menu**    .)
2. If this is the first entry, enter a description of the countdown. Otherwise, press the left soft key  for **Add New** and enter the text. See "Entering Text" on page 26.
3. Press the left soft key  for **Next**.
4. Use the Left and Right navigation key to select a priority for the task: **Low** or **High**.
5. Press the Down navigation key and use the keypad to enter the **Due Time**. Press the right soft key  to select **AM** or **PM**.
6. Press the navigation key down once.
7. Use the keypad to enter the **Due Date**.
8. Press the left soft key  for **Done**.

To View or Edit the Current Tasks








1. Display the **Task List** (**Menu**    .)
2. Highlight a task and press . The task is displayed.
 - To edit the task, press the left soft key  for **Edit**.
 - To delete task, press the right soft key  for **Options** and select **Erase**.

Note: To delete all the tasks, from the **Task List** menu, press the right soft key for **Options** and select **Erase All**.







Using Countdown List

You can use the Countdown List function to remind you how much time is left until a specific event.

To Enter a Countdown

1. Display the **Countdown (Menu**   ).
2. If this is the first entry, enter a description of the countdown. Otherwise, press the left soft key  for **Add New** and enter the text. See "Entering Text" on page 26.
3. Press the left soft key  for **Next**.
4. Use the keypad to enter the countdown Time.
5. Press the right soft key  to select **AM** or **PM**.
6. Press the navigation key down once.
7. Use the keypad to enter the countdown date.
8. Press the left soft key  for **Done**.

To View or Edit the Current Countdowns





1. Display the **Countdown (Menu**   ).
2. Highlight a countdown and press . The countdown is displayed.
 - To edit the countdown, press the left soft key  for **Edit**.
 - To delete countdown, press the right soft key  for **Options** and select **Erase**.

Note: To delete all the countdowns, from the **Countdown** menu, press the right soft key for **Options** and select **Erase All**.


Notepad

Your phone comes with a notepad you can use to compose and store reminders and notes to help keep you organized.





Adding a Note

1. Display the **Notepad (Menu  )**.
2. If this is the first entry, enter the text. Otherwise, press the left soft key  for **Add New**. See "Entering Text" on page 26.
3. Enter up to 160 characters in the note using the keypad and press the left soft key  for **OK**.





Viewing a Note

1. Display the **Notepad (Menu  )**.
2. Use the navigation keys to scroll to the desired note and press  to view the note details.

Deleting a Note




1. Display the **Notepad (Menu  )**.
2. Highlight the note you wish to delete using the navigation keys.
3. Press the right soft key  for **Options**.
4. Select an option:
 - **Erase:** Delete the highlighted note.
 - **Erase All:** Delete all the notes.
5. Highlight **Yes** with the navigation key and press  to confirm.

Setting the Skin of a Note

1. Display the **Notepad (Menu  )**.
2. Highlight the note using the navigation keys.
3. Press the right soft key  for **Options**.
4. Select **Set Skin**.
5. Press the left and right navigation keys to display the different skins.
6. Press the left soft key  for **Assign**. The note is saved with the new skin.

World Clock

World Clock displays what time it is in twenty-four different time zones around the world together with one or more major cities, states, regions, or countries in a time zone.



1. Display **World Time (Menu  )**.
2. Press the navigation key left, right, up, or down to display the different time zones.
3. Press the right soft key  set Daylight Savings **On** or **Off**.

Voice Service

Activating Voice Recognition

Voice recognition allows you to say commands to perform common functions supported by your phone. There is no voice training required to use the voice recognition feature. You simply say the pre-designated command displayed on your screen in a normal tone of voice to perform the desired function.

To activate voice recognition:

1. Press and hold  or . (The phone prompts you to say a voice command.)
2. Wait for the beep and then say one of the following commands:
 - Call
 - Send Text
 - Lookup
 - Go To
 - Check

When it recognizes one of these commands, the phone launches the associated application. If the phone does not hear a command within approximately eight seconds, it de-activates voice recognition without taking any action.



Call

Call allows you to dial any valid 7, 10 or 11 digit North American phone number by speaking the number naturally, without pausing between the digits.

Tips for using voice Dial:

- Call works best in quieter environments.
- When saying a number, speak at a normal speed and say each digit clearly. There is no need to pause between digits.
- The phone recognizes the digits one, two, three, four, five, six, seven, eight, nine, zero, and oh. The phone does not recognize numbers such as “one eight hundred” for “1-800.” Instead, say “one-eight-zero-zero.”
- The phone recognizes only valid 7, 10 or 11 digit North American phone numbers.
- If your phone does not usually recognize you correctly when you are using voice Call, try adapting Call to your voice, which can significantly improve accuracy for some speakers. (See “Changing Voice Dial Sensitivity” on page 103 for details.)

To place a call using voice Call:

1. Activate voice recognition by pressing and holding. (The phone prompts you for a command.)
2. Say **Call**. (The phone prompts you to say the number.)
3. Say either a name stored in your Contacts or a valid 7, 10 or 11 digit North American phone number naturally and clearly.
 - If the phone asks you, “Did You Say,” followed by the correct number, say “**Yes**.” (You can also select the correct number from those displayed on the screen by pressing  on the correct number. The phone will then dial the number.)
 - If the phone asks you, “Did You Say,” followed by an incorrect number, say **No**. (If there are other alternatives, the phone will prompt you with the next one. You can also press the navigation key up or down to select the correct number from the Choice List, and then press  to dial.)
 - If you said a name listed in your Contacts that has more than one number associated with it, the phone displays the different locations (**Home, Office, Mobile, Pager, Fax**) and asks you which one to dial. Say one of the location names and the phone will dial the number for the location you specified.







Note: In some cases, the phone might ask you to repeat a name or number. Make sure that the number is a valid 7, 10 or 11 digit North American phone number, and then say the number again. If the number

isn't valid, or if the phone still doesn't understand the number on the second try, it will not place a call.

Enabling/Disabling Choice Lists

You can customize whether the Call feature displays the list of top voice recognition choices or automatically dials the first number, without displaying a choice list.



To enable or disable choice lists for Voice Dial:

1. Press the left soft key  for **Menu**.
2. Press  for **Tools & Apps**.
3. Press  for **Voice Service**.
4. Press the left soft key  for **Settings**.
5. Highlight **Choice Lists** and press .
6. Press the navigation key up or down to select **Automatic**, **Always On** or **Always Off** and press left soft key  for **OK**.

Lookup

Lookup lets you retrieve contact information for any person in your Contacts by saying the full name of the person.



To retrieve information using Lookup:

1. Activate voice recognition by pressing and holding  or . (The phone will prompt you for a command.)
2. Say **Lookup**. (The phone will prompt you to say the name.)
3. Say the full name of the person, exactly as it is entered in your Contacts. (The phone will play the name it recognized through the earpiece, and then open the contact information for that name.)
 - If the phone says, “Did You Say,” followed by an incorrect name, say **No**. The phone then prompts you with the next

name, if there is one. If there are no more names, the phone will say “Sorry, No Match Found.”



Send Text

The Go To option allows you to quickly send a text message to a person in your Contacts by saying the full name of the person.

1. Activate voice recognition by pressing and holding  or . (The phone will prompt you for a command.)
2. Say the full name of the person, exactly as it is entered in your Contacts. (The phone will play the name it recognized through the earpiece, and then open the contact information for that name.)
3. If the phone says, “Did You Say,” followed by an incorrect name, say **No**. The phone then prompts you with the next name, if there is one. If there are no more names, the phone will say “Sorry, No Match Found.”



Go To

The Go To option allows you to quickly launch a menu item.

1. Activate voice recognition by pressing and holding  or . (The phone will prompt you for a command.)
2. Wait for the beep and say **Go To** followed by one of the following words: **Contacts**, **Call History**, **Messaging**, **Wireless Web**, or **Next Menu**.

Check







The Check option gives you an update on the status of your phone.

1. Activate voice recognition by pressing and holding  or . (The phone will prompt you for a command.)

2. Wait for the beep and say **Status** followed by one of the following words: **Status**, **Signal**, **Network**, **Battery**, or **My Phone #**.





Changing Voice Dial Sensitivity






You can adjust your phone's sensitivity to sounds when listening for voice commands or names, making it require a more exact or less exact sound match before responding to your command.

1. Press the left soft key  for **Menu**.
2. Press  for **Tools & Apps**.
3. Press  for **Voice Service**.
4. Press the left soft key  for **Settings**.
5. Press  for **Sensitivity**.
6. Press the navigation key up or down to select **Reject More**, **Recommended**, or **Reject Less** and press the left soft key  for **OK**.
 - If you select **Reject More**, your phone will require a more exact sound match and if you select **Reject Less**, your phone will require a less exact sound match.

Configuring Digit Dialing

You can configure your phone to adapt to your voice when using voice-based dialing.









1. Press the left soft key  for **Menu**.
2. Press  for **Tools & Apps**.
3. Press  for **Voice Service**.
4. Press the left soft key  for **Settings**.


5. Press  for **Digit Dialing**.
6. Press  for **Adapt Digits**.
7. Press the left soft key  for **OK**.
8. Follow the instructions presented on your screen to configure your phone for your voice. You will be prompted to record a series of numbers. After listening to each recording, press the left soft key  for **Yes** to keep the recording, or press the right soft key  for **No** to reject the recording.


Hint: To reset digit dialing, press  for **Reset Digits** while in the Digit Dialing menu.

Changing Voice Dial Prompts



By default, your phone provides audio prompts such as “Please say a command”. You can turn these prompts on or off.







1. Press the left soft key  for **Menu**.
2. Press  for **Tools & Apps**.
3. Press  for **Voice Service**.
4. Press the left soft key  for **Settings**.
5. Press  for **Sound**.
6. Press  for **Prompts**,  for **Digits** or  for **Names**.

Hint: Press  to change the speed and volume that names are repeated.

7. Press the navigation key up or down to select **On** or **Off** and press the left soft key  for **OK**.

Changing Voice Launch

By default, voice commands are activated by pressing and holding  or . You can change your phone's settings to activate voice commands whenever you open the flip lid of your phone.







1. Press the left soft key  for **Menu**.
2. Press  for **Tools & Apps**.
3. Press  for **Voice Service**.
4. Press the left soft key  for **Settings**.
5. Press  for **Voice Launch**.
6. Press the navigation key up or down to select **Talk Key** or **Talk Key and Flip Open** and press the left soft key  for **OK**.



Voice Memo

You can use your phone to record brief memos to remind you of important events, phone numbers, or other items.

Recording Voice Memos

To record a voice memo:






1. Press the left soft key  for **Menu**.
2. Press  for **Tools & Apps**.
3. Press  for **Voice Memo**.
4. Press the left soft key  for **Record New**.
5. Wait for the beep and then start speaking. (As it is recording, the phone displays a countdown timer that shows how many seconds are left for recording.)
 - Press the left soft key  to **Pause** the memo. (When a memo is paused, press the left soft key  again to **Resume** recording.)

6. To finish recording, press the right soft key  to **Finish** the recording prior to the countdown completion.
7. The memo is saved to your phone. Press the left soft key  to **Play** your message for review.


Tip: You can also assign Voice Memos to either the left or right navigation keys. For more information, see "Configure Nav. Key Shortcuts" on page 123.

Recording Phone Call Conversations



To record a conversation during a phone call:

1. During a call, press the right soft key  for **Options**.
2. Press  for **Voice Memo**. (A one minute counter is displayed on the screen to indicating the amount of time a single voice memo can be recorded.)
 - Press the left soft key  to **Pause** the memo. (When a memo is paused, press the left soft key  again to **Resume** recording.)
3. Press the right soft key  for **Done** to stop and save the phone call conversation.

Voice Memo Options

After recording a voice memo, you can select the following options by pressing the right soft key  for **Options** in the Sound Gallery menu.

- **Record New:** Record a new voice memo. See "Recording Voice Memos" on page 105.
- **Send Msg:** Send the selected voice memo in a multimedia text message. See "Messaging" on page 50.

- **Upload:** Upload the selected voice memo to a storage area provided by your service provider.
- **Erase:** Erase a voice memo. Select the individual memos to erase by highlighting them and pressing . Press the left soft key  for **Next** and confirm the deletion.
- **Erase All:** Erase all the voice memos.
- **Copy/Move: Copy** or **Move** the selected voice memo to your memory card, if present.
- **Rename:** Change the description of the voice memo.
- **Info:** Displays information about the selected voice memo, such as length and recording date.






Bluetooth



Bluetooth® is a short-range wireless communications technology capable of exchanging information over a distance of about 30 feet without requiring a physical connection.

Unlike infrared, you don't need to line up the devices to beam information with Bluetooth®. If the devices are within a range of one another, you can exchange information between them, even if they are located in different rooms.

Add New Device









To add a new device:

1. Display **Bluetooth (Menu**  .
2. Press the left soft key  for **Add New**.
3. Select one of the following options:
 - **Search:** The phone will search for available devices. After the phone finds a new device, press the left soft key  for **Add to List**. Enter a PIN for your phone and press .

- **Wait for request:** The phone will wait to be contacted by another device. If prompted, enter the PIN for your phone and press .
4. Enter a name for the device or keep the default name.
 5. Press the left soft key  for **Done**.

Options



After a device is added to your list of Trusted Devices, press the right soft key  to select from the following options:

-  **Add New:** Add another device to your Trusted Devices list.
-  **Send Name Card:** This option lets you send a Name Card from your Contacts list to another device. See "Contacts" on page 39 for information.
-  **Get Name Card:** This option lets you receive a Name Card from another device. See "Contacts" on page 39 for information.
-  **Edit Name:** This option shows the name given to your phone for Bluetooth[®] purposes. You can edit the name if needed.
-  **Erase:** This option lets you delete the highlighted trusted device.
-  **Erase All:** This option lets you delete all the trusted devices.
-  **Info:** This option lets you view information about the highlighted trusted device.
-  **Settings:** This option lets you configure your Bluetooth[®] settings. See "Bluetooth" on page 121 for more information.

Note: The software in this handset supports Bluetooth profiles: HSP, HFP, OPP (v-card only), DUN, BPP. However, the software does not support the transfer of data files.

Other Applications

Other applications (**Menu**  ) shows any applications you have downloaded from your service provider. See "Tools & Apps" on page 90 for information about downloading new software.

To see how much memory you have left for applications, press the right soft key  and then press  to display **Memory Status**.

Phone Settings

You can customize your phone's display, sound and other settings to the way you like it.








Ringers

Different ringer types help you identify incoming calls and messages. You can assign ringer types to individual Contacts entries, types of calls, schedules, types of alarms, and types of messages. Ringer types available for assignment include:

- **Single Tones:** include a variety of standard ringer types.
- **Ring Tones:** include a variety of standard musical melodies.
- **Melodies:** includes a variety of short songs.
- **Downloaded:** Ringtones includes all the ringtones you have previously downloaded. See "Shop" on page 89

Voice Calls








You can select a different ringer for each type of received call: those with Caller ID, unknown callers, and calls while roaming:

1. Press the left soft key  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Sounds**.
4. Press  for **Ringers**.
5. Press  for **Voice Calls**.
6. Press  for **Caller ID** or  for **Unknown calls**.
7. Press the navigation button up or down to select **Single Tones**, **Ring Tones**, **Melodies**, or **Downloaded**.
8. Press the navigation button up or down to select desired ringer.

9. Press  to save and exit.









Roam Ringer

You can set your phone to provide a either a normal or a distinctive ringer type when roaming. To select a ringer type for incoming roam calls:

1. Press the left soft key  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Sounds**.
4. Press  for **Ringers**.
5. Press  for **Voice Calls**.
6. Press  for **Roaming**
7. Select **Normal** or **Distinctive**.
8. Press  to save and exit.

Messages







To select a ringer type for received messages:

1. Press the left soft key  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Sounds**.
4. Press  for **Ringers**.
5. Press  for **Messages**.
6. Press  for **Voicemail**,  for **Text and Multimedia** or  for **Web-Alerts**.
7. Press the navigation button up or down to select **Single Tones**, **Ring Tones**, **Melodies**, or **Downloaded**.
8. Press the navigation button up or down to select desired ringer.

9. Press  to save and exit.







Meeting / Silent Mode

You can disable the ringer for when you are in a meeting or movie theater:

1. Press the left soft key  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Sounds**.
4. Press  for **Ringers**.
5. Press  for **Meeting / Silent Mode**.
6. Press the navigation button up or down to select **On** or **Off**.
7. Press  to save and exit.







Keypad

This menu allows you to select the tone that the phone sounds when you press a key. Press Up or Down to select an option and press Right or Left to scroll through the choices. When you are finished, press the Save soft key or

1. Press the left soft key  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Sounds**.
4. Press  for **Keypad**.
5. Press  for **Keypad Sound**.
6. Press the navigation key right to increase or left to decrease the volume.
7. Press  to save and exit.







DTMF Length

Your phone offers a number of options for selecting the audible tones accompanying a key press. Voice mail or other automated systems may require long or short time lengths to activate different features. To select a key tone:

1. Press the left soft key  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Sounds**.
4. Press  for **Keypad**.
5. Press  for **DTMF Length**.
6. Select **Short** or **Long**.
7. Press  to save and exit.











Tone Type

Your phone offers a number of different types of key tones:

1. Press the left soft key  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Sounds**.
4. Press  for **Keypad**.
5. Press  for **Tone Type**.
6. Select **Normal**, **Rain Drop**, or **Xylophone**.
7. Press  to save and exit.

Volume

You can adjust the volume of your phone using either the Menu or the volume keys on the side of your phone. To adjust the ringer volume from the menu:

1. Press the left soft key  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Sounds**.
4. Press  for **Volume**.
5. Press  for **Ringer**,  for **Messages**,  for **Earpiece**,  **Speaker**, or  for **Power On/Off**.
6. Press the navigation key left or right until the desired volume level is selected and press the left soft key  to **Select** and exit.

Tip: You can adjust the ringer volume in idle mode (or the earpiece volume during a call) by using the volume key on the side of your phone.










Alerts

Your phone can alert you with an audible tone when you change service areas, once a minute during a voice call, or when a call has been connected.

The different actions available are:

- **Minute Beep** - An alert tone is sounded every minute that you are connected.
- **Call Connect** - An alert tone is sounded when you are initially connected.
- **Call Lost** - An alert tone is sounded when the signal fades and the connection is lost.
- **No Service** - An alert tone is sounded when you come in or out of your coverage area.






To enable or disable alert sounds:


1. Press the left soft key  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Sound**.
4. Press  for **Alerts**.
5. Select an option:
 -  for **Minute Beep**
 -  for **Call Connect**
 -  for **Call Lost**
 -  for **No Service**
6. Select **On** or **Off** using the navigation key.
7. Press  to save and exit.

Display

Changing the Banner











The Banner (the text greeting shown on the display screen) can be up to 14 characters and is displayed on your phone's screen in idle mode. Your phone lets you change its contents and location. For example, you could change the default text to say "Bob's Phone".

1. Press the left soft key  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Display**.
4. Press  for **Banner**.
5. Configure the banner:
 - Press  to **Set** the location of the banner: **Off**, **Top**, or **Bottom**.

- Press  to **Edit** the text of the banner. See "Entering Text" on page 26.



Changing the Wallpaper






Your phone offers options for what you see on the display screens when in idle mode.

1. Press the left soft key  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Display**.
4. Press  for **Wallpaper**.
5. Press  to change the **Main Display** or press  to change the **Front Display**.
6. Select one of the following:
 -  **Preset Image**: Contains images preloaded on your phone.
 -  **Downloads**: Contains downloaded images from your service provider.
 -  **Photo Gallery**: Contains pictures taken with your phone's camera.
7. Press the navigation key left or right until the desired image is displayed.
8. Press  to select the image.

Changing the Backlight Settings

The Backlight setting lets you select how long the display screen is illuminated after the handset is opened or any key press is made.






1. Press the left soft key  for **Menu**.
2. Press  for **Settings**.

3. Press  for **Display**.
4. Press  for **Backlight**.
5. Select an option to change:
 -  **On**: Use the navigation keys to select **3 Seconds, 7 Seconds, 15 Seconds, 30 Seconds, Always On, or Always Off**.
 -  **Dim**: Use the navigation keys to select **1 Minute, 2 Minutes, 5 Minutes, 10 Minutes, or Always On**.
6. Press  to save and exit.

Note: Long backlight settings reduce the battery's talk and idle times.


Changing the Keypad Light Settings





The Keypad Light setting lets you select how long the keypad is illuminated after the handset is opened or any key press is made

1. Press the left soft key  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Display**.
4. Press  for **Keypad Light**.
5. Use the navigation keys to select the length for the keypad light: **8 Seconds, 15 Seconds, 30 Seconds, or Always Off**.
6. Press  to save and exit.

Changing the Front Display Contrast









The Front Display Contrast setting adjusts the contrast of your the external LCD display. You can adjust the contrast if you have difficulty viewing the screen, particularly in sunlight.

1. Press the left soft key  for **Menu**.

2. Press  for **Settings**.
3. Press  for **Display**.
4. Press  for **Front Display Contrast**.
5. Use the navigation keys to select the level of contrast: **Lowest**, **Low**, **Med**, **High**, or **Highest**.
6. Press  to save and exit.


Changing the Time and Date Settings





The Time and Date settings adjusts how the time and date are displayed on the display screens.

1. Press the left soft key  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Display**.
4. Press  for **Time and Date**.
5. Select an option to change:
 -  **Main Display**: Use the navigation keys to select **Digital Clock**, **Analog Clock**, or **Off**.
 -  **Front Display**: Use the navigation keys to select **Time & Date**, **Time Only**, or **Off**.
 -  **Display Mode**: Use the navigation keys to select **12 hour** or **24 hour**.
6. Press  to save and exit.

Changing the Menu Style








Your phone allows you to choose how the menu appears on your display screen.

1. Press the left soft key  for **Menu**.

2. Press  for **Settings**.
3. Press  for **Display**.
4. Press  for **Menu Style**.
5. Press the navigation key up or down to select **Icon** or **List**.
6. Press  to save and exit.

Changing the Dialing Font

Your phone allows you to select the size and appearance of the font used when dialing numbers.






1. Press the left soft key  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Display**.
4. Press  for **Dialing Font**.
5. Select an option to change:
 -  **Color**: Use the navigation keys to select **Basic**, **Rainbow**, **Monochrome**, or **Hyphenate**.
 -  **Size**: Use the navigation keys to select **Normal** or **Large**.
6. Press  to save and exit.

Games / Apps

Backlight

The backlight setting lets you select how long the display screen and keypad are illuminated after the handset while playing games.






To change the backlight setting:

1. Press the left soft key  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Games / Apps**.
4. Press  for **Backlight**.
5. Use the navigation key to select **8 Seconds**, **15 Seconds**, **Always On**, or **Always Off**.
6. Press  to save and exit.

Note: Long backlight settings reduce the battery's talk and standby times.









Volume

The Volume setting allows you to adjust the volume of your games and tools.

1. Press the left soft key  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Games / Apps**.
4. Press  for **Volume**.
5. Press the navigation key left or right until the desired volume level is selected.
6. Press  to save and exit.





Notification




The Notification option allows you to set whether or not your phone prompts you of incoming messages while playing games or using tools.

1. Press the left soft key  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Games / Apps**.
4. Press  for **Notification**.
5. Select an option to change:
 -  **Voice Mail**: Select **On** or **Off**.
 -  **SMS**: Select **On** or **Off**.
 -  **MMS**: Select **On** or **Off**.
6. Press  to save and exit.

Bluetooth







Bluetooth[®] is a short-range wireless communications technology capable of exchanging information over a distance of about 30 feet without requiring a physical connection. See "Bluetooth" on page 107 for information about using phone's Bluetooth feature.

1. Press the left soft key  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Bluetooth**.
4. Select an option to change:
 -  for **Power**: Select **On** or **Off** to enable or disable Bluetooth support.

-  for **Discoverable Mode**: Select **On for 1min** to let other devices connect to your phone for the next minute; otherwise, select **Off**.
-  for **Device Name**: Type in the name of your phone as it will appear to other Bluetooth devices. See "Entering Text" on page 26.
-  for **Device Info**: Display information about your phone's Bluetooth configuration.

GPS

Your phone's GPS feature enables service providers to locate your position for emergency and other services.







1. Press the left soft key  for **Menu**.
2. Press  for **Settings**.
3. Press  for **GPS**.
4. Select an option to change:
 -  **Status**: To enable GPS tracking for your phone select **On**. To disable GPS tracking for everything except emergencies, select **Emergency Only**.
 -  **Privacy**: Configure how devices can track your phone, **By Permission**, **Restricted**, or **Unrestricted**.
5. Press  to save and exit.

Note: See "GPS Services" on page 90 for information about downloading new GPS services.

Others

Configure Nav. Key Shortcuts








When in Idle mode, you can use the left and right navigation keys to launch an often-used function. The center navigation key cannot be changed.

1. Press the left soft key  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Others**.
4. Press  for **Nav. Key Shortcuts**.
5. Press  for **Left Nav Key**.
6. Press the navigation key up or down to select one of the following functions:
 - None
 - Send New
 - Planner
 - Contacts
 - Web
 - Voice Service
 - Call History
 - Music & Media
 - Voice Memo
 - Messaging
 - Music
 - Sounds
 - Voice Mail
 - My Albums
 - Display
 - Text and Multimedia
 - Calculator
 - Bluetooth
 - Inbox
 - Alarms
7. Press  to save and exit.

Call Setup







Restriction

You can restrict the phone numbers that your phone can call. You can change the Restriction settings to prevent all calls, restrict calls to Contacts only or to only allow special numbers such as 911 or Customer Service.

1. Press the left soft key  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Others**.
4. Press  for **Call Setup**.
5. Press  for **Restriction**.
6. Press  for **Dialed Calls**.
7. Using the navigation keys, select **Allow all**, **Contacts Only** or **Special# Only**.
8. Press  to save and exit.







Call Answer

To set the actions required to answer an incoming call:

1. Press the left soft key  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Others**.
4. Press  for **Call Setup**.
5. Press  for **Call Answer**.
6. Using the navigation keys, select **Send Key**, **Any Key** or **Flip Open**.
7. Press  to save and exit.

Auto Answer







To answer calls when your phone is connected to an optional hands-free car kit or head set:

1. Press the left soft key  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Others**.
4. Press  for **Call Setup**.
5. Press  for **Auto Answer**.
6. Press the navigation key up or down to select **2 Seconds**, **4 Seconds**, **8 Seconds** or **Off**.
7. Press  to save and exit.

Note: When your phone is in Auto Answer mode, * **Auto Answer** * appears on the display screen.






Auto Redial

When enabled, the Auto Redial option causes the phone to make ten attempts to redial a phone number after an unsuccessful call. The time interval between attempts varies.

1. Press the left soft key  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Others**.
4. Press  for **Call Setup**.
5. Press  for **Auto Redial**.
6. Press the navigation key up or down to select **On** or **Off**.
7. Press  to save and exit.

Language







Your phone can display text in English or French. Language selection changes all menus and voice message settings.

1. Press the left soft key  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Others**.
4. Press  for **Language**.
5. Press the navigation key up or down to select **English** or **Français**.
6. Press  to save and exit.

TTY Mode






Your phone is TTY-compatible. Connect the TTY equipment to the headset jack, which is located on the left side of the phone. Before you can use your phone with a TTY device, you'll need to enable TTY.

Note: Enabling TTY may impair headset use and non-TTY accessory performance.

1. Press the left soft key  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Others**.
4. Press  for **TTY Mode**.
5. Press the left soft key  for **OK**.
6. Press the navigation key up or down to select **Enable TTY** or **Disable TTY**.
7. Press  to save and exit.

Key Guard





You can configure your phone's Key Guard options to prevent accidental pressing of the external buttons.



1. Press the left soft key  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Others**.
4. Press  for **Key Guard**.
5. Press the navigation key up or down to select **Flip-closed, After 5 Seconds**, or **Off**.
6. Press  to save and exit.

Data Setup

Your phone is capable of sending and receiving digital data and fax calls when connected to a computing device (laptop, desktop, hand held, palmtop, etc.) running the Windows operating system. Your phone functions similar to a typical modem on your PC, enabling you to use wireless data involving a wide variety of Windows applications.

To use digital data or fax services with your phone, you will need to obtain a digital data/fax kit from your service provider. This kit contains the necessary cables, software, and documentation required for you to connect and use your phone with your computing device.





1. Press the left soft key  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Others**.
4. Press  for **Data Setup**.
5. Using the navigation keys, highlight the desired option.


- **Data/Fax:** Configure the type of connection options. Use the navigation keys to select one of the following.
 - **Off:** Allows normal voice call use.
 - **Fax In Once:** No voice calls can be received. Allows one incoming fax call, and then reverts to Off.
 - **Fax In Always:** No voice calls can be received. Only allows incoming Fax calls.
 - **Data In Once:** No voice calls can be received. Allows one incoming data transmission and then reverts to Off
 - **Data In Always:** No voice calls can be received. Only allows incoming data transmissions.
 - **PC Connection:** Configure the connection to your PC. Select **USB** or **Closed**.
 - **Do Not Disturb:** Enable or disable incoming calls during data sessions. Press the left soft key  for **Next** and select **On** or **Off**.
6. Press  to save and exit.

System

Phone Info






The Phone Info screen displays information about your handset's current hardware and software. The Icon Glossary option can help you identify a display icon whose function you have forgotten.

1. Press the left soft key  for **Menu**.
2. Press  for **Settings**.
3. Press  for **System**.
4. Press  for **Phone Info**.

5. Select an option: **My Phone Number**, **Software Version**, **Hardware Version**, **ESN**, **PRL**, **Browser Version**, **Serving System**, or **Icon Glossary**.
6. When you are finished, press  to exit.





Memory Info

The Memory Info screen tells you how much of your phone's memory is used and how much remains available.

1. Press the left soft key  for **Menu**.
2. Press  for **Settings**.
3. Press  for **System**.
4. Press  for **Memory Info**.
5. Select an option: **Total Usage**, **Music & Media**, **My Albums**, **Games**, or **Tools & Apps**.
6. When you are finished, press  to exit.

System

Your System screen allows you to control your ability to roam (access other compatible service provider networks).













1. Press the left soft key  for **Menu**.
2. Press  for **Settings**.
3. Press  for **System**.
4. Press  for **System**.
5. Select an option:
 - **Set Mode**: Controls which networks you can access. Select **Automatic** to have the phone search for an alternate system when your Home one is not available. Select **Home only** to prevent your phone from roaming on other networks.







- **Set NAM:** Select **NAM 1** or **NAM 2**.
- **Call Guard:** Select **On** or **Off**.

6. Press  to save and exit.

Security






The Security screen allows you to lock your phone, enable or disable voice privacy, set restrictions, and other security options.

1. Press the left soft key  for **Menu**.
2. Press  for **Settings**.
3. Press  for **System**.
4. Press  for **Security**.
5. Enter the lock code. The factory settings are the last four digits of your telephone number. Select one of the following options:
 -  **Lock Phone:** Restricts the use of your phone by engaging the lock. Select **Unlocked**, **On Power-Up**, or **Lock Now**.
 -  **Lock Camera:** Restricts the use of the phone's built-in camera. Select **On** or **Off**.
 -  **Lock Camcorder:** Restricts the use of the phone's built-in camcorder. Select **On** or **Off**.
 -  **Change Lock:** Change the lock code for your phone. Enter the new number and press the left soft key  for **Next**. You will be asked to confirm the new number.
 -  **Special #:** Allows you to enter special phone numbers which can be called even if the phone is locked. Select one of the slots and press the left soft key  for **Select**. Type in the new number and press  to save.

-  **Erase Contacts:** Deletes all your Contacts. Select **Yes** or **No**.
-  **Erase Downloads:** Deletes the contents of your Downloads. Select **Yes** or **No**.
-  **Erase Image Album:** Deletes the contents of your Image Album. Select **Yes** or **No**.
-  **Erase Sound Album:** Deletes the contents of your Sound Album. Select **Yes** or **No**.
-  **Erase Video Album:** Deletes the contents of your Video Album. Select **Yes** or **No**.
-  **Reset Phone:** Returns all phone options to their factory default. Select **Yes** or **No**.

Airplane Mode

Airplane Mode allows you to use many of your phone's features, such as Games, Notepad, Voice Memos, etc., when you are in an airplane or in any other area where making or receiving calls or data is prohibited. When your phone is in Airplane Mode, it cannot send or receive any calls or access online information. All incoming calls will be sent directly to your voice mail box.

1. Press the left soft key  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Airplane Mode**.
4. Press the left soft key  for **Next**.
5. Press the navigation key up or down to select **On** or **Off**.
6. Press  to save and exit.

Safety

Getting the Most Out of Your Reception

Keeping Tabs on Signal Strength

The quality of each call you make or receive depends on the signal strength in your area. Your phone informs you of the current signal strength by displaying a number of bars next to the signal strength icon. The more bars displayed, the stronger the signal. If you're inside a building, being near a window may give you better reception.

Understanding the Power Save Feature

If your phone is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. If your phone is active, it periodically rechecks service availability or you can check it yourself by pressing any key. Anytime the Power Save feature is activated, a message displays on the screen. When a signal is found, your phone returns to standby mode.

Understanding How Your Phone Operates

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radio frequency (RF) signals. When you use your phone, the system handling your call controls the power level. This power can range from 0.006 watts to 0.2 watts in digital mode.

Knowing Radio Frequency Safety

The design of your phone complies with updated NCRP standards described below. In 1991-92, the Institute of Electrical and Electronics Engineers (IEEE) and the American National Standards Institute (ANSI) joined in updating ANSI's 1982 standard for safety levels with respect to human exposure to RF signals. More than 120 scientists, engineers and physicians from universities, government health agencies and industries developed this updated standard after

reviewing the available body of research. In 1993, the Federal Communications Commission (FCC) adopted this updated standard in a regulation. In August 1996, the FCC adopted hybrid standard consisting of the existing ANSI/IEEE standard and the guidelines published by the National Council of Radiation Protection and Measurements (NCRP).

Maintaining Your Phone's Peak Performance

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- Try not to cover the phone's antenna.
- Speak directly into the mouthpiece.
- Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and remove the battery. If it's inoperable, return it to a dealer store or call Customer Support for service.

Note: For the best care of your phone, only authorized personnel should service your phone and accessories. Faulty service may void the warranty.

Maintaining Safe Use of and Access to Your Phone

FAILURE TO FOLLOW THE INSTRUCTIONS OUTLINED
MAY LEAD TO SERIOUS PERSONAL INJURY AND POSSI-
BLE PROPERTY DAMAGE.

IMPORTANT SAFETY INSTRUCTIONS - SAVE THESE
INSTRUCTIONS.

DANGER - TO REDUCE THE RISK OF FIRE OR ELECTRIC
SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS.

FOR CONNECTION TO A SUPPLY NOT IN Canada, USE

AN ATTACHMENT PLUG ADAPTOR OF THE PROPER CONFIGURATION FOR THE POWER OUTLET.

Using Your Phone While Driving

Talking on your phone while driving (or operating the phone without a hands-free device) is prohibited in some jurisdictions. Laws vary as to specific restrictions. Remember that safety always comes first.

When using your phone in the car:

- Get to know your phone and its features, such as speed dial and re-dial.
- When available, use a hands-free device.
- Position your phone within easy reach.
- Let the person you are speaking to know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.
- Do not take notes or look up phone numbers while driving.
- Dial sensibly and assess the traffic; if possible, place calls when stationary or before pulling into traffic.
- Do not engage in stressful or emotional conversations that may divert your attention from the road.
- Dial 911 to report serious emergencies. It's free from your wireless phone.
- Use your phone to help others in emergencies.
- Call roadside assistance or a special non-emergency wireless number when necessary.

Following Safety Guidelines

To operate your phone safely and efficiently, always follow any special regulations in a given area. Turn your phone off in areas where use is forbidden or when it may cause interference or danger.

Using Your Phone Near Other Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, RF signals from wireless phones may affect inadequately shielded electronic equipment.

RF signals may affect improperly installed or inadequately shielded electronic operating systems and/or entertainment systems in motor vehicles. Check with the manufacturer or their representative to determine if these systems are adequately shielded from external RF signals. Also check with the manufacturer regarding any equipment that has been added to your vehicle.

Consult the manufacturer of any personal medical devices, such as pacemakers and hearing aids, to determine if they are adequately shielded from external RF signals.

Note: Always turn off the phone in health care facilities and request permission before using the phone near medical equipment.

Turning Off Your Phone Before Flying

Turn off your phone before boarding any aircraft. To prevent possible interference with aircraft systems, the U.S. Federal Aviation Administration (FAA) regulations require you to have permission from a crew member to use your phone while the plane is on the ground. To prevent any risk of interference, FCC regulations prohibit using your phone while the plane is in the air.

Turning Off Your Phone in Dangerous Areas

To avoid interfering with blasting operations, turn off your phone when in a blasting area or in other areas with signs indicating that

two-way radios should be turned off. Construction crews often use remote-control RF devices to set off explosives.

Turn off your phone when you're in any area that has a potentially explosive atmosphere. Although it's rare, your phone or its accessories could generate sparks. Sparks could cause an explosion or a fire resulting in bodily injury or even death. These areas are often, but not always, clearly marked. They include:

- Fueling areas such as gas stations.
- Below deck on boats.
- Fuel or chemical transfer or storage facilities.
- Areas where the air contains chemicals or particles such as grain, dust or metal powders.
- Any other area where you would normally be advised to turn off your vehicle's engine.

Note: Never transport or store flammable gas, liquid or explosives in the compartment of your vehicle that contains your phone or accessories.

Restricting Children's Access to your Phone

Your phone is not a toy. Children should not be allowed to play with it because they could hurt themselves and others, damage the phone, dial 911 by mistake or make calls that increase your phone bill.

Caring for the Battery

Protecting Your Battery

The guidelines listed below help you get the most out of your battery's performance.

- Use only Samsung approved batteries and travel adapters. These chargers are designed to maximize battery life. Using other batteries or chargers voids your warranty and may cause damage.
- In order to avoid damage, charge the battery only in temperatures that range from 32° F to 113° F (0° C to 45° C).
- Don't use the battery charger in direct sunlight or in high humidity areas, such as the bathroom.
- Never dispose of the battery by incineration.
- Keep the metal contacts on top of the battery clean.
- Don't attempt to disassemble or short-circuit the battery.
- The battery may need recharging if it has not been used for a long period of time.
- It's best to replace the battery when it no longer provides acceptable performance. When used correctly, the battery can be recharged hundreds of times before it needs replacing.
- Don't store the battery in high temperature areas for long periods of time. It's best to follow these storage rules:
 - Less than one month:
4° F to 140° F (-20° C to 60° C)
 - More than one month:
4° F to 113° F (-20° C to 45° C)

Disposal of Lithium Ion (Lilon) Batteries

For safe disposal options of your Lilon batteries, contact your nearest service center.

Special Note: Be sure to dispose of your battery properly. In some areas, the disposal of batteries in household or business trash may be prohibited.

Note: For safety, do not handle a damaged or leaking Lilon battery.

Acknowledging Special Precautions and Industry Canada Notice

Only use approved batteries, antennas, and chargers. The use of any unauthorized accessories may be dangerous and will invalidate the phone warranty if said accessories cause damage or a defect to the phone.

Although your phone is quite sturdy, it is a complex piece of hardware and can be broken. Use common-sense guidelines to avoid dropping, hitting, bending or sitting on it.

Cautions

Any changes or modifications to your phone not expressly approved in this document could void your warranty for this equipment, and void your authority to operate this equipment. Only use approved batteries, antennas and chargers. The use of any unauthorized accessories may be dangerous and void the phone warranty if said accessories cause damage or a defect to the phone.

Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending or sitting on it.

Information to User

This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation; if this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient / relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Specific Absorption Rates (SAR) for Wireless Phones

The SAR is a value that corresponds to the relative amount of RF energy absorbed in the head of a user of a wireless handset.

The SAR value of a phone is the result of an extensive testing, measuring and calculation process. It does not represent how much RF the phone emits. All phone models are tested at their highest value in strict laboratory settings. But when in operation, the SAR of a phone can be substantially less than the level reported to the FCC. This is because of a variety of factors including its proximity to a base station antenna, phone design and other factors. What is important to remember is that each phone meets strict federal guidelines. Variations in SARs do not represent a variation in safety. All phones must meet the federal standard, which incorporates a substantial margin of safety. As stated above, variations in SAR values between different model phones do not mean variations in

safety. SAR values at or below the federal standard of 1.6 W/kg are considered safe for use by the public.

The highest reported SAR values of the SCH-A950 are:

1.470 W/kg CDMA Head SAR

0.611 W/kg CDMA Body SAR

Owner's Record

The model number, regulatory number and serial number are located on a nameplate inside the battery compartment. Record the serial number in the space provided below. This will be helpful if you need to contact us about your phone in the future.

Model: SCH-A950

Serial No.:

User Guide Proprietary Notice

CDMA Technology is licensed by QUALCOMM Incorporated under one or more of the following patents:

4,901,307 5,109,390 5,267,262 5,416,797

5,506,865 5,544,196 5,657,420 5,101,501

5,267,261 5,414,796 5,504,773 5,535,239

5,600,754 5,778,338 5,228,054 5,337,338

5,710,784 5,056,109 5,568,483 5,659,569

5,490,165 5,511,073

T9 Text Input is licensed by Tegic Communications and is covered by U.S. Pat. 5,818,437, U.S. Pat. 5,953,541, U.S. Pat. 6,011,554 and other patents pending.

Warranty

STANDARD LIMITED WARRANTY

What is Covered and For How Long? SAMSUNG Electronics Canada Inc. ("SAMSUNG") warrants to the original purchaser ("Purchaser") that SAMSUNG's phones and accessories ("Products") are free from defects in material and workmanship under normal use and service for the period commencing upon the date of purchase and continuing for the following specified period of time after that date:

Phone	1 Year
Batteries	1 Year
Leather Case/Pouch/Holster	90 Days
Game Pad	90 Days
Other Phone Accessories	1 Year

What is Not Covered? This Limited Warranty is conditioned upon proper use of Product by Purchaser. This Limited Warranty does not cover: (a) defects or damage resulting from accident, misuse, abuse, neglect, unusual physical, electrical or electromechanical stress, or modification of any part of Product, including antenna, or cosmetic damage; (b) equipment that has the serial number removed or made illegible; (c) any plastic surfaces or other externally exposed parts that are scratched or damaged due to normal use; (d) malfunctions resulting from the use of Product in conjunction with accessories, products, or ancillary/peripheral equipment not furnished or approved by SAMSUNG; (e) defects or damage from improper testing, operation, maintenance, installation, or adjustment; (f) installation, maintenance, and service of Product; or (g) Product used or purchased outside Canada. This Limited Warranty covers batteries only if battery capacity falls below 80% of rated capacity or the battery leaks, and this Limited Warranty does not cover any battery if: (i) the battery has been charged by a battery charger not specified or approved by SAMSUNG for charging the battery; (I) any of the seals on the battery are broken or show evidence of tampering; or (IA) the battery has been used in equipment other than the SAMSUNG phone for which it is specified.

What are SAMSUNG's Obligations? During the applicable warranty period, SAMSUNG will repair or replace, at SAMSUNG's sole option, without charge to Purchaser, any defective component part of Product. To obtain service under this Limited Warranty, Purchaser must return Product to an authorized phone service facility in an adequate container for shipping, accompanied by Purchaser's sales receipt or comparable substitute proof of sale showing the date of purchase, the serial number of Product and the sellers' name and address. To obtain assistance on where to deliver the Product, call Samsung Customer Care at 1-800-Samsung. Upon receipt, SAMSUNG will promptly repair or replace the defective Product. SAMSUNG may, at SAMSUNG's sole option, use rebuilt, reconditioned, or new parts or components when repairing any Product or replace Product with a rebuilt, reconditioned or new Product. Repaired/replaced leather cases, pouches and holsters will be warranted for a period of ninety (90) days. All other repaired/replaced Product will be warranted for a period equal to the remainder of the original Limited Warranty on the original Product or for 90 days, whichever is longer. All replaced parts, components, boards and equipment shall become the

property of SAMSUNG. If SAMSUNG determines that any Product is not covered by this Limited Warranty, Purchaser must pay all parts, shipping, and labor charges for the repair or return of such Product.

What Are the Limits On SAMSUNG's Liability? EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED HEREIN, PURCHASER TAKES THE PRODUCT "AS IS," AND SAMSUNG MAKES NO WARRANTY OR REPRESENTATION AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO:

- THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE;
- WARRANTIES OF TITLE OR NON-INFRINGEMENT;
- DESIGN, CONDITION, QUALITY, OR PERFORMANCE OF THE PRODUCT;
- THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR
- COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO.

NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. ALL IMPLIED WARRANTIES AND CONDITIONS THAT MAY ARISE BY OPERATION OF LAW, INCLUDING IF APPLICABLE THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY LIMITED TO THE SAME DURATION OF TIME AS THE EXPRESS WRITTEN WARRANTY STATED HEREIN. SOME JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE, USE, OR MISUSE OF, OR INABILITY TO USE THE PRODUCT OR ARISING DIRECTLY OR INDIRECTLY FROM THE USE OR LOSS OF USE OF THE PRODUCT OR FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL, CONSEQUENTIAL OR SIMILAR DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS, OR FOR DAMAGES ARISING FROM ANY TORT (INCLUDING NEGLIGENCE OR GROSS NEGLIGENCE) OR FAULT COMMITTED BY SAMSUNG, ITS AGENTS OR EMPLOYEES, OR FOR ANY BREACH OF CONTRACT OR FOR ANY CLAIM BROUGHT AGAINST PURCHASER BY ANY OTHER PARTY. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM PROVINCE TO PROVINCE. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT AND SHALL BE PURCHASER'S EXCLUSIVE REMEDY. IF ANY PORTION OF THIS LIMITED WARRANTY IS HELD ILLEGAL OR UNENFORCEABLE BY REASON OF ANY LAW, SUCH PARTIAL ILLEGALITY OR UNENFORCEABILITY SHALL NOT AFFECT THE ENFORCEABILITY FOR THE REMAINDER OF THIS LIMITED WARRANTY WHICH PURCHASER ACKNOWLEDGES IS AND WILL ALWAYS BE CONSTRUED TO BE LIMITED BY ITS TERMS OR AS LIMITED AS THE LAW PERMITS.

THE PARTIES UNDERSTAND THAT THE PURCHASER MAY USE THIRD-PARTY SOFTWARE OR EQUIPMENT IN CONJUNCTION WITH THE PRODUCT. SAMSUNG MAKES NO WARRANTIES OR REPRESENTATIONS AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, AS TO THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE OR SUITABILITY OF ANY THIRD-PARTY SOFTWARE OR EQUIPMENT, WHETHER SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT IS INCLUDED WITH THE PRODUCT DISTRIBUTED BY SAMSUNG OR OTHERWISE, INCLUDING THE ABILITY TO INTEGRATE ANY SUCH SOFTWARE OR EQUIPMENT WITH THE PRODUCT. THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE AND SUITABILITY OF ANY SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT LIE SOLELY WITH THE PURCHASER AND THE DIRECT VENDOR, OWNER OR SUPPLIER OF SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT, AS THE CASE MAY BE.

This Limited Warranty allocates risk of Product failure between Purchaser and SAMSUNG, and SAMSUNG's Product pricing reflects this allocation of risk and the limitations of liability contained in this Limited Warranty. The agents, employees, distributors, and dealers of SAMSUNG are not authorized to make modifications to this Limited Warranty, or make additional warranties binding on SAMSUNG. Accordingly, additional statements such as dealer advertising or presentation, whether oral or written, do not constitute warranties by SAMSUNG and should not be relied upon.

Samsung Electronics Canada, Inc.

©2006 Samsung Electronics Canada Inc. Samsung is a registered trademark of Samsung Electronics Co. Ltd. and its related entities.

No reproduction in whole or in part allowed without prior written approval.

Specifications and availability subject to change without notice.

#861826 v2 | 4032342

Index

A

- Air Time *49*
- Airplane Mode *131*
- Alarm Clock *91*
- Alert Notification *114*
- Auto-Answer *125*

B

- Battery
 - Charging *17*
 - Disposal *138*
 - Installing *17*
 - Removing *17*
- Bluetooth
 - Settings *121*
 - Using *107*

C

- Calculator *91*
- Call Forwarding *29*
- Call History *47*
 - Erasing *49*
 - Options *48*
 - Viewing *47*
- Call Options *23*
- Call timers *49*
- Call Waiting *29*
 - Do Not Disturb Mode *29*
- Caller ID *28*
- Camcorder *83*
- Camera
 - Camera Mode Options *77, 84*
- Choice Lists *101*

D

- Display
 - settings *115*
- display *9*
- Display Screen Symbols *9*
- Do Not Disturb Mode *29*

E

- E-Mail *66*
- Emergency Numbers *20*
- Entering Text
 - ABC Mode *27*
 - Selecting a Character Input Mode *26*
 - Symbols and Numbers *28*
 - T9 Text Input *26*

G

- Games *89*
- GPS Services *90*

I

- icons *10*
- IM & chat *66*
- interior screen *9*

K

- Keypad
 - sounds *112*

M

- Making Calls *19*
- Meeting / Silent Mode *112*
- memory card *13*
- Menus
 - Navigation *31*
- Messaging *50*
 - Erasing Text Messages *62*

Micro SD card *13*
Missed Call Notification *23*
MP3 *71*
Music *71*
My Albums *87*

N

Navigating Through Menus *31*

P

PCS Services
 Call Waiting *29*
 Caller ID *28*
Phone Book
 Adding an Entry *39*
 Calling a Number From *21*
 Editing Entries *41*
 Finding Entries *40*
Phone Number
 Displaying *19*
Phone Numbers
 Saving *25*
 With Pauses *20*

PictBridge Print *81*

playlists *72*

R

Ringers *110*

Ringtones

 Downloading *74*

S

screen *9*

Short codes *66*

Silent Mode *112*

Speakerphone *30*

Speed Dialing *21*

T

T9 Text Input *26*

Text Messages

 Default Entry Mode *64*

 Message Setup Options *63*

Tools & Apps *90*

Turning Your Phone On and Off
18

TV *75*

V

Video *74*

Voice Dial

 Changing Voice Dial Prompts
 104

 Changing Voice Dial Sensitiv-
 ity *103*

 Changing Voice Launch *105*

Voice Mail

 Clearing *52*

 Notification *51*

 Retrieving *52*

 Setting Up *50*

Voice Memos *105, 106*

Voice Recognition

 Activating *98*

W

Wallpaper

 changing *116*

 downloading *74*

Web alert *65*

Wireless Web

 Launching the Browser *68*

 Navigating *68*