


User Manual

----- TBS GPS Tracker watch phone

For model: TBS3202_b/TBS3203

Edition 1.2

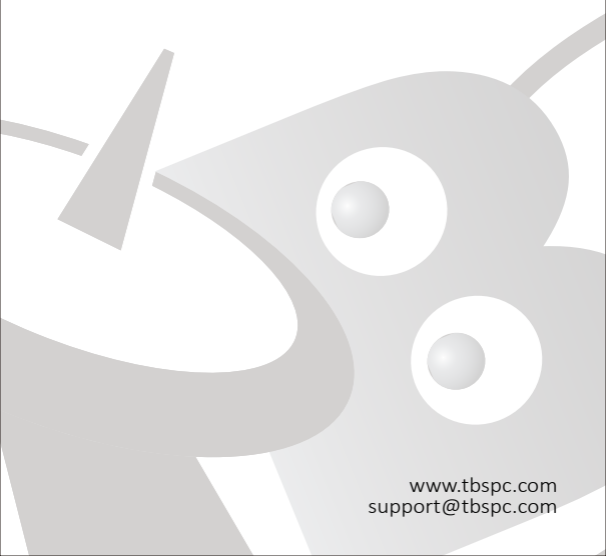

www.tbspc.com
support@tbspc.com


Overview

1. Appearance and key descriptions
2. SIM Card installing
3. Reset and Charge
4. Turn on and Turn off
5. Password setting
6. Guardian numbers setting
7. Dial /Answer a phone call
8. Working mode setting
9. GPS tracking
10. Audio remote monitor
11. Alarm setting
12. Low battery
13. Package Content
14. Appendix

1. TBS GPS watch phone layout

1.1 TBS3202_b

TBS3203

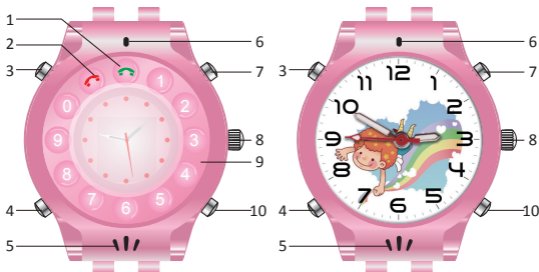

Number	Name	Description
1	Calling button <i>(For TBS3202-B only)</i>	Press to make a call
2	Hang up button <i>(For TBS3202-B only)</i>	Press to hang up a call/Charging indicator
3	Power button	Hold in the button to turn on/off the watch phone
	Backspace button	Press to reject a calls Press to return to standby mode
4	Speed dial-1	Press to call to the first guardian
5	Loud-speaker	Hand free speaker
6	Microphone	
7	Speed dial- 2	Press to call the second guardian
		Hold down to start SOS calling
8	Adjust the time	Twirl button to adjust the time
9	Dialing Keypad <i>(For TBS3202-B only)</i>	Hold down "1", it will work as "#"
		Hold down "0", it will work as "+"
10	Speed dial- 3	Press to call to the third guardian
		Hold down to turn on or turn off the voice prompt

2. SIM Card installing

2.1 SIM Card slot



Do not bend or twist the back cover excessively. Doing so may damage the cover.

Notes: Please make sure the phone has been turned off before you insert or remove the SIM card.

2.2 How to insert the SIM card



Insert the SIM with the gold-colored contacts facing up.

PS.:

> TBS GPS watch phone series are compatible with Micro-SIM card (15*12mm standard).

 
> TBS GPS watch phone series just support 2G: GSM 850/900/1800/1900MHz.

3. Reset and Charge

3.1 Reboot and reset the watch phone

> Use a small pointed device to press the mini “Reboot” button to reboot the watch.

> Guardians send SMS “0#password” to the watch phone to reset it. If the watch is malfunctioning for any reason, Guardians can send this SMS command to restore default settings.



3.2 Charge the watch phone

> The watch phone has built-in Lithium Polymer Battery, you can change it by connecting to power adapter or computer.

> When the watch is charging, the red LED light which the “Hang up button” is lit. When it is fully charged, the green LED light which the “Calling button” will be lit.



4. Turn on and Turn off

4.1 Turn on the watch phone

Hold down the power button to turn on.



Note: Please make sure the SIM card have been inserted correctly.

> If the SIM card is installed correctly, user will hear voice prompt “Entered the standby mode, self-check normal”.

> If the SIM card is installed incorrectly, user will hear voice prompt “Entered the standby mode, please check the SIM card”.

> When you hear the voice prompt “Self-check normal”, it means the watch phone is checking GPS signal automatically. If you are indoors, you will hear voice prompt “It is out of GPS signal, please go to outdoors”.

4.2 Turn off the watch phone.

> Hold down the “Power Button” to turn off the watch phone.

5. Password setting

- > The default password is the last four numbers of IMEI code.
- > Guardians can change password by sending SMS "7#old password#new password" to the watch.
- > The new password must be with 6 numbers.
- > If new password is successfully set, guardian's phone will receive SMS "7#, Password SET, OK" from the watch phone.

6. Guardian numbers setting


- > The watch phone supports to set up 3 "speed dial" guardian numbers and 1 SOS number by receiving SMS: "1#password#Guardian1#Guardian2#Guardian3#SOS number".
- > If guardian members are less than four, SMS command is different, for example "1#password#Guardian1#Guardian2".
- > If guardian members are less than four, the SOS number will be empty. When you hold down SOS button, the watch phone will call all guardians one by one.
- > After guardian numbers are successfully set up, the numbers will be assigned to corresponding button as below:




- > If guardian numbers are successfully set, guardian's phone will receive SMS "1#, Guardians set, ok" from the watch phone.

7. Dial /Answer a phone call

7.1 Answer a phone call

> Press “Speed Dial button 1-3” to answer the call. Or press  to answer the call. (For TBS3202-B only)

> Press “Turn on button” to hang up the call. Or press  to hang up the call. (For TBS3202-B only)

> The watch will answer the phone automatically 10 seconds later after a call is coming, even though the user does not press any button to answer the phone.

7.2 Dial a phone call

> In standby state, press corresponding speed dial button to call the guardian, and you will hear voice prompt as “call out”.

> In default mode, users can call anyone by dial the number in the keypad(For TBS3202-B only).

> Hold down button of speed dial- 2 to start SOS call. Once user starts SOS call, the watch phone will call guardians one by one till someone answers the phone.

8. Working mode setting

8.1 The watch phone supports 4 working modes:

> **Mode 1 (Default)** – Positioning acquiring system is active + the watch can get any incoming and all outgoing calls are allowed by dialer or speed dial buttons, speaker is active, vibration is active.

> **Mode 2 (Positioning only)** – Positioning acquiring system is active without incoming and outgoing calls, speed dial buttons are disabled, dialer buttons are disable, speaker is disable, vibration is disable.

> **Mode 3 (Parents only)** – Positioning acquiring system is active + only guardians are allowed for incoming and outgoing calls, speed dial buttons are active, dialer buttons are disabled, speaker is active, vibration is active.

> **Mode 4 (Silent mode)** – Positioning acquiring system is active + only guardians are allowed for incoming and outgoing calls. Speed

dial buttons are active, dialer buttons are disabled, speaker is disabled, vibration is active.

8.2 Guardians can change the working mode by sending SMS to the watch:

- > Send "3#password#1" to set up the "Mode 1".
- > Send "3#password#2" to set up the "Mode 2".
- > Send "3#password#3" to set up the "Mode 3".
- > Send "3#password#4" to set up the "Mode 4".

8.3 If the working mode is changed successfully, guardian's phone will receive confirmation SMS "MODE 1/2/3/4 SET, OK" from the watch phone.

Note: GPS tracking function, SOS function, Monitoring functions are always workable in any mode.

9. GPS Position

When the watch phone receives SMS "5#password" from guardian's number, it will reply guardian a GPS position SMS with Google map link, which includes longitude and latitude.

Note: The watch should be taken to outdoor for GPS signal. If it can't receive GPS signal for the position, it will reply the guardian with location of the previous GPS positioning.

10. Audio Remote Monitor

- > If guardians send SMS "6#password" to the watch phone, the watch will call back guardian's number automatically to have a one-way conversation.
- > If guardians send SMS "6#password#assigned phone number" to the watch phone, the watch phone will call the assigned number automatically to have a one-way conversation.
- > If guardians send SMS "11#password" to the watch phone, the watch phone will call back guardian's number automatically to have a two-way conversation.

> If the phone server is too busy to make the call immediately, the watch will reply to guardian with SMS "The server is currently busy, please try again later".

PS.:

One-way conversation means the guardian phone can monitor the sound around the TBS3202_b GPS watch phone, but TBS3202-b GPS watch phone can't hear any sound.

Two-way conversation means TBS3202-b GPS watch phone and guardian phone can talk with each other.

11. Alarm setting

> The guardian can set up 3 alarms by sending SMS "10#password#alarm time1#alarm time2#alarm time3", For example: "10#password#0730#1230#1730".

If setting is successful, the watch will reply guardian with SMS "Alarm successful setting".

> When the alarm is ringing, press power button to stop it.

> The guardian can turn off the alarm by sending SMS "10#password#0". If setting is successful, the watch will reply guardian with SMS "alarm has been closed".

> The guardian can turn on the alarm by sending SMS "10#password #1", If setting is successful, the watch will reply guardian with SMS "alarm turned on" in advanced the alarm time was set up. Or else the watch will reply guardian with SMS "please set alarm time".

12. Low Battery



> There will be a voice prompt when watch phone's battery is low. At the same time, the red LED light in "hang up button" will flash.

13. Package Content:

- 1 x Kid watch phone
- 1 x USB charging cable
- 1 x Power adapter
- 1 x USB earphone
- 1 x User manual

14. Appendix:

14.1. SMS Commands List

Function	SMS Command	Remarks
Factory Reset	0#password	Watch phone receives this command to have factory reset automatically.
Guardian numbers setting	1#password#Guardian1#Guardian2#Guardian3#SOS number	
Mode setting	3#password#mode number	Mode number list: Parents Mode: 1 GPS mode: 2 Kids Mode: 3 School Mode:4
GPS tracking	5#password	After receiving this command, watch phone will collect its position data (longitude & latitude) and reply SMS to guardian with Google Map Link.
Monitor	6#password	After receiving this command, watch phone will call back guardian's number automatically to have a one-way conversation.
	6#password#assigned phone number	After receiving this command, watch phone will call back the assigned number automatically to have a one-way conversation.
Password setting	7#old password#new password	The new password must be with 6 numbers.
Alarm setting	10#password#alarm time1#alarm time2#alarm time3	For example: 10#password#0730#1230#1730
Auto Call	11#password	After receiving this command, watch phone will call the guardian automatically, then you can talk to each other.

14.2. Working mode comparison

	Positioning	Incoming calls	Outgoing calls	Speed dial	Dialer buttons	Speaker	Vibration
Mode1	Active	All	All	Active	Active	Active	Active
Mode2	Active	Disable	Disable	Disable	Disable	Disable	Disable
Mode3	Active	Guardian only	Guardian only	Active	Disable	Active	Active
Mode4	Active	Guardian only	Guardian only	Active	Disable	Disable	Active

14.3. FAQ:

Solutions to SIM card problem:

- 1) Make sure the SIM card you buy is "MICRO SIM CARD", with size of (15*12mm standard). It must support GSM 850/900/1800/1900MHz.
- 2) Try to insert the SIM card into a regular cell phone and test if the card works normally.
- 3) Try to use a forceps to push the SIM card inwards to help the card completely position in the slot after inserting SIM card into the phone. The accessories in a 3202-b box actually include a forceps. Sometimes this kind of problem is caused by poor positioning of the cards. If pushing the card by using pen-point, turn on the power again and it works.
- 4) The watch must be off before placing the SIM card inside the watch. If it is placed in the watch while watch is on it will not detect the SIM card or any text commands.
- 5) Listen to the indication carefully after you turn on watch phone. If the watch phone indicates "Please check the SIM card", it means that the card is not plugged properly.

Solutions to the GPS position problem :

- 1) The watch should be in outdoor to receive GPS signal for location positioning.
- 2) It will take about 5 minutes to activate GPS function in the first time.

Solutions to the charging problem :

- 1) Use a normal phone power adapter for charging. Or connect the watch phone to a PC for charging. If these ways work, it means that is the power adapter damaged. Contact with your seller for a new one.
- 2) Use another USB cable for charging. If this way works, it means that is USB cable damaged. Contact with your seller for a new one.
- 3) If you check both power adapter and USB cable are without problem, the watch still can't be turned on after charging more than half a hour, it means the watch is damaged. Contact with your seller for maintenance or replacement.