


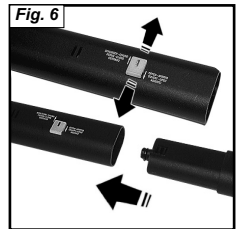
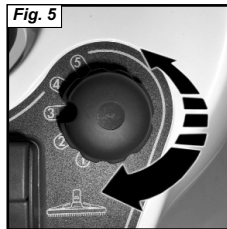
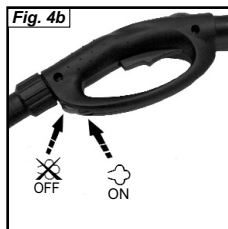
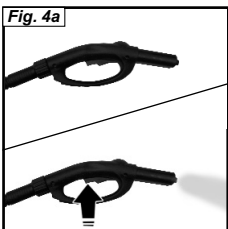
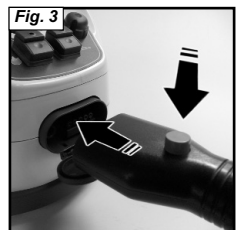
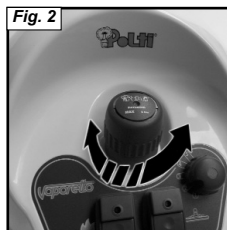
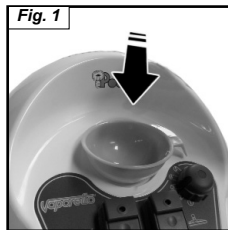
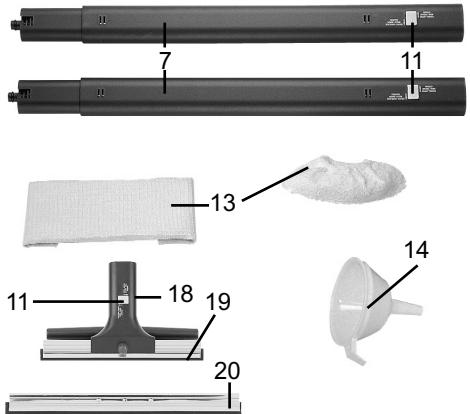
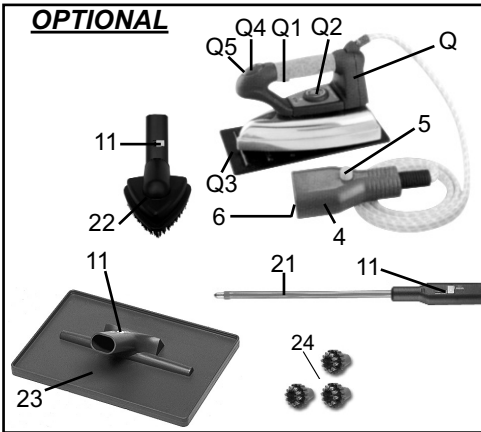


Vaporetto®

eco care

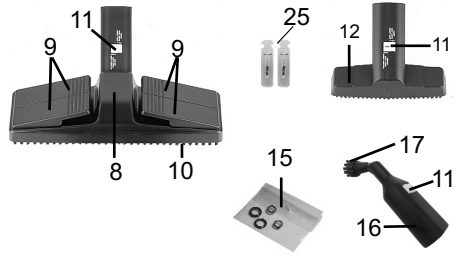

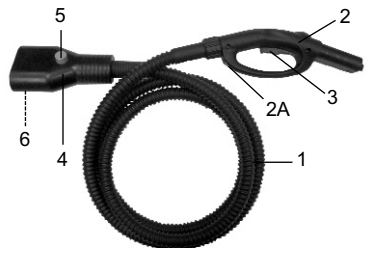

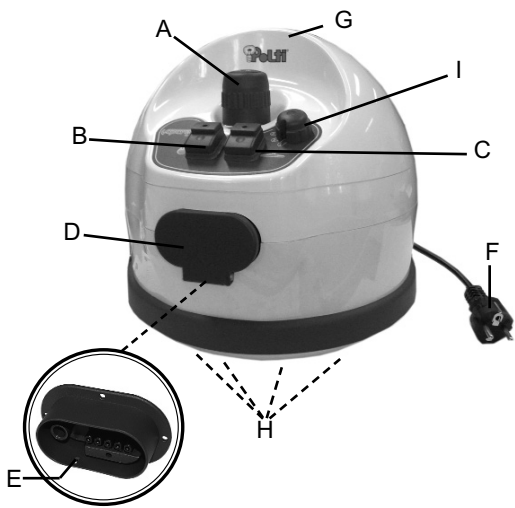

KEEP THESE INSTRUCTIONS

Read these instructions carefully before using the appliance.

Any use which does not comply with these instructions will invalidate the warranty.

Dear Customer,

Thank you for purchasing this POLTI product, contributing to the conservation of our most precious natural resource: the Environment. Vaporetto solves all cleaning and hygiene problems without the use of detergents - all that's needed is just normal tap water which our system transforms into steam at a constant powerful pressure, allowing you to clean more thoroughly and in an ecological way eliminating dust mites and allergens.*

Our Technical Development team has added a range of sophisticated improvements to make cleaning tasks both safer and more effective:

Safety is guaranteed by the strict tests all Polti products and accessories are subjected to.

- The **Safety Cap** - a unique Polti patent, prevents opening whilst any residual pressure to remain in the system.
- The water **boiler tank** is made of a stainless steel 18/10 which resists lime scale and corrosion and extends the life of your appliance.
- Steam pressure is controlled by a **pressure switch** and the steam flow can be regulated while operating.

**According to the tests carried out by Cambridge University, Vaporetto eliminates at least 98% of dust mites and at least 86% of allergens*

TECHNICAL DATA

Voltage:.....**120 V~**
 Frequency:.....**60 Hz**
 Max power:.....**1500 W**
 Net weight (without water):**11.02 lb (5 Kg) APPROX**

Polti S.p.A. reserves the right to change equipment or accessory specification without prior notice.

Copyright: *The documents supplied with the machine, including this manual, are the property of POLTI S.p.A. All rights reserved.*

IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ ALL INSTRUCTIONS AND WARNINGS AND MAKE SURE YOU UNDERSTAND THEM BEFORE USING THE STEAMER.



SAFETY ALERT SYMBOL: This symbol indicates that a potential risk of injury exists. The safety messages will follow the safety alert symbol with the words "DANGER" "WARNING" or "CAUTION"



DANGER SIGN: This sign indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.



WARNING SIGN: Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury. It highlights conditions that are a serious risk for personal safety.



CAUTION SIGN: Indicates a potentially hazardous situation which, if not avoided, may result in a minor or moderate injury, and to alert against unsafe practices.

These safety messages will indicate the potential hazard and how to reduce the possibility of injury, and the risks if you do not follow the instructions.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

Any use which does not comply with these instructions will void the warranty.

SAFETY INFORMATION

This product is intended for household use only

GROUNDING INSTRUCTION

This appliance must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This appliance is equipped with a cord having an equipment-grounding conductor and grounding plug. The plug must be inserted into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.



IMPROPER CONNECTION OF THE EQUIPMENT-GROUNDING CONDUCTOR CAN RESULT IN A RISK OF ELECTRIC SHOCK, WHICH CAN CAUSE INJURY OR DEATH. CHECK WITH A QUALIFIED ELECTRICIAN OR SERVICE PERSON IF YOU ARE IN DOUBT AS TO WHETHER THE OUTLET IS PROPERLY GROUNDED. DO NOT MODIFY THE PLUG PROVIDED WITH THE APPLIANCE - IF IT WILL NOT FIT THE OUTLET, HAVE A PROPER OUTLET INSTALLED BY A QUALIFIED ELECTRICIAN.

This appliance is for use on a circuit having a nominal rating of 120 volts and is factory-equipped with a specific electric cord and plug to permit connection to a proper electric circuit. Make sure that the appliance is connected to an outlet having the same configuration as the plug. No adaptor should be used with this appliance. If the appliance must be reconnected for use on a different type of electric circuit, the reconnection should be made by qualified service personnel.

- **WARNING** – To reduce the risk of fire, electric shock, or injury:
- Not for space heating purposes
- To provide continued protection against risk of fire or electric shock, connect to properly grounded outlet
- For household use only
- To reduce the risk of electric shock – Use indoor only
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not use extension cords.



IMPORTANT SAFETY INSTRUCTIONS
TO REDUCE THE RISK OF ELECTRIC SHOCK, FIRE OR INJURY:

Read all instructions carefully before using the appliance.

- The wiring system to which the appliance is connected must always comply with applicable laws and regulations.
- Always connect to properly grounded outlet (see “Grounding Instructions”, page 4).
- Connecting the appliance to improper voltage may cause injury of fire or result in damage to the appliance. Before connecting the appliance, make sure that the voltage is the same as the voltage indicated on the data label of the appliance. No adapter should be used with this appliance.
- If the appliance is left unused, disconnect it from electrical outlet. Never leave the appliance unattended with the cable plugged-in.
- Always make sure the that appliance is unplugged before performing maintenance work of any kind, including adding water or cleaning the appliance.
- Always turn off the appliance using the on/off switch before unplugging it.
- Do not unplug by pulling on the cord. Grasp the plug to avoid damaging the socket and risking a short-circuit.
- Do not allow the power cable to be twisted, crushed, stretched, or come into contact with sharp or hot surfaces.
- Do not use the appliance if the power cable or other parts of the appliance are frayed or damaged, and do not attempt repairs. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never touch the appliance with wet hands or feet with the cable plugged into electric outlet.
- Do not use the appliance when barefoot.
- Do not use the appliance near sinks, bathtubs, showers or containers full of water.
- Never immerse the appliance, the cable or the plugs in water or another liquid.
- Use appliance only for its intended use as described in this manual. Do not use as a space heater or for any other purposes not specified .
- While refilling with water, switch off and unplug the appliance.
- Do not use a flammable or combustible liquid to clean a floor or other surface
- Do not use the appliance where there is a danger of explosion.
- Use indoors only.
- Do not place the appliance near any other electrical appliance that is currently in use or near any heat source.
- Store the appliance in dry place. Do not expose to temperatures under 32°F (0°C) or over 104°F (40°).
- Do not direct the steam jet at electrical and/or electronic equipment or at the appliance itself.
- Keep the appliance out of children’s reach. It contains small parts.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities. Do not use before reading and understanding these instructions.
- High-pressure steam jets can be dangerous if used improperly.
- Do not direct the steam jet at people, pets or debris .



Steam may cause serious injury if in contact with body parts. Always allow the steamer to cool down before handling

- Do not direct the steam jet at electrical equipment or the appliance itself.
- Never place your hands or any body parts in the steam jet.
- Before plugging-in the appliance, ensure that the safety button is activated.
- Before refilling the appliance when it is hot, turn it off, unplug it, unscrew the safety cap and allow it to cool for at least 5 minutes to avoid scalding.
- Keep your face and any body parts away if you fill the boiler when it is still hot, as a few drops of water can evaporate on contact with the hot boiler, causing a jet of steam .
- Do not empty the appliance when the water inside the boiler is still hot.
- Do not unscrew the cap when the appliance is in operation.
- Do not use to treat clothes being worn on the body.
- Always rest the appliance on a stable surface. When cleaning stairs, ensure that the appliance is securely placed on a step before operating. Do not lay on steps that are narrower than the size of the appliance. Use extra care when cleaning on stairs.
- Do not wind the power cable around the appliance, especially when the appliance is still hot .
- Care should be used to arrange the cord so as not to trip over it . Safely put the cord in its compartment and put in storage after each use to prevent tripping accidents.
- Steam through the hose will cause it to get hot. Avoid contact with hot areas.
- Always keep the appliance in horizontal position during operation.
- If the appliance has been dropped, damaged, or immersed in water, or leaks, do not use and contact the customer care as the internal safety features may have been affected.
- In case of breakdown or malfunction switch off the appliance and never attempt to disassemble it, but contact the customer care.
- This appliance is equipped with safety devices which are to be replaced only by a qualified technician.
- Regularly check the status of the safety cap and seal, replace with original parts as necessary.
- Let the appliance cool down before cleaning it or carrying out any maintenance.
- Before storing the appliance make sure that it has completely cooled down.



IMPORTANT SAFEGUARDS
WHEN USING THE STEAM IRON

When using the iron accessory, in addition to the above safeguards that apply to the steamer:

- Iron only on supports that are heat resistant and which allow the steam to permeate.
- Replace the iron rest mat only with original spare parts.
- If ironing whilst sitting down, take care to ensure that the jet of steam is not angled towards your legs. Steam can scald.
- Always use and rest the iron on a stable surface.
- When placing the iron on its stand, make sure that the surface on which the stand is placed is stable.
- Do not leave the iron unattended while connected or on an ironing board
- Use the iron on an ironing board. Ironing on any other surface may damage the surface.
- Burns may occur when touching hot surfaces or near steam vents.
- Use iron only for its intended use.
- Close supervision is necessary when the iron is used near children.



IMPORTANT SAFEGUARDS
USING THE APPLIANCE:

- Water contains magnesium, mineral salts and other deposits that may cause the formation of scale. To prevent these deposits from damaging the appliance, we recommend periodically adding Kalstop FP2003 in the boiler tank , a natural descaling agent specifically formulated to prevent formation of scale and protect your appliance. For any queries please visit us at www.polti.com web site. Alternatively, use a mixture of 50% tap water and 50% distilled water or bottled spring water.
- Never use 100% distilled water or bottled spring water but always mix them with 50% tap water.
- Never use water from clothes dryers, scented water, water from refrigerators, batteries or air conditioners, pure distilled water or rain water.
- Do not put any detergent or chemical substance in the boiler tank.
- For best results, use original Polti products only, as products of other brands may not be suitable for use in Polti appliances and could cause damage.
- Press the buttons only with a finger, without excessive force and avoid using pointed objects such as a pen or a screwdriver.
- To avoid compromising the safety of the appliance use only original spare parts.
- Do not overfill the boiler tank.
- Do not place the hot appliance on heat-sensitive surfaces.



DO NOT SWALLOW




Keep out of the reach of children. The Kalstop FP2003 supplied with the appliance contains vegetable origin tannic complex, in alkaline aqueous solution. Avoid contact with the eyes and skin. In case of contact with the eyes, flush with cold water for 15 minutes. In case of contact with skin, wash with water. If irritation persists, call a doctor or a poison control center.

KEY


GENERATOR

- A) Patented Safety Cap
- B) Generator on/off switch
- C) Accessory on/off switch
- D) Central connector block with splash proof cover
- E) Lock-in aperture for central connector
- F) Power supply cable
- G) Carrying handle
- H) Pivotting wheels
- I) Steam flow regulation control
- J) "Out of water" indicator light
- K) Steam pressure indicator light
- L) Pressure indicator

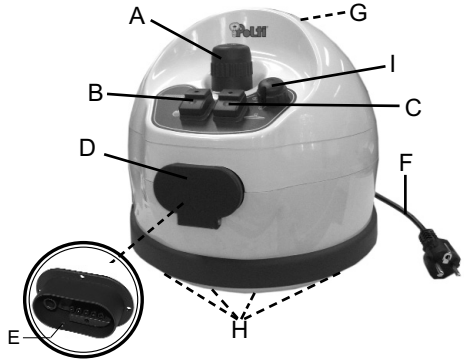

ACCESSORIES

- 1) Flexible hose
- 2) Steam gun
- 2A) Safety switch
- 3) Steam request lever
- 4) Connector assembly
- 5) Press down connector button
- 6) Locking tab
- 7) Extension tubes
- 8) Large brush
- 9) Cloth retaining clips
- 10) Replaceable bristles plate
- 11) Accessories locking button
- 12) Small brush
- 13) Cotton cloths
- 14) Filler funnel
- 15) Spare washers for accessory connections
- 16) Steam concentrator
- 17) Small round brush for steam concentrator
- 18) Window squeegee tool
- 19) Small blade for window tool
- 20) Large blade for window tool
- 25) 2 vials of Kalstop FP2003

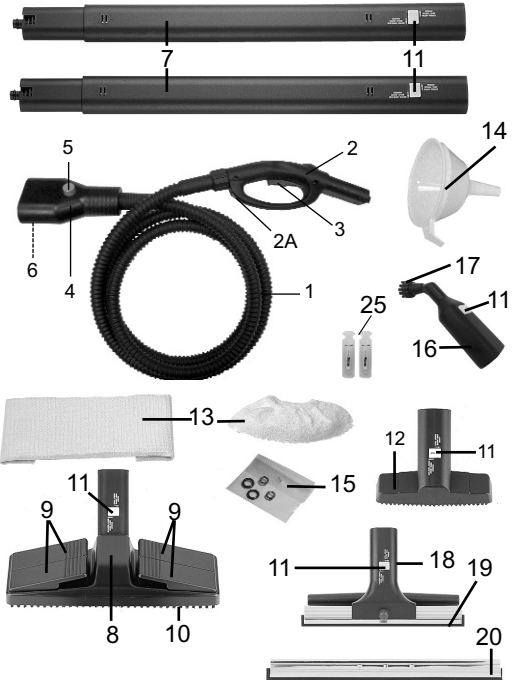

OPTIONAL ACCESSORIES

- 21) High pressure lance
- 22) Triangular brush
- 23) Wallpaper stripper tool
- 24) Small round brass brushes for steam concentrator
- Q) Professional Iron
 - Q1) Steam request button
 - Q2) Temperature regulation dial
 - Q3) Iron rest mat
 - Q4) Continuous steam jet button
 - Q5) "Iron heating" indicator light



CORRECT USE OF THE PRODUCT

This appliance is intended for home use as a steam cleaner as described and in accordance with the instructions provided in this manual. Please read these instructions carefully and keep them, as you may find them useful in the future.

POLTI DECLINES LIABILITY FOR ANY DAMAGE OR ACCIDENT DERIVED FROM ANY USE OF THIS APPLIANCE WHICH IS NOT IN CONFORMITY WITH THE INSTRUCTIONS CONTAINED IN THIS BOOKLET.

IMPORTANT

Before leaving our factory all our products are rigorously tested. For this reason, your VAPORETTO may contain some residual water in the boiler from the testing.

SET UP

Before using VAPORETTO for the first time assemble the pivoting wheels as indicated in the Fig. A.

PREPARATION FOR USE



WARNING



Steam may cause serious injury if in contact with body parts. Always allow the steamer to cool down before handling.



To reduce the risk of personal injury unplug the power cord from the electrical outlet and let the appliance and the accessories cool down completely before handling



Always make sure that the appliance is unplugged before performing maintenance work of any kind, including adding water or cleaning the appliance.

1. Unscrew the patented safety cap **(A)** and fill the boiler with about 50 fl oz (1.5 L) of water using the filler funnel **(14)** making sure that it does not overflow (fig. 1).

NOTICE Ordinary tap water may be used. However, since water contains lime scale by nature, which may cause scaling in the long run, we recommend using a mixture of 50% tap water and 50% distilled water or bottled spring water. Never use 100% distilled water or bottled spring water but always mix them with 50% tap water. To use tap water only and avoid scale formation, we recommend periodically adding the special natural scale removal agent Kalstop FP2003. Pour half vial of Kalstop into the boiler tank containing the recommended quantity of water. If your water supply is particularly hard, you may want to use more (such as 1 vial for 34 fl oz / 1 liter of water).

2. Carefully screw on the safety cap to hand tight (Fig. 2). Make sure the patented safety cap **(A)** is fully and correctly screwed on, otherwise steam may escape from around the cap.
3. Connect the power supply cable **(F)** into an electrical outlet of the correct voltage.



Do NOT under any circumstances put or leave the filler funnel in the water filling aperture of the appliance when the appliance is connected to the electrical outlet. Danger of burns!
Always make sure generator on/off switch **(B)** is switched OFF before connecting the appliance to the mains.

INSTRUCTIONS FOR USE

- 1a. Press down the generator on/off switch **(B)** and the accessories on/off switch **(C)** which will light up.
- 2a. Open the cover of the central connector block **(D)** and insert the central connector **(4)** pressing the connector button **(5)** and taking care that the locking tab **(6)** is correctly positioned in the lock-in aperture **(E)** on the block (Fig. 3).
- 3a. When the generator on/off switch **(B)** goes out, the steam cleaner is ready for use

4a. The steam gun (2) is equipped with a safety switch (2A) which prevents the accidental start of the steam jet by children or people who do not know how to operate the appliance.

With the switch (2A) in the "OFF" position, the lever controlling the steam jet is locked (Fig.4b). Should the hose be left unattended for a moment whilst the appliance is connected to the electrical outlet, it is recommended to put the safety switch in the "OFF" position. To start working, set the (2A) switch to the "ON" position and press the steam button (Fig.4a).

The first burst of steam may contain some water droplets, due to imperfect thermic stabilization inside the flexible hose. We would therefore advise that the first jet of steam is sprayed onto an old cloth until a constant pressure of steam is obtained.

Note: The generator on/off switch (B) may go on and off from time to time during use of VAPORETTO. This means the machine is maintaining the correct and constant pressure and is quite normal.

STEAM REGULATION FEATURE

VAPORETTOs are equipped with a steam regulation control (I) (Fig. 5). You can increase the steam flow by turning the control in clockwise direction. Turning it in an anti-clockwise direction reduces the steam flow. Here are some suggestions for the choice of steam flow level:

- Strong steam: for encrusted dirt, stains, grease and for sanitizing.
- Normal steam: for carpets, rugs, glass, tiles etc.
- Delicate steam: for vaporizing plants and cleaning delicate surfaces.

CONNECTION OF ACCESSORIES

All the accessories of VAPORETTO can be connected to the handle or to the extension tubes as per the following instructions (fig. 6):

- 1b. Move the locking button (11) on the accessory to the "open" position.
- 2b. Attach the required accessory to the hand gun or to the extension tube.
- 3b. Move the locking button (11) back to the position 'closed'.
- 4b. Check that the locking button has engaged and the accessory is fully connected.

PATENTED SAFETY CAP / "WATER OUT"



Steam may cause serious injury if in contact with body parts. Always allow the steamer to cool down before handling.

The appliance is equipped with a patented safety cap, which prevents opening of the generator boiler tank as long as there is any pressure remaining inside. This is an important and indispensable safety device, and it is necessary to follow the procedure here below when re-filling the boiler tank.

When you have used up all the water in the tank, proceed as follows:

- 1c. Switch off the machine at the generator on/off switch (B)
- 2c. Press the steam request lever (3) on the steam gun (2) or, if using the professional iron, the steam request button (R) on the professional iron (Q) so as to fully exhaust the steam supply from the tank.
- 3c. Switch OFF the accessory on/off switch (C).
- 4c. Disconnect the power supply cable (F) from the electrical outlet.
- 5c. Unscrew anti-clockwise the patented safety cap (A)
- 6c. Wait at least for 5 minutes to allow the boiler tank to cool down.
- 7c. When cool proceed to carefully refill the boiler tank as described in paragraph 1 of the section "Preparation for Use". If refilling the generator when not completely cooled, pour only very small quantities of water at each pouring into the tank, so as to avoid spitting from the tank, and cover exposed skin and face whilst filling

USE OF THE PROFESSIONAL IRON (OPTIONAL)



WARNING



Steam may cause serious injury if in contact with body parts. Always allow the steamer to cool down before handling.



To reduce the risk of personal injury unplug the power cord from the electrical outlet and let the appliance and the accessories cool down completely before handling

Vaporetto can be quickly transformed into a highly effective ironing system to make ironing quick and easy. Simply connect the product to the iron accessory for Vaporetto.

- Fill the boiler tank of the steam generator with water as described in the user's manual for the generator.
 - 1d. Connect the connector assembly at the end of the iron hose (4) to the generator as shown in point 2a of the section "Instructions for Use".
- Check the manufacturer's label on the garment, and interpret the symbol on the label as follows:

	Steam ironing allowed For dry ironing, set the temperature regulation dial (Q2) on ...
	Steam ironing allowed For dry ironing, set the temperature regulation dial (Q2) on ..
	Check the fabric's resistance to steam ironing or dry iron with the temperature regulation dial (Q2) set on •
	- do not iron - steam ironing or treatment not allowed

STEAM IRONING

- 2d. For STEAM ironing, turn the dial (Q2) and set the iron temperature to its maximum travel on the "COTTON-LINEN" steam position.
- 3d. Wait for a few minutes until the "Iron heating" indicator light (Q5) goes out, to show that the soleplate of the iron has reached the required temperature.

- 4d. Press the steam request button (Q1) to enable the steam to come out. The steam flow will stop when the button is released. After each filling, when you first start to use the iron, a few drops of water mixed with the steam may be emitted (due to imperfect heat stabilization). It is therefore advisable to direct the first jet of steam onto a rag.
- 5d. The iron can also be used in a vertical position e.g. for removing creases from curtain, clothing etc.
- 6d. To obtain a continuous jet of steam move the sliding button (Q4). The steam will continue to come out even when the steam request button (Q1) is released. To stop the steam flow move the sliding button backwards (Q4).

NOTICE When using the iron accessory, it is recommended that the steam flow of your appliance be adjusted to a medium level, or make a few tests to find the most suitable emission for the fabric that you intend to iron.

DRY IRONING

- 7d. If you need to DRY iron (ONLY) (NOT steam ironing), press the accessory on/off switch (C) and adjust the temperature of the iron by turning dial (Q2) to the temperature required for the fabric (as shown on the dial).

CAUTION when dry ironing, be careful not to press the steam request button (Q1), as hot water could come out of the iron onto your garment and board.



WARNING

- Do not leave the iron unattended whilst connected to the electrical outlet.
- Iron only on heat resistant surfaces and on surfaces that allow the steam to escape e.g. MESH ironing boards.
- **CAUTION** if you iron sitting down, do not place your legs under the ironing board, the steam can cause burns.

TIPS FOR BETTER UNIT PERFORMANCE

WARNINGS

- For cleaning leather, wood or delicate fabrics especially, velvet and other pile surfaces, consult the manufacturers instructions. Clean only by using the hand gun at a safe distance together with a soft cloth and always do a test on a non visible part of the item first or on a sample.

Allow the test area to dry completely before observing results and effects on surface or color before proceeding to clean further areas.

- For cleaning wood surfaces (furniture, doors etc.) take great care as a too long application of the steam could alter the waxed appearance, the shine or the color of the surfaces cleaned. We therefore recommend you to apply the steam on such surfaces only for brief periods or to clean these surfaces using a cloth first held in the steam.
- Please pay particular attention while cleaning brick floors: a too long application of steam could damage wax, brightness or color of these surfaces.
- For delicate surfaces (e.g. synthetic materials, lacquered surfaces etc.) we recommend to always cover the small brush with at least two cloths to reduce the intensity of the steam, and (on machines with steam variation control) with the steam set at low level. Always test first on a non-visible area, allow to dry thoroughly, and if successful, be sure to use exactly the same tool, technique, steam level and steam jet distance.
- If cleaning glass surfaces in particularly low temperatures preheat the glass using the hand gun from about 1.6 ft (50 cm) distance from the surface to be cleaned.
- For care of your plants vaporize at a minimum distance of 1.6 ft (50 cm).

STEAM GUN (2)

The steam gun can be used directly on all spots requiring a stronger, closer treatment without connecting the brushes. The more resistant the stain, the closer you should hold the gun, the steam pressure and temperature being higher at the source. Always wipe with a dry cloth (or a slightly abrasive sponge if the spot is a difficult one to remove) after using the gun. Steam gun is particularly efficient at:

- breaking down rug and carpet stains before they are treated with the large brush;
 - cleaning stainless steel surfaces, panes, mirrors, enamelled surfaces;
 - cleaning hard-to-reach corners, such as stairs, window sills, door posts;
 - cleaning cooking top knobs, taps bases
 - cleaning window shutters, odors, car interiors;
 - spraying plants (from a distance);
 - removing odors and creases from clothes.
- To reach higher points, the steam gun can be connected to one or both extension tubes.

LARGE BRUSH (8)

To clean floors, put a clean, dry kitchen cloth under the brush and swing back and forth without applying any pressure. Use the other side of the cloth when the first one is impregnated with dirt. Use the brush directly without the cloth on particularly dirty or incrustated areas and in spaces between the tiles: swing the brush sideways to detach the dirt. Highly obstinate stains may require a steam gun treatment before the brush and cloth are used (an old bath towel is an ideal cloth). The same procedures apply to ceilings and vertical surfaces, like wallpaper. The cloth can easily be fastened around the brush and held in place by the 4 clips (9) on the brush itself. Smooth cotton cloths are suitable for the treatment of glass surfaces: fasten the cloth around the brush then pass it over the window pane (or mirror) to remove the greasy film. Finally, spray the surface with the steam gun and wipe dry with a clean cloth. In cold weather, window panes will require pre-heating with the steam gun (from a distance of 1.6 ft (50 cm)), prior to the actual cleaning with the brush. VAPORETTO is ideal for both syntetic and wool rugs as well as for all types of carpets. Its use ensures total hygiene, revives colors and restores the original brilliance of the pile. Drying occurs practically at once. Fold a cotton cloth over 2 or 3 times (according to the length and resistance of the pile) and fasten it onto the brush. Move the brush rapidly in all directions without applying any pressure. You should avoid lingering in the same place, as this may soak the area. Particularly dirty rugs may need several treatments. Obstinate stains may require the use of the steam gun (from a distance of 0.15 - 0.3 ft (5-10 cm)) prior to treatment.

SMALL BRUSH (12)

The small brush is used whenever the big brush is too big or not practical.

The small brush can be connected directly to the steam gun or to the extension tubes. The small brush can be used on:

- furnishing fabrics (after testing on a small hidden area)
- car linings (not pile surfaces), car windows (not in freezing temperatures)
- small window surfaces
- tile and other small surfaces

To clean wood (doorposts, floors etc) do not apply the steam directly but cover the brush (big or small) with a doubled cotton cloth. For furniture cleaning, direct the steam jet onto a dry cotton cloth, and then start the cleaning. The warm moisture on the cloth traps the dust, spots and the static electricity so that the furniture stays clean longer.

STEAM CONCENTRATOR (16)

The steam concentrator (which can be connected directly to the gun or together with the extension tubes) allows you to concentrate a powerful jet of steam to otherwise inaccessible locations, such as radiators, door posts, sills and shutters, as well as for sterilizing toilet bowls. It's a very useful and indispensable tool.

WINDOW SQUEEGEE TOOL (18,19,20)

DO NOT USE STEAM ON GLASS IN FREEZING TEMPERATURES

Warning: in particularly cold weather, pre-heat the windows by applying steam from a distance of about 1.6 ft (50 cm) from the surface to be cleaned.

The window squeegee tool allows you to clean effectively and rapidly all glass surfaces without using detergents. Your glass will remain cleaner longer thanks to the absence of the film normally left behind by chemical cleaning products on which new dust and grease can adhere.

Cleaning glass is done in two stages:

- Spray the steam onto the surface to be cleaned to loosen the dirt (not touching with the blade).
- Pull the blade straight down the window surface from top to bottom without applying the steam, to take away the dirt.

- FOR EXTRA ABRASIVE ACTION AND MORE EFFECTIVE REMOVAL OF DIRT, WE RECOMMEND USING THE BRISTLES SUPPLIED WITH THE LARGE WINDOW CLEANING KIT

To clean especially large glass surfaces, attach the window squeegee tool to the extension tubes.

OPTIONAL ACCESSORIES

PROFESSIONAL IRON (Q)

Vaporetto can be quickly transformed into a highly effective ironing system to make ironing quick and easy. Simply connect the product to the iron accessory for Vaporetto.

HIGH PRESSURE LANCE (21)

This accessory allows you to reach the most inaccessible places. Ideal for cleaning large radiators or shutters etc.

TRIANGULAR BRUSH (22)

A new accessory whose shape allows access into the most difficult corners.

WALLPAPER STRIPPER TOOL (23)

Specially designed for easy removal of wallpaper without significant wetting.

SMALL ROUND BRASS BRUSHES FOR STEAM CONCENTRATOR (24)

To be screwed onto Steam Concentrator (16) accessory. They add a strong abrasive action on resistant surfaces (such as the BBQ grill).

KALSTOP FP2003


Water contains magnesium, mineral salts and other deposits that may cause the formation of scale. To prevent these deposits from damaging the appliance, we recommend periodically adding Kalstop FP2003 in the boiler tank, a natural descaling agent specifically formulated to prevent formation of scale and protect your appliance. Pour half vial of Kalstop into the boiler containing the recommended quantity of water. If your water supply is particularly hard, you may want to use more (such as 1 vial for 34 fl oz / 1 liter of water).

For any queries please visit us at www.polti.com website.

CARE OF YOUR VAPORETTO


- Before attempting any maintenance operation, make sure to always disconnect the appliance from the electrical outlet.
- To clean the body of the appliance, use a moist cloth.

Regularly check the status of the green gasket located on the central connector (4). If necessary, replace the gasket with the spare washers supplied (15).

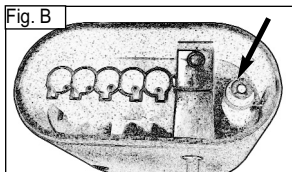

- Remove the broken / damaged green gasket.
- Insert the new one. Put it on the steam nozzle and push it till its seat. See (fig. B)
- Lubricate the gasket with some oil.

Perform the same check on the connection black gasket of the extension tubes (7) and the steam gun (2).

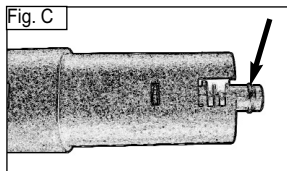

- Remove the broken / damaged black gasket.
- Insert the new one. Put it on the steam nozzle and push it till its seat. See (fig. C)
- Lubricate the gasket with some oil.

TROUBLESHOOTING

PROBLEM	SOLUTION
The appliance can not switch on	Check that the lead is correctly plugged into a suitable electrical outlet. Ensure that the appliance has been turned on using the ON/OFF switch (B).
Generator on/off switch (B) and accessory switch (C) are on but no steam is delivered.	Wait for the switch (B) to turn off. If even once the lamp (B) is off, steam is still not delivered, there is no water in the boiler. Fill according to the instructions given in the manual.

WHO IS COVERED:

This product is warranted to the original purchaser or the person receiving the product as a gift against defects in materials and workmanship as based on the date of original purchase from an Authorized Dealer. The original sales receipt showing the product name and the purchase date from an Authorized Dealer is considered proof of the date of purchase.

WHAT IS COVERED:

Subject to the exclusions contained below, Polti USA, Inc. warrants this product to be free from defects in materials and workmanship for a period of 1 (one) year from the date of purchase.

At its option, Polti USA, Inc. will either repair the product at no charge, using new or refurbished replacement parts, or exchange the product with a product that is new or which has been manufactured from new, or serviceable used parts and is at least functionally equivalent to the original product in current inventory, or refund the original purchase price of the product. Polti USA, Inc. warrants replacement products or parts provided under this warranty against defects in materials and workmanship from the date of the replacement or repair for the remaining portion of the original product's warranty. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Polti USA, Inc.'s property.

When a refund is given, your product becomes Polti USA, Inc.'s property. Replacement product can only be sent if all warranty requirements are met. Failure to follow all requirements can result in delay or denial of warranty.

WHAT IS NOT COVERED**EXCLUSIONS AND LIMITATIONS:**

This limited warranty does not cover defects due to incorrect use or use other than that identified in the instruction manual, which is an integral part of the contract of sale for the product. The limited warranty does not cover parts that are subject to normal wear and tear (consumables such as filters, brushes, etc.),

Defects or damage that result from (a) the use of non-Polti original accessories, spare parts or consumables, (b) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse, (c) use of the products for commercial purposes; (d) subjecting the product to abnormal usage or conditions, (e) limescale build-up, and (f) chance (fire, short circuit) which are not the fault of Polti USA, Inc., are excluded from coverage.

Polti will accept no responsibility for any injury to people or animals or damage to property directly or indirectly resulting from failure to follow the instructions provided in the instruction manual, including without limitation warnings and product maintenance instructions.

The limited warranty does not cover damage caused by service performed by anyone other than an Authorized Service Location, to a product or a part that has been modified without written permission, if the recommended maintenance of the product is not correctly performed or if any product's serial number has been removed or defaced.

THIS LIMITED WARRANTY DOES NOT COVER:

- Shipping charges to return defective product.
- Product repair and/or part replacement because of improper use or maintenance, connections to improper voltage supply, power line surge, lighting damage, unauthorized repair or other cause not within the control of Polti USA, Inc..
- Damage from mishandled shipments or transit accidents when returning product.
- A product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications.
- Product lost in shipment and no signature verification receipt can be provided.
- Failure to operate in accordance with the Instructions Manual.

WHAT OTHER LIMITATIONS ARE THERE?

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR, REPLACEMENT, OR REFUND AS PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OF IMPLIED. IN NO EVENT SHALL POLTI USA, INC. BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT OR ACCESSORY, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS, TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

Some states and jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or from one jurisdiction to another.

TO OBTAIN ASSISTANCE

For technical support go to www.polti.com and select customer care / technical support or call:

- USA: 1-888-99-POLTI (1-888-997-6584)
Monday - Friday: 8am - 6pm EST
- CAN: 1-888-697-65-84
- MEX: 01 800 84 (POLTI) 76584

The logo for Vaporetto, featuring the brand name in a stylized, italicized font with a horizontal line above it. A registered trademark symbol (®) is located at the top right of the word.

Distributed by Polti USA Inc.

**MADE IN ITALY by Polti S.p.A. -
22070 Bulgarograsso (CO) - Italy - Via Ferloni, 83**

www.polti.com



For any queries please visit us at www.polti.com web site or contact:

USA 1-888-99-POLTI (1-888-997-6584)

Monday - Friday: 8am - 6pm EST

Para cualquier pregunta por favor visitar www.polti.com o contactar:

MEX 01 800 84 (POLTI) 76584

Pour de plus amples informations, veuillez visiter notre site www.polti.com ou nous contacter:

CAN 1-888-697-65-84