

Antari Z-300 Fazer

***Congratulations on the purchase of your new
ANTARI FAZER.***

Introduction

Thank you for choosing an ANTARI Fazer. You now own a rugged and powerful state-of-the-art machine. Prior to use, we suggest that you carefully read all of the instructions. By following the suggestions found in this user manual, you can look forward to the reliable and satisfactory performance of your ANTARI Fazer for years to come.

Please follow these operation and safety instructions to ensure a long and safe life for your Fazer.

Cautions

- ◆ Do not overfill your ANTARI Fazer. Overfilling will cause the unit to clog.

Danger of electric shock

- ◆ Keep this device dry.
- ◆ For inside use only. Not designed for outside use.
- ◆ For the 110V models, use 3-prong grounded electrical outlet only. Prior to use take care to determine that the unit is installed at the rated voltage.
- ◆ Always unplug your ANTARI Fazer before filling its tank.
- ◆ Keep Fazer upright.
- ◆ Turn off or unplug when not in use.
- ◆ This machine is not water- or splash-proof. If moisture, water, or fog liquid gets inside the housing, immediately unplug the unit and contact a service technician or your ANTARI dealer before using it again.
- ◆ No user serviceable parts inside. Refer to your ANTARI dealer or other qualified service personnel.
- ◆ For adult use only. Fazer must be installed out of the reach of children. Never leave the unit running unattended.
- ◆ Never aim the output at open flames.

Danger of explosion

- ◆ Never add flammable liquids of any kind (oil, gas, perfume) to the Fazer liquid or the fluid container.

Pay attention to all warning labels and instructions printed on the exterior of your ANTARI Fazer

- ◆ Use only high-quality Antari fog liquid or suitable dealer recommended fog fluid.
- ◆ Always make sure there is sufficient liquid in the Fazer liquid tank. Operating this unit without liquid may cause permanent damage to the machine.
- ◆ If your ANTARI Fazer fails to work properly, discontinue use immediately. Drain all Fazer liquid from the tank, pack the unit securely (preferably in the original packing material), and return it to your ANTARI dealer for service.
- ◆ Never drink Fazer liquid. If it is ingested, call a doctor immediately. If Fazer liquid comes in contact with skin or eyes, rinse thoroughly with water.

Unpacking & Inspection

Open the shipping carton and verify that all equipment necessary to operate the system has arrived intact.

Your Z-300 Fazer machine should be accompanied by the following items:

1. This user manual!
2. Power cord
3. Z-6 multi-function remote control with attached cord.

If any equipment is missing contact your ANTARI dealer immediately.

Before beginning initial setup of your ANTARI Fazer, make sure that there is no evident damage caused by transportation. In the event that the unit's housing or cable is damaged, do not plug it in and do not attempt to use it until after contacting your ANTARI dealer for assistance.

Setup

- ◆ Remove all packing materials from shipping box. Check that all foam and plastic padding is removed.
- ◆ Place Fazer on a flat surface and remove Fazer liquid tank cap.
- ◆ Pour Antari Fog Liquid into the liquid tank, being careful not to exceed the maximum fluid level. DO NOT OVERFILL. Use only ANTARI Fog Liquid or other dealer-recommended high-quality Fog fluid. Any other types of fluid can damage the unit. When the container is full, place the cap back on the liquid tank and tighten.
- ◆ Your Fazer can only be operated by connecting the Z-6 remote control into the remote control slot in the back of the machine.

Operation

- ◆ Plug the remote control cord into the slot marked remote control on the back of the Fazer machine. Plug the power cord into a grounded electrical outlet.
- ◆ Turn on the power switch located on the back of the Fazer machine.
- ◆ The red light on the remote control will turn on once the machine is plugged into a power outlet and the on/off switch is turned on.
- ◆ Once the red light comes on the machine must warm-up. This period varies depending on conditions but should not take more than 10 minutes under any circumstances.
- ◆ The green light on the remote control will turn on once the machine is ready to produce haze. When the green light turns on, the machine may be operated using the remote control.
- ◆ The Z-300 Fazer is controlled via the Z-6 remote control. Please refer to the section titled Remote Control Operation for detailed instruction on the various functions available.
- ◆ Prior to the green light turning on the machine will not haze and the functions will not respond.
- ◆ The Z-300 is equipped with a low fluid sensor. When the fluid is not low the light on the back of the machine is green and will flash on and off continuously. When the fluid is low the light will turn red. When the light is red add fluid to the Fazer immediately.
- ◆ When the Fazer does not have any liquid in the machine the PC board will shut off the pump so that the machine will not be damaged. The pump will remain off until fluid is added to the machine.

Important: Always monitor tank fluid level during operation. Even with the low level sensor, the Z-300 Fazer machine can suffer damage when run without fluid. If the machine does not function after having been run without fluid please contact your Antari dealer for service.

If you experience low output, mechanical noise or no output at all, unplug immediately. Check fluid level, the external fuse, remote connection, and power from the wall. If all of the above appears to be O.K., plug the unit in again. If Fazer does not function after 30 seconds, discontinue operation or permanent damage to the unit may result. Return the machine to your ANTARI dealer. Always drain tank before mailing or transporting this unit.

Remote Control Operation

Z-6: 10 meter wired multi-function remote controller with 5-pin plug for ANTARI Fazer Z-300 model.

- ◆ The interval knob adjusts the time between discharges when the timer function is engaged. The range is from 10 seconds ~ 250 seconds.

- ◆ The second knob, labeled volume, controls the volume of haze produced. The range is from 0% ~ 100% of maximum output.
- ◆ The yellow TIMER button controls the timer function. Depress the button to activate. When activated the yellow light will turn on. Adjusting the interval knob will determine the time between haze output (10 ~ 250 seconds). The duration of output is set at 15 seconds. The volume can be adjusted using the volume knob to control the amount of haze produced.
- ◆ The red CONTINUOUS button sets the machine to constant haze production. To activate this function, depress the red button. The volume knob can be used to regulate the volume of the steady stream of haze produced.
- ◆ The green MANUAL button will produce a continuous blast at maximum volume while the button is held down. When released, the manual function stops and the machine will return to the previous setting; timer; continuous; or stationary.
- ◆ Note: the Continuous function will override the Timer function. Therefore, if both buttons have been depressed the Fazer will haze continuously. The manual function overrides all functions. When depressed and held down the Fazer will haze at maximum volume for as long as the button is held down, regardless of the machine's setting at the time.

Fazer Liquid

The Z-300 Fazer machine operates on regular fog liquid. The machine has been designed to produce exceptional haze using ANTARI fog liquids. Use only ANTARI fog liquids or other dealer recommended fog fluids. Failure to use high quality fog liquid can damage the machine.

Do not use liquids designed only for Hazer machines. The Fazer can operate using only fog fluids or fluids recommended by your dealer that are designed to be used exclusively in the Antari Z-300 Fazer.

Do not allow the Fazer liquid to become contaminated. Contamination includes adding fragrances, oils, dust, or any other foreign materials to the Fazer liquid supply. Always replace the caps on the fog liquid container and the Fazer's liquid tank immediately after filling.

Save these instructions