

Active wall mounting: PROTECTOR ST-01®

The PROTECTOR ST-01® is to be mounted at the site of installation (concrete, brick, wood and plasterboard walls, etc.) in accordance with the following instructions.

The mounting height may vary depending upon the applicable local or national regulations (for example: building codes, fire protection regulations, etc.).

A. Preparation prior to installation

Prior to installation, insert the battery recommended by the manufacturer (not included) into the PROTECTOR ST-01® battery case and connect to the terminal pad taking care to ensure correct polarity.

If additional modules (e.g. radio module, etc.) are to be used, connect them to the power supply prior to installing the PROTECTOR ST-01®.

Please be aware that a fire extinguisher should not be placed in the PROTECTOR ST-01® before the PROTECTOR ST-01® has been properly fitted at the site of installation using correctly dimensioned screws and wall plugs. Doing so risks breaking the sprung suspension system.

B. Installation

The PROTECTOR ST-01® is mounted at the site of installation with the open side facing the wall. A barrier between the PROTECTOR ST-01® and the wall is not required.

It should be noted that the screws and dowels used must be suitable for the material at the site of installation.

The following screws and dowels are recommended by the manufacturer for concrete and brick walls:

Universal or wood screws:	5,0 * 70,00 mm
Dowels:	Fischer UX 8 * 50 R (suitable for all building materials)

For secure installation 5 screws and 5 dowels must be used (not included).

It is essential to make sure that the **centre screw (adjustment screw)** is only tightened to the extent that the bracket attachment still has unhindered movement. After tightening the centre screw please check that the bracket attachment can still move freely.

Active wall mounting: **PROTECTOR ST-01®**

C. Tasks after installation

After installation proceed as follows:

Place the fire extinguisher on the PROTECTOR ST-01®.

Once the fire extinguisher is mounted, follow the instructions shown in section C in the user manual concerning entering an access code. Attention: pay **specific attention to the blue flashing signal** when implementing the coding (the **audible signal** is generated for technical reasons only and **is irrelevant** for the coding)!

When using a personal access code, make sure that this code is noted and stored by the person responsible for the PROTECTOR ST-01®. If the personal access code is lost, it can only be reset using the manufacturer's master code. A personal code is not recommended if the PROTECTOR ST-01® is used in a private home.

After entering the access code a test of all the PROTECTOR ST-01® functions must be performed by following the steps below:

1. Fire extinguisher removal test

Audible signal

☐ yes (= ok)

☐ no

- a) Check battery (Voltage and/or polarity check)
- b) Check the limit switch with the fire extinguisher in place (Bracket attachment must depress the limit switch)
- c) Contact the manufacturer

Optical signal – yellow LED

☐ yes (= ok)

☐ no

- a) Contact the manufacturer

2. Setting the volume

The volume can be adjusted to suit the ambient environment (see section C in the user manual).

Active wall mounting: PROTECTOR ST-01®

3. Fire simulation test (in conjunction with wireless smoke detectors and radio module)

If the PROTECTOR ST-01® (loaded with the fire extinguisher) is operated in conjunction with a branded wireless smoke detector and the corresponding radio module, then it is possible to simulate the outbreak of fire as described below.

Activation of the branded wireless smoke detector using a test aerosol or the test button should trigger the PROTECTOR ST-01® to emit the following signals:

Audible signal

☐ yes (= ok)

☐ no

- a) Check the radio connection between the smoke detector and the Protector (triggering distance approximately 2 m apart)
- b) Battery check (same as 1 above)
- c) Check the correctness of the coding between the smoke detector and the radio module
- d) Check using replacement units (smoke detector and radio module)
- e) Contact the manufacturer

Optical signal – green LED

☐ yes (= ok)

☐ no

If several PROTECTOR ST-01® devices are operated with radio modules, and if one of the fire extinguishers is removed from one of the PROTECTOR ST-01® devices following the fire alarm, then both signals are terminated for that particular PROTECTOR ST-01®, whereas the signals on all of the other PROTECTOR ST-01® devices remain functional. In the event of fire this ensures that the nearest working fire extinguisher is always indicated.



PROTECTOR-ST-01®

Active wall mounting: PROTECTOR ST-01®

A. Extinguisher fill level

The basic version of the PROTECTOR ST-01® is designed for one full 6 kg (6 litres) fire extinguisher.

Please note that when using a 12 kg (12 litres) fire extinguisher the audible and visual alarms are only triggered when the extinguisher is completely empty. Indication of partial filling level can be facilitated at any time by fitting the correct 12 kg conversion spring.

In case of fire or theft the visual and audible alarm is not affected.

B. Maintenance

The PROTECTOR ST-01® has a 2-year maintenance interval. The due date is indicated after 26 months by a blue flashing light. As part of the maintenance service the battery must be replaced with a battery recommended by the manufacturer (letter E in the user manual) and the device must be checked to ensure a trouble-free, functional condition. Resetting the service indicator is described in the following paragraph „Programming“ (Section C of the user manual).

C. Programming

The PROTECTOR ST-01® can be programmed from the front of the casing without opening the device, using a permanent magnet. By assigning a personal access code this programming function can be blocked to prevent unauthorized use.

Programming is performed by applying a permanent magnet to the right edge of the device. When a magnet is close to the device a blue flashing signal with a cadence of approximately 0.6 seconds is triggered. Attention: pay **specific attention to the blue flashing signal** when implementing the coding (the **audible signal** is generated for technical reasons only and **is irrelevant** for the coding)!

All functions are assigned three-digit codes. The input is performed by repeated application of the magnet until the number of flashes corresponding to the respective code number is called-up. After entering a code number the magnet must be removed from the device for at least one flash interval (0.6 seconds) before the next code position is accessed.

Active wall mounting: PROTECTOR ST-01®

The device acknowledges the entry of a valid three-digit code with four green flashes and a beep. An invalid code is indicated by four yellow flashes and four short beeps.

After the entry or deletion of a personal access code, the entry will be acknowledged after six positions have been entered. The integers 1 to 9 are valid for the access code.

If a personal access code has been set, then it must be entered before programming can begin. After setting or correctly entering a personal access code the device remains unlocked for a period of ten minutes before automatically locking itself again. The personal code is securely stored and retained even after the battery has been removed.

Local alarm functions (LED and beep) and relay output (normally closed and break contact) can be activated and deactivated independently of each other. If the alarm is activated for longer than 1 minute, the relay is automatically reset. In such cases the alarm is immediately available again for new alarm activation.

The functions have been assigned the following codes:


- Switching on the Alarm Function 1 – 2 – 3
- Switching off the Alarm Function 3 – 2 – 1
- Activating the Relay Output 1 – 2 – 4
- Deactivating the Relay Output 4 – 2 – 1
- Resetting the maintenance interval 4 – 3 – 2
- Three-stage settings for the audible alarm

loud	2 – 3 – 3
quiet	2 – 2 – 2
off	2 – 1 – 1
- Setting a personal access code 4 – 6 – 8 – x – y – z
- Deletion of a personal access code 4 – 6 – 8 – 10 – 10 – 10
- To unlock the programming function if the personal access code has been lost, contact the manufacturer for the master code.

Active wall mounting: PROTECTOR ST-01®

D. Inputs and outputs

The PROTECTOR ST-01® has two terminal blocks with contacts numbered 1 to 6 and 7 to 12 (see terminal schematic diagram).

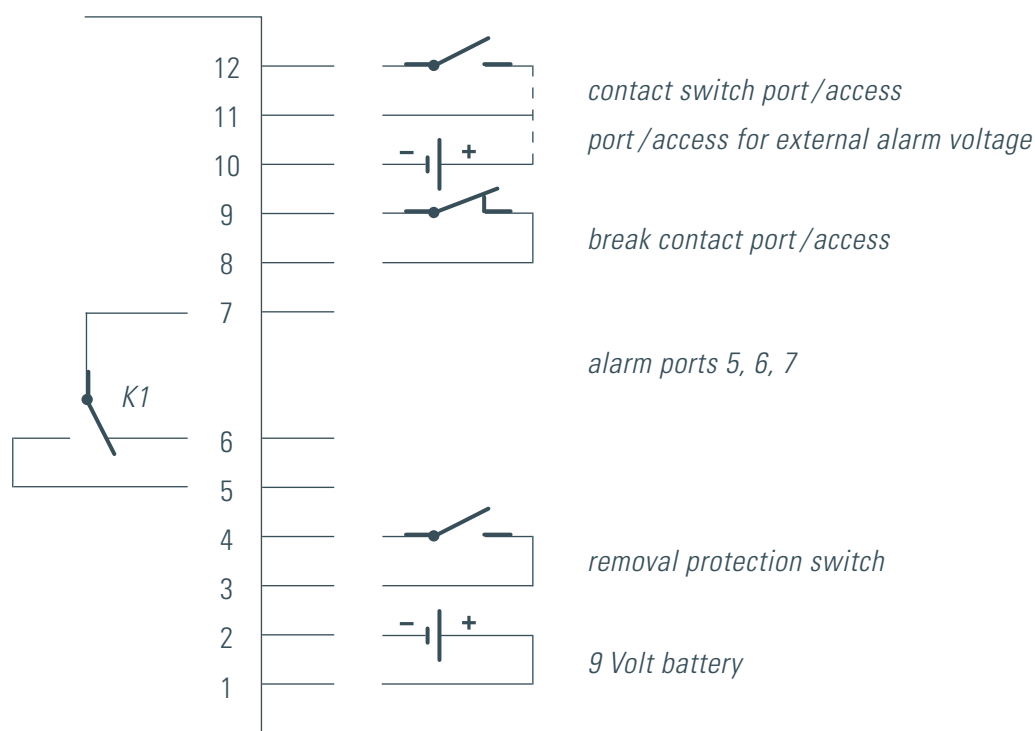

Contacts 1 / 2 and 3 / 4 are used to connect the 9-volt battery and the micro switch for tamper-proofing and fill-level monitoring. They are pre-wired when the unit is delivered.

D.1. Alarm outputs

Contacts 5, 6 and 7 are connected to an internal transfer relay, which is activated in the case of an alarm.

D.2. Alarm inputs

Contacts 8 to 12 are inputs for external alarm signals.

Contacts 8 and 9 can be used for a break contact. If these terminals are not used, they must be bridged. The devices are already bridged on delivery.

An external alarm DC voltage can be added between terminals 10 and 11. The positive terminal must be connected to terminal 11.

Contacts 11 and 12 allow the connection of an external contact switch.

Active wall mounting: PROTECTOR ST-01®

E. Power supply

9 V Alkaline battery, minimum capacity 600 mAh

Battery service life > 2 years

Maintenance interval 2 years + 2 months grace period

Overdue maintenance is indicated by a flashing blue LED.

Battery status is monitored. If the voltage falls below the minimum requirement, it is indicated by a faint beep every minute over a period of 30 days.

F. Ambient conditions

Working temperature -10 to +55 °C (limited by the battery)

Storage temperature -25 to +85 °C

Humidity < 90 %, non-condensing