

## MAINTENANCE

Periodically clean the ear tip with a mild soap and water solution to extend the life of the accessory. To prolong the life of the accessory, store the accessory away from high temperature conditions.

## HEARING PROTECTION WARNING

These communications products are designed to produce a specific audio output level at maximum rated power. Many countries have regulations defining the amount of noise that an individual can be subjected to during a normal workday. The duration of exposure, the level of audio output and the level of ambient noise will affect compliance to these regulations. Compliance is application dependent and standards vary. It is the **SOLE RESPONSIBILITY** of the end user to determine applicability of and compliance to local hearing protection regulations. When purchasing any accessories that use earphone kits, it is the **SOLE RESPONSIBILITY** of the user to determine proper fit. Always use caution when inserting any of the products into your ear.

## Parts & Accessories

Sonetics P/N	STL-30	STL-50	STL-70	Description
114-0091-00	X			Clothing Clip (5)
114-0107-00		X		Speaker Foam
114-0111-00	X		X	Foam Microphone Windscreen (5)
114-0112-00			X	Foam Earphone Cover (5)

# SONETICS STEALTH LIGHTWEIGHT HEADSETS



STL-30/-30PTT Lightweight Behind Head



STL-50/-50PTT Overhead



STL-70/-70PTT Heavy Duty Behind Head

## STL-30/-30PTT

Lightweight, Behind Head: Designed for less rigorous applications where an adjustable headband would not be necessary. When used with a Sonetics belt pack, this headset provides high clarity and discreet two-way communications while offering the comfort necessary for extended wear and a secure fit in active environments.

The STL-30/-30PTT headsets can be worn under a helmet or cap. The STL-30PTT includes an in-line Push-To-Talk (PTT) switch for easier PTT access.

### Mechanical Specifications:

- Temple pad axial pull off force: 20 lbs
- Cable pull from ear cup, axial: 30 lbs
- Microphone boom flex life @ +/- 60° bend: 4,000 cycles

### Electrical Specifications:

- Microphone sensitivity at 94dB SPL: -40 typical

### Environmental Specifications:

- Operating temperature: -20° C to +60° C
- Storage temperature: -40° C to +80° C

## STL-50/50PTT

Overhead Headset: This headset is a single-ear model featuring a swivel boom microphone for two-way communications, and is intended for use in areas with high background noise to provide privacy and noise isolation. The STL-50PTT includes an in-line Push-To-Talk (PTT) switch for easier PTT access.

## STL-70/-70PTT

Lightweight, Behind Head: This headset is used for 2-way belt pack communications in areas with moderate background noise to provide privacy and noise isolation.

Ergonomically designed, the STL-70 is a slim, rugged single-ear unit that performs under harsh conditions such as blowing rain and in hazardous situations such as water rescues. The STL-70 is Mil-Spec and IS/ATEX certified and has a comfortable fit that provides clear and consistent communications for short and long-term assignments.

The STL-70PTT includes an in-line Push-To-Talk (PTT) switch for easier PTT access.

These headsets feature:

- Flexible boom with bi-directional, noise cancelling microphone
- Adjustable headband
- Microphone windscreen.

### Mechanical Specifications:

- Cable pull from PTT module, axial: 20 lbs
- Cable pull from headset, axial: 66 lbs
- Flex cycles at cable: 10,000 cycles

### Electrical Specifications:

- Microphone sensitivity at 94dB SPL: -40 min, -24 max

### Environmental Specifications:

- Operating temperature: -20° C to +60° C
- Storage temperature: -40° C to +80° C
- Water, wind and dustproof

### INSTALLATION:

- (1) Turn the belt pack off.
- (2) Insert the headset plug into the Belt Pack headset jack. Turn to secure (as shown below).
- (3) The headset has a clip to secure it to a collar of a shirt, jacket, etc.
- (4) **STL-30 & STL-70:** The headband is worn behind the head with the speaker on the left ear.
- (5) **STL-50:** The speaker can be located on either right or left ear.
- (6) **STL-30/-30PTT:** recommended microphone gain level: 10 (see belt pack User Manual, Programmable Squelch)
- (7) **STL-50/-50PTT, STL-70/-70PTT:** recommended microphone gain level: 4 (see belt pack User Manual, Programmable Squelch)



### OPERATION

- Turn the belt pack on and operate it as explained in the belt pack's User Manual.
- Place the microphone in front of the mouth NO MORE than 1/8" away from the lips.
- Placement of the microphone is CRITICAL for proper operation. If the microphone is positioned incorrectly, you may experience a reduction in volume and clarity of intercom and radio communication.
- **STL-XXPTT Headsets:** Microphone is activated by the headset in-line push-to-talk switch.

