




ADSL High Speed Internet User Manual


1. iBUZZ SIP Phone Physical Setup Instruction

1.1 INSTALLATION WITHOUT A ROUTER

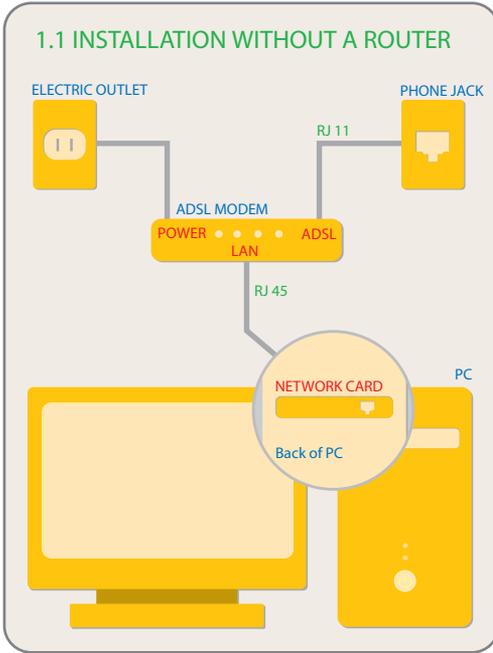

- 1 Connect your **RJ11** phone cable into your **ADSL modem** port labelled **ADSL**.
- 2 Plug in the **ADSL modem AC Power Adaptor** to your wall **electric outlet**. (wait for 1 minute until there is a permanent green light on the ADSL status.)
- 3 Use the provided **RJ45 Network Cable**, connect your **PC (network card interface)** to the **ADSL modem** port labelled **LAN**.

1.2 INSTALLATION BEHIND A ROUTER

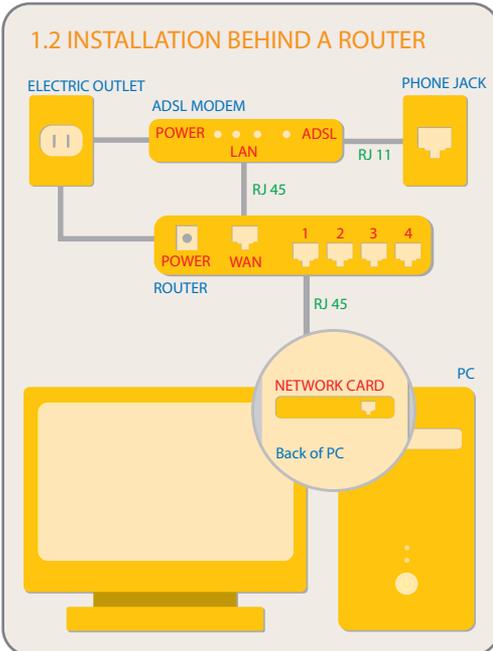

- 1 Connect your **RJ11** phone cable into your **ADSL modem** port labelled **ADSL**.
- 2 Plug in the **ADSL modem AC Power Adaptor** to your wall **electric outlet**. (wait for 1 minute until there is a permanent green light on the ADSL status.)
- 3 Use the provided **RJ45 Network Cable**, connect your **Router (WAN)** to the **ADSL modem** port labelled **LAN**.
- 4 Connect the **RJ45 Network Cable** to your **PC (network card interface)** from the **router** port labelled **1-4**.

1.3 USER LOG-IN POP-UP WINDOW

ADSL Management

Welcome
Message

Welcome to the ADSL Management page.

Please enter your full ADSL phone number including areacode.

ADSL Phone Number: **step 3**

AIC ADSL Management

Login - Step 2

Enter your ADSL Management Password.

step 4

[Click here to return to the previous page.](#)

ADSL Port | Bandwidth Details

AIC ADSL Manager Contact: Tel: support

AIC

Customer Name:

Account: 535298

ADSL Phone: 604-517-2182

Current bandwidth: 1.0255GB month-to-date

Current product: 1.5Mbps DHCP BC

Current Status: Active

Current Address: .BC.

ADSL Management Password


New Password:

Confirm:

- 1** turn on your computer.
- 2** wait for the Log in pop-up window to show up.
- 3** enter your ADSL phone number including areacode ex. 6043214567.
- 4** enter the temporary password "12345".

*please change the password after you have log in to the ADSL Port.

2. How to check your AIC ADSL usage:

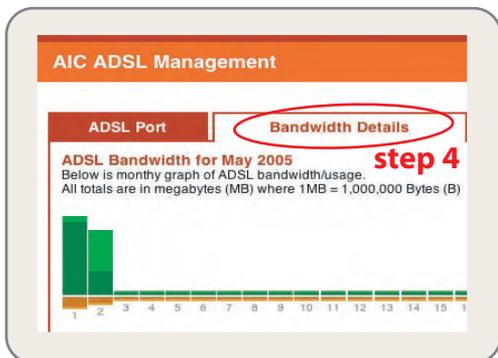

- 1** go to <http://adsl.aicom.com>.
- 2** enter your ADSL phone number including areacode
- 3** enter your Password
- 4** click on "Bandwidth Details"

www.aicom.com

Technical Support Hotline:

Vancouver: 604-708-3811

Calgary: 403-237-5809

Toronto: 905-882-0761

Edmonton: 780-702-4233

Email:

support@aicompro.com

