



ITEM#11891
STAND FOR 5-TON ELECTRIC LOG SPLITTER
(NORTHERN ITEM# 1189)
USER'S MANUAL



Read carefully and understand RULES FOR SAFE OPERATION and instructions before operating. Failure to follow the safety rules and other basic safety precautions may result in serious personal injury.

Assembly and Operation Instructions

For technical questions and replacement parts, please call 1-800-222-5381.

Thank you very much for choosing a NORTHERN TOOL + EQUIPMENT CO., INC. Product! For future reference, please complete the owner's record below:

Model: _____ Purchase Date: _____

Save the receipt, warranty and these instructions. It is important that you read the entire manual to become familiar with this product before you begin using it.

This product is designed for certain applications only. Northern Tool + Equipment strongly recommends that this product is not modified and/or used for any application other than that for which it was designed. If you have any questions relative to a particular application, DONOT use the product until you have first contacted Northern Tool + Equipment to determine if it can or should be performed on the product.

Before using this product, please read the following instructions carefully.

MAIN SPECIFICATIONS:

Overall Dimensions: 26-3/8"(L) x 25"(W) x 27-1/4"(H)


Rubber Wheel: 6in. Dia., 2 pieces

Max. Loading Capacity: 300 LBS (136KG)

INSTALLATION

When unpacking, check to make sure all the parts mentioned in the parts list are included.

Assemble the parts as per the diagram below:

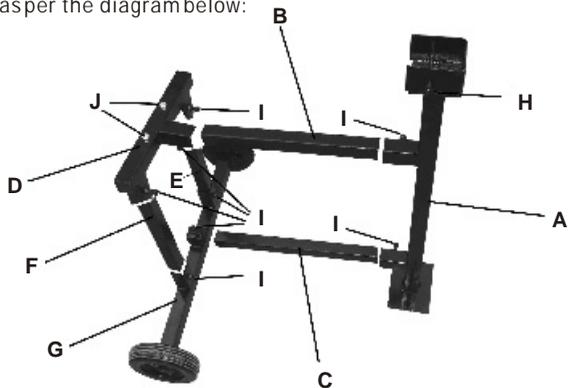

Part No.	Name	Quantity	Part No.	Name	Quantity
A	Vertical Pole 1	1	F	Vertical Pole 3	1
B	Horizontal Pole 1	1	G	Wheel Axes Stands	1
C	Horizontal Pole 2	1	H	Screw (M8 x 90)	1
D	Stand fixed Electric Motor	1	I	Screw (M8 x 15)	8
E	Vertical Pole 2	1	J	Screw (M8 x 50)	2

⚠ WARNING

1. Before each use of the log splitter, check to make sure the log splitter stand is securely fixed, and the log splitter is securely attached to the log splitter stand.
2. Make sure the log splitter stand is placed on an even surface before using the log splitter stand.
2. Always wear protective goggles and gloves when using a log splitter.
3. Maximum loading capacity of this log splitter stand: 300 LBS. Overload may cause danger!

MAINTENANCE

1. Clean the log splitter stand with dry and soft cloth.
2. When not in use, store the log splitter stand in a place which is dry and out of direct sunlight.