

T8600, T8601, T8602, T8611, T8624 Thermostats

INSTALLATION INSTRUCTIONS AND OWNER GUIDES ADDENDUM

FURNACE AIR FILTER, HUMIDIFIER PAD AND ULTRAVIOLET (UV) LAMP TIMERS

The thermostat has up to three timers to help the homeowner remember when to change or clean the furnace air filter, whole-house humidifier pad or ultraviolet air treatment system UV lamp. See Table 1.

Table 1. Thermostat timers.

Timer Measurement	Type of Thermostat	
	Manual System Switches (Heat, Off, Cool)	Pushbutton System Keys (Heat, Off, Cool)
Calendar days in any mode.	Furnace air filter and UV lamp timers	UV lamp timer
Calendar days in Heat mode only.	Humidifier pad timer	Humidifier pad timer
System run time in any mode.	—	Furnace air filter timer

View or Reset Timer Settings


When the thermostat activates a timer, the thermostat flashes **Filter** until the timer resets.

1. Reset the timer by pressing the **i** key until the expired timer is displayed.



M20243

2. Press the Time **▲**key to reset the timer.

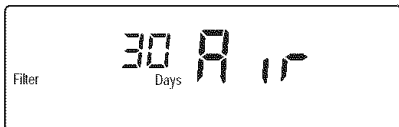

M20244

3. Press the Run Program key.

NOTE: You can view the number of days remaining at any time by pressing the **i** key three or four times. If more than one timer is active, all active timers show sequentially when pressing the **i** key several times.

For complete instructions on replacing or cleaning your furnace filter, humidifier pad or UV lamp, see the product owner's manuals. Contact your local contractor or visit www.honeywell.com/yourhome.

For instructions on entering Installer Setup mode, see product installation instructions (installers only). Table 2 gives Installer Setup instructions for the timers.

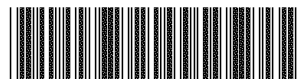


Table 2. Timer Installer Setup.

Selection	Installer Setup Number	Factory Setting		Other Choices	
		Display	Description	Display	Description
Furnace air filter timer (pushbutton System keys)	43	2	30 days (System run time)	0, 1, 3, 4	0 - off 1 - 10 days 3 - 60 days 4 - 120 days (Time is counted when heat, cool or fan is running)
Furnace air filter timer (manual System switches)	43	2	90 days (calendar days)	0, 1, 3, 4	0 - off 1 - 30 days 3 - 180 days 4 - 365 days (Time is counted by calendar days in any mode.)
Humidifier pad monitor	44	0	Off	1, 2, 3	1 - 90 days 2 - 180 days 3 - 365 days (Time is counted by calendar days in heat mode.)
Ultraviolet air treatment (UV) system lamp monitor	45	0	Off	1	1 - 365 days (Time is counted by calendar days in any mode.)

Honeywell
Automation and Control Solutions

Honeywell
1985 Douglas Drive North
Golden Valley, MN 55422

Honeywell Limited-Honeywell Limitée
35 Dynamic Drive
Scarborough, Ontario
M1V 4Z9

