



IMPORTANT SAFETY INFORMATION

WARNINGS: TO REDUCE THE RISK OF SERIOUS INJURY, READ ALL INSTRUCTIONS AND WARNINGS COMPLETELY BEFORE USING THIS PRODUCT.

The InStyler Auto Curl has been carefully engineered for both effectiveness and safety. However, basic safety precautions should always be followed when using any device, especially when children are present.



DO NOT USE THIS APPLIANCE NEAR BATHTUBS, SHOW-ERS, BASINS OR OTHER VESSELS CONTAINING WATER

- INSTYLER AUTO CURL IS NOT INTENDED FOR USE BY CHILDREN.
- KEEP AWAY FROM WATER.
- DANGER As with most electrical appliances, electric parts are live even when the switch is off. To reduce the risk of electric shock:
- 1. ALWAYS UNPLUG UNIT IMMEDIATELY AFTER USE.
- 2. **DO NOT** use while bathing or showering.
- DO NOT place or store the InStyler Auto Curl where it can fall or be pulled into a tub, toilet or sink, or any other water source.
- 4. **DO NOT** use InStyler near water.
- 5. **DO NOT** place or drop into water or other liquid.
- If the InStyler Auto Curl falls into water, **DO NOT REACH INTO** THE WATER! Unplug device immediately.

IMPORTANT: The InStyler Auto Curl should **NEVER** be used with any type of synthetic hair extension. The Auto Curl can be used on real human hair extensions **ONLY**, with the following precautions: If your real human hair extensions are sewn in, you can use your InStyler up to the scalp. If your real human hair extensions are glued in, make sure you start with your Auto Curl below the glue.

WARNING TO REDUCE THE RISK OF BURNS, FIRES, ELECTRICAL SHOCK, DEATH, INJURY OR DAMAGE TO PROPERTY:

- 1. The InStyler Auto Curl should be used only on clean, dry hair.
- Counterfeit versions of the InStyler Auto Curl do exist. To ensure you have purchased a genuine product and to reduce the risk of burns, electrical shock and malfunctions, purchase from authorized dealers only.
- Use Auto Curl only for its intended purpose as described in this manual. **DO NOT** use attachments not recommended by the manufacturer.
- 4. NEVER operate the InStyler Auto Curl if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped in water. If the power supply cord or plug is damaged, the InStyler must be replaced by the manufacturer or an authorized service agent in order to avoid a hazard.
- 5. Keep this product and the cord away from water and heated

IN STYLER°

- surfaces. **DO NOT** wrap the cord around the InStyler Auto Curl until it is completely cool.
- 6. This product has moving parts. Children and pets should be kept away when product is in use.
- 7. The InStyler Auto Curl should **NEVER** be left unattended when plugged in.
- 8. **NEVER** use while sleeping.
- NEVER drop or insert any object into any opening or hole on The InStyler Auto Curl.
- 10. **DO NOT** operate outdoors or where aerosol (spray) products are being used or where oxygen is being administered.
- 11. **DO NOT** use an extension cord with the InStyler Auto Curl.
- 12. The InStyler Auto Curl barrel may be hot during use. **DO NOT** allow eyes or skin to touch the heated surfaces.
- 13. **DO NOT** operate with a voltage converter.
- 14. This product is designed for hair styling. **DO NOT** use for any other purpose.
- 15. This product is a personal care device and is **NOT** intended for commercial use.
- 16. **DO NOT** use this product if any parts become damaged. In-

- spect the InStyler Auto Curl prior to beginning hair styling to ensure all parts are secure in their place.
- 17. **DO NOT** subject this product to excessive force or shock that may result in malfunction, shorter lifespan or distorted parts.
- 18. **DO NOT** tamper with this product's components. Doing so may cause unnecessary damage. This product contains no user-serviceable parts.
- 19. **DO NOT** use liquid cleaners, aerosol cleaners or any cleaner containing alcohol, detergent, abrasive or corrosive materials.
- 20. **DO NOT** use the InStyler Auto Curl if you are 8 years old or younger.
- 21. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities or lack of experience or knowledge. They should be given supervision or instruction in the use of this appliance by a person responsible for their safety.

SAVE THESE INSTRUCTIONS. KEEP THIS MANUAL IN A SAFE PLACE FOR FUTURE REFERENCE AND MAKE SURE ANYONE WHO USES THIS PRODUCT ALSO READS THIS MANUAL. READ ALL INSTRUCTIONS BEFORE USING YOUR INSTYLER AUTO CURL. NO ASSEMBLY REQUIRED.

(IN)STYLER®







The Sectioning Petal will show you the max amount of hair you should put in your Tulip.

If you put too much hair into your Sectioning Petal, all the hair will not fit in the hole. Make sure your section is small enough to fit entirely in the hole.



This is important to get the best results and prevent overloading the Tulip.

For tighter curls use smaller sections of hair.

Once you have used your Sectioning Petal, take your section of hair and place it in between the guides on your Tulip. Now you're ready to curl!

CONTROLS

INSTYLER

DIRECTION SWITCH

3 Rotation Settings

"R" rotates the barrel to the right. "L" rotates the barrel to the left. "A" will automatically switch rotation from left to right after each completed curl.

POWER/HEAT SELECT

Powers unit on and allows you to select heat setting (See chart on p8).

TANGLES & JAMS

In the unlikely event of a tangle, slide the Power/Heat Select button to "O," untangle the hair. Then, turn the unit back on to reset and re-load your hair.

ROTATION BUTTON

Tap and immediately release to start rotation. Unit will automatically rotate until the timer beeps.

TIMER SWITCH

3 Timer Settings

Slide switch up to select desired amount of time (see chart on p8).

POWER INDICATOR LIGHT

When the light stops blinking, the unit is ready for use.



SETTINGS

CURL TYPE	TEMP.	HAIR TYPE	TIMER
Beachy Waves	Low (177°C)	Fine/Medium/Thick	Remove when rotating stops
Soft, Loose Curls	Low (177°C)	Fine	3 sec.
	Medium (200°C)	Medium/Thick	3 sec.
Medium Body Curls	Low (177°C)	Fine	8 sec.
	Medium (200°C)	Medium	8 sec.
	High (220°C)	Thick	8 sec.
Tight, Striking Curls	Medium (200°C)	Fine	12 sec.
	High (220°C)	Medium/Thick	12 sec.

DIRECTION SETTINGS



To style your hair **away from your face** select (R when styling on the right side of your head and L) when styling on the left side of your head. To style **toward your face** select L) when styling on your right side and (R when styling on your left side. For a more **natural and relaxed look** select (A). This will automatically alternate between right and left after each completed curl resulting in a less uniform style.

PREPARATION & SECTIONING



- Always start with clean, dry, product-free hair.
- Detangle entire head and comb out all sections.
- Sections should be a 1.25 cm to 1.5 cm. For tighter curls, use smaller sections. DO NOT OVERLOAD THE UNIT.
- Use the Sectioning Petal (see p.6) to learn the size of the section to use. This is important for the best results and to prevent overloading the Tulip.
- Style the under layers of your hair first.
- Next, style the top layers.
- Work around each side of your head to the nape of your neck.
- Light styling spray can be used after styling for longer lasting curls.



LIGHTS & SOUNDS



POWER INDICATOR LIGHT

After powering on the unit, the Power Indicator Light will begin to blink. When the light stops blinking, the unit is ready for use.




WHAT'S THAT NOISE?

The beeping lets you know that the unit is working. Keep your hair in the Tulip until you hear three quick beeps and the beeping stops. That means that it is time to pull the unit out of your hair. The unit will stop rotating, but it is important that you keep the unit in the hair until you hear those 3 quick beeps.

After the three beeps, quickly pull the unit straight down to reveal your beautiful curl.

HOW TO INSERT HAIR

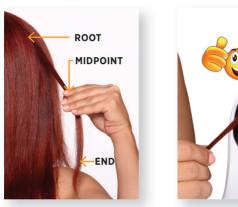



First, determine your section size by using the Sectioning Petal (p.6). Always start with a 1.25 cm to 1.5 cm section of hair. Looking in the mirror, grab a section of hair from the midpoint and pull it taught.

Place entire section of hair through the opening of the unit. Make sure ALL the hair is in the unit, behind the 2 grey dots.



HOW NOT TO INSERT HAIR







It is very important that the hair is placed correctly in the unit. Placing too much hair, or placing it improperly can lead to tangling.

Make sure ALL the hair is in the unit, behind the 2 grey dots.

PREPARE TO CURL



Once you've chosen where to start the curl, gently hold the hair straight and to the side.

Then tap and immediately release the Rotation Button.

CURL!







Make sure to **hold the unit steady** as the hair is automatically wrapped onto the barrel. Let go of the hair as it is fed into the unit.

Be sure to wait for the **3 quick beeps** (see p.10 for details), release the beautiful curl by quickly pulling the unit straight downward (The hair should never be heated longer than 20 seconds).

ADVANCED TECHNIQUE: THE SWIRL CURL



After properly sectioning your hair using the Sectioning Petal, use your index finger to split your section of hair to both sides of the barrel and gently hold the hair in place until the hair is pulled into the unit.



ADVANCED TECHNIQUE: SMOOTHING





The thermal guard around the barrel is open for the heated barrel to be easily accessible. To smooth a curl that is too tight, carefully hold the curl against the side of the heated barrel and slide the barrel up and down the curl to straighten the curl out and make it looser.

NOTE: The barrel will be hot to touch. The thermal guard around the barrel is not heated to limit the amount of heat exposure to your hair. This makes the tool safer to use and allows you to put the guard directly against your head.

MAINTENANCE

Your InStyler Tulip is essentially maintenance free. No lubrication is needed. Keep all openings clear of grime and dirt. If cleaning is necessary, unplug the unit from the power source and wait for the unit to completely cool. Wipe the exterior of the unit with a cloth. The consumer should not attempt any repairs. If a repair is required, unplug the unit, allow it to cool, and return it for repair to authorized service representative.

STORAGE

To store your InStyler Tulip, unplug and wait for it to fully cool. Store out of the reach of children and in a safe and dry location. Do not pull on cord at electrical source or wrap cord around the unit.



DISPOSAL

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device please use the return and collection systems of your Local Authority.

TECHNICAL PARAMETERS

Voltage: 100-240V, 50/60Hz

Power: 30-33W Class: II

Product Description: Auto Curler

Manufactured by: Tré Milano, LLC. Los Angeles, CA 90230

Your Guarantee

This product is under guarantee for 12 months. We do not offer returns but do respect your Statutory rights.

LIMITED ONE YEAR WARRANTY

The InStyler and its parts are warranted against manufacturer defects for one year from the date of purchase. This limited warranty only covers the items specifically listed above for the period specified. IF THE WARRANTY CARD IS NOT COMPLETED AND RETURNED TO COMPANY AT THE TIME OF THE ORIGINAL SALE, CONSUMER MUST PROVIDE PROOF OF PURCHASE WITH ANY WARRANTY CLAIM.

EXCLUSIONS

Excluded from this limited warranty are damages to the InStyler caused by unreasonable or unintended use, abuse or neglect. Also excluded is damage from ordinary wear and tear.

VOIDING OF LIMITED WARRANTY:

THE FOLLOWING OCCURRENCES OR CONDITIONS WILL VOID THIS LIMITED WARRANTY: (1) USE FOR COMMERCIAL PURPOSES; (2) FAILURE TO USE THE INSTYLER ACCORDING TO COMPANY'S SPECIFICATIONS AND INSTRUCTIONS INCLUDING, WITHOUT LIMITATION, SAFETY INSTRUCTIONS AND WARNINGS; (3) FAILURE TO PROPERLY CLEAN AND MAINTAIN THE INSTYLER AS STATED IN THE MANUAL; AND (4) TRANSFER OR ASSIGNMENT OF THIS WARRANTY.

SOLE REMEDY

The sole remedy under this limited warranty is repair or replacement, the Company's option, of the InStyler or part(s) deemed to be defective. "Repair" or "Replacement" shall mean providing the labour and materials necessary, at no cost to the consumer, to repair or replace the defective parts or replace, at Company's option, the InStyler.

HOW TO MAKE A WARRANTY CLAIM:

To present a claim under this limited warranty, call the telephone number below to receive a return authorisation code. Customer Services: 03301239101

DISCLAIMER:

The Warranty in this document is the only Warranty on the InStyler. Company makes no other Warranty of any kind., express or implied. All implied Warranties of merchantability and fitness for a particular purpose which exceed the obligation or time limits stated in this Warranty are hereby disclaimed by Novellia UK Ltd and excluded from this Warranty.

Distributed by: Novellia UK Ltd 26 Park Road Melton Mowbray Leicestershire LE13 1TT

www.instyler.co.uk

Returns Policy

Novellia UK Ltd values its relationship with its customers, and therefore, offers a return policy for any faulty products purchased directly from Novellia UK Ltd.

To return any faulty products, you must contact Novellia UK Ltd and receive a Credit Return Authorisation Number within the warranty period. You must receive a Credit Return Authorisation Number in order to return the product. Call 03301239101 to receive your Credit Return Authorisation Number.

YOU MUST:

- · Provide full contact details.
- Provide a reason for returning the product.
- Post the product and all accompanying components to Novellia UK Ltd, c/o PO BOX 724, ALTRINCHAM, WA15 5BJ.
- Return the product in the original packaging with all ot her items included in the purchase and the original purchase receipt.
- Mark the outside of your return shipping box with your Credit Return Authorisation.
 Number and your first and last name in clearly printed letters.
- This returns policy doesn't affect your statutory rights.

Details that will be required for any faulty InStylers:

- Name
- Address
- Telephone Number
- Fmail
- Place of Purchase
- Price Paid
- Serial Number
- Model Number

20 Reason for Return

Other Important Information

Packaging and Environmental Warnings/Recycling Information

After removing the product from the packaging ensure that all contents are intact and free from damage. In the unlikely event of missing or damaged parts; please contact your retailer or Novellia UK Ltd, directly.

NEVER LEAVE CHILDREN UNATTENDED WITH PACKAGING TO AVOID A POTENTIAL SOURCE OF DANGER.

Please dispose of all packaging responsibly in accordance with your Local Authority regulations. Recycle the packaging material where possible.

Your appliance contains valuable materials which can be recovered or recycled. If you decide to replace your product please recycle where facilities exist. Check with your Local Authority or retailer for your local civic waste collection facility.

Unwanted electrical products should not be disposed of with household waste.

Power Cord and Plug Warning (UK AND Ireland) The sealed power cord supplied with this product is fitted with an earthed 13A plug (BS1363) and is intended for domestic use only in the country of purchase.

The sealed power supply cord and plug is not user-serviceable. Replace fuse only with an approved 13A fuse (BS1362).

ALWAYS ENSURE FUSE COVER IS SECURELY IN PLACE BEFORE OPERATION.

DO NOT attempt to operate the product with any other power cord other than the one provided or if the power cord or plug is damaged in any way. To order a replacement contact Novellia UK Ltd, using the contact details supplied in this manual.

DO NOT use this product with an extension lead. If you accept liability for doing so, only use a good quality extension lead with an earthed plug that is suited to the power of the appliance.



FAILURE TO COMPLY TO THE ABOVE WARNINGS COULD LEAD TO SERIOUS DAMAGE TO THE PRODUCT AND/OR PERSONAL INJURY AND MAY INVALIDATE YOUR GUARANTEE.



Join our community for updated tips, tricks, videos, and special product offers.







www.instyler.co.uk

Distributed by Novellia UK Ltd. PO Box 724 Altrincham, WA15 5BJ Customer Service: 0330 1239101

©2015 Tré Milano, LLC. All Rights Reserved. InStyler® and InStyler® logo are registered trademarks of Tré Milano, LLC.