

# LTL 730 Dynamometer and Crane Scale User's Manual



*Optional  
Communicator*



**Cooper Instruments and Systems**  
PH: 540-349-4746 • FAX: 540-347-4755

[www.cooperinstruments.com](http://www.cooperinstruments.com)



### **Warning**

Read and understand this manual before using the equipment. Failure to follow instructions can result in serious injury or death.

## **IMPORTANT**

***This equipment must be routinely checked for proper operation and calibration. Application and usage will determine the frequency of calibration required for safe operation.***

# CONTENTS

1.0 Specifications .....	1
2.0 Safe Operation .....	1
2.1 Radio Safety .....	2
2.2 Radio Communications Reliability .....	2
3.0 Introduction .....	3
4.0 LTL 730 & Communicator Description .....	3
4.1 LTL 730 Front Panel .....	3
4.2 LTL 730 Connector .....	4
4.3 Communicator Front Panel .....	4
4.4 Communicator Keys .....	4
5.0 Power On and Annunciators .....	5
6.0 LTL 730 Setup .....	6
6.1 Setup Menu .....	6
7.0 Configuration .....	9
7.1 Configuration Menu .....	10
8.0 LTL 730 Operation .....	14
8.1 Display Modes .....	14
8.2 Force Measurement .....	14
8.3 Force Measurement Rezero .....	15
8.4 Displaying Peak Force .....	15
9.0 Communicator Operation .....	16
9.1 Powerup Display .....	16
9.2 Setup Menu .....	17
9.3 Config Menu .....	18
9.4 Communicator Print Formats .....	19
10.0 General Information .....	20
10.1 Changing Batteries .....	20
10.2 Battery Life .....	20
10.3 Care .....	20
10.4 Radio Information .....	20
10.5 Installing Spacers .....	21
11.0 Common Configurations .....	22
12.0 FCC Information .....	23
12.1 Modifications .....	23
13.0 Troubleshooting .....	23
14.0 Weighing and Force Measurement Practice .....	24
14.1 Load Centering .....	24
14.2 Alignment .....	25
14.3 Proper Pin Fit .....	25
14.4 Torque and Bending .....	25
14.5 Certified Gear .....	25
14.6 Good Force Measurement Practice .....	25
15.0 Warranty Repair Policy .....	26

# 1.0 SPECIFICATIONS

## Dynamometer Specifications

**Enclosure:** Designed to NEMA4X/IP55. Suitable for continuous outdoor use.

**Accuracy:** 0.1% of capacity.\*

**Repeatability:** 0.1% of capacity.\*

\*1 part in 1000 display mode with Cooper Instruments provided shackles.

**Factor of safety:** 2.5K to 10K = 7:1 USF

25K to 100K = 5:1 USF, 220K to 330K 4:1 USF

**Body Protection:** Aluminum capacities are anodized. Alloy steel capacities are electroless-nickel plated.

**Bearings:** Unmatched repeatability attained by needle bearings in shackle pin holes up to LTL 730 10K. Shackle pin acts as inner race.

**Shackles:** Forged industry standard anchor shackles. Models up to LTL 730 10K use precision machined shackle pin. Higher capacities use forged pin.

**Display:** 128 x 64 dot-graphic LCD display shows up to 6 digits 1.0" (26mm) high plus annunciators and softkeys. Digits are .11 inches (7mm) thick for unmatched readability.

**Display update rate:** 2 times per second.

**Connector:** Recessed sealed connector may be used for serial communications or connection to a Communicator remote.

**RS-232 / RS-485 communication:** Print or extract data easily. Continuous output can drive a scoreboard. Configurable poll character.

**Calibration:** Traceable to the National Institute of Standards and Technology. Certificate included with curve of readings. Passes only with three consecutive confirming runs, with all points in specification.

**Battery life:** 320 hours typical use with two C-cell alkaline batteries. 40 hours typical with Radio Link system.

**Operating temperature:** -4° F to 140° F (-20° to 60° C).

**Included with instrument:** Carry case, batteries, manual and certificate of calibration. LTL 730 50K and LTL 730 100K with shackles include shackle crate and spacers.

**Options:** Shackles. 2.4 GHz radio board. Display backlight.

**Approval:** FCC ID: KQL-PKLR2400

CAN ID: CAN2268391158A

CE #: 89/336/EEC, 98/37/EEC, EN61000-4

Registration: 595129

## Communicator Specifications

**Enclosure:** Designed to NEMA 3 / IP44 with optional sleeve. Suitable for protected outdoor use.

**Instrument size:** 9.0 x 4.6 x 1.8 inch (228 x 117 x 45mm).

**Accuracy:** Not applicable. Only sends and receives digital information.

**Display:** 128 x 64 dot-graphic LCD display can show full readings up to 5 instruments.

**Battery life:** 60 hours wireline, 20 hours radio using four AA alkaline batteries under typical use.

**Operating temperature:** -4° F to 140° F (-20° to 60° C).

**Connectors:** Sealed connectors may be used for serial communications and wired connection to an LTL 730 dynamometer.

**RS-232 communication:** Print or extract data easily. Continuous output can drive a scoreboard. Configurable poll character.

**Included with remote:** Carry case and batteries.

**Accessories:** Rubberized case protector sleeve. Remote wall mount bracket. Serial and remote cable assemblies.

## Radio Specifications

**FCC Certified:** For unlicensed low power devices. No radio licensing or permits required for normal operation.\* (In the US and Canada. Check local ordinances in other countries.)

**Frequency:** 2.4 GHz spread-spectrum operates between 2.402 – 2.478 GHz. Continuously and automatically changes frequencies many times per second for consistent, reliable communications.

**Output Level:** 10 mW (20 dBm)

**Display Update Rate:** 2 times per second with single dynamometer. Multi-instrument networks result in reduced updates.

**Number of networks:** 63 remotes can operate independently in the same airspace with unique channels.

**Number of links remote can control:** Up to 15 addresses are available per network channel.

**Configuration:** Address and Network channels are front panel configurable.

**Antenna:** Integral antenna.

**Range:** Open-air – Up to 300 feet, line-of-sight. Indoors – Dependent upon installation site with 150 feet common.

# 2.0 SAFE OPERATION



If you overload this dynamometer you could suffer severe injuries or death. The total load on the dynamometer should NEVER exceed the rated capacity!



**CAUTION:** Remove batteries from instrument when using the external AC power supply.

Keep all the following in mind as you use the LTL 730 dynamometer.

The system capacity is equal to the rating of the dynamometers. The shackle rating should not be used to determine lift capacity of the system.

The shackles are rated in metric tons. Thus the 12-ton shackles are rated to 26,450 lbf and are suitable for use on the 25,000 lbf dynamometer.

Any zeroed deadload must be considered as part of the ultimate load.

Although this instrument has a substantial overload protection rating, the instrument should not be used above the rated capacity. Doing so can significantly impact fatigue life of the instrument and cause premature and abrupt failure. If a higher capacity reading is needed, Cooper Instruments insists that a larger instrument be used.

Safety is always a concern in overhead lifting and tensioning applications. To limit your liability always insist upon factory supplied shackles and pins and factory tested and certified safe optional equipment. All COOPER INSTRUMENTS products are designed to meet the published Safe Working Load (SWL) and Ultimate Safety Factor (USF) standards of the United States Military.

Do not grind, stamp, drill or deform the metal on the dynamometer body in any way. Protect the instrument from impact in use and storage.

Any significant damage or deformation to the loading element is cause for evaluation by Cooper Instruments, **particularly** in the element side members to the right and left of the display.

Relieve all torsional and off axis loads.

Apply load in the center of the shackle bow with this instrument. Off center loading results in substandard performance.

Instrument requires time to stabilize when changing temperatures.

Use only the hardware supplied with this instrument. If no hardware was supplied, insure that the mating pin and shackle bow is equivalent to the hardware used at calibration. Otherwise substandard performance or failure can result.

**Cooper Instruments recommends only using qualified rigging hardware and cannot be responsible for unapproved hardware.**

This instrument is not designed for the following:

- Applications that see rapid, dramatic temperature swings or thermal shock. Wide variation in readings can occur.
- Environments with high electromagnetic fields such as cranes employing electromagnets to lift metal. These induce trace voltages that are picked up within the load cell lead wiring and appear as inaccurate loads.
- Intrinsically safe environments. This unit has not been Factory Mutual tested.

## 2.1 Radio Safety

The radiated output power of this device is far below the FCC radio frequency exposure limits. Nevertheless, the device shall be used in such manner that the potential for human contact during normal operation is minimized.

When connecting an external antenna to the device, the antenna shall be placed in such a manner to minimize the potential for human contact during normal operation. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, human proximity to the antenna shall not be less than 3 inch (7.5 cm) during normal operation. The antenna is located at the connector panel on the Communicator.

## 2.2 Radio Communications Reliability



Low power radio systems should not be used in applications where timely updates of readings are required for safety purposes.

Radio systems are vulnerable to interference, resulting in delays between the dynamometer scale and remote. In some instances of interference, the display shown on the remote may be several seconds old. This can result in a hazardous situation when the system is used as the reference for acceptable loads in cases such as proof loading and monitoring of binding or overload. In these applications where timely updates are critical, a communication cable should be used to physically connect the LTL 730 and Communicator remote (see setup of RS-485 communications). Alternately, the LTL 730 display can be observed directly.

### 3.0 INTRODUCTION

The LTL 730 electronic dynamometer from Cooper Instruments is a force measurement load sensor and digital readout in one instrument. The LTL 730 can be used to measure tension or weight. It can operate stand-alone or be coupled with a remote Cooper Instruments Communicator, via radio communication or direct wire connection, for improved convenience, functionality and safety.

This manual covers the setup and operation of the LTL 730 and optional Communicator.

This manual covers the following:

- LTL 730 & Communicator Description
- LTL 730 Setup
- Communicator Setup
- LTL 730 & Communicator Operation
- Troubleshooting

Be sure to read the safety precautions found in the *Safe Operation* section.



**Warning**

**If you overload this dynamometer you could suffer severe injuries or death. The total load on the dynamometer should NEVER exceed the rated capacity!**

## 4.0 LTL 730 & COMMUNICATOR DESCRIPTION

### 4.1 LTL 730 Front Panel

The LTL 730 comes in several weight capacities. All have the same front panel, shown in Figure 1.



**Figure 1. LTL 730 front panel**

### LTL 730 Keys

There are four “hard” keys and four “soft” keys. The hard keys are permanently labeled and the soft keys are just below the display. The soft key functions change and the key label appears above each key on the display. **Sometimes the individual soft keys are referred to as the F1, F2, F3 and F4 keys as numbered from left to right.**

*If you press and hold the **ZERO** key for five seconds, the LTL 730 display will show the zero reference calibration point.*



**On/Off** key

Use this key to turn the unit on and off.



**Zero key**

Use this key to zero the force indicated on the display.



**ESC key**

Use this key to escape from portions of the menu structure and return to previous choices or displays.



**Arrow key**

Use this key to access any available soft keys not currently viewed.

## 4.2 LTL 730 Connector

The connector on the LTL 730 is recessed for protection. It is used to connect the instrument to a Communicator remote display/controller, printer or external power supply. Contact Cooper Instruments for details.

## 4.3 Communicator Front Panel

Figure 2 shows the Cooper Instruments Communicator. This is a battery powered, radio-linked (or wired) remote display and control unit.



Figure 2. Cooper Instruments Communicator

## 4.4 Communicator Keys

The Communicator has the same keys as the LTL 730 but also some extra ones. They are all explained below:

*If you press and hold the ZERO key for five seconds, the Communicator will reset the active LTL 730 to the zero reference calibration point.*



**On/Off key**

Use this key to turn the unit on and off. Also, when in Radio Mode, this key will access a menu for further options.




**ZERO key**

Use this key to zero the force indicated on the LTL 730 and Communicator displays.



**ESC key**

Use this key to escape from portions of the menu structure and return to previous choices or displays.

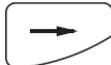

**Arrow key**

Use this key to access any available soft keys not currently viewed.




**Up and Down key**

Use these arrow keys to move through menu choices, when applicable. Also scrolls through any active links.



**Remote Setup key**

Use this key to access the Setup menu.

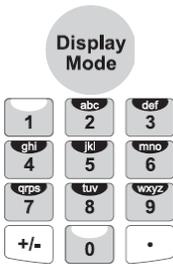

Display Mode key

Use this key to cycle between Communicator display modes. They are LTL 730 specific force value, LTL 730 specific peak value, multiple display of force values and multiple display of peak values.

Keypad keys

Use these keys to enter numeric characters. Use for address assignments and other miscellaneous data entry.

## Communicator Connectors

The Communicator may have between 2-3 connectors. CELL is for wireline communications with an LTL 730. COM1 is for serial communications. AUX is not presently used and is either nonfunctional or not installed.

## 5.0 POWER ON AND ANNUNCIATORS

When you power up the LTL 730 you will see a display similar to the example shown on the left in Figure 3.

*Depending on permission settings and/or revision of firmware, various soft keys may be in a different location or not visible.*

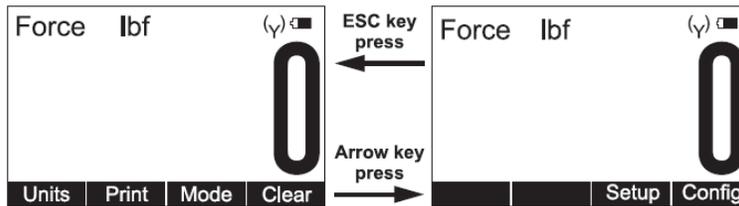


Figure 3. Initial displays

The display sample above shows several symbols you may see on your display but usually not all at the same time.

*lbf and kgf are units of force, not weight. They will be close to their mass counterparts, lb and kg, for most applications and at most locations. See Config>Units for more information.*

<b>Force</b>	This tells you that the display is showing live force measurement at the moment. Will show <b>Peak</b> when viewing Peak Mode.
<b>lbf</b>	Current unit of measure is lbf in this example. May also be kgf, N, or up to 2 other custom units.
~	Motion symbol. This appears when the force is in motion. This symbol disappears when motion ceases.
<b>Y</b>	This shows the radio is configured ON but is not in communications with any Communicator.
<b>Y</b>	The battery in the device is low and the radio section has been turned off. The device will continue to display (LTL 730 will display force applied and Communicator will display dashes) but will be unable to communicate by radio or, LTL 730 or the Communicator are improperly configured for RF communications on Comm port #2 with no RF PC board installed.
<b>(Y) (Y)</b>	2 Ys indicate the Communicator is in communications with an active LTL 730.
	Battery annunciator. This shows approximate remaining battery life.
<b>P</b>	Capture of a new peak value. This annunciator will remain lit for a few seconds.

Arrow key

Press the **Arrow** key to move between the two displays in Figure 3. In the display on the right in Figure 3, one of the soft keys is labeled **Setup**. Press this and you gain access to the soft keys shown in the Setup Menu in Figure 4.



Peak force and unit of measure on 2nd line  
 104.5 lbf  
 302.5 lbf

**Format #3** Live force value plus unit of measure on 1st line  
 Peak force and unit of measure on 2nd line  
 Descriptive prefixes on each line  
 Force 104.5 lbf  
 Peak 302.5 lbf

**Format #4** Fixed position output. Works well with RS-232 utilities, such as WedgeLink, for parsing into a spreadsheet such as Microsoft Excel. (comma- separated).

Excel	A	B
1	104.5	lbf
2	302.5	lbf

Fixed characters.

Position	Description
1-8	Live force number
10-16	Displayed unit of measure (up to 7 characters)
18-25	Peak force number
27-33	Displayed unit of measure (up to 7 characters)
9, 17, 26	Commas
34	Carriage return

**Example 1**

<sp><sp><sp>104.5,<sp><sp><sp><sp>lbf, <sp><sp><sp>302.5,<sp><sp><sp><sp>lbf<CR>

**Example 2 (custom unit)**

<sp>140000.,<sp><sp><sp><sp><sp>kg,<sp>165450., ,<sp><sp><sp><sp><sp>kg<CR>

This would yield (shown in courier):

```

      111111111112222222222333333333344444444455555555
123456789012345678901234567890123456789012345678901234567
104.5,      lbf,      302.5,      lbf, <CR>
140000.,    kg,      165450.,    kg, <CR>
```

**Format #5** Live force, unit of measure, peak force, unit of measure. All tab separated.

104.5<tab>lbf<CR> (if presently displaying live readings)  
 302.5<tab>lbf<CR> (if presently displaying peak readings)  
 104.5<tab>lbf<tab>302.5<tab>lbf<CR> (if presently displaying dual mode)

**Setup Misc**

Press the **Misc** key to access the following soft key set (refer to Figure 4):

<b>Flash</b>	Press this soft key to enable or disable the “display flash” feedback. If enabled, the press of a key causes the display to momentarily flash to give you a visual feedback that the key was activated.
<b>Zero</b>	Press this soft key enable or disable if a press of the <b>Zero</b> key also clears the Peak force value. If you enable this function, press the <b>Zero</b> key to clear the Peak force and zero the load. If you disable the function, the <b>Zero</b> key will only zero the load. Peak force remains in effect and will only be cleared with the Clear function during operation.

<b>Contr</b>	<p>Press this key to adjust the contrast of the LCD display. Press the <b>Up</b> soft key to lighten the contrast. Press the <b>Down</b> soft key to darken the contrast. There is a keypad shortcut for increasing and decreasing contrast. While in normal display mode press <b>Arrow</b> key and F2 simultaneously to increase contrast.</p> <p>There is a keypad shortcut for increasing and decreasing contrast. While in normal display mode press <b>Arrow</b> key and <b>F2</b> simultaneously to increase contrast. Press <b>Arrow</b> key and <b>F1</b> simultaneously to decrease contrast.</p> <p><b>Sometimes the individual soft keys are referred to as the F1, F2, F3 and F4 keys as numbered from left to right.</b></p>
<b>Blite</b>	<p>If the optional backlight is installed, press this key to adjust the backlight brightness and sleep timer functions. Press the <b>Inten</b> soft key to set the background brightness. Press the <b>Mode</b> soft key to set the backlight configuration options. There is a keypad shortcut for increasing and decreasing backlight intensity.</p> <p>Press <b>Arrow</b> key and <b>F4</b> simultaneously to increase intensity.</p> <p>Press <b>Arrow</b> key and <b>F3</b> simultaneously to decrease intensity.</p> <p><i>Use of the backlight will affect battery life.</i></p>

## Setup About

The next soft key is the **About**. The About menu shows an assortment of information about your instrument. This can be handy for maintaining calibration, troubleshooting or determining if the firmware can be upgraded. Press this and access the following soft key set (refer to Figure 4):

<b>Device</b>	Press this to see software revision and dynamometer information.
<b>Calib</b>	<p>This soft key access the following soft key set:</p> <p><b>Points</b> Press this key to display the calibration loading points. This is useful information that can be keyed in manually in the event instrument memory is ever accidentally overwritten or corrupted.</p> <p><b>Print</b> Press this key to transmit all the calibration information available to a serial printer or computer.</p> <p><i>Cooper Instruments suggests that calibration data be recorded and saved.</i></p>
<b>O.Load</b>	Lists the number of overloads that have occurred since the last calibration.
<b>Zero</b>	Lists the current zero point compared to the calibration zero point. If the zero point has moved significantly, this may indicate a serious overload has occurred and the instrument should be returned for service.
<b>Ntwrk</b>	Lists radio information - the enabled channel and identifier.

## Setup Test

The Test functions can help service technicians remotely diagnose your instrument by showing information on key internal functions. Typically these menus will have significance only to trained technicians. You may look at these menus without technical guidance, but the information may have little meaning, or an error may be reported that may not exist. Press this key to access several items described below (refer to Figure 4):

<b>Batt</b>	Press this key to perform a battery test. This shows the battery level in A-D counts and approximate voltage. Voltage is not calibrated.
<b>A-D</b>	Press this key to test the A-D section of the LTL 730. You need to apply force to change the counts and test the unit. The A-D is the electronics portion that converts analog load cell signal to digital numbers.
<b>Disp.</b>	Press this key to perform a display test. Stop the test by pressing the <b>ESC</b> key.
<b>Keys</b>	Press this key to perform key tests. Any key pressed will be reflected in the display. Press <b>ESC</b> to end the test.
<b>Ntwrk</b>	Press this key to perform a self-test of the radio's system.


<b>Comm</b>	<p>The serial test is an internally conducted diagnostic that requires a jumper across transmit and receive. This requires a plug or cable assembly. Pressing the <b>Serial</b> soft key accesses the following soft keys:</p> <p><b>COM1</b> Press this key to test COM1 in a loopback test.  <b>COM2</b> Press this key to test COM2 in a loopback test.</p> <p><i>To perform a COMM test, the unit must be configured to use RS-232 communications.</i></p>
-------------	--

## 7.0 CONFIGURATION

The configuration menu is a group of settings that may be password protected if desired to prevent operators from making significant system changes. It is used to configure the following:


- radio network
- resolution
- communication ports
- power up display mode
- units of measure
- power management
- password management
- system default reset

To access the configuration menu, press the **Config** soft key shown in Figure 5.

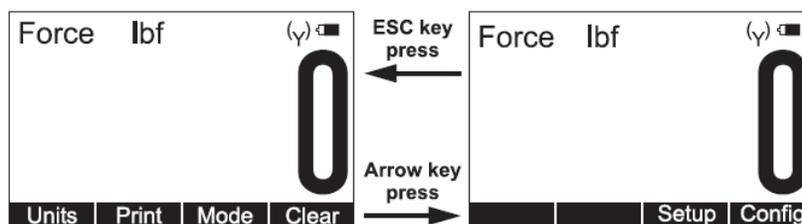

**Figure 5. Accessing Config soft key and menu**

The display prompts for a password. See Figure 6.

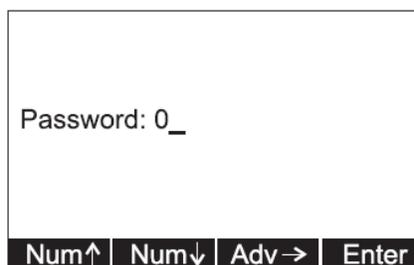

**Figure 6. Password screen**

Use the **Num** keys to enter the first character of the password and the **Adv** key to move to the next character. When you are done press the **Enter** key and the soft keys shown in Figure 7 become available.

*The default password is "0". If the password has been changed and forgotten, contact Cooper Instruments for assistance.*

## 7.1 Configuration Menu

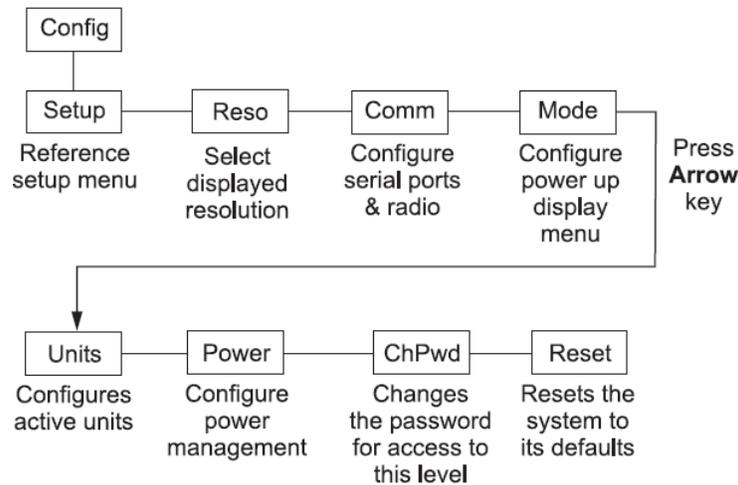


Figure 7. Configuration menu

### Config Setup

The first soft key is **Setup**. Press this and you access the setup menu shown in Figure 4. All its features are covered in that section of the manual.

### Config Reso

Reso stands for resolution. Resolution is the value by which the LTL 730 displays increments. Press this key to set the unit to standard (1000 divisions) resolution or enhanced (5000 divisions) resolution. For example: 10,000 lbf would count by

10 lbf (10,000 lbf/1000 divisions = 10 lbf) in standard resolution  
2 lbf (10,000 lbf/5000 divisions = 2 lbf) in enhanced resolution

*Enhanced Resolution mode drains more battery power than standard resolution.*

Standard resolution may have 1000 or 1250 divisions. Enhanced resolution may have 4000 or 5000 divisions. This follows normal display increment practice of changing by 1, 2, 5 or a multiple or submultiple of those numbers (e.g. 10, 20, 50, .1, .2, .5, etc.).

### Config Comm

Press this key to enable or disable radio communication and configure serial ports.

#### **Default Serial Communications**

*Baud Rate = 57600*

*Parity = None*

*Databits = 8*


*Stop bits = 1*

*There is no option for handshakes. All settings should be None.*


*RS-232/RS-485 activity consumes more battery power.*

To configure serial ports, follow these steps:


1. Press the **Comm** key and you see the following screen:

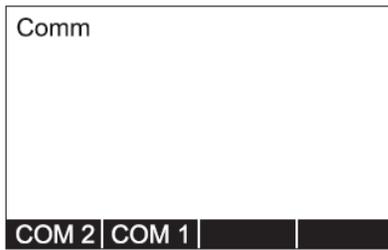

2. Press **COM 2** or **COM 1**. *COM2 is used to configure the optional radio board, if installed.* The following display appears.

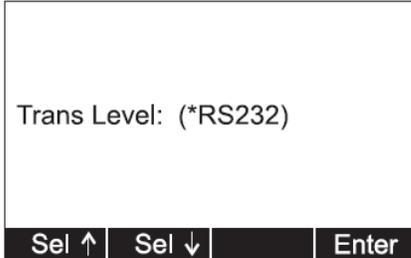


3. Select a transmission level using the **Sel** keys to scroll through the four choices; Disabled (default), RS232, RS485, and RF. RF stands for Radio Frequency and means transmission would be by radio (requires optional radio board). Press **Enter** to accept the setting. *If you set the Trans Level to RF, steps 3-5 are automatically set and **do not** appear.* The following display appears:

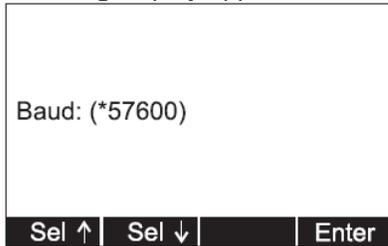


*The \* indicates which option is currently selected. The second serial port requires a larger connector. The standard 4-pin connector only has one serial connection (COM 2).*


4. Select a baud rate using the **Sel** keys to scroll through your choices. Choices are 1200, 2400, 4800, 9600, 19200, 38400, 57600 (default), and 115200. Press **Enter** to accept the setting. The following display appears:

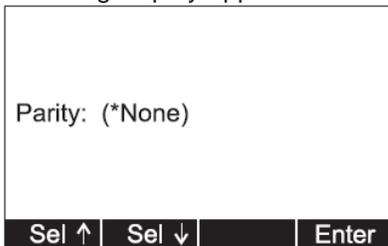

5. Select a parity value using the **Sel** keys to scroll through your choices. Choices are none (default), odd and even. Press **Enter** to accept the setting. The following display appears:

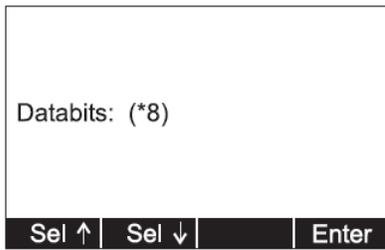

6. Select a databit value using the **Sel** keys to toggle between the two choices; 7 or 8 (default). Press **Enter** to accept the setting. The following display appears.

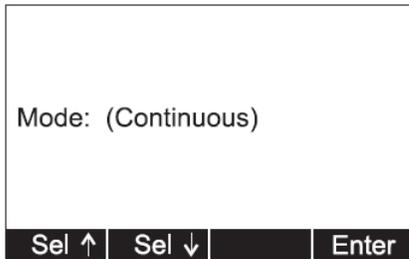

7. Select a mode of communication you want using the **Sel** keys to scroll through these choices; Continuous, , Poll, Remote and Print Key Only. Press **Enter** to accept the setting.
  - If you choose Continuous, you will be prompted to select a print format for the transmission and a rate at which you want to send the transmission.
  - If you choose Poll you will be prompted to enter a poll character.
  - Choose Remote for wireline communications.
  - Choose Print Key Only to print only when the Print key is pressed.
8. Repeat steps 2-7 for the other serial port if it needs configuring.
9. Press **ESC** to return to the first soft key set of the Configuration menu.

If you enable the radio:

You are asked to enter a Radio Channel. Your LTL 730 and Communicator must be on the same channel to function together. Key in a number from 1 through 64. 1 is the default setting. Press **Enter** to accept.


You are asked to enter a Network ID#. This is a unique address number (1-15) so the Communicator only speaks to one instrument at a time without “cross-talking.” Use the available soft keys to enter a number (1-15), then press **Enter** to accept.

You are then asked to key in an alternate network identifier. Use the available soft keys to enter alpha characters, then press **Enter** to accept.

## Config Mode

The next menu key is the **Mode** key. Use this key to choose what display mode is active upon powerup.

1. Press the **Mode** key. The following is displayed:

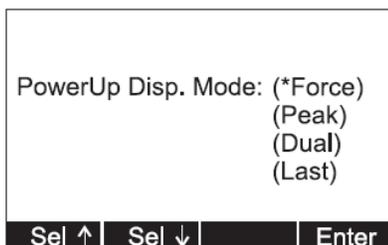

See the *Display Modes* section under *LTL 730 Operation* for more detail on display modes.

Asterisk shows current selection. *(Last)* causes display to power up in same mode as when last powered down.

2. Select a display mode value using the **Sel** key to scroll through the choices. Press **Enter** to accept the displayed setting.  
The display returns to the first soft key set of the Configuration menu.

## Config Units

The next soft key is **Units**. Use this item to set the units of measure you want available when you use the **Units** key in the normal operating mode. This can also assign custom units.

Custom units are typically used for any of three purposes:

1. To display a unit of measure not found in the standard options, such as ton, tonne, dyne, or KIP.
2. To apply a multiplier when multipart line systems or other static line arrangements are used. For example, if a 4-part line is used, the dynamometer at the dead end can display approximate total weight by using a multiplier of 4.

It is critical that the operator understands the relationship between the dynamometer and custom unit. For example, assume a custom unit of kg is entered where  $1 \text{ kg} = 5 \text{ kgf}$  (as seen at the dynamometer). The operator could become confused, and think that a 1000 kg display means that there is still 4000 kg of capacity remaining.

3. To compensate for local gravitational differences. There are variances in gravity throughout the world. If used as a scale, variances due to gravitational differences can be handled by having the instrument calibrated on-site with certified dead weights or by using the custom units. Simply divide the gravitational constant at your location by  $9.80665 \text{ m/s}^2$  (or  $32.1741 \text{ ft/s}^2$ ) and use this as the multiplier entry. A less accurate alternative: If the constant is not known, lift a weight of known mass close to the capacity of the instrument. In enhanced resolution mode, observe the reading. Divide the actual by the observed reading and use this as the multiplier entry.


## Config Power

The next soft key is the **Power** key. Use this to set power management features.

*Powering the instrument off regularly allows the batteries to partially recover and maximizes energy extractions from the batteries.*

*Key presses reset the timer. Characters received through the serial port also reset the timer.*


1. Press the **Power** key. The following is displayed:

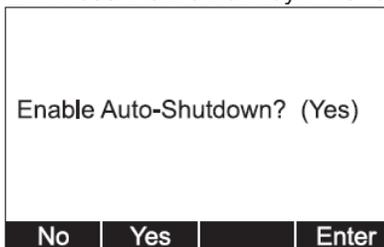

Enable Auto-Shutdown? (Yes)

No	Yes	Enter
----	-----	-------

Auto-Shutdown powers off the instrument automatically. The instrument can be programmed for a fixed operating time or programmed to shut down after a period of inactivity.

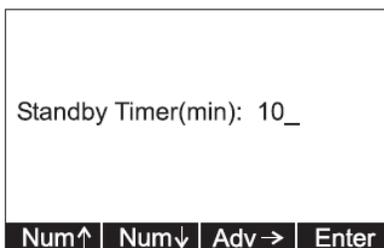


Standby Timer(min): 10\_

Num↑	Num↓	Adv→	Enter
------	------	------	-------

Timer reflects the period required to pass before Auto-Shutdown activates.

The following screen is displayed:

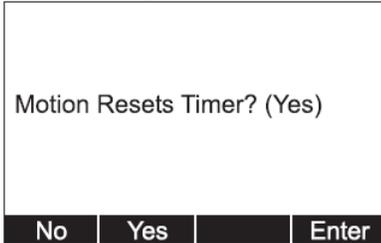

Select **Yes** if you only want the instrument to automatically shut down when there is inactivity. Select **No** if you want the instrument to power down after the timer counts down, regardless of any activity.

### Config ChPwd

The next soft key is **ChPwd**. Use this to change the password used to access the configuration menu.

**IMPORTANT: Changing the password denies access to this menu without entry of the new password. Contact Cooper Instruments if you lose your password.**

### Config Reset

The last soft key in this set is the **Reset** soft key. Use this to reset the system to its factory default settings.

This concludes the Configuration menu section.

## 8.0 LTL 730 OPERATION

### 8.1 Display Modes

The LTL 730 has several display modes accessible by pressing the **Mode** soft key. See Figure 8.

The first display mode when you power up is the live force measurement mode.

Press the **Mode** soft key and the display changes to peak measurement mode. This mode shows the peak force applied to the LTL 730 since the last peak clearing action. Delete the peak reading by pressing the **Clear** soft key.

Press the **Mode** soft key again and the display shows live force and peak readings simultaneously.

Press the **Mode** soft key again and the display returns to the force measurement mode.

*Power up display modes may be configured. See Config>Mode section.*

### 8.2 Force Measurement

Follow these steps to perform a gross force measurement.

1. Turn on the unit with the **On/Off** key.
2. Remove any weight from the LTL 730.
3. Zero the LTL 730 by pressing the **ZERO** key.
4. Apply the force to the LTL 730 and read the gross force on the display.

You can change the units of measure of the display by pressing the **Units** soft key. See note below. Zero reference is maintained after instrument power off and will be recalled with the next power-on. Zero reference may be lost if battery power is removed.

*Unit of measure can be changed only if multiple units are enabled in the Configuration menu.*

### 8.3 Force Measurement Rezero

Rezeroing allows the weight or load of fixturing to be invisible to the measurement. **The zeroed load must always be considered as part of the maximum capacity.**

1. Turn on the unit with the **On/Off** key.
2. Remove any weight from the LTL 730.
3. Zero the LTL 730 by pressing the **ZERO** key.
4. Apply the tare force to the LTL 730 and press the **ZERO** key.
5. Apply the force to the LTL 730 and read the net force on the display.

Steps 2 and 3 are not required if the weight of the fixturing is not needed. This should be maintained, however, to know cumulative loads.

### 8.4 Displaying Peak Force

The LTL 730 will store the peak force applied until that reading is cleared. To display the peak force applied to an LTL 730, from the force measurement mode, press the **Mode** soft key. The display changes to display menu #2 shown in Figure 8, which is the peak display mode. The peak force is displayed. You can clear this by pressing the **Clear** soft key.

Peak reading is maintained after instrument power off and will be recalled with the next power-on. Peak reading may be lost if battery power is removed.

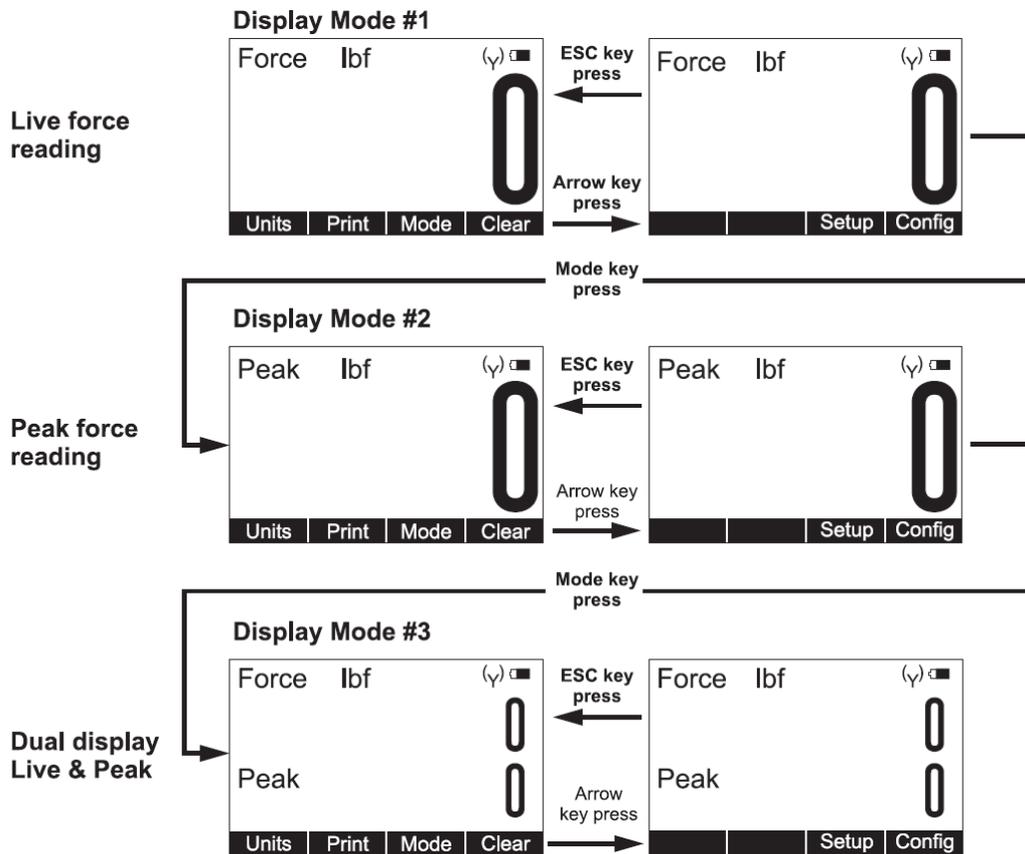


Figure 8. Display mode menu

Press the Mode soft key repeatedly until the desired display mode is reached.

## 9.0 COMMUNICATOR OPERATION



Use the **UP** and **DOWN** arrow keys on the Communicator to scroll through the displays of all active LTL 730s and a total screen.

The Cooper Instruments Communicator is a remote display and control module designed to work with the LTL 730. It can be connected by wire or can communicate by radio if both the Communicator and LTL 730 are equipped with optional radio boards.

The Communicator may simultaneously view and control several dynamometers at one time. Each is monitored individually by assigning unique numeric identifiers to each (addresses).

Several Communicators may operate in the same airspace if they are on different channels.

For best performance always have different identifiers for LTL 730s within the same network and use different channels for systems operating anywhere close to one another.


Since most functions are identical, you should refer to the LTL 730 section for comprehensive explanation and the Communicator's section will highlight differences that exist.

The Communicator is designed to be similar in layout and function to an LTL 730 to make operation easy and intuitive. The main screen appears as it does on the LTL 730 except that the Mode soft key has been blanked. This has an actual hard key on the remote.

### 9.1 Powerup Display

(Y) [ ] (Y) [ ] These annunciators on the Communicator display show battery level and radio operation for the Communicator (right side pair) and the active LTL 730 (left side pair).

An example of a Communicator's powerup display is shown below:

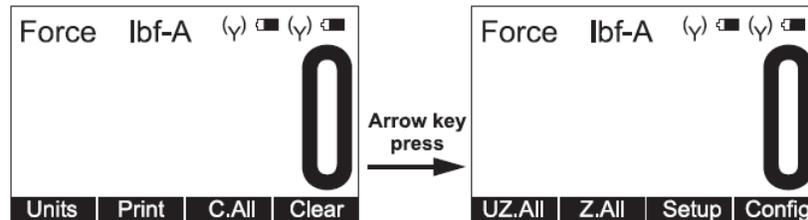

There are three soft keys on the first display and 4 on the second display. The soft key functions are described below:

<b>Units</b>	Changes the displayed unit of measure. Each press advances the display through this sequence; lbf, kgf, N, custom 1, custom 2.
<b>Print</b>	Outputs serial data to peripheral devices attached to COM 1.
<b>C.All</b>	Clears the peaks on all LTL 730s currently in communication with the remote.
<b>Clear</b>	Clears the current peak value of the active LTL 730.
<b>UZ.All</b>	Resets all LTL 730s to calibration zero reference point.
<b>Z.All</b>	Zeros all LTL 730s currently in communication with the remote.
<b>Setup</b>	Accesses the Setup menu shown in Figure 9.
<b>Config</b>	Accesses the Config menu shown in Figure 10.

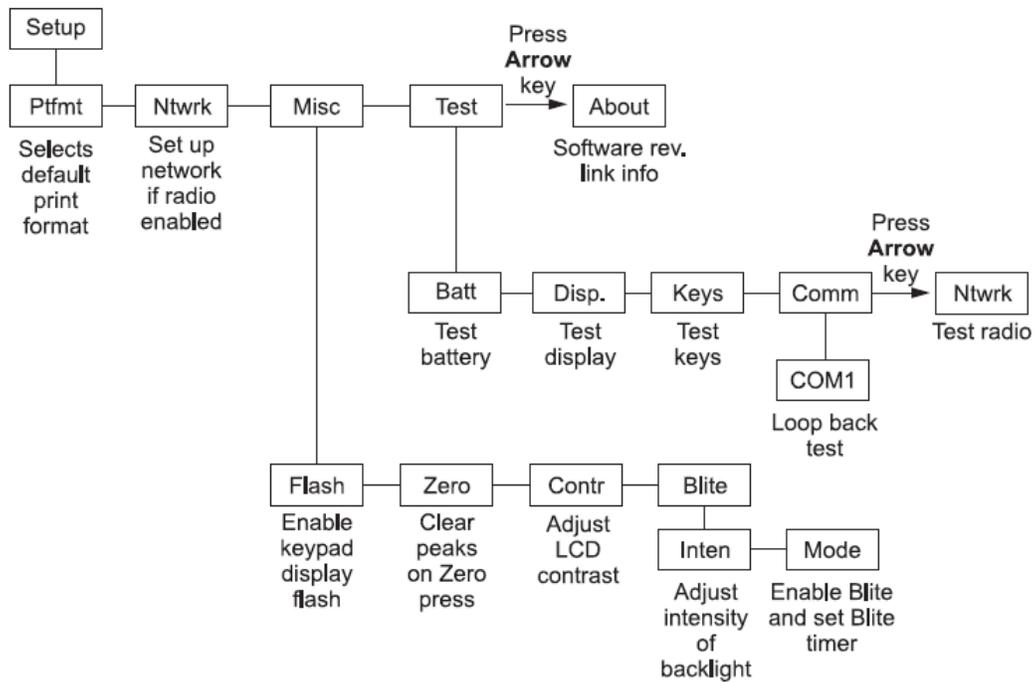


Figure 9. Setup menu

## 9.2 Setup Menu

<b>Ptfmt</b>	Select from print formats 1-7. See <i>Print Formats</i> section on the following pages.
<b>Ntwrk</b>	Setup the network. First choice is Radio Channel #. Can pick 1-64. All LTL 730s set to this same number will communicate with this Communicator. Next choice is number of LTL 730s in the network. Pick from 1-15. Next choice, you must set the address for each LTL 730. Each LTL 730 in the network must have a unique number. Pick from 1-15.
<b>Misc</b>	Lets you setup the following items: <p><b>Flash</b> Use this to enable the visual confirmation of keystrokes. Display will flash on keystrokes if enabled.</p> <p><b>Zero</b> Use this to enable or disable clearing of peak force values upon <b>ZERO</b> key press or <b>Z.All</b> soft key press.</p> <p><b>Contr</b> Use this to adjust the contrast of the Communicator display. Follow onscreen prompts for directions. <i><b>Contrast shortcut</b> There is a keypad shortcut for increasing and decreasing contrast. While in normal display mode press <b>Arrow</b> key and <b>F2</b> simultaneously to increase contrast. Press <b>Arrow</b> key and <b>F1</b> simultaneously to decrease contrast.</i></p> <p><b>Blite</b> Use this to adjust the intensity and mode of the optional backlight. Intensity adjusts the brightness of the backlight. Using Mode you can set the backlight to OFF, ON, or TIMER. If you select TIMER, the backlight will shut off after a configurable period of time (in seconds), without a keystroke. You are also given the option of choosing if motion will reset the backlight timer to start counting again. Backlight intensity shortcut Press Arrow key and F4 simultaneously to increase intensity. Press Arrow key and F3 simultaneously to decrease intensity. <i><b>Backlight intensity shortcut</b> Press <b>Arrow</b> key and <b>F4</b> simultaneously to increase intensity. Press <b>Arrow</b> key and <b>F3</b> simultaneously to decrease intensity.</i></p>


<b>Test</b>	<p>Lets you test the following items:</p> <p><b>Batt</b> Press this to check the battery condition. Display shows voltage condition of the batteries.</p> <p><b>Disp</b> Press this to perform a display test. Press any key to stop the test.</p> <p><b>Keys</b> Press this key to test individual key function. Press <b>ESC</b> to stop the test.</p> <p><b>Comm</b> Press this key to perform LOOP/NOLOOP tests on COM1. Press <b>ESC</b> to return to <b>Test</b> soft key display. COM1 must be enabled in Config menu to test.</p> <p><b>Ntwrk</b> Press this key to perform a radio test.</p>
<b>About</b>	<p>Press this soft key to see the following information:</p> <ul style="list-style-type: none"> <li>• Communicator Serial Number</li> <li>• Firmware part number</li> <li>• Revision level of software</li> </ul>

Press **ESC** repeatedly to return to normal operation. If you have made changes you will be prompted to save the changes. Press the **Save** soft key to save the changes and return to normal operation. Press the **noSave** soft key to disregard any changes made and return to normal operation. Press the **Cancel** soft key to return to the Setup menu screen.

This completes the Setup menu description.

### 9.3 Config Menu

The configuration menu, shown in Figure 10, allows you to set the items described below. Press the **Config** soft key to enter the menu. You will be asked to key in a password, then press the **Enter** soft key to access the menu.

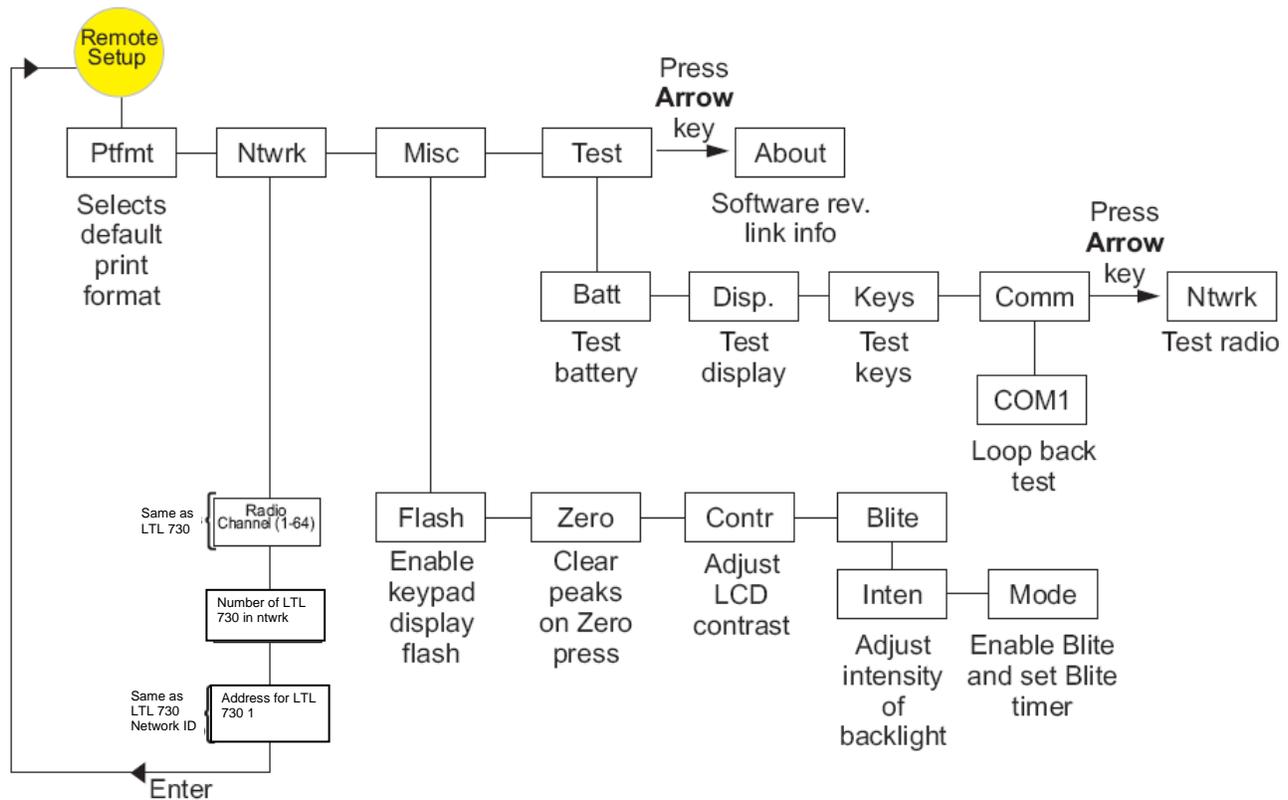

**Figure 10. Config(uration) menu**

<b>Mode</b>	Press this to set the display mode that will be active upon power-up.
-------------	---

<b>Units</b>	Press this key to set the following: Choice of power-up unit of measure Enable or disable lbf, kgf, N, custom unit 1 and 2
<b>Power</b>	Press this to set the following: Enable Auto-shutdown (Y/N) Shutdown Timer (set minutes before idleness causes unit to shut off)
<b>Chpwd</b>	Press this to change the Config menu password.
<b>Reset</b>	Press and you are given the choice of resetting the Communicator to its factory defaults.

## 9.4 Communicator Print Formats

Press the **Ptfmt** soft key to select the print format that will be sent from the Communicator on Com 1 to a peripheral printer when you press the **Print** soft key. Choose from the formats below. Data sent is shown below. The default is format #1.

- Format #1 Current displayed value (peak or live force) plus unit of measure on the active LTL 730 only.  
104.5 lbf (live force example)  
302.5 lbf (peak force example)
- Format #2 Live force value plus unit of measure on 1st line and Peak force and unit of measure on 2nd line for active LTL 730 only.  
104.5 lbf  
302.5 lbf
- Format #3 Live force value plus unit of measure on 1st line and Peak force and unit of measure on 2nd line with descriptive prefixes on each line for active LTL 730 only.  
Force 104.5 lbf  
Peak 302.5 lbf
- Format #4 Fixed position output for active LTL 730 only. Works well with RS- 232 utilities, such as WedgeLink, for parsing into a spreadsheet such as Microsoft Excel.

Excel	A	B
1	104.5	lbf
2	302.5	lbf

Fixed characters.

Position	Description
1-8	Live force number
10-16	Displayed unit of measure (up to 7 characters)
18-25	Peak force number
27-33	Displayed unit of measure (up to 7 characters)
9,17,26	Commas
34	Carriage Return

### Example 1

```
<sp><sp><sp>104.5,<sp><sp><sp><sp>lbf,<sp><sp><sp>302.5,<sp><sp><sp><sp>lbf<CR>
```

### Example 2 (custom unit)

```
<sp>140000.,<sp><sp><sp><sp><sp>kg,<sp>165450., ,<sp><sp><sp><sp><sp>kg<CR>
```

This would yield (shown in courier):

```
111111111122222222223333333333444444444455555555
123456789012345678901234567890123456789012345678901234567
104.5,      lbf,      302.5,      lbf<CR>
140000.,    kg,      165450.,    kg<CR>
```

- Format #5 Live force, unit of measure, peak force, unit of measure for active LTL 730 only. All tab separated.  
104.5<tab>lbf<CR> (if presently displaying live readings)  
302.5<tab>lbf<CR> (if presently displaying peak readings)
- Format #6 Cell #, description, live force, unit of measure for all active LTL 730s plus a total.

Example:  
Cell<tab>Description<tab>Live Force<tab>Units<CR>  
1<tab>North<tab>104.5<tab>lbf<CR>  
2<tab>South<tab>4801<tab>lbf<CR>  
Total<tab><tab>4905.5<tab>lbf

Format #7 Outputs print format #6 plus peak values for all LTL 730s.

## 10.0 GENERAL INFORMATION

### 10.1 Changing Batteries

To replace discharged batteries, unscrew the battery compartment cap on the right side of the dynamometer. Remove the two C cells and replace them with the + poles inserted first. If the spring in the cap becomes detached, you can reattach it by aligning the large end over the counterbored hole and turning the spring counterclockwise while pushing the spring into the hole. The spring will work into the recess and be self-retained.

The Communicator has 4 AA batteries. To replace, remove rear battery cover and replace with fresh batteries in the proper arrangement.

### 10.2 Battery Life

The time required between battery changes can vary with usage, functions enabled, temperature, duration of use and recovery time, display update rate, battery grade and more.

To maximize battery life:

- Disable radio if not being used. Even if an optional radio board is not installed, the software will run, if enabled.
- Disable other functions such as RS-232 and backlight.
- Warm environments result in longer battery life over cool environments.
- Use high quality alkaline batteries.
- Turn off instrument when not in use. Alkaline batteries partially recover when the instrument is off.



CAUTION: Remove batteries from instrument when using the external AC power supply.

### 10.3 Care

The LTL 730 is built to be rugged and endure typical industrial and commercial use. It is still, however, a precision instrument that should be treated with care. Store the instrument in its carry case with power off. Remove batteries if not being used.

### 10.4 Radio Information

The radio technology used in the radio equipped LTL 730 and Communicator is a 2.4 GHz digital spread spectrum system designed for communications reliability. Radio operation and the performance attained can be difficult to predict and will vary with environment and conditions. There are locations where radio use is impractical or even impossible.

Tips for best performance:

- Keep the Communicator and LTL 730 as close as possible together.
- Keep metal and other dense objects as far from the instruments as possible.
- Normally the higher that both the LTL 730 and Communicator are above the ground, the better the performance and range will be.

Many things can degrade radio signals, such as brick walls, metal reinforced concrete, machinery and even wiring within walls. Other systems such as wireless networks and cordless phones may degrade or interfere with operation of the Cooper Instruments radio-equipped system. As an FCC approved instrument on a license-free radio band, the instrument must accept interference received from other devices that share the same frequency and airspace. If other systems are colliding, it is best to isolate the device(s) that cause the interference and then take steps to eliminate the problem which may include relocation, conditional operation or retirement of the interfering device.

## 10.5 Installing Spacers

High capacity dynamometers with shackles of 50,000 lbf/20000kgf capacity and up, use spacers, Figure 11, to insure proper centering of the dynamometer for performance and safety reasons.



**Figure 11. Spacer**

Do not use the dynamometer with shackles if the spacers are not installed. The LTL 730 design incorporates an innovative method to retain these spacers, if desired, to ease shackle installation.

Place spacer on a solid surface and use a hammer to start the roll pins into the two small spacer holes. See Figure 12.



**Figure 12. Inserting roll pin**

Insert through matching holes in dynamometer body. Lay the dynamometer on the spacers on a solid surface with the roll pins protruding from the top. See Figure 13.



**Figure 13. Roll pins extending above dynamometer body**

Position the holes of the second spacer over the holes and tap spacer into position. See Figure 14.



**Figure 14. Placing second spacer on roll pins**

A punch sized slightly smaller than the holes in the spacer may be helpful. The spacers should “sandwich” the dynamometer body, but should not be drawn completely tight.

Remove the four large circular foam plugs from the carry case and it can continue to be used with the spacers attached.

## 11.0 COMMON CONFIGURATIONS

### **LTL 730 being used stand-alone** (no RS-232 or Communicator remote)

Key Settings (LTL 730):

- COM1 Trans Level – Disabled
- COM2 Trans Level – Disabled

### **LTL 730 connected to a computer**

Key Settings (LTL 730):

- COM1 Trans Level – Disabled
- COM2 Trans Level – RS-232 (all other parameters should agree with peripheral such as baud, data bits & parity)

### **Communicator connected to one LTL 730 by wire on CELL port**

Key Settings (LTL 730 and Communicator):

- COM1 Trans Level – Disabled
- COM2 Trans Level – RS-485
- Address: 1
- Channel: 1

### **Communicator talking to one LTL 730 by radio**

Key Settings (Communicator):

- COM1 Trans Level – Disabled or RS-232
- COM2 Trans Level – RF
- Radio Channel (1-64): 1 (this must differ from all other Communicators in the area)
- Number of LTL 730s in the network (1-15): 1
- Address of LTL 730 1: 1

Key Settings (LTL 730):

- COM1 Trans Level – Disabled
- COM2 Trans Level – RF
- Radio Channel (1-64): 1 (must match Communicator setting)
- Network ID (1-15): 1
- Network Identifier: (enter characters or digits to identify this specific LTL 730) (most useful if multiple LTL 730s are networked to one Communicator)

### **Communicator talking to four LTL 730s by radio**

Key Settings (Communicator):

- COM1 Trans Level – Disabled or RS-232
- COM2 Trans Level – RF
- Radio Channel (1-64): 1 (this must differ from all other Communicators in the area)
- Number of LTL 730s in the Network (1-15): 4
- Address of LTL 730 1: 1
- Address of LTL 730 2: 2
- Address of LTL 730 3: 3
- Address of LTL 730 4: 4

Key Settings (LTL 730 1):

- COM1 Trans Level – Disabled
- COM2 Trans Level – RF
- Radio Channel (1-64): 1 (must match Communicator setting)
- Network ID (1-15): 1
- Network Identifier: A

Key Settings (LTL 730 2):  
 COM1 Trans Level – Disabled  
 COM2 Trans Level – RF  
 Radio Channel (1-64): 1 (must match Communicator setting)  
 Network ID (1-15): 2  
 Network Identifier: B

Key Settings (LTL 730 3):  
 COM1 Trans Level – Disabled  
 COM2 Trans Level – RF  
 Radio Channel (1-64): 1 (must match Communicator setting)  
 Network ID (1-15): 3  
 Network Identifier: C

Key Settings (LTL 730 4):  
 COM1 Trans Level – Disabled  
 COM2 Trans Level – RF  
 Radio Channel (1-64): 1 (must match Communicator setting)  
 Network ID (1-15): 4  
 Network Identifier: D

## 12.0 FCC INFORMATION

 <b>Warning</b>	<p>This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:</p> <ol style="list-style-type: none"> <li>1. This device may not cause harmful interference, and</li> <li>2. This device must accept any interference received, including interference that may cause undesired operation.</li> </ol>
---	---

Agency Identification Numbers	
US/FCC	CAN/IC
KQL-PKLR2400	CAN2268391158A

## 12.1 Modifications

The FCC states that any changes or modifications to this device that are not expressly approved by Cooper Instruments may void the user's authority to operate the equipment.

## 13.0 TROUBLESHOOTING

Problem	Possible Cause	Solution
LTL 730 powers on momentarily and turns off	Low battery	Replace with high quality alkaline batteries
LTL 730 does not power on	Low battery	Replace with high quality alkaline batteries
	Batteries installed backwards or no spring contact	Insure that positive terminals of both batteries (nub) face inward – towards the black cap. Check that spring is attached to the battery cap.
	Software reset	Remove battery cap & reinstall after one minute. Attempt to turn power on again.
	Display contrast too light	Hold the <b>Right Arrow</b> key down while pressing the <b>F2</b> key several times to increase the display contrast. If nothing occurs, release both keys. Press the power button and try again.
Display is completely dark	Display contrast too dark	Hold the <b>Arrow</b> key down while pressing the <b>F1</b> key several times to decrease the display contrast.
LTL 730 does not	Check installation &	Insure that shackles are in good working condition and aligned


Problem	Possible Cause	Solution
appear accurate	system	straight. Verify system is applying force directly through the dynamometer with no off center or torsional loads being applied to the instrument.
	Local gravitational variances	If being compared against dead-weights, check your local gravitational constant (see Force Measurement & Weighing Differences section). Use custom units to compensate or calibrate on-site.
	Check repeatability	Place LTL 730 in low-resolution mode. Lift an arbitrary weight several times as close to capacity as possible. Record each weight reading. Do the readings differ from each other? Calculate the standard deviation of the readings using a spreadsheet such as Microsoft Excel. See if the deviation is greater than 0.1% of the instrument capacity.
	Compare against a reference load.	Place LTL 730 in low-resolution mode. Apply a known load near instrument capacity. Check calibration date.
Radio communication intermittent	Low batteries. Distance is excessive or dead-radio pocket	Bring remote closer to dynamometer. Allow several seconds to retrain.
	Excessive radio noise or interference in environment	Remove dynamometer and remote from the environment. Attempt communications in an area free of local radio signals.
Radio communications not working at all	Dead batteries. Distance is excessive, dead radio pocket	Bring remote closer to dynamometer. Allow several seconds to retrain.
	Radio systems initialized. No "Y" appears	Enable the radio system in the COM2 configuration of both instruments (under Comm menu).
	 Displayed	Change batteries in the device when the  is blinking
	Operating channels matched	Remote and link must be on the same operating channel. See LTL 730 and Communicator configurations of COM2 for radio (under Comm menu).
	Excessive radio noise or interference in environment	Remove dynamometer and remote from the environment. Attempt communications in an area free of local radio signals. See <i>Radio Information</i> section of the manual.
Remote reading changes to dashes	Low batteries, lost communications	See steps above for improving communications.
Display locks up on marquee	Poor connection between LTL 730 and Communicator	Remove batteries from LTL 730 and Communicator, replace them and power up.

## 14.0 WEIGHING AND FORCE MEASUREMENT PRACTICE

The basis for all electronic force measurement or weighing is measurement of stress in a load cell body. To obtain optimal results it is necessary to establish a few basic rules; otherwise the effect may be a nonlinear or nonrepeatable response. Read and follow these tips and see the illustrations on the next page.

### 14.1 Load Centering

For accurate performance the force acting on the unit must be in line with the unit. Centering the load is accomplished by using the shims on each side of the load cell so that it is centered on the shackle pin. See the illustration at right. The 50,000 lbf (20000 kgf) and higher LTL 730s also include spacers supplied with shackles.

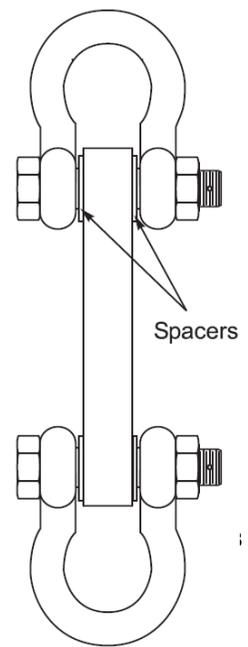

## 14.2 Alignment

Insure shackles are oriented parallel with the instrument. Apply load in the center of the shackle bow.

## 14.3 Proper Pin Fit

A proper fitting pin is important in order to generate an even stress distribution and avoid yield stresses. To achieve published accuracy you must use the shackle pins and centering spacers provided by Cooper Instruments.


## 14.4 Torque and Bending


Torque and bending should be avoided. Use swivels on the lifting wire for anti-torque and avoid side forces.

## 14.5 Certified Gear

Certified shackles and lifting gear should always be used in accordance to local laws and federal legislation. Insure all hardware, fittings and line used to sustain the load are properly sized and rated for the installation. Have the system evaluated by a qualified engineer if any question or uncertainty exists.

## 14.6 Good Force Measurement Practice

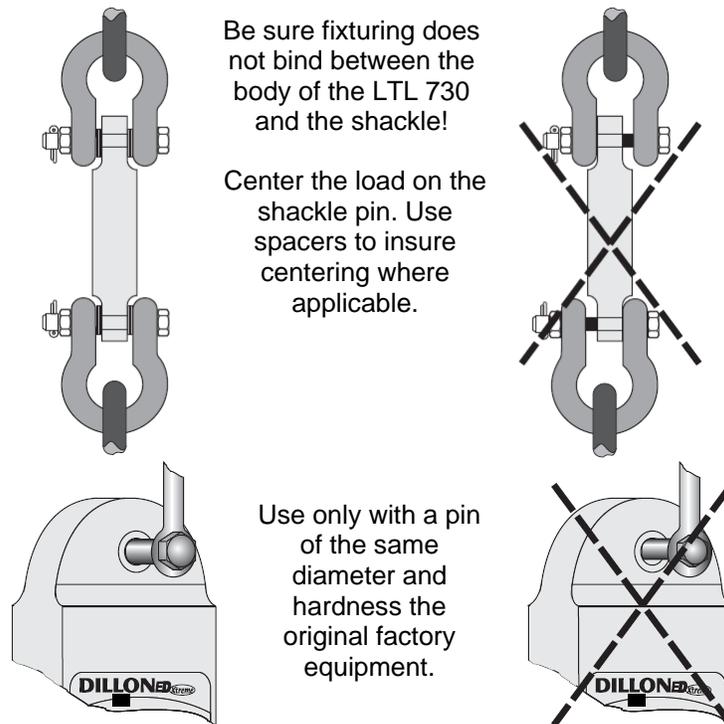

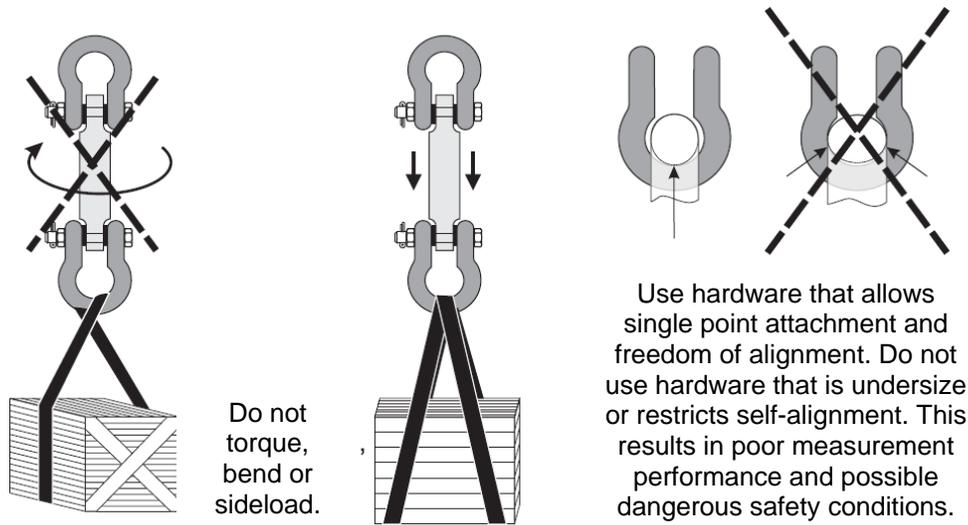

## 15.0 Warranty Repair Policy

### Limited Warranty on Products

Any Cooper Instruments product which, under normal operating conditions, proves defective in material or in workmanship within one year of the date of shipment by Cooper will be repaired or replaced free of charge provided that a return material authorization is obtained from Cooper and the defective product is sent, transportation charges prepaid, with notice of the defect, and it is established that the product has been properly installed, maintained, and operated within the limits of rated and normal usage. Replacement or repaired product will be shipped F.O.B. from our plant. The terms of this warranty do not extend to any product or part thereof which, under normal usage, has an inherently shorter useful life than one year. The replacement warranty detailed here is the buyer's exclusive remedy, and will satisfy all obligations of Cooper whether based on contract, negligence, or otherwise. Cooper is not responsible for any incidental or consequential loss or damage which might result from a failure of any and all other warranties, express or implied, including implied warranty of merchantability or fitness for particular purpose. Any unauthorized disassembly or attempt to repair voids this warranty.

### Obtaining Service under Warranty

Advance authorization is *required* prior to the return to Cooper Instruments. Before returning the item, contact the Repair Department c/o Cooper Instruments at (540) 349-4746 for a Return Material Authorization number. Shipment to Cooper shall be at buyer's expense and repaired or replacement items will be shipped F.O.B. from our plant in Warrenton, Virginia. Non-verified problems or defects may be subject to a \$100 evaluation charge. Please return the original calibration data with the unit.

### Repair Warranty

All repairs of Cooper products are warranted for a period of 90 days from date of shipment. This warranty applies only to those items that were found defective and repaired; it does not apply to products in which no defect was found and returned as is or merely recalibrated. It may be possible for out-of-warranty products to be returned to the exact original specifications or dimensions.

\* Technical description of the defect: In order to properly repair a product, it is *absolutely necessary* for Cooper to receive information specifying the reason the product is being returned. Specific test data, written observations on the failure and the specific corrective action you require are needed.