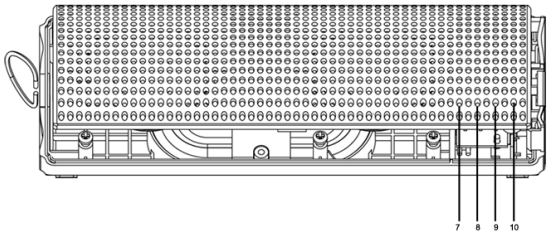 
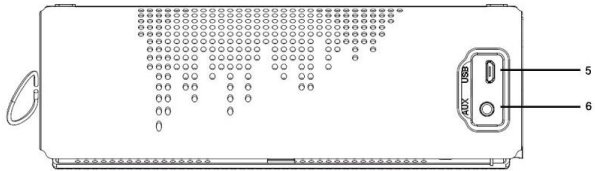 
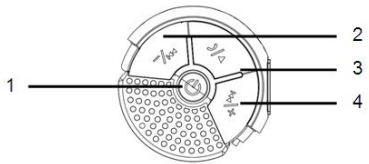 


# User Manual

## Bluetooth Speaker



**E-Boda The Beat 200**



1. ON/OFF button
2. Previous/Volume –
3. Next/Volume +
4. Play/Pause/Hands free
5. Micro USB charging port
6. AUX in Port
7. AUX indicator light (Green)/
8. Power on indicator light (Green) Charging (Red)
9. Bluetooth LED (Blue)
10. Microphone

## **Specifications**

**Bluetooth Range:** 33 ft (10 m)

**Playback Time:** approx. 4 Hrs

**Dimensions:** **7.2 x 2.6 x 2.2** (inch ) (183 x 65 x 55 mm)

**Weight:** 0.53 oz. (.240 gr.)

**Battery:** Li-Ion, 600 mAh

**Charging:** 5 V, 500mA

## **Operation**

### **Powering On**

-Press the Power key shortly to turn on the speaker, the Blue LED will start to flash while the Green LED stays illuminated. The B200 will automatically enter Bluetooth mode when powered on\*

\*If an Aux (3.5 mm) cable is connected to The Beat, the Blue LED will not illuminate, notifying you, the speaker is in Aux-In mode.

## **Powering Off**

- Press the power key shortly to turn off the speaker and all the LED status lights will shut off.

## **Bluetooth Mode**

 
 

 

### **Pairing**

- The unit will automatically go into “Pairing Mode” when it is powered **ON**.
- Go into your Bluetooth device settings menu and look for “**The Beat 200**”.
- When the device connected, the Blue LED light will keep on.
- After the unit has paired and connected, it will connect automatically when the speaker is powered on and the device is in range.

 
 

**Note:** In case that the end-users use the old generation cell phone, it may be asked for enter an password “0000” to proceed the connection.

## **Begin Streaming Music**

The E-Boda The Beat 200 can be operated and controlled via your Bluetooth device or on the top side controls on the unit itself.

- Press “  ” to start playing music.
- Press “  ” shortly for Volume up.
- Press “  ” shortly for volume down.
- Press and Hold “  ” to play next track.
- Press and Hold “  ” to play Previous track.

## **Making and Receiving Phone Calls**

- When The Beat is connected and paired to your device it allows you to make or receive phone calls with its built-in microphone.
- Press “  ” to accept a call.
- To hang up a call press “  ”.
- To place a call, simply dial the number or select contact from your Bluetooth device and call.
- To reject a call, press and hold “  ” for 2 seconds.

### **Aux-In Mode**

- Plug in the supplied 3.5 mm cable into The Speaker. The other end is connected to your device. The Green LED will only illuminate when in “Aux” mode.

\*Please note that only “Volume +/-” will function on your mobile device. Track control does not function when in Aux-In mode.

### **Auto-Sleep mode**

The Bluetooth speaker will turn to Auto-Sleep mode when not used or connected to any Bluetooth device for 5 minutes and the speaker will have a warning tone. Press the Power key to turn on the unit again and the speaker will be in the Bluetooth mode.

### **Charging**

- Attach the USB cable to the speaker, and plug in to any USB charger. If the unit is completely discharged, it will take approximately 3 hours to fully charge

- The Red LED will illuminate during charging, when it has completed, the LED will be off.

## LED Status

|                                     |                              |
|-------------------------------------|------------------------------|
| Blue LED flashing & Green LED solid | Bluetooth Mode               |
| Green LED on solid                  | Aux Mode, Charging Completed |
| Red LED                             | Charging                     |

## Troubleshooting

|   |  |
|---|--|
| The speaker doesn't connect to device       | Speaker needs to be connected/re-paired to device      |
| A tone is heard every few seconds           | Speaker needs to be charged                            |
| The speaker will not power on               | Speaker needs to be charged                            |
| The speaker doesn't control track(s)/volume | Speaker needs to be in Bluetooth mode for full control |
| The speaker distorts at high volume         | The devices' volume needs to be lowered                |