

Asema S1

User Manual

Asema S1: User Manual

Asema Electronics Ltd
Copyright © 2011-2013

No part of this publication may be reproduced, published, stored in an electronic database, or transmitted, in any form or by any means, electronic, mechanical, recording, or otherwise, for any purpose, without the prior written permission from Asema Electronics Ltd.

Asema E is a registered trademark of Asema Electronics Ltd.

Table of Contents

Safety	1
1. Installation considerations	2
1.1. Controlling a single socket	2
1.2. Controlling multiple sockets	2
1.3. Supporting an external switch	2
2. Installation	3
2.1. Connecting to a lamp	3
2.2. Embedding inside a wall socket	3
2.3. Embedding inside a light switch	3
2.4. Placing the controller to a distribution box	4
3. Pairing and communicating with Asema E	5
3.1. Detecting, pairing and naming controllers on the device.	5
3.2. Detecting, pairing and naming controllers using the WebView.	5
3.3. Radio quality measurement	6
3.3.1. Radio quality measurement on the device	6
3.3.2. Radio quality measurement in the WebView	7
3.4. Removing the controller	7
3.4.1. Removing the controller on the device	7
3.4.2. Removing the controller in WebView.	7
3.5. Resetting the controller	8
3.6. Mesh networking and repeaters	8
4. Settings for Asema S series controllers	9
4.1. Default relay mode	9
4.2. Safety timer	9
4.3. Added radio security	9
5. Troubleshooting	10

Safety

Please read this before proceeding and follow the safety precautions below when installing and operating the system.

Retain and follow all product safety and operating instructions.

Observe all warnings in the operating instructions on the product.

Operate your appliances responsibly, especially when controlling them with remote controls or over the Internet. Remote control of appliances in an Asema system is disabled by default to prevent accidental damage. Enable remote control only on devices where you can be certain damage cannot occur due to for instance heat, fire, smoke or water you do not notice while not present.

Always use an authorized and qualified electrician when installing products that involve rewiring electrical connections, changes to the distribution box, or opening wall sockets or other components embedded into walls, floors, or ceilings. Live cables can only be accessed by a qualified electrician.

Do not force or bend the cables at any point during installation. Do not drop, throw or try to bend the product. If you are worried or have any concerns about the installation, please contact a qualified electrician immediately.

Slots and openings in the product are provided for ventilation. These openings must not be blocked or covered. Loss of ventilation may cause the product to overheat.

If you notice anything unusual about the product such as loose wires, exposed cabling, burn marks, holes in the insulating materials or damage to the product, stop immediately.

When a power supply unit is included with the product only use the designated power supply unit. Other usage may be dangerous and will invalidate any approval given to this product.

Unless specifically indicated otherwise, the product is designed to operate in room temperature under dry conditions. Keep the device dry and away from excessive moisture, water or any liquid as it may cause a short circuit. Keep the device away from extreme temperatures.

If this product is equipped with a USB-port for connecting to a power or a computer, note that connecting to improperly grounded equipment can result in an electric shock to your device. Be sure your computer is properly grounded (earthed) before connecting this product to a computer.

Do not use this product in gas stations, fuel depots, chemical plants or where blasting operations are in progress, or in potentially explosive atmospheres such as fueling areas, fuel storehouses, below deck on boats, chemical plants, fuel or chemical transfer or storage facilities, and areas where the air contains chemicals or particles, such as grain, dust, or metal powders. Please be aware that sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

This product may cause medical equipment to malfunction. The use of this device is forbidden in most hospitals and medical clinics.

There is no need to open the product. **YOUR WARRANTY IS INVALIDATED IF YOU DISASSEMBLE OR ATTEMPT TO DISASSEMBLE THE DEVICE.**

1. Installation considerations

1.1. Controlling a single socket

The basic installation type for an Asema S1 is to control a single power outlet in your home. In this case choose whether you want to control this socket directly from the socket itself or from the wall switch connected to the socket.

If you are installing the Asema E to control a roof lamp, you have three options

1. you can either install Asema S1 external to the roof by replacing the terminal block of the lamp with the Asema S1
2. with the help of an electrician, you can install the Asema S1 inside the cabling in the roof
3. with the help of an electrician, you can install the Asema S1 behind the wall switch, so you will have control both wirelessly and with your wall switch

If the Asema S1 is to be installed inside a wall power socket, note that it is a common practice to wire the wall sockets in series. Cutting the power from one socket will cut the power of all the rest of the sockets also. If you want to control just a single socket, rewire the wall socket so that the circuit is not cut when the Asema S1 relay cuts the wall socket it is embedded to.

Important

If the Asema S1 is used to measure or control an appliance that needs electrical supply after a purposeful or accidental blackout, such as a refrigerator or freezer, the default power supply mode should be switched from its factory setting OFF to ON. For more information, please see chapter 4.1, "Default relay mode".

1.2. Controlling multiple sockets

The Asema S1 is capable of cutting current to up to 16A and can easily accommodate most installation locations where wall outlets are operated in groups. To control multiple wall sockets as one, you can either

1. with the help of an electrician place the Asema S1 at a wall socket that is the first in series of wall sockets, this will cut the power from all sockets.
2. with the help of an electrician, install the Asema S1 into the distribution box in the house in series with a fuse.


1.3. Supporting an external switch

Each Asema S1 has a separate switch connector for adding control via a wall switch. With this connector, you can effectively turn any wall switch into a radio controller of multiple lights and appliances in the house. To do this, connect the incoming and outgoing phase and neutral into the Asema S1 only. Then connect the switch into the Asema S1 only. Asema S1 will provide the voltage needed to operate the control switch.

2. Installation

2.1. Connecting to a lamp


The S1 can be used to control and measure a (roof) lamp.

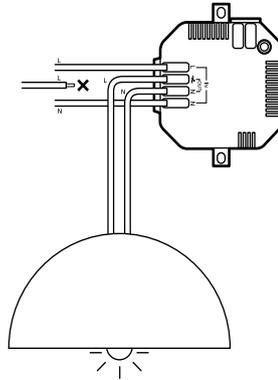

1. Switch off mains power of the circuit under installation.
2. Connect incoming neutral and phase.
3. Connect the lamp to outgoing neutral and phase as indicated by symbols on Asema S1.
4. Optionally attach the controller to the roof with screws.

2.2. Embedding inside a wall socket


The Asema S1 is small enough to be fitted inside a wall socket to control and measure the power.

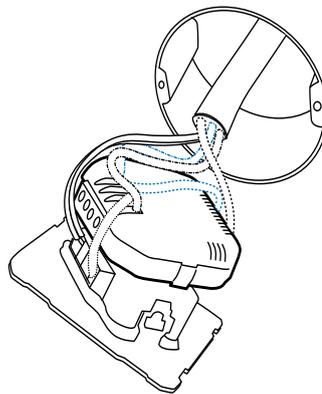


1. Switch off mains power of the circuit under installation
2. If installation space is limited, cut the protective plastic from the wire connector of the controller
3. Place the controller next to the socket and connect outgoing neutral and phase
4. Connect incoming neutral and phase as indicated by symbols on Asema S1
5. Insert controller and socket to wall and close.

2.3. Embedding inside a light switch

The Asema S1 is small enough to be fitted behind a light switch to control and measure the power.

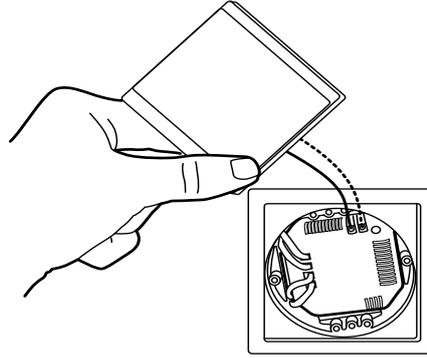

1. Switch off mains power of the circuit under installation.
2. Uncover the switch controller screws on Asema S1, and if needed cut the wire connector protective plastic.

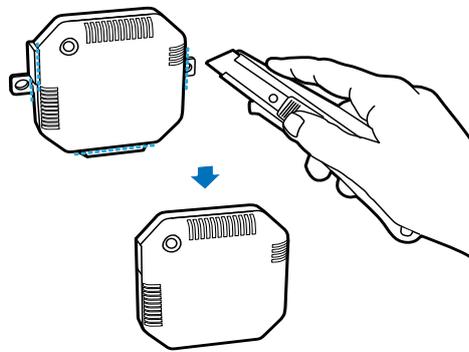

3. Connect incoming neutral and phase as indicated by symbols on Asema S1
4. Connect the light switch to the switch connector.
5. Insert controller to wall and close.

2.4. Placing the controller to a distribution box

The Asema S1 can also be installed directly into your electricity distribution panel, enabling control and measure of entire groups at once.

1. Switch off mains power of the panel.
2. Locate the fuse (max 16A) protecting the targeted appliance or group.
3. Connect Asema S2 to the load in series after the fuse by attaching incoming and outgoing neutral and phase.

3. Pairing and communicating with Asema E

In order for the Asema E to communicate with the Asema controllers, they need to be paired first. After pairing the Asema E can send ON/OFF messages to the controllers and read real-time information on the electricity use. Pairing can be done either using the device, or in the WebView.

3.1. Detecting, pairing and naming controllers on the device.

1. On the Asema E, go to **Main Setup** > **Appliances** > **Appliances**.
2. Click "Detect". The Asema E will now scan all Asema controllers which are not yet paired, and list them on the screen. This can take a few seconds.
3. The result will be list of controllers, looking like this:




The controllers don't have a name yet, just a code on the top, which corresponds with the sticker that you received with your controller. To distinguish which controller is which, you can either compare the displayed code to the sticker or click on the sound icon (top-button). The controller will beep, which will help you in recognizing which controller you are currently adding.

4. Click on the gear icon  (middle button) to edit the controller. Fill in a name for the controller that will help you distinguish it. We recommend naming it after the appliance you will connect to it. From the drop-down menu choose an appliance type.
5. Click OK. The controller will now be saved and you will be returned to the list of controllers, including the unpaired ones. Repeat step 4-5 for all unpaired controllers until all controllers are paired.
6. You're done! The controller will now also automatically be added to the ON/OFF, Power Consumption History, and Power Meter screenlets of an Asema E and appear there when you run these.

3.2. Detecting, pairing and naming controllers using the WebView.

1. Go to the WebView. You do this by typing in the IP address of your device into a browser on your computer. You can find the IP address either in Main Setup, or by clicking on the black status bar at the top in the E-view. Once the application is loaded in your browser, click on Appliances. This will open up the Appliances page. If this is the first time you add a controller, the page will be almost empty. If you have added controllers before, they will be listed here.
2. Click "Detect". The Asema E will now scan all Asema controllers which are not yet paired, and list them on the screen. This can take a few seconds.
3. The result will be list of controllers, looking like this:

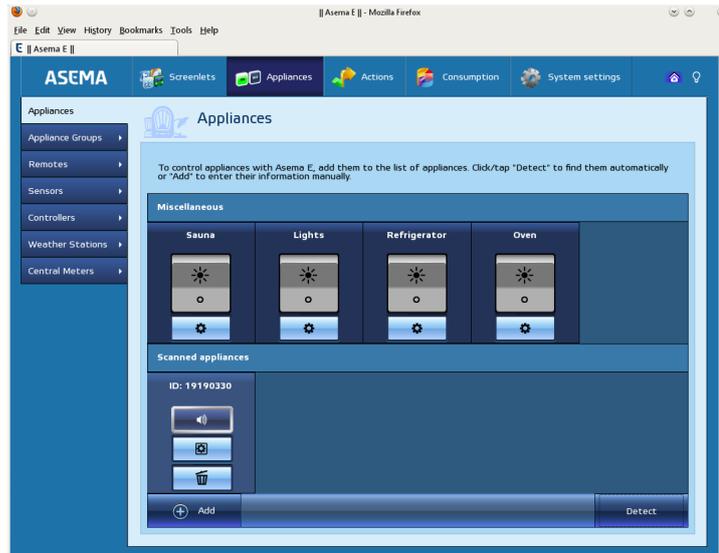

The controllers don't have a name yet, just a code on the top, which corresponds with the sticker that you received with your controller. To distinguish which controller is which, you can either compare the displayed code to the sticker on the controller, or click on the sound icon (top-button). The controller will beep, which will help you in recognizing which controller you are currently adding.

4. Click on the gear icon  (middle button) of the controller you want to pair. This will open up a form. Fill in a name for the controller that will help you distinguish it. We recommend naming it after the appliance you will connect to it.
5. Click OK. The controllers will now be saved and you will be returned to the list of controllers, including the unpaired ones. Repeat step 4-5 for all unpaired controllers until all controllers are paired.
6. You're done. The controllers will now also automatically be added to the ON/OFF, Power Consumption History, and Power Meter screenlets of an Asema E, and appear there when you run these.

3.3. Radio quality measurement

The Asema controller communicates with the Asema E device through radio signals on 434 MHz frequency. If your system is having problems, such as the buttons not switching ON or OFF appliances when you click on them, it might be that there are some problems with the radio signal. In certain installations or buildings the radio signal gets interference either from other signals, or due to the nature of the building, such as for example, thick steel walls. The Asema E can diagnose the radio quality.

3.3.1. Radio quality measurement on the device

1. Go to **Main Setup** > **Appliances** > **Controllers**. This will list all the controllers you have paired with the device. At the end of each Asema controller listed, you will see the test icon below . Tap on it.
1. This will send a test message to all controllers which will test the radio quality. It will return 4 values:
 - Device identifier: This is simply the ID of the controller in your system.
 - Signal quality: This shows a value between 1 and 100. On average a good working connection should show between 50 and 70.
 - Packet loss: the percentage of data packages that is lost in transmission. This value should not be more than 10.

- Hop count: the Asema E system can send messages to one controller that is far away, using another controller that is closer. The message then 'hops' from one controller to another and the same way back. In this way the distance a radio message is increased significantly. The maximum number of hops is four. For optimal performance you should try to get a hop count below three (See also Section 3.6 Mesh Networking).

3.3.2. Radio quality measurement in the WebView

1. Go to **WebView** > **Appliances** > **Controllers**. This will list all the controllers you have paired with the device. At the end of each Asema controller listed, you will see an icon labeled "QA". Tap on it:
2. This will send a test message to all controllers which will test the radio quality. It will return 4 values, which you will see in the pop-up:
 - Device identifier: This is simply the ID of the controller in your system.
 - Signal quality: This shows a value between 1 and 100. On average a good working connection should show between 50 and 70.
 - Packet loss: the percentage of data packages that it lost during transmission. This should not be more than 10.
 - Hop count: the Asema E system can send messages to one controller that is far away, using another controller that is closer. The message then 'hops' from one controller to another and the same way back. In this way the distance a radio message is increased significantly. The maximum number of hops is four. You should try to get reading under three for optimal performance (See also Section 3.6 Mesh Networking)

3.4. Removing the controller

To remove or unpair a controller, follow the following steps.

3.4.1. Removing the controller on the device

1. Go to **Main Setup** > **Appliances** > **Appliances**. This will list all the connected appliances and their controllers.
2. Click on the gear icon of the appliance you want to remove. This will open up a form with all the settings for this controller.
3. Click on "Delete". It will give you a pop-up, asking if you are sure that you want to remove this appliance. Click on OK. You will then get a second pop-up, asking if you would also like to remove the controller. Click OK.
4. You will then see the device processing the data. You will be notified when the appliance has been removed, and when the controller has been reset.
5. The controller is now removed from the system, reset and can be paired again with any Asema E system. When you click on Detect, it will immediately detect the unpaired controller.

3.4.2. Removing the controller in WebView.

1. Go to WebView, and click on Appliances. This will list all the connected appliances.
2. Click on the gear icon of the appliance you want to remove. This will open up a form with all the settings for this controller.

3. Click on "Delete". It will give you a pop-up, asking if you are sure that you want to remove this appliance. Click on OK. You will then get a second pop-up, asking if you would also like to remove the controller. Click OK.
4. You will then see the browser processing the data. You will be notified when the appliance has been removed, and when the controller has been reset.
5. The controller is now removed from the system, reset and can be paired again with any Asema E system. When you click on Detect, it will immediately detect the unpaired controller.

3.5. Resetting the controller

Each Asema S series device has a dedicated reset button for removing pairing data from the controller itself manually. **You should always try to reset a control from the Asema E first before doing a manual reset.**

A manual reset will simply remove the pairing from the controller without telling about this to an Asema E. It will therefore result in a "ghost" controller on the Asema E that can no longer be reached. You can however remove the ghost controller with a forced delete on the Asema E. Please refer to Asema E manual for more information.

The manual reset is needed if you have lost pairing data on your Asema E due to replaced equipment, accidental deletion or other similar reason. To perform the manual reset, you must have the controller connected to mains power. Then simply press the reset button. The controller will beep as an indication of reset.

You can find the reset button as follows

- On an Asema S1, the reset button is the transparent button with blinking red LED light
- On an Asema S2, the reset button is the gray button in front, marked with "RESET"
- On an Asema S3, the reset button is the transparent button with blinking red LED light, found under the top cover of the device

3.6. Mesh networking and repeaters

Mesh networking means that controllers with a radio can relay messages automatically between them and this way extend the range of communication or go around obstacles. Thus they work automatically as repeaters of messages for each other. Asema S series controllers and Asema M series meters can automatically form a mesh network.

You do not have to do anything to enable mesh networking, the devices will do this automatically. However, you may benefit from knowing the topology of the mesh network as placing a controller between two controllers that have trouble communicating with each other may improve the situation.

To get most out of mesh networking, take a look at the radio quality signals of the controllers. Read 3.3, "Radio quality measurement" to see how this is done. The "Hop count" measure tells you how many repeaters are between the Asema E and the controller you are analyzing. If you see a low hop count but a bad radio quality, this means that the radio is suffering from disturbance due to distance or obstacles. Placing another controller in a location that is between the two devices, possibly so that it allows to bypass an obstacle, will improve your installation.

4. Settings for Asema S series controllers

In addition to automation features that work when connected to the Asema E, Asema S series controllers support a set of independent safety and control settings that can be modified with the Asema E but work after that independent of the radio connection to the Asema E.

4.1. Default relay mode

When an Asema S series is in factory settings, after the controller gets power it will be in OFF mode. Consequently, it will not feed power to the appliance it controls unless the controller is switched on by using the controls of Asema E. The reason for having power switched OFF by default is fire safety and electrical safety. If for some reason during a blackout easily flammable material is placed on top of an appliance, turning power back on will not cause a fire hazard.

In some cases it is however desirable to have the power switched ON by default. This is especially true if the Asema S series controller controls a refrigerator or digital recorder. If the default mode has not been changed from its factory setting, the appliance will not receive power even after a very short blackout.

When the default mode is ON, the power will be automatically switched on when power returns to the controller. To change the default mode, enter the settings of the appliance in case and tick the box marking that the default mode is ON.

4.2. Safety timer

The safety timer switches the relay OFF automatically after the configured number of seconds has passed since the last ON switch. Every time the controller is put to ON state, the timer starts counting again. Once the counter reaches zero, the relay switches OFF.

The safety timer is a convenient and secure method to implement for instance automatic switch off of such home appliances as an electric stove. If you are worried that the stove is easily left accidentally on, the Asema S will turn it off e.g. after one hour of use. In case the appliance uses three-phase power, connect the Asema S series controller to a contactor and let the contactor cut the actual power.

4.3. Added radio security

In added security mode, the Asema S series controller will add and require a specific random security token in each radio message. With the added token, it is virtually impossible for a malicious person to try to interfere with the network by recording and replaying radio traffic. Using the security token is recommended if you operate in an environment where extra protection is needed. Because setting up this security while establishing a communication link takes slightly longer than in standard radio traffic, the mode is off by default and may cause delays in response time in installations where the input power to the Asema S is cut regularly.

5. Troubleshooting

This section lists a few common problems you may encounter into while using your controller and common remedies to them. For a more complete list of howto's and up-to-date answers to problems, visit the FAQ section on our support website at support.asema.com.

- **Cannot detect a controller**

If a controller cannot be found when detecting a controller, the problem can be the cause of four basic reasons: 1) the controller is not connected to mains power, 2) the radio reception is poor, 3) the controller is already paired, or 4) the device is broken.

First make sure the controller is properly connected. On Asema S1, the LED light will blink to indicate a proper mains connection. On Asema S3, when power on pressing the foot switch will cause a tick sound when the relay switches on.

After making sure you have power, make sure there are no interfering obstacles between the controller and an Asema E and the distance between the two does not exceed 30 meters.

Make sure that the controller is not already paired. A paired controller no longer sends a beacon and cannot therefore be detected. To have the controller send beacon again, reset it either from the Asema E (in case of a controller paired to that Asema E) or from the reset button.

- **Cannot pair a controller**

Pairing a controller requires a good radio connection between the controller and Asema E. Make sure you have no interfering elements between the devices and the distance is short enough. For troubleshooting purposes you may want to move your Asema E closer to the controller to see how distance affects the radio connection. Use the bar indicators to check the field strength if necessary.

- **Slow response to commands**

If your controller works but the operation seems sluggish, this is most likely due to poor radio coverage. The commands are slow because they need to be resent many times before a valid command can be pushed through.

To improve the response, you may want to place the devices differently to avoid radio disturbance. Placing another controller in between the devices may also help as a repeater. Note also that radio antennas are always directional to some directions and reflections from walls and other structures will affect the way radios work. Try to move or rotate your Asema E a bit, this may help the radio connection considerably.

Recycling

At the end of its serviceable life, this product should not be treated as household or general waste. It should be handed over to the applicable collection point for recycling of electrical and electronic equipment, or returned to the supplier for disposal. You are liable to dispose of all your electronic or electrical waste equipment by relocating over to the specified collection point for recycling of such hazardous waste. Isolated collection and proper recovery of your electronic and electrical waste equipment at the time of disposal will allow us to help conserving natural resources. Moreover proper recycling of the electronic and electrical waste equipment will ensure safety of human health and environment.

RoHS compliance. This product is in compliance with Directive 2002/95/EC of the European Parliament and of the Council of 27 January 2003, on the restriction of the use of certain hazardous substances in electrical and electronic equipment (RoHS) and its amendments.

For full compliance statements, please visit www.asema.com.