

Table of Content

1.	Summary
	1.10verview
	1.2Applications and Universal Usage P3
	1.3SpecificationsP4
	1.4Package content
	1.5Attention
2.	Product outlookP6
3.	How to install / operate
	3.1Soft Stop Recording
	3.2Hard Stop Recording
4.	How to playback videoP8
5.	Indication lights meaningP8
6.	Factory setting
7.	Changeable functions in software system
8.	Change functions procedure
9.	How to update patches
10	Accessories
11	.Trouble Shooting

1. Summary

1.1 Overview

It is a CCTV Security Digital Video Recorder (DVR) camera, not a real lamp. This is an innovative design and being patented. The idea is very simple to use and can be used worldwide, just insert a Micro-SD card and screw-in like a bulb, turn on power. It will automatically record video. The key advantage is no need technical background, you know how to install and use it, besides its video files are so small, a 32GB Micro-SD card can store more than 8 days video files (CIF format). Bring security into environments by your own like home, office, factory, shopping mall, restaurant and so on.

1.2 Applications and universal usage

This camera has been built-in a powerful security management system. Users can change settings to meet various applications.

Application	Description
1. Day and night non-stop surveillance	It suits for environments need to record day and night
	7daysx24hr, and large memory capacity. For this
	application, change recording mode to "Real Time"
	and file storage method to "Circular".
2. Motion detection only	It suits for environments need to record moving
	objects only, ignoring static scenes. For this
	application, change recording mode to "Motion
	Detection "
3. Spy camera	This camera looks like a real lamp, it is good to be a
	spy camera, setting no light when recording, thefts
	would not discover it. For this application, change
	recording indication light to "Indication light off".
4. Apply video recording law	In some countries, when recording video can not
	record audio together in public area by law. For this
	application, change video recording with sound to
	"No".
5. Shooting at different angles	This camera can shoot at different angles, a 200mm
	long extension adapter included, bending it to make
	camera aiming at different angles.

6. Universal Usage	Different countries have different bulb holder types.
	This camera comes with E27 adapter, we have
	different converters to match that, like E27 to GU10/
	B22/E12/E14 and so on.

1.3 Specifications

Item Name	Bulb CCTV Security DVR Camera
Model No.	BC-680 - using 3rd generation LED array (850nm
	wavelength)
	BC-681 - using 24pcs IR LEDs
	BC-682 – using 3 rd generation LED array (940nm
	wavelength)
System	ARM9 32-bit Microprocessor core
Image Sensor	1/4" CMOS sensor
Len Resolution	300,000 pixel
Len	3.6mm(default)/2.8mm/6mm (optional)
Viewing Angle	2.8 mm – around 110°
	3.6mm – around 90 $^{\circ}$
	6mm $$ - around 60 $^{\circ}$
Video Format	3GP
Video Resolution	640x480(VGA) / 352x288(CIF)
Audio Format	ADPCM format
Microphone	Built-in
Memory Card Device	Micro-SD Card, 2GB-32GB
Video File Size	A 4GB card can store 24hrs video files (CIF format)
IR LED	2pcs 3rd generation LED array (850nm wavelength),
	red dot light at night - BC-680
	24pcs IR LEDs, red dot light at night - BC-681
	2pcs 3rd generation LED array (940nm wavelength),
	no light at night - BC-682
Night vision Distance	15 – 20 Meters (6mm Len)
	10 – 15 Meters (3.6mm Len)
	5 – 10 Meters (2.8mm Len)

Motion Detection Distance	5 – 8 Meters
Min. illumination	0 Lux (IR on), 0.5 Lux (IR Off)
Camera Adapter	E27
Input Voltage	AC 110V – 250V
Power Consumption	<5W
Working Temperature	-20 °C ~ 70 °C
Dimension	110mm Height x 72mm Diameter
Weight	120g

1.4 Package Content

- 1 x Bulb DVR Camera
- 1 x User Manual
- 1 x CD
- 1 x Micro-SD card reader

1.5 Attention

- 1. Before replacing the camera, please ensure the power is OFF and the circuit voltage is within the operation range (110 250 V AC)
- 2. Please hold the plastic enclosure of the camera during installation or removal to ensure safety
- 3. If camera running for more than 2hrs with IR light On, the plastic case will be little bit warm that is normal, and the metal part will be warm too. But when IR light off, it will cool down quickly.

2. Product Outlook



3. How to install/operate



- 1. Insert a Micro SD card (2GB-32GB, format it for first time usage) into the camera card-slot
 - 1.1. Before screw-in the camera, ensure the socket power is off and the voltage is within the operation range (AC 110 250V)
- 2. Screw-in the camera like a bulb
- 3. Turn on power
- 4 .First you would see <u>Blue</u> and <u>Red</u> indication lights are on, after few seconds only <u>Blue</u> indication light is flashing that means it is recording. But if only <u>Red</u> indication light is on, that means the Micro SD card has some problem, take it out and reformat it and insert it again.

3.1 Soft Stop Recording



- 1. If it is recording, press the "S" button once.
- The <u>Blue</u> and <u>Red</u> indication lights will be on. That means it is in standby mode, Wait for 3-5 seconds, push the card, it will eject out. When the card is out, only <u>Red</u> indication light is on.
- 3. If the card is not taken out, to continue recording, just press the "S" button once again, the <u>Blue</u>

indication light will keep flashing, that means it is recording.

- 4. If the card is taken out, insert the card again, wait for around 10 seconds, the <u>Blue</u> indication light will keep flashing. That means it is recording. Or insert the card and press "S" button once, you see the <u>Blue</u> indication light will keep flashing. That means it is recording.
- 5. Above actions are assuming the power is on

3.2 Hard Stop Recording

- 1. If it is recording, you want to stop recording, you can directly turn off power.
- 2. Wait for 3-5 seconds before take out the card
- 3. If you want to continue recording, just insert the card again and then turn on power

4. How to Playback video

- 1. Take out Micro-SD card from camera
- 2. Put the card into card reader and plug into computer usb port
- 3. On computer, a removable hard-disk pop-up
- 4. Browsing it's content, there is a folder called "VIDEO->RECORD"



5. All recorded video files are stored there, click a video file to play

2012-08-17 15-04-49	209,088 KB
2012-08-17 15-34-56	179,389 KB
2012-08-17 16-05-04	198,037 KB

6. If the video can not see images but sound only, then you have to install a media player called "VLC media player" from coming CD or download it from internet for latest version.(www.vlcmediaplayer.org)

5. Indication Lights Meaning

- 1. <u>Blue</u> light keeps flashing in a periodic interval, that means the camera is recording
- 2. <u>Blue</u> light flashing three times, then no more light on camera, that means the camera is starting recording in No indication light mode
- 3. <u>Blue</u> and <u>Red</u> lights are on, that means the camera is in standby mode with card inside
- 4. <u>Red</u> light on only, that means there is no Micro-SD card inside or The card has some problem

6. Factory Setting

The factory out setting :

Parameters / Functions	Value
Video Format	3GP (fixed)

Real Time Recording Mode, video files	30 mins per file (fixed)
saved in	
Motion Detection Mode, video files	2 mins per file if no more action, if objects keep
saved in	moving, it will keep storing, the max. is 30 mins
	per file (fixed)
Video file name format	YYYY-MM-DD hh-mm-ss e.g. 2012-07-19
	19-54-34 (fixed)
Recording Mode	Real Time (Changeable)
Resolution	640x480 (Changeable)
Recording with Audio	Yes (Changeable)
Indication Light	On (Changeable)
Circular Storage	Yes (Changeable)
Time Stamp on Video	Yes (Changeable)

7. Changeable Functions in Software System

This camera has built-in a powerful security management system, there are 7 major functions. They are changeable to meet different applications. Change procedure is very simple just done on Micro-SD card.

Function Name	Description
Recording mode : Real time / Motion	Real time Recording : Video files will be recorded in
Detection only	30min per file, if there is object moving, the video will
	be recorded in 12fps, if there is no object moving, the
	video will be recorded in 1fps
	Motion Detection only : If objection motion is
	detected it will start recording at 12fps, and if no more
	actions after 2 mins, it will save a 2 mins file. If the
	actions keep moving, it will keep record until no more
	action detected. The max recording time is 30mins per
	file. If no action being detected, no files will be
	created.
CIF/VGA Resolution	Two video resolutions for selection, CIF 352x288 /
	VGA 640x480
Circular Storage/ Non-circular storage	Circular storage means if Micro-SD card is full, it will
	overwrite earlier files and keep storing. Non-circular
	storage means when Micro-SD card is full then stop
	recording
Recording Indication Light On/Off	Recording indication light On, blue indication light
	will be flashing when recording. Recording indication

	light Off means no light when recording. It is good for
	spy purpose.
Time Stamp on Video	Stamping date time on video or not
Recording Audio in video	Recording video with sound or not, due to some
	countries not allowing recording video with audio in
	public area.
Date time	Use computer system time or customize a time

8. Change Functions Procedure

- 1. Plug your Micro-SD card (the same one using in camera) into computer USB slot
- 2. Open the coming CD or go to our website <u>www.eazzydv.com</u> download area downloading it, there is a folder called "USERSET TOOL"



MFC42D.DLL	2008/7/22 18:18
MFCD42D.DLL	2008/7/22 18:18
MFCO42D.DLL	2008/7/22 18:18
MSVCRTD.DLL	2008/7/22 18:18
USBPopOut	2008/12/4 18:08
🛵 UserSet	2012/8/15 11:49

2. Copy the whole folder into your Computer or Micro-SD card

3. Double click to run the file "userset.exe", a screen will prompt up

C Use computer system time		
	8 Month 16 Date 17	Hour 12 Minute 28 Second
Recording Mode	Resolution	Circular Storage of video files
🕫 Real Time	C VGA (640 x 480)	(Yes
Motion Detection	(CIF(352 x 288)	C No
Indication light On when recording	Time stamp on video	Sound recording in video
Indication light On when recording	Time stamp on video	Sound recording in video
@ 0n	@ 0n	☞ Yes

- 4. Click to choose functions you want to change, click "Save to exit" button to save changes, otherwise click "cancel" button to quit.
- 5. Take the card from computer and insert into your camera again, turn on power. It will auto apply the changes.

9. How to update patch

- 1. Plug your Micro-SD card (the same one using in camera) into computer
- 2. If there are new patches, we will list on <u>www.eazzydv.com</u> download section
- 3. Download the patch and unzip it on your computer
- 4. There should have a folder called "update", copy the whole folder into your Micro-SD card
- 5. Put the card into camera and turn on power again
- 6. <u>Blue</u> light will keep flash for a while and then off. No indication light at all. That means updating completed.
- 7. Turn off power, and then turn on again. It is running new updates.

10. Accessories



10.1 Extension Adapter

Item No.	Picture	Description
BC-AE16		160mm extension adapter, bending angle is around 10 °
BC-AE20		200mm extension adapter, Max. bending angle is around 90 °
BC-AE30		300mm extension adapter, max. bending angle is around 180 °
BC-AE45		450mm extension adapter, max. bending angle is around 360 °



10.1 Extension Adapter with Plug

Item No.	Picture	Description
BC-AEP30UK		300mm long extension adapter with UK plug
BC-AEPC30UK		300mm long extension adapter with UK plug plus clip and power cable



10.3 Bulb Converter

Item No.	Picture	Description
BC-ACB22		Converting E27 to B22
BC-ACGU10		Converting E27 to GU10
BC-ACE14		Converting E27 to E14
BC-ACE12		Converting E27 to E12

11. Trouble Shooting

1. When playback video, there is sound only without pictures

Solution : This is the problem of your media player that does not support 3gp format video. Please download a media player called "VLC media player" from internet <u>www.vlcmediaplayer.org</u>. That can solve the problem.

2. When recording, after pressing the "S" button the Red and Blue indication light should be ON, but only Red indication light is ON and the Micro-SD card inside of camera Solution : Press "S" button again once firmly, the blue and red indication lights will be ON. The

problem is caused by in-proper contacting switch.

3. The Red and Blue indication light are on, a micro SD-card inside camera, press "S" button. The camera still not recording.

Solution : Take out the Micro SD card check it whether full and system set to non-circular recording. If so, change setting to circular recording or delete some old files inside of the card.

4. The Red and Blue indication lights are on, micro SD-card is not full, press "S" button. The camera still not recording.

Solution : Take out the Micro SD-card and check it, the card is good or not. If the card is good, press "R" button (reset button).

5. The bulb holder with power and all indication lights are off

Solution : Check power holder with power or not, if it is with power press the reset button of camera. If there is still no indication lights, then contact local maintenance service centre or our customer service support on website www.eazzydv.com.