



# 8.5ft Square Olefin Offset Umbrella

## Assembly and User Manual

ITEM: 940310  
#M42929



The schematics in this manual are for assembly and operation illustration only. They may differ from the umbrella's actual appearance.




www.atleisure.com  
ATLANTA, GEORGIA  
**Customer Service Toll Free 1-855-880-7205**  
Monday through Friday from 8:00am-5:00pm  
(Eastern Time)

If you have any questions, problems or need additional parts please **do not return** to the place of purchase. Contact our customer service department toll free at **1-855-880-7205** or email us at **customerservice@atleisure.com**


2. Package Contents |



| Replacement Parts (cont'd) 11.

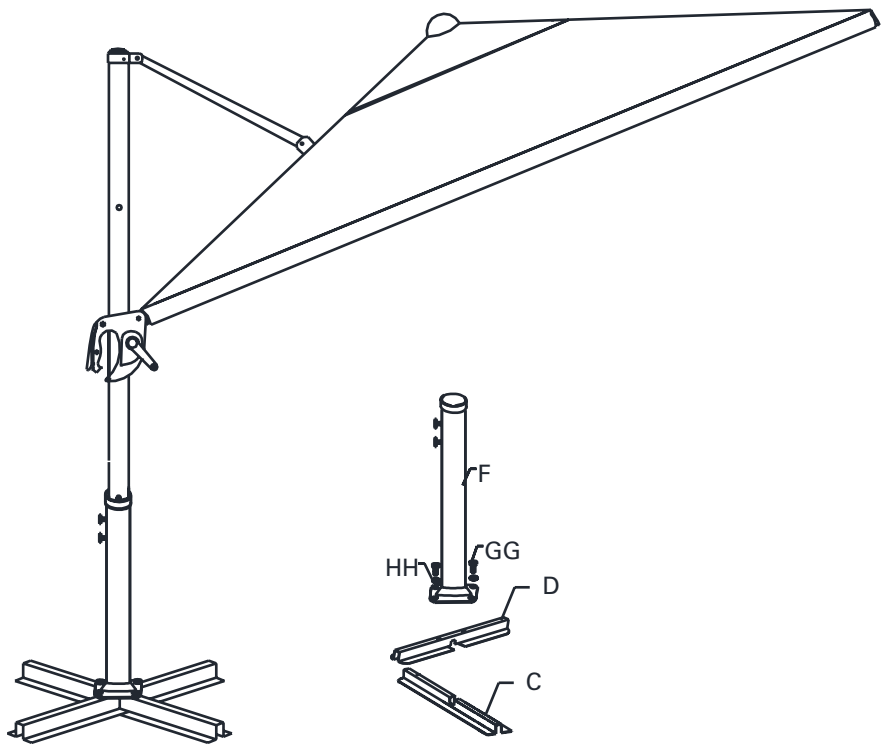

| PART | DESCRIPTION                      | QTY(PC) |
|------|----------------------------------|---------|
| C    | Lower Cross Leg                  | 1       |
| D    | Upper Cross Leg                  | 1       |
| F    | Holder Pole (with control knobs) | 1       |
| N    | Umbrella Frame (with canopy)     | 1       |

| No. | Description     | Qty. | Re-order No.   |
|-----|-----------------|------|----------------|
| C   | Lower Cross Leg | 1pc  | CSL-C48X-BRZ-T |
| D   | Upper Cross Leg | 1pc  | CSL-D48X-BRZ-T |
| F   | Holder Pole     | 1pc  | HDP-F48X-BRZ-T |
| G   | Bolt            | 4pcs | HDW-GG-T       |
| H   | Washer          | 4pcs | HDW-HH-T       |
| 7   | Crank           | 1pc  | CRK-748G-BRZ-T |

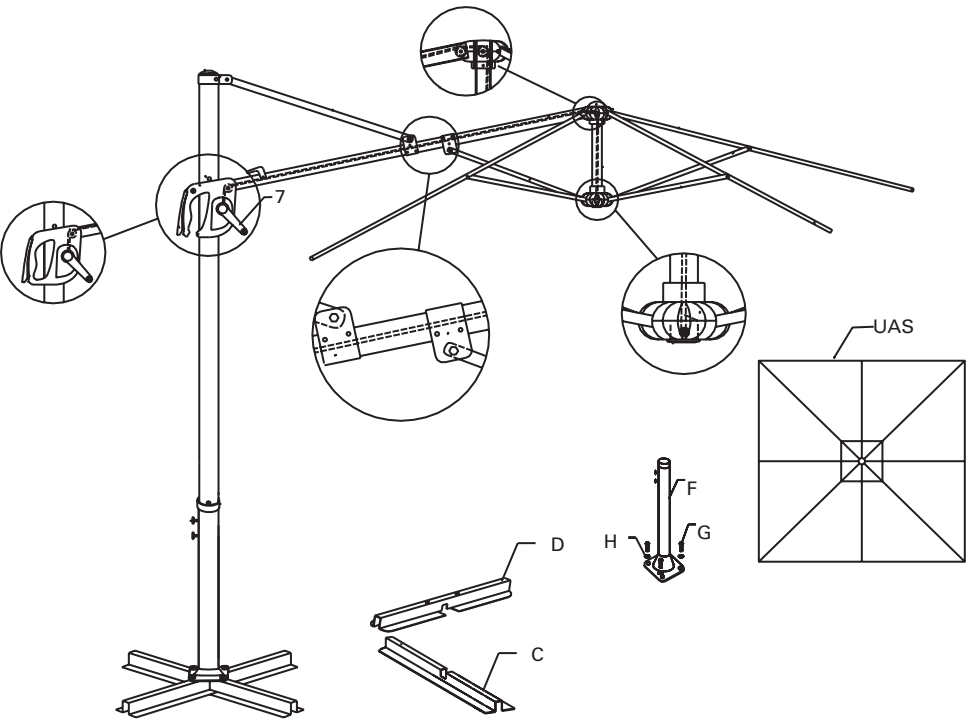
 
| PART | PICTURE   | DESCRIPTION                  | QUANTITY                      |
|------|---|------------------------------|-------------------------------|
| GG   |  | Hex Bolt M10-1.5x20<br>A2-70 | 4pcs<br>(in the blister pack) |
| HH   |  | Flat Washer M10 A2-70        | 4pcs<br>(in the blister pack) |


**PREPARATION**  
Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and diagram above. If any part is missing or damaged, contact our customer service toll free at **1-855-880-7205** for replacement parts or further instructions.

Tools Required for Assembly: Open end wrench or adjustable wrench (not included)


## 4. Assembly Instructions |

| Warranty 9.

Remove all protective materials. Be careful not to throw away small parts such as screws, washers, etc. that may be wrapped in the protective materials.

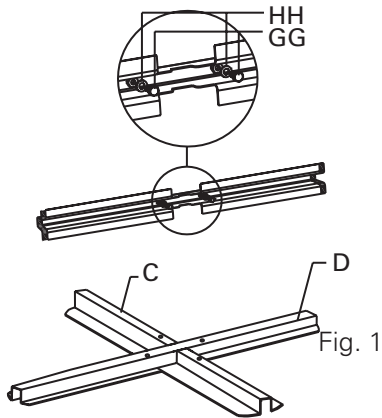

**Step 1.** Place the Upper Cross Leg (D) over Lower Cross Leg (C) to form an "X" as shown in Fig 1.

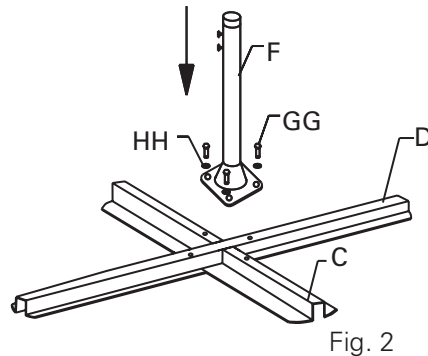

**Step 2.** Attach the Holder Pole (F) to the cross legs (C&D) with the Screws (G) and Washers (H) (found in blister pack) as shown in Fig 2. Hand tighten only. Adjust the Holder Pole (F) to be sure it is positioned correctly on the base. Finally tighten all bolts. Be careful not to over tighten.

### 90-DAY WARRANTY

This product is covered under a manufacturer's 90-day warranty from date of purchase against defects in materials and workmanship. This warranty does not cover damage due to neglect, abuse or weather related damage. For full warranty disclosure, email us at **customerservice@atleisure.com**.

### HOW TO FILE A CLAIM

If you are within your warranty, to file a claim you must have your receipt and pictures of your damaged umbrella. Email information to ATLeisure at **customerservice@atleisure.com**.

This ATLeisure product is covered by U.S. Patent No. 5,937,882 and U.S. Patent No. 8,104,492.

## 8. Warnings |

1. Do not use this umbrella during periods of high wind and rain. Failure to do so may result in personal injury and/or property damage.
2. Be sure to secure and/or weight the base of the umbrella.
3. Always take the umbrella down when not in use.
4. Remove the crank after set up is complete (as shown in Fig. 10) and keep it for next time use, in order to prevent children from opening/closing the umbrella and causing damage/injury.
5. Before opening the umbrella, please make sure that the Ballast is filled with water. Fill the Ballast with water when necessary to increase product stability. Recommended minimum weight of the water loaded for proper umbrella stability is 150 lbs. Failure to do so will result in a weight imbalance and cause the umbrella to tip over.
6. Do not stand on the umbrella base. To avoid the base from breaking or distorting do not drag the easy ballast base on the ground.
7. Placement of the umbrella over or near a swimming pool can cause premature fading of the canopy. This is not covered under our warranty.
8. To prevent damage to the canopy, open the umbrella facing the opposite direction that the wind is blowing.

### CANOPY CARE INSTRUCTIONS:

Simply clean the umbrella canopy with a soft brush and mild detergent.

Do not machine wash.

Do not iron.

Air dry the canopy thoroughly before storing for extended periods of time.

Make sure the canopy is completely open during drying process to prevent shrinkage.

## | Assembly Instructions (cont'd) 5.


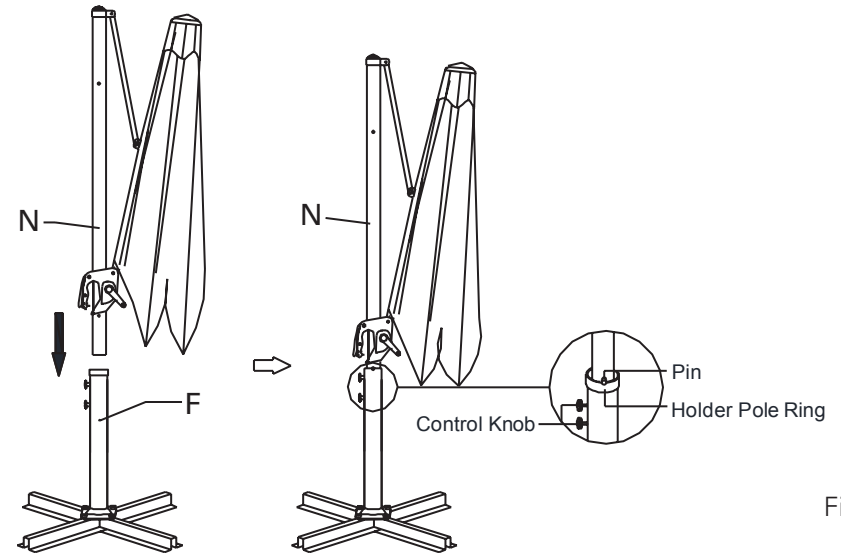


Fig. 3

**Step 3.** Insert the main pole of the Umbrella Frame with Canopy (N) into the Holder Pole (F) until the lower fixed stop pin sits on the Holder Pole Ring as shown in Fig. 3. Tighten the two control knobs into the Holder Pole (F) to secure the umbrella as shown in Fig. 3.

**Step 4.** Use appropriate anchors to permanently attach base to your wooden deck or concrete patio or use patio stones or offset umbrella base (sold separately) to weight down the umbrella base.

## 6. Instructions Of Set-Up & Operation |

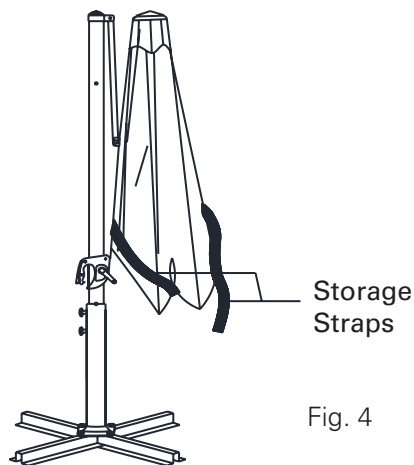



**Step 1.** Unfasten the storage straps around the canopy as shown in Fig. 4.

**Step 2.** Open the umbrella for the first time: Pull out the lever clamp to release the glide handle as shown in Fig 5. Grasp and slide the glide handle up along the umbrella pole. Turn the crank handle in the open direction as shown in Fig. 5 to open the canopy until the lower center hub reaches the end of the support pole as shown in Fig. 5 where the canopy has the proper tension. Push down the lever clamp to lock the glide handle against the umbrella pole as shown in Fig.5 where it determines a canopy tilt angle.

**If the crank becomes too hard to crank, check to see if the rope has come off the pulley. If you continue to turn the crank, the rope could break.** Contact our customer service toll free at **1-855-880-7205** for further assistance.

**Step 3.** If the canopy does not cover the area on your patio as expected (does not offer the shade to the area) you may need to adjust the position of the canopy to cover your desired area. Loosen the control knobs and turn the umbrella pole around its axis to let the canopy move to be over your desired area. Finally make sure to tighten the control knobs to secure the umbrella.

## | Instructions Of Set-Up & Operation (cont'd) 7.

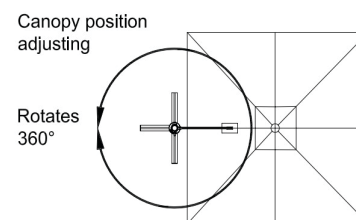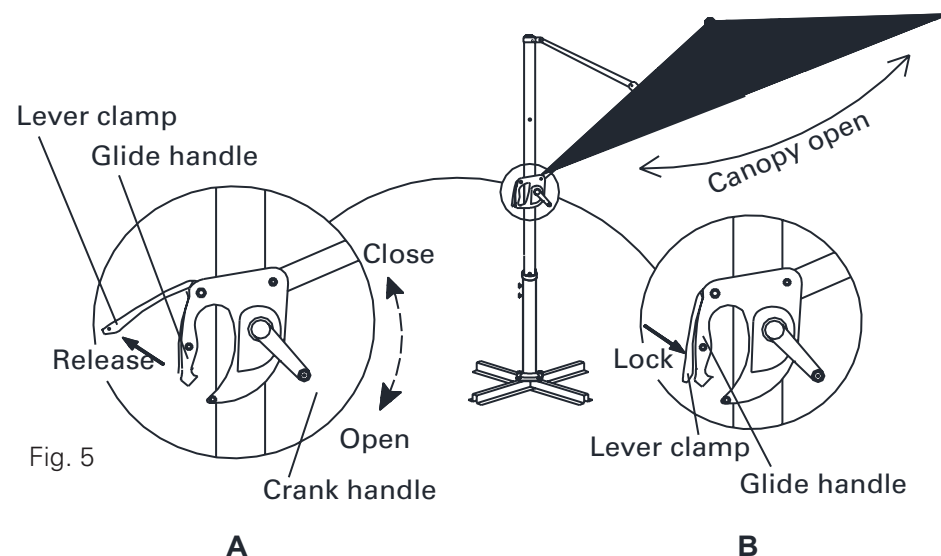

**Fig. 7** The umbrella can rotate 360° around the axis of the main pole

The umbrella has a unique design that moves the pole out of your way and off to the side. The multiple position canopy can rotate 360° around the axis of the main pole to offer the shade on your expected area around the umbrella.