

SAMSUNG

**PORTABLE CELLULAR
TELEPHONE
SCH-A105
User's Manual**



World Wide Web
<http://www.samsungmobile.com>

Printed in Korea
Code No. : GH68-xxxxxA
English(Brazil)
2000/05. Rev.1.0

FCC RF EXPOSURE INFORMATION

In August 1996 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards.

Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations.

Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

Body-worn Operation

This device was tested for typical body-worn operations using the optional belt-clip/holster placed 0.7 inches (1.8cm) from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.7 inches (1.8cm) must be maintained between the user's body and the phone, including the antenna, whether extended or retracted. The use of third-party belt-clips/ holsters with no metallic components that provide the minimum separation distance of 0.7 inches (1.8cm) can be used to satisfy FCC RF exposure requirements. The use of non-tested accessories or other body-worn operations may not comply with FCC RF exposure requirements and should be avoided. Contact your local dealer for optional accessory items.

Vehicle Mounted External Antenna (optional, if available.)

A minimum separation distance of 7.9 inches (20cm) must be maintained Between a person and the vehicle mounted external antenna to satisfy FCC RF exposure requirements.

For more information about RF exposure, please visit the FCC website at www.fcc.gov

Table of Contents

GETTING STARTED

Unpacking	7
Phone Layout	8
Key Functions	8
Display	10
Icons	10
Installing Battery	11
To Install the Battery	11
To Remove the Battery	12
Charging a Battery	13
Low Battery Indicator	14
Switching the Phone On/Off	15

GENERAL FUNCTIONS

Making a Call	16
Correcting the Number	16
Ending a Call	16
Emergency Dialing	17
Prepend Dialing	17
Making a Call from the Phone Book	18
To Search an Entry, Then Dial	18
To Search a Name, Then Dial	18
Speed Dial	19
One-Touch Dial	19
Two-Touch Dial	19
Three-Touch Dial	20
Voice Dialing	21
Last Number Redial	21
Answering a Call	22
Viewing Missed Calls	22
In-Call Options	23
Call Waiting	24
Three-Way Calling	24
Call Forwarding	25
Adjusting the Volume	25
Quick Switching to Vibration Mode	26
Recording a Voice Memo	26

USING THE MENUS

Using the Navigation Keys	28
Using the Index System	29
Menu Map	30

CALLS

Outgoing (MENU 1-1)	32
Incoming (MENU 1-2)	33
Erase Logs (MENU 1-3)	34
Air Time (MENU 1-4)	34

PHONE BOOK

Find Name (MENU 2-1)	35
My Phone Number (MENU 2-2)	36
Add Entry (MENU 2-3)	36
Creating a New Entry	36
Adding a Number in an Existing Entry	37
Storing Phone Numbers at Call End	37
Entering a Name	38
Find Entry (MENU 2-4)	39

SOUNDS

Ring (MENU 3-1)	40
Key Beep (MENU 3-2)	41
Alert (MENU 3-3)	41
Alarm (MENU 3-4)	42
Differential Ring (MENU 3-5)	42
Power-on/off (MENU 3-6)	43

DISPLAY

Backlight (MENU 4-1)	44
Greeting (MENU 4-2)	44
Version (MENU 4-3)	44
Language (MENU 4-4)	44

PIM (Personal Information Manager)

Schedular (MENU 5-1)	45
To Do List (MENU 5-2)	47
Calculator (MENU 5-3)	48
World Time (MENU 5-4)	48
D-Day (MENU 5-5)	49

Voice Dial

Record (MENU 6-1)	50
Review/Erase (MENU 6-2)	51
Erase All (MENU 6-3)	52
Set Active (MENU 6-4)	52

SETUP

Auto Retry (MENU 7-1)	53
Auto Receive (MENU 7-2)	53
Auto Hyphen (MENU 7-3)	53
Answer Mode (MENU 7-4)	54
Tone Length (MENU 7-5)	54
Tone (MENU 7-6)	54
Set Time (MENU 7-7)	55
In Data/Fax (MENU 7-8)	55
Analog Call (MENU 7-9)	55
Select Mode (MENU 7-0)	56
Web Browser (MENU 7-*)	57

Web Browser

The Web Browser Prompt to Start	58
Launching the Web Browser	59
Exiting the Web Browser	60
The Web Browser Soft Keys	60
Navigating the Web Browser	60
Entering Text, Numbers, or Symbols	63
Using Links	63
Initiating a Phone Call from the Web Browser	63
Using Bookmarks	63

SECURITY

Lock (MENU 0-1)	65
Restrict (MENU 0-2)	66
Lock Code (MENU 0-3)	66
Emergency Number (MENU 0-4)	66
Send PIN (MENU 0-5)	67
Clear Memory (MENU 0-6)	67
NAM Mode (MENU 0-7)	68
Block Own Number (MENU 0-8)	68
System Select (MENU 0-9)	69
Reset Phone (MENU 0-0)	69

MESSAGES

Received Messages (✉ -1)	70
Transmitting Messages (✉ -2)	72

ACCESSORIES

Batteries	73
Cigarette Lighter Adapter	73
Travel Charger	73
Hands-Free Car Kit	73
Ear-Microphone	73
RS-232C Cable	73

USING THE BATTERIES

Precautions When Using Batteries	74
--	----

SAFETY INFORMATION

Road Safety	76
Operating Environment	76
Care and Maintenance	78
Emergency Calls	79

GLOSSARY OF TERMS	80
-------------------------	----

GARANTIA	83
----------------	----

QUICK REFERENCE CARD	87
----------------------------	----

Safety Precautions and Important Notices

Read these simple guidelines. Failure to comply with these guidelines may be dangerous or illegal.

For more detailed safety information, see Safety Information on page 76.

ROAD SAFETY COMES FIRST

Do not use a hand-held phone while driving; park the vehicle first.

SWITCH OFF IN AIRCRAFT

Mobile phones can cause interference. Using them on aircraft is illegal.

SWITCH OFF NEAR BLASTING

Do not use the phone where a blasting operation is in progress. Observe restrictions, and follow any regulations or rules in force.

SWITCH OFF WHEN REFUELLING

Do not use the phone at a refuelling point or near fuels or chemicals.

INTERFERENCE

All mobile phone may be subject to radio interference, which may affect their performance.

Getting Started

QUALIFIED SERVICE

Only qualified service personnel must install or repair cellular equipment. Use only approved accessories and batteries.

USE SENSIBLY

Use only in the normal position (to ear).
Avoid unnecessary contact with the antenna when the phone is switched on.

IMPORTANT! Use only accessories approved by the phone manufacturer. This apparatus is intended for use when supplied with power from SAMSUNG approved Travel adapter and Desktop charger. The use of any other types will invalidate any approval or warranty applying to the phone, and may be dangerous.

 
When you disconnect the power cord of any accessory, grasp and pull the plug, not the cord.

Este produto está adequado para uso no ano 2000 e subsequentes.

 
Unpacking

Your package contains the following items.

Handset



Desktop Charger



Battery



Hand Strap



User's Manual



In addition, you can obtain the accessories for your phone from your local SAMSUNG dealer. For information on the accessories, see page 73.

Phone Layout

The following illustrations shows the main elements of your phone.



Key Functions



Enters the menu facility. Also, scrolls through the menu options.



In the idle mode, enters the **Messages** menu.
In the menu facility, selects a menu function or stores information that you have entered (such as a name in the phone memory).

Key Functions (Continued...)



In the menu facility, scroll through the menu options and phonebook memory.

In the idle mode, key displays the Phone Book entries and key displays the Phone Book names.



In the menu facility, scroll through the menu options and phonebook memory.

When entering a name, move the cursor left or right. When the key is held down *in the idle mode*, records a voice memo. (For details, refer to page 26).



Makes or answers call.

In the idle mode, enters the Outgoing Call Log.



Deletes characters from the display.

In the menu facility, returns to the previous menu level.



Ends a call. Also, switches the phone on or off when pressed and held.

In the menu facility, returns to the idle mode and cancels your input.



Enters numbers, letters and some special characters.



In the idle mode, enters the **Voice Dial** mode when pressed and held.



In the idle mode, quickly changes to Vibration mode when pressed and held. (Refer to page 26).

 


(On the side of the phone)


Adjusts voice volume *during a conversation* and key beep volume *in the idle mode*. *In the menu facility*, scrolls through the menu options.


Display


The display comprises two areas: an upper line of static icons, and the lower text and graphic area. The following icons display at power-on:

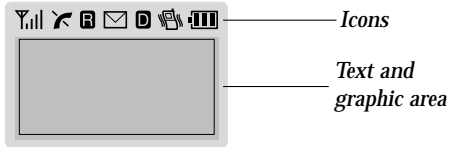

Icons


 Shows the received signal strength. The more bars you see, the stronger the signal.


 Indicates the phone is out of service area, and you cannot make or receive calls.

 Appears when you are out of your home area and have registered with a different network (when travelling in other countries, for example).

 Appears when a new message has been received.

 Indicates a Digital mode.

 
 Indicates a Vibration mode.

 Shows the level of your battery. The more bars you see, the more power you have left.

 
Installing Battery

To Install the Battery

1. Insert the saw-toothed end on the bottom of the battery into the slots on the bottom of the phone (①), then slide the battery down (②).

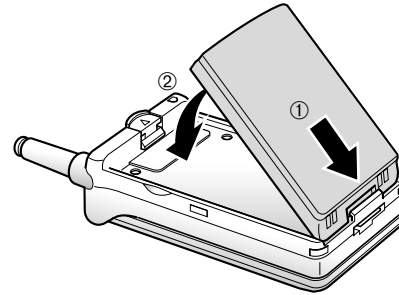


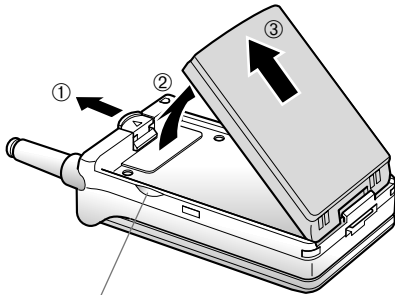 
2. Press the battery down until you hear a click.

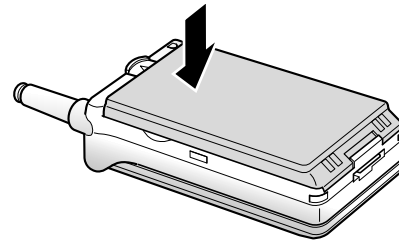

To Remove the Battery

If you want to remove the battery, do as follows:

1. If necessary, switch off the phone by holding down  key until the power-off message is displayed.
2. Push up and hold the catch above the battery on the back of the phone (①) and lift the battery away. (② - ③)



Use the grooves on both sides of the phone when you lift the battery away.

 
Charging a Battery


Your phone is powered by a rechargeable Li-ion battery. A desk top charger is provided with your phone. Use only approved batteries and chargers. Ask your local SAMSUNG dealer for further details.

 
The phone can be used while the battery is charging.


Note: You must fully charge the battery before using your phone for the first time. A discharged battery is fully recharged in approximately 8-12 hours.

 
1. Plug the power cord of the charger into a standard wall outlet.

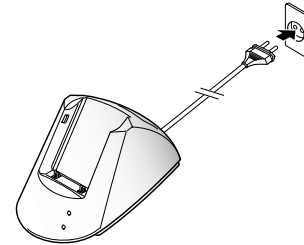

2. Remove the battery from the phone and place it in the rear compartment of the charger. The light marked  on the front of the charger turns red.

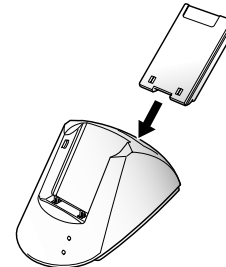 


3. If you do not wish to use your phone while charging the battery, you can leave the battery attached to the phone. Place the phone with the battery attached in the front compartment of charger with the keypad facing forward. The light marked  on the front of the charger turns red.

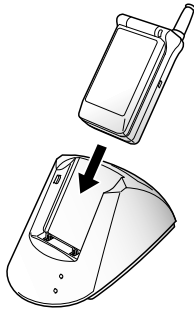


Low Battery Indicator

When the battery is weak and only a few minutes of talk time remain, an empty battery icon (no bars displayed) flashes in the upper right corner of the screen. You will hear a warning tone.

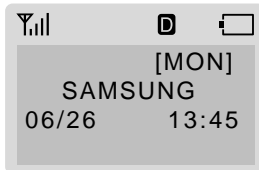



When the battery becomes too weak for the phone to operate, it switches off automatically.

Switching the Phone On/Off

1. Open the flip cover.
2. Hold down  key for more than one second to switch the phone on.

The red light flashes, an alert sounds:

- When the system locates services, the greeting message displays along with the date and time. You can now place and receive calls.
- If the system cannot locate service, the greeting message displays without the date and time. In this case, you cannot place and receive calls. You can try later when service is available.
- If your phone is locked, the lock icon appears. Press  key, and enter the four-digit lock code to unlock the phone.

3. When you wish to switch the phone off, hold down  key for more than two seconds.

General Functions

Making a Call

When the idle screen is displayed, key in the area code and phone number and press  key.

Note: If you have set **Auto Retry** option (7-1) to **On** (see page 53), and the call does not connect, the phone automatically retries to make the call.

Correcting the Number

To clear ...

The last digit displayed


The whole display

Then

Press  key.

Hold down  key for more than one second.

Ending a Call

When you have finished your call, briefly press  key or close the flip.





Emergency Dialing

You can place calls to 911 or one of the three emergency numbers in your emergency number list even if your phone is locked. For further information on emergency number list, refer to page 66.

Prepend Dialing

The **Prepend** option enables you to add up to digits, such as area codes and network feature activation codes, to a phone number. You can prepend an existing entry in the Phone Book or Call Logs before dialing.


To prepend existing phone numbers in the Phone Book or Call Logs:

1. Access the phone number entry.
2. When the desired phone number displays, press  key to access the **Options** menu.
3. Press  key ( key in Call Logs) to select **Prepend** option.
4. Enter the area code or feature code.
5. Press  key to dial the number.





Making a Call from the Phone Book


You can store the phone numbers called regularly in memory, called the Phone Book. You then simply recall the number to dial. For further information on Phone Book, refer to page 35.

To Search an Entry, Then Dial


1. Press  key in the idle mode.

The screen shows the entries stored in the Phone Book in numerical order.





2. Use  or  key to find the desired entry.
You can also enter the first digit of the number by pressing the associated alphanumeric key, then press  or  key to find the desired entry.


3. Press  key to dial the stored number.

To Search a Name, Then Dial

1. Press  key in the idle mode.

The screen shows the names stored in the Phone Book in alphabetical order.

2. Use  or  key to find the desired name. You can also enter the first letter of the name by pressing the associated alphanumeric key, then press  or  key to find the desired entry.

3. Press  key to dial the stored number.

Speed Dial

Once you have stored phone numbers in the phone book memory, you can dial them easily whenever you want.

One-Touch Dial

Memory locations 01 through 09 are special one-touch locations. You can dial the phone numbers stored in the Phone Book memory from 01 through 09 simply by pressing one button.

Press and hold the third digit of the memory location containing the number to be dialed.

For example: Location no. 009

Press  and hold.



The number (and name) stored is displayed, then dialed.

Two-Touch Dial

Memory locations 10 through 99 are special two-touch locations.

Press the second digit briefly, then hold down the third digit of the memory cell.

For example: Location no. 023

Press  briefly and hold down .

The number (and name) stored is displayed, then dialed.

Three-Touch Dial

Memory locations 100 through 229 are special three-touch locations.

Press the first and the second digit briefly, then hold down the third digit of the memory cell.

For example: Location no. 123

Press **1** and **2** briefly, then hold down **3**.

The number (and name) stored is displayed, then dialed.

Notes

- If you press **#** after pressing the digits for speed dialing, you can see the phonebook contents of the corresponding location number; name, memory location number, phone number, and so on.
- When several numbers are saved in one location, only the phone number which is specified with Set Speed Dial option will be automatically dialed. For details, refer to Options under Phone Book menu on page 35.

Voice Dialing

Before using the Voice Dialing feature, you must record the name in your phone. For details, refer to page 50.

1. To place a call, press and hold ***** key, or open the flip, depending on the **Set Active (6-4)** option (see page 52).
2. At the voice prompt, say the name into the phone.
 - If the phone recognizes the name, the phone attempts a connection.
 - If the phone does not recognize the name, the screen prompts for the name again.
 - If the phone is unable to recognize the name after two attempts, the message **Cannot Recognize Name**. **Please check name** displays. Try the call again later, or check the recorded name.

Last Number Redial


The phone stores the last 10 numbers dialed. To recall any of these numbers, proceed as follows.


1. If there are any characters on the display, clear the display by holding down **CLR** key for more than one second.
2. Press **SEND** key. The list of outgoing calls are displayed.
3. Use **^** or **v** key (or **▲** or **▼** key on the left side of the phone) to scroll through the list until you select the required name or number.
4. Press **SEND** key to dial the number displayed.

Answering a Call

When somebody calls you, the phone rings and the phone icon is displayed in the middle of the screen.

If the caller can be identified, the caller's phone number (or name if pre-stored in your Phone Book) is displayed. If the caller cannot be identified, only the phone icon appears.

 
1. To answer a call, open the flip cover. If the flip is already open, press any key except for  key.

If the **Answer Mode** menu (7-4) is set to **By Opening** option, you can answer a call only by pressing  key.

2. End the call by closing the flip cover or pressing  key.

Note: You can answer a call while using the phone book or menu features. The current operation will be interrupted.

Viewing Missed Calls


If you are unable to answer a call for any reason, you can find out who was calling you, if this service is available. In this way, you can call the person back simply by pressing  key, if necessary.

The number of missed calls is displayed on the idle screen immediately after the call was missed.

To view the missed call, refer to '**Incoming**' (1-2) under '**Calls**' on page 33.

In-call Options

Your phone provides a number of functions that you can use during a call. You may not utilize all of these functions at all times. Many of the in-call options are network services.

Press  key during a call to access the following in-call options:

Calls: allows you to access the **Calls** menu.

Phone Book: allows you to access the **Phone Book** menu.

Mute/Unmute: allows you to switch your phone's microphone off, so that the other party cannot hear you.

Example: You wish to say something to another person in the room but do not want the other party to hear you.

Silent Key: does not transmit the key tones. It allows you to press keys without hearing annoying key tones during a call.

Note: To communicate with answering machines or computerized telephony systems, the **Silent keys** option must be disabled.

Version: allows you to view the software and hardware version of your phone.

Send Tel #: sends DTMF tones of your number.



SEND: sends DTMF tones of the currently displayed number. DTMF (Dual Tone Multi Frequency) tones can be used to control electronic phone services such as bank-by-phone or voicemail. During a call, key in the digits you want to send as DTMF tones, for example, the bank account number and password. Then select this in-call option.

Call Waiting

You can answer an incoming call while you have a call in progress, if this service is supported by the network. Contact your service provider to activate Call Waiting.

When a waiting call is detected, the incoming call alert sounds (network dependent) and a text notification displays.




To answer a waiting call:

1. To answer the call, Press  key. The phone connects the calling party, and places the current party on hold.
2. Press  key again to switch between two parties.

Three-Way Calling

This feature enables you to conduct conference calls with two separate parties at the same time. You are billed airtime for each outgoing call separately. Contact your service provider to activate Three-Way Calling.


 
To place a Three-Way call:

1. During conversation, press  key, enter the phone number for the third party, and then press  key again. The phone places the other party on hold.
2. When the third party answers, press  key again to connect with the original party.

Call Forwarding

This feature provides the option of forwarding incoming calls to another phone number, even while your phone is off. Activating Call Forwarding does not affect outgoing calls made from this phone. Contact your service provider to activate Call Forwarding.

Adjusting the Volume



During a call, if you want to adjust the earpiece volume, use the volume keys on the left side of the phone. Press  key to increase and  key to decrease the volume.



Press the keys to adjust the volume.

In the idle mode, you can adjust the key tone volume using the same keys.

Quick Switching to Vibration Mode

You can quickly switch your phone to vibration mode with a touch of  key. Press and hold the key until the  icon and * **Vibrate** * appears in the display. Your phone goes to the vibration mode immediately.

Press and hold  key again to return to **Bell** ring mode.


This feature is convenient when you are in a hurry to mute the phone's ringer in a theater for example.


Recording a Voice Memo

Your phone can record up to 5 voice memos. Each voice memo can be up to one minute in length.

When recording, a 60-second timer displays and an alert sounds to indicate when recording time expires.

To Record a Voice Memo

To record a voice memo, press  key. The message “**Recording**” displays, along with the timer.

To stop recording, press  key again.

The following options for the current voice memo becomes available:

Add Label: allows you to add a label for the memo you have just recorded. Enter a proper name up to 12 digits using the keypad. If you do not add a label, the recorded date and time will be used to identify the memo. If you make a call and record the conversation, the phone number is saved as the label when you do not add a label. If you record the conversation which is held by someone's calling and do not enter a label, **No Label** is saved as the label.

Continue: allows you to continue recording the memo.

Erase: allows you to erase the memo you have just recorded.

To Review a Voice Memo

This option allows you to play back all memos recorded, starting with the latest memo. The screen displays the label if you have entered one. If not, the screen displays the date and time when the memo was recorded, the phone number or **No Label**. For more details, see ‘**Add Label**’ above.

While the memos display, the following options are available.

Replay: plays the current memo once again.

Erase: erases the memo currently being played.

Next Memo: skips to the next memo.









Prev Memo: skips to the previous memo.

Using the Menu







A three-level menu structure is available to set the various options available on your phone. You can set the menu options in two different ways.

Using the Navigation Keys


The following keys are used to set menu option by scrolling then selecting an option.

Key	Purpose
	Enters the menu structure. <i>In the menu mode</i> , moves to the next menu in the main menu level and moves to the next screen in the sub-menu level.
 or   or 	<i>In the menu mode</i> , moves to the next menu or option. You can also use  or  key on the left side of the phone to move to the next or previous option.
	Access the menu displayed or the highlighted option.



 
Example: Selecting the **Record** option in **Voice Dial** menu

1. Press  key to access the main menu.
2. Press  or  (or ) key repeatedly until **Voice Dial** is displayed, then press  key. The **Voice Dial** options are displayed.
3. Press  key to select the highlighted **Record**. The **Record** option is activated.

Using the Index System

 
 
Each menu option is assigned a hierarchical number. You can use this number to access the corresponding option directly. Simply press  and key in the required number.

Example: Selecting the **Record** option in **Voice Dial** menu

1. Press  key to access the main menu.
2. Press  key to access the **Voice Dial** menu. The **Voice Dial** options are displayed.
3. Press  key to select **Record**. The **Record** option is activated.

The numbers assigned to each option are indicated on the following menu map.

Menu Map

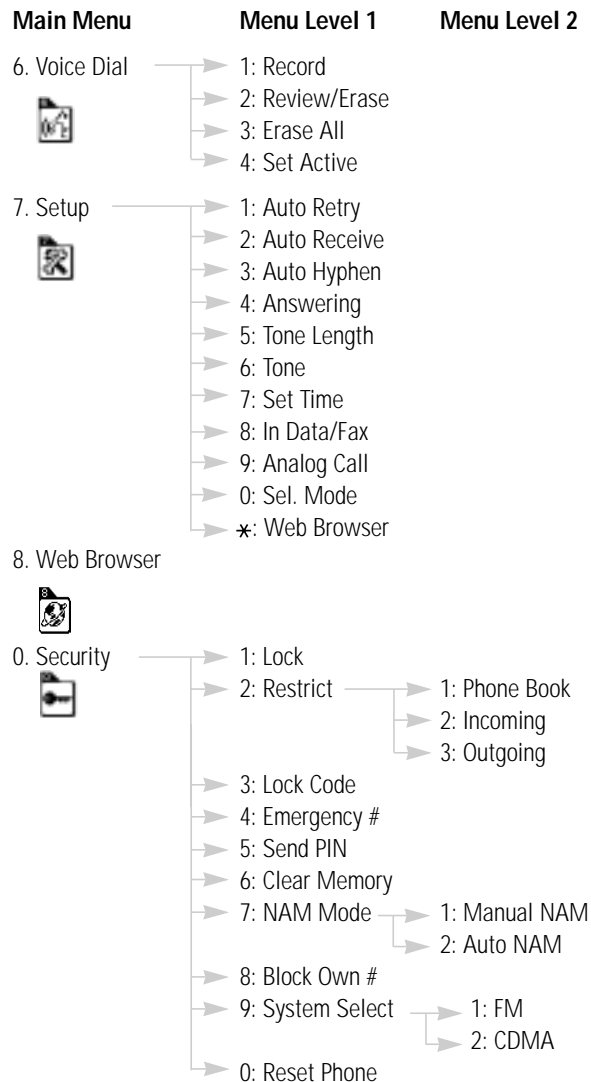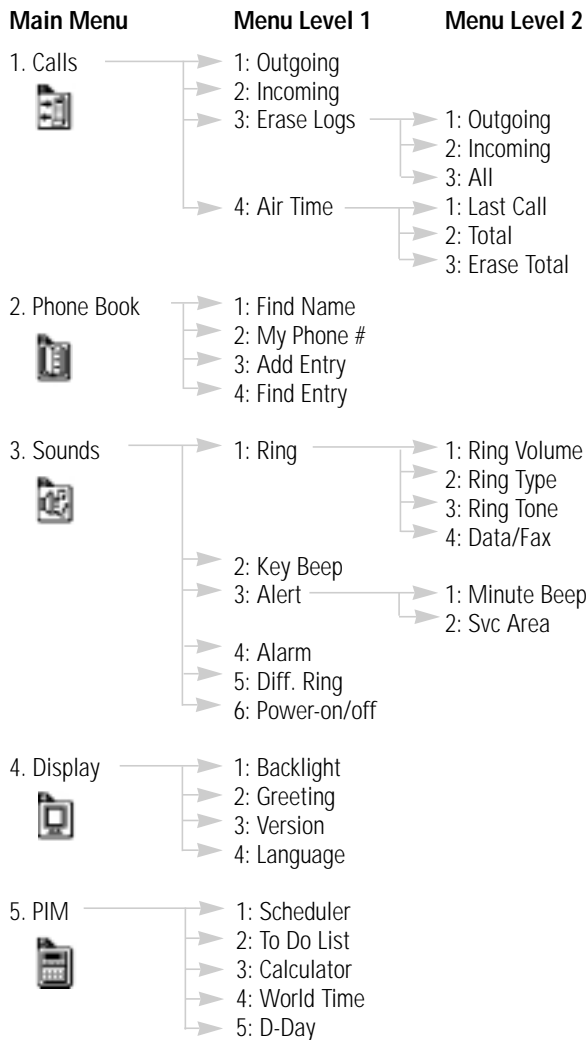

Calls

You can use the **Calls** menu to:

- View and dial the last outgoing or incoming numbers.
- Erase the numbers in the Call Log memory.
- View the duration of calls.

Outgoing

Menu 1-1


The phone stores up to 10 outgoing calls you dialed. When you access this menu, the list of outgoing calls is displayed.


To ...

Select an entry

Dial the selected entry

View the date and time at which the call was dialed and use option features

When you press  key, you can view the date/time stamp for the selected entry. If there is a Phone Book match, the name displays.

Press  key to access **Options**. The following options are available:

Talk: dials the selected number.

Show Entry (or **Store** if the phone number is not currently stored in the Phone Book): shows the phone book entry or stores the number in the Phone Book.

Prepend: allows to add an area code or feature code to the number before calling the number.

Press ...

 or  key

 key

 key

Incoming

Menu 1-2


This option lets you view the last 10 calls received. (if you are subscribed to the caller ID service). When you access this menu, the last incoming calls are displayed.


To...

Select entry

Dial the selected entry

View the date and time at which the call was received and use option features

When you press  key, you can view the date/time stamp for the selected entry. If there is a Phone Book match, the name displays.

Press  key to access **Options**. The following options are available:

Talk: dials the selected number.

Show Entry (or **Store** if the phone number is not currently stored in the Phone Book): shows the phone book entry (or stores the number) in the Phone Book.

Prepend: allows to add an area code or feature code to the number before calling the number.

Press ...

 or  key

 key

 key

Erase Logs

Menu 1-3

You can erase the numbers stored in the Call Log memory.

Outgoing: The numbers you called are erased.

Incoming: The numbers you received are erased.

All: All calls you dialed and received are erased.

Air Time

Menu 1-4

Using this option, you can view the call time of the last call, as well as total air time for all calls since you last reset the timer.

Last Call: duration of the last call

Total: total duration of all calls made since the timer was last reset.

Erase Total: resets the call timers.



Phone Book




The Phone book allows you to store frequently used phone numbers and the associated names in your personal directory to make it easy for you to make a call without having to remember or enter the phone number. You can store up to 229 numbers.

Find Name

Menu 2-1

This option displays the stored names in the Phone Book in alphabetical list.

Press  or  key to scroll to the desired name. You can also enter the first letter(s) of the name by pressing the associated alphanumeric key. Using this method, the phone searches for the names in the list beginning with that letter(s), and then displays the first name in that section of the list.

When the desired entry displays, press  key to place a call. If you press  key, then  key, you can access the following options:

Talk: dials the number.




Add Phone#: allows you to add several different types of numbers to the name, such as work office number or mobile number.

Edit: allows you to edit phone number, name, or entry number. **Set Secret** option prevents the number from being displayed on the screen. **Set Speed Dial** option allows you to designate the number to be dialed as a speed-dial number. For details, refer to page 19.

Prepend: prepends the number to add an area code or feature code to the number before dialing.



Erase: erases the number.

Name Ringer: allows you to designate a unique tone to signal an incoming call by the number.

Note: You can locate Phone Book entries quickly when the phone is in the idle mode. Press  key to access **Find Name** menu in one step and then press  or  key to scan entries.

My Phone Number

Menu 2-2

You can check your phone number. If you have more than one phone number, press  or  key to check the next number.



 




Note: You can block this feature by setting **Block Own Number** option (0-8) to **ON**. Refer to page 68.

Add Entry


Menu 2-3

This menu allows you to store a number with a name in your Phone Book. You can save a person's various numbers, such as workplace number, mobile number and fax number, into one entry. Using this feature, you can keep someone's information together. It also helps you to find numbers easily in the Phone Book.






Creating a New Entry

1. Enter a number and press  key. The phone book entries are displayed.
2. Press  key to confirm **<New Name>**.
3. You are asked to select a label. The following labels are available: **Home, Work, Mobile, Pager, Fax, No Label**. After selecting the label, press  key.
4. The first available location displays. To accept the displayed location, press  key. To select another location, press  or  key to scroll to the desired location or enter the location number using the number keys, then press  key.

Note: An entry's location is also its speed-dial code



5. To include a name with the entry, enter the desired name, then press  key. For information on how to enter a name, see page 38.

Adding a Number in an Existing Entry

1. Enter a number and press  key. The phone book entries are displayed.
2. Select the entry you want to add a number to with   key, then press .
3. Available labels are displayed. After selecting the desired label, press  key to save the setting.

Storing Phone Numbers at Call End

To store a phone number at your call end:

1. Press  key to end the call. The call time and the phone number display.
2. To store the phone number, press  key.
3. To complete storing the number, follow the instructions mentioned above.

 
 
 


Entering a Name

1. Press the key labeled with the desired letter.

Since each key has three or more letters, press the key repeatedly until the desired letter appears in the display.




2. Select the other letters in the same way.

Notes



- You can enter a symbol by pressing  repeatedly. The available symbols are 1 . , ? ! @ \$ % ^ & () _ + - = { } [] < > / | ; ; " \ ' ~ .
- You can enter a special letters for each languages by using . (e.g, if you want to enter **Ä**, enter **A** by pressing , and while the letter A is highlighted, press  repeatedly until you find the letter.)
- The cursor moves to next available space when you press a different key. When entering the same letter twice (or a different letter on the same key), just wait for a second for the cursor to move automatically, and then select the next letter. To delete letters, press  key.

Find Entry

This option allows you to find an entry by location number.

Enter the location by pressing the number keys or press  or  key to scroll to the desired location, then press  key to display the selected entry.

When the desired entry displays, press  key to place a call.

If you press  key, then  key, you can access **Options**. For details on option menus, refer to the options under the **Find Name** menu on page 35.

Sounds




 
You can use the **Sounds** menu to customize various sound settings, such as the:


- Ring volume, type, and tone
- Alert sounds
- Alarm

Ring

Menu 3-1

Ring Volume

This option allows you to adjust the ringing volume to one of nine levels. You can also turn the ringer off. Use  or  key (or  or  key on the left side of the phone). The more the bars, the louder the volume.

Note: During an incoming call, you can mute the ringer by pressing  key.

Ring Type

This option allows you to indicate how you are to be informed of any incoming calls. The following options are available.

BELL: The phone rings using the ring tone selected via the menu option.

LAMP: The backlight is switched on and the lamp blinks; the phone neither rings nor vibrates.

VIBRATOR: The phone vibrates but does not ring.

VIB + BELL: The phone vibrates first, then rings.

Ring Tone

This option allows you to select the required ringing tone. You can choose among 20 different tones or melodies. Each time you select a tone, it sounds for a few seconds.



Data/Fax

This option allows you to be alerted with a distinct ringing tone when you are faxed or received a data through the phone (network dependent). You can choose between 20 different tones or melodies. Each time you select a tone, it is played for a few seconds.

Key Beep

Menu 3-2

This option allows you to adjust the tone volume that the keypad generates when you press a key.

You can also use  or  key on the left side of the phone to adjust key volume in the idle mode.

Alert

Menu 3-3

Minute Beep

With this menu option set to **ON**, the phone sounds an alert 10 seconds before each elapsed minute to remind you of the length of the current call.

Service Area



With this menu option set to **ON**, the phone beeps when you exit service area or when you return to a service area.

Alarm


Menu 3-4

The option allows you to set the alarm to ring at a specific time.

To set the alarm, proceed as follows.

1. Select **Set** option.
2. Choose the alarm frequency option, and press  key.
Daily: the alarm rings every day at the same time.
One Time: the alarm rings only once and is then deactivated.
3. Enter the required time.
4. Press  key.

To stop the alarm when it rings, simply open/close the phone or press any key.

To deactivate the alarm, select **Release** option, then press  key.

Differential Ring

Menu 3-5

This option allows you to designate a unique ring to signal an incoming call by a stored caller number.

You can specify up to 5 callers and select a unique ring tone for each caller from 20 different tones and melodies.

Power On/Off

Menu 3-6

This menu enables or disables the phone sounds when it is switched on or off.

The following options are available:

- ENA. DIS.:** The phone sounds when it is switched on, and does not sound when off.
- DIS. DIS.:** Neither does the phone sound when it is switched on nor off.
- ENA. ENA.:** The phone sounds both when it is switched on and off.
- DIS. ENA.:** The phone does not sound when it is switched on, and sounds when off.

Display

Backlight

Menu 4-1

You can select whether or not the phone uses the LCD backlight. The following options are available.

8 SECONDS: The backlight comes on when you press a key or receive a call and switches off 8 seconds after the last key is pressed.

OFF: The backlight is not used.

Greeting

Menu 4-2

This option allows you to set a greeting message to be displayed in the idle mode. It is preset to **SAMSUNG**. You can change the greeting message according to your own preference.

Enter your personal greeting up to 12 digits by using the alphanumeric keys. For more information on entering letters, refer to page 38.

Version

Menu 4-3

This option allows you to view the software and hardware version of your phone.

Language

Menu 4-4

Sets the language of voice prompts, menu's and key-input.

PIM (Personal Information Manager)

The PIM feature enables you to:

- View the calendar and organize your schedule
- Define a list of things to do
- Use the phone as a calculator
- Check the current time for 24 major cities around the world
- Set and count D-Day

Scheduler

Menu 5-1

With the scheduler feature, you can:

- Consult the calendar
- Write memos to keep a track of your schedule and trigger an alarm if necessary

Consulting the Calendar

When you select the **Scheduler** menu option (**5-1**), the current month calendar is displayed with the day highlighted with the cursor.



To view the previous or next month, press **▲** or **▼** key on the left side of the phone.




To move the cursor, use the navigation keys.

Writing a Memo


To write or edit a memo on a specific date, proceed as follows.

1. Select the required date in the calendar, using the navigation keys.


Note: To skip to the previous or next month, press  or  key on the left side of the phone.

2. Press  key.
The cursor blinks to allow you to enter the desired time.
3. Enter the time and then press  key to write a memo.
4. Enter your memo and then press  key.

Note: For further details on how to enter characters, refer to page 38.

5. If you want the alarm to ring at the time on the chosen day, select an alert type: **Melody Mode** or **Bell Mode**.
Selecting **Sound Off** does not ring at the selected time.
6. Press  key. The phone saves your setting.

Editing, Adding or Deleting a Memo


If you select a day for which a memo already exists, you can press  key to edit, add or delete the memo.

The following options are available:

Edit: allows you to edit the memo.

Add: allows you to add a memo on the day.

Del: allows you to delete the memo.

After you select an option, press  key. Then follow the window prompt.

To Do List



Menu 5-2

This feature allows you to draw up a list of tasks to be done.

Creating the To Do List

1. Enter a task.

Note: You can enter up to 32 characters. For further details on how to enter characters, see page 38.

2. Press  key two times and enter a desired due date for the task.
3. Press  key.

Editing the To Do List

If a task is already defined in the **To Do List**, it is displayed when you select the **To Do List** menu option (5-2). Press  key to edit the content.

The following options are available.

Edit: allows you to edit the task.

Add: allows you to add another task.

Del: allows you to delete the task.

Select an option, and press  key. Then follow the window prompt.


Note: A one hour difference from current time at destination may occur due to daylight saving time.


Calculator

Menu 5-3

Using this feature, you can use the phone as a calculator. The calculator provides the basic arithmetic functions: addition, subtraction, multiplication and division.

Using the Calculator

1. Enter the first number using the numeric keys.
2. Press a navigation key until the required arithmetic symbol appears: + (add), - (subtract), x (multiply), / (divide).
3. Enter the second number.
4. To calculate the result, press  key.
5. Repeat steps 1 to 4 as many times as required.

Note: To erase any mistakes and clear the display, press  key.

World Time

Menu 5-4

This option allows you to check the current time for 24 major cities around the world, by using the navigation keys.

The screen shows the:

- City name
- Current date and time




D-Day

Menu 5-5

The phone counts how many days, hours and minutes are left for the day on which an important action is planned to happen or begin.

Writing, Editing and Erasing an Item

When you select the **D-Day** menu option (5-5), the defined item is displayed. Then press  key to access the following options.

Note: If there are more than one items defined in the menu, select an item with  or  key, and press  key.

The following options are available.

Edit: allows you to edit the item.

Add: allows you to create a new item.

Del: allows you to delete the item.

Select an option, and press  key. Then follow the window prompt.

Voice Dial

You can call up to 20 stored entries by speaking the name into the microphone. Before using the Voice Dialing feature, you must record the name in your phone.

Record


Menu 6-1

This option allows you to register numbers for subsequent voice dialing. The phone provides voice prompts and screen displays to guide you through the recording process.

Respond to the prompt by saying the name you want to save. The phone stores the name as a first sample, and then prompts for the name again.

Respond to the prompt by repeating the name after the beep. The phone stores the name as a second sample, and then requests the phone number.

Enter the phone number by pressing the digit keys.

To store the phone number, press  key. The name (if matched up to Phone Book) and number display, along with the notification **Recorded**.



Tips on Recording Name

- Avoid recording similar names phonetically. If you record a similar name to the one already in memory, the phone requests another name.
- Speak clearly and naturally.
- The person who will use the phone should record the name. The phone does not recognize the name if the voice sounds differently.
- Avoid too long or too short name. It is recommended to contain 2 to 5 syllables.
- If this feature does not work properly, erase the name, and record with another name.
- It is recommended to practice several times to obtain best result.
- You can record up to 20 names. If you try to record more than 20, the phone announces 'Memory is full'.

Review/Erase

Menu 6-2

This option allows you to check or erase an individual voice dial entry. A list of entries displays.




Press the digit key to select the desired entry, or press  or  key to scan entries.

When you select the desired entry, the recorded name plays audibly.

If you want to erase the selected entry, press  key while the name is playing.


Erase All

Menu 6-3

 
This option allows you to delete all voice dialing entries. Press  key, to confirm the deletion. Otherwise, press  or  key to exit this menu without deleting the voice dialing entries.

Set Active

Menu 6-4

Voice Dialing is always active once you have recorded a name and have entered the associated phone number. To place a call using Voice Dialing, simply press and hold  key in the idle mode and then say the name into the phone after you hear the prompt.

You can also initiate a Voice Dialing call just by opening the flip, when you select this option.

[*] only: Enables Voice Dialing only by pressing and holding  key.

[*] / FOLDER: Enables Voice Dialing by pressing and holding  key or by opening the flip.

Setup

Many different features of your phone can be customized to suit your preferences.

Auto Retry

Menu 7-1

With this menu option set to **ON**, when you place a call and the call does not connect, the phone automatically retries to make the call.

Auto Receive

Menu 7-2

With this menu option set to **ON**, the phone automatically answers calls. This option is useful while driving, for instance.

When a call comes in, your phone will answer the call automatically after 2 rings. The feature does not work if you have chosen **VIBRATOR** as a ring type or set the ring volume to off.

Auto Hyphen

Menu 7-3

With this menu option set to **ON**, your phone automatically hyphenates numbers as follows: (area code)-(number). Digits following a pause are not hyphenated.


Answer Mode

Menu 7-4

This menu option allows you to select an answer mode when an incoming call comes. It is preset to **By Opening**.

The following options are available:

By Opening: The phone answers when you open the folder.

By Any Key Ans: The phone answers when you press any key except  key.

By Send: The phone answers when you press  key.

Tone Length

Menu 7-5

Some phones you call can recognize only longer tones. You may have to change the length to **LONG** for some calls. When calling a paging system, your phone should be in the **SHORT** mode.

Tone

Menu 7-6

Release Tone: You can set your phone to sound the release tone when a call is disconnected or dropped.

Connect Tone: You can set your phone to sound the connect tone when your call is connected to the system.

Set Time

Menu 7-7

The option enables you to set the current date and time. Enter the time and date.

The current time, if set, displays. The month, day, hour and minute must be entered with 2 digits. The year requires all four digits. If you do not input the time or you input the wrong time, **Invalid Time** displays.

In Data/Fax

Menu 7-8

To send or receive data or fax through the phone, you have to set this option to **Incoming Data Only** or **Incoming Fax Only**. When you want to use the phone for a normal voice call, set to **Off: Voice Call Only**.

The following options are available:

Off: Voice Call Only: receives a call.

Incoming Data Only: receives or sends data.

Incoming Fax Only: receives or sends fax.

Analog Call

Menu 7-9

Your phone is preset to Digital mode. If you want to place a call in Analog mode, use this menu. But if your system supplier does not provide AMPS service, this feature is unavailable.

If you end the Analog call, your phone returns to Digital mode automatically.

Select Mode

Menu 7-0

This option was specifically designed for usage in the areas served by Band 'B' operators, so it has differentiated System Search Parameters.

The menu allows you to choose the band and the system in which to operate. The following options are available:

Mode1: the phone prefers Band 'B' CDMA digital Search Systems, but also considers the possibility of operating in AMPS analog systems.

Mode2: the phone prefers Band 'A' CDMA digital Search Systems, but also considers the possibility of operating in AMPS analog systems.

Mode3: the phone prefers Band 'B' CDMA digital Search Systems, not considering the possibility of operating in AMPS analog systems. This mode is recommended for usage when you want to set the phone exclusively to the CDMA digital system.

Note: To select any other parameters mode for the Search System, please contact your service center.

Web Browser

Menu 7- ✖

Each time you start the Web Browser, you will view a reminder that you will be billed for the connection time. This menu allows you to change if and when this message appears.

Prompt to start: You will see the prompt when you enter the browser, but not when you exit it.


Prompt to end: You will see the prompt only when you exit the browser.

Prompt both: You will be prompted when you enter or exit the browser.

Prompt none: The default setting. You will never see the prompt.

Web Browser

The Web Browser menu allows you to access certain information such as stock quotes and weather via the Internet. Browsing the web via the phone is not like using your home computer. Site providers have selected only the critical aspects of their site to present to wireless phone users, and have removed most graphics.

Each time you start Web Browser, the phone will connect to the Network of your service provider as necessary, and the service indicator icon () will appear on the display. Any time the service indicator icon is visible on the display, your phone is connected to the Network of your service provider and you will be billed accordingly. Rates will vary according to your billing plan.

The Samsung Web Browser will end the connection after a certain period of network inactivity and will automatically re-connect as necessary. For this reason, you may find that you are billed for several network connections within a single Web Browser session. This is normal and is designed to minimize your bill.


 







The Web Browser Prompt to Start

Each time you start the Web Browser, you will view a reminder that you will be billed for the connection time. You can change if and when this message appears. Refer page 57.


Launching the Web Browser

Note: The first time you use the Web Browser, you will go through a security setup process that takes 3 to 5 minutes. Please follow the on-screen prompts to complete the security setup process. This initial setup process occurs only the first time you access the service.



1. Press  to display the Main Menu.
2. Press  for Web Browser. Your Phone will access the Web Browser network.
3. A reminder of the charge will appear. Using the soft keys, simply answer yes () or no ().
4. Once connected, the Home page (or the last page visited) will be displayed. To access the Home menu page from any other menu in the Web Browser, press and hold  key. An example of a Home Page is shown below:

Home Page
1 Samsung
2 Yahoo !
3 Weather
4 Portfolio
5 More Internet
5. What appears on the display when accessing the Web Browser is dependent on the service provider content. To view additional text, use the  and  key.

Exiting the Web Browser

Simply press  to exit the Web Browser. If the “**Prompt to end**” or “**Prompt both**” option is set in the Web Browser setup (see page 57), you will be prompted whether you want to end the browser call.



The Web Browser Soft Keys

At the bottom of the Web Browser display is a solid bar which contains browser commands. “Soft” keys ( and ) below the solid bar are used to execute the commands. These two keys are called soft keys because their function changes depending on where you are in the Web Browser software.

Navigating the Web Browser

When you use the Web Browser, some keys on your phone operate differently than on a normal phone call. These keys are explained below. The Web Browser presents on-screen items in one of the following ways:

- text or numeric input
- links (embedded in content)
- numbered options
(some options may not be numbered)
- simple text

You can act on the options or links by making use of the soft keys. The soft keys ( and ) are located below the bottom line of the display.

Here's how the keys work in the Web Browser:



Up/Down Navigation Key: Use the navigation key to scroll to and select browser options. The currently selected option is indicated by the α symbol. You can also use the navigation key to move the cursor when editing text.



MENU Key: This is the left soft key. The left soft key is used primarily for secondary options, or a menu of secondary options. For more info, see “The Web Browser soft keys.” on page 60. Also, pressing and holding this key backs you up to main menu page from any other menu in the Web Browser.



END Key: Exits the Web Browser and returns the phone to Standby mode.



Numbered Keys 0 - 9: If the items on a page are numbered, you can use these keys to select them.



Right Cursor Key: Moves the cursor right in a text entry.



Left Cursor Key: Moves the cursor left in a text entry.



CLR Key: This key performs two important functions:

- Backs you up in the browser. Pressing it once backs you up one page. Pressing and holding this key backs you up to the Home page.
- Clears out entered text or numbers. When entering numbers or text, press this key to clear the last number, letter, or symbol. Press and hold this key to completely clear the input field.



OK / Messages Key: This is the right soft key. The right soft key is used primarily for selecting the highlighted item, but its function may change depending on what you are doing (see “The Web Browser soft keys.” on page 60).



Volume Key: This key performs several useful functions:

- Allows you to scroll up or down by a page.


Entering Text, Numbers, or Symbols

When you are prompted to enter text, the current text entry method will appear on the left soft key as ALPHA, NUM or SYM. To change the input mode, use the left soft key.

Using Links

Links have several purposes, including jumping to a different page, jumping to a different site, or even initiating a phone call from some sites. Links are shown inside of brackets ([]), and you can normally use the right soft key to select a link when it is highlighted.


Initiating a Phone Call from the Web Browser

You may initiate a phone call from the Web Browser if the site you are using supports this feature (the phone number may be highlighted and the right soft key will appear as “Call.”). In most cases, you can also use  key to call the number. The browser connection will remain on if you initiate a call. After you end the call, your phone will return to the page in which you were previously in the Web Browser.


Using Bookmarks

You can bookmark many individual pages for easy access at a later time. Bookmarks save you time by reducing the number of steps it takes to access a desired page.

To create a bookmark

1. Go to the page that you want to mark.
2. Press and hold  key. A list of options appears.
3. Select Mark Site.
4. If the page has a title, it will be automatically used for the name of the bookmark. You can also change the bookmark name. Selecting Save will save the name and add the page to your list of bookmarks.
5. A message will appear confirming that the bookmark was added to the list. Select OK to return to the screen that you marked to resume navigation within the Web Browser.
6. The new bookmark is added to the bottom of your bookmark list.

Finding a bookmark

From the Home Page, select Bookmarks and select the bookmark you want and press  key.

Or

From the Home Page, press and hold the number associated with the bookmark in the bookmark list.

Your phone provides many security options, including a user-programmable lock code and call restriction features.

To access the security menu, you must enter a four-digit lock code. The lock code is preset to **0000** at factory.

Lock

Menu 0-1

When the phone is locked, you cannot operate the phone until you enter the lock code.




The following options are available:

OFF: the phone remains unlocked.

NOW: the phone locks immediately.

ON POWER-UP: the phone locks automatically at the next power-up.

To place an emergency call on Lock mode:

- To call an emergency number, enter the number and then press  key. The phone recognizes 911 and numbers assigned by (Menu **0-4**) as emergency numbers.
- To place normal outgoing calls, press  key to display the Lock Code screen, and then enter the lock code. When the Standby screen displays, enter the phone number, and then press  key.

Restrict

Menu 0-2

This feature allows you to restrict your calls. Call Restriction can be set up in the following ways.

Phone Book: the phone restricts the use of the Phone Book.

Incoming: calls cannot be received.

Outgoing: calls cannot be made.

Each option can be restricted or unrestricted individually.

Lock Code

Menu 0-3

This feature allows you to change your current lock code to a new one. The lock code is preset to 0000 at factory.

Enter a new, four-digit lock code, then press  key.

Emergency Number

Menu 0-4

This feature allows you to call to emergency numbers when the phone is locked or when the outgoing call is restricted.

This menu provides the option of storing three emergency numbers. Select a location and enter the desired number.

To dial emergency numbers in Lock mode simply enter the emergency number, then press  key.

Send PIN

Menu 0-5

This feature prevents the phone from being used by unauthorized persons. The feature is only available if your system supplier provides this service and you have a PIN assigned by the system supplier.

These options are available:

Never: The option is not activated

Prompt: When you make a call, you are asked to send PIN.

For information about this service in detail, contact your service provider.

Clear Memory

Menu 0-6

This menu option enables you to clear all phone memories. All user-input in the phonebook, call logs, PIM, etc. will be deleted.

NAM Mode

Menu 0-7

The NAM (Number Assignment Module) enables you to subscribe to one or more service networks.

The following options are available:

Manual NAM: You set the phone to the network you want to use. You can select a NAM from a maximum of 2 NAMs. If you select a new network manually, the phone shows the greeting message and sounds the starting beep, and then returns to the idle mode. For details, contact your service provider.

Auto NAM: With this option set to **ON**, the phone selects the networks automatically based on system information for the area you are in.

Block Own Number

Menu 0-8

This feature allows you to block your own number display, and others cannot view your phone number. If you turn this feature on, the message **Blocked for phone number** displays when the **My phone #** menu (2-2) is accessed.

System Select

Menu 0-9

With this menu option, you can select the system service mode between FM(analog) and CDMA(digital). Each service mode allows you to select a roaming option. Roaming is a feature which is only relevant in areas where there are at least two cellular service providers having valid roaming agreements.

Roaming, when available, allows you to register your phone on one of the networks, but use the facilities of the other if your own network is not available. This system priority feature allows you to program your phone for optimum operation when within your home service area or when outside your home service area.

Contact your home cellular service provider for information on the availability of this feature and roaming agreements they have with other cellular service providers.

There are five different roaming options:

A Only: the phone uses A system only.

A Pref: the phone tries A system first, then tries the other.

B Only: the phone uses B system only.

B Pref: the phone tries B system first, then tries the other.

Home Only: the phone uses your home network only.


Reset Phone

Menu 0-0

With this menu option, you can easily reset your phone to its default configuration.

Note: This option does not clear phone memories, but only changes back setting to their original state.

Messages

Your phone receives voicemail notification, text messages, and pages. And your phone transmits text messages and pages if your system supplier provides this service. When the phone receives a message, an alert sounds, and a text notification displays. The  icon remains on the screen until you read the pending text messages or until you listen to the voicemail notification messages.


Your phone can store up to 100 pages and text messages, depending on the length of the message. If the message memory is full, a message is displayed and you cannot receive any new messages. Delete obsolete messages.

Received Messages




The menu allows you to read voicemail notification, text messages, and pages.



The following options are available:

Voice ( 1-1): The screen displays the time, date and the number of new, unheard messages.


Press  key to access the following options.



- **Listen:** You can listen to the voicemail.
- **Reset:** You can reset manually the counter for voicemail messages, if desired. (The system resets the counter automatically after you listen to all new messages.)


Page ( 1-2): An indexed list of page messages displays. An exclamation point next to an entry indicates an urgent message. A check mark next to an entry indicates that you have read and stored the message.


Select the desired message to review, then press  key. After reviewing the message, press  key to access the following options.




- **Talk:** To call the phone number.
- **Save #:** To store the phone number in your Phone Book.
- **Erase:** To erase the phone number in your Phone Book.
- **Next Mgs:** To review the next message.
- **Previous Msg:** To review the previous message.

Text ( 1-3): An indexed list of text messages displays. An exclamation point next to an entry indicates an urgent message. A check mark next to an entry indicates that you have read and stored the message.

Select the desired message to review, then press  key. After reviewing the message, press  key to access the option menu. For details on the option menus, refer to the

Page ( 1-2) option menu above.

BrowserMsg ( 1-4): An indexed list of Web Browser messages displays. An exclamation point next to an entry indicates an urgent message. A check mark next to an entry indicates that you have read and stored the message.

Select the desired message to review, then press  key. After reviewing the message, press  key to access the option menus. For details on the option menus, refer to the **Page ( 1-2)** option menu above.

Via the **Alert** (✉ 1-5) menu, the phone alerts you when a message is received. You can choose how frequently this happens. The three options are: **EVERY 2 MIN, OFF, ONCE**.

To delete all text and page messages you have received, select **Erase All?** (✉ 1-6).

Transmitting Messages

✉ -2

The menu allows you to transmit pages and text messages, and to store the messages you have transmitted.

The following options are available:

Paging (✉ 2-1): When prompted, enter the desired destination address number, then the number you want to be called back.

Messaging (✉ 2-2): When prompted, write the message and enter its destination address number, then the number you want to be called back. You can set text message's priority. Priority options are available: **NORMAL, URGENT, EMERGENCY**.

The messages you have transmitted are stored in

Tx Box (✉ 2-3).

- **Stored Msg:** This menu allows you to read the stored messages you have transmitted.
- **Erase All:** This menu allows you to erase all messages you have transmitted.

Batteries

Two types of Li-ion batteries are available for use with your phone:

- SLIM Battery
- STANDARD Battery

Cigarette Lighter Adapter

The Cigarette Lighter Adapter charges your phone in a vehicle while you drive and enables you to operate the phone from a vehicle cigarette lighter socket.

Travel Charger

The Travel Charger plugs into a wall outlet and enables you to charge a single battery at your home or office or while traveling.

Hands-Free Car Kit

The Hands-Free Car Kit provides safety, freedom and convenience in your vehicle. (Kit includes Cradle and Microphone.)

Ear-Microphone

The Ear-Microphone includes both the earpiece and microphone in a convenient, lightweight unit.

RS-232C Cable

The RS-232C Cable connects your phone to a computer port, allowing you to use Internet or other communication programs.

Using the Batteries

Your phone is powered by a rechargeable Li-ion standard battery.

Additional batteries are available for purchase (ask your SAMSUNG dealer for further details):

Precautions When Using Batteries

- Never use any charger or battery that is damaged in any way.
- Use the battery only for its intended purpose.
- If you use the phone near the network's base station, it uses less power; talk and standby times are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.
- Battery charging times depend on the remaining battery charge and the type of battery and charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time (talk time and standby time) is noticeably shorter than normal, it is time to buy a new battery.
- If left unused, a fully charged battery will discharge itself over time.

- Use only Samsung-approved batteries and recharge your battery only with Samsung-approved chargers. When a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.
- Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.
- Do not leave the battery in hot or cold places, such as in a car in summer or winter conditions, as you will reduce the capacity and life-time of the battery. Always try to keep the battery at room temperature. A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Li-ion batteries are particularly affected by temperatures below 0 °C (32 °F).
- Do not short-circuit the battery. Accidental short circuiting can occur when a metallic object (coin, clip or pen) causes a direct connection between the + and - terminals of the battery (metal strips on the back of the battery), for example when you carry a spare battery in a pocket or bag. Short-circuiting the terminals may damage the battery or the object causing the short-circuit.
- Dispose of used batteries in accordance with local regulations. Always recycle. Do not dispose of batteries in a fire.

Safety Information

Road Safety

- Remember, road safety always comes first!
- Do not use a hand-held phone while driving a vehicle. Always park the vehicle before having a conversation.
- Make sure that the phone is stored safely and will not fall or be broken in the event of a collision or emergency stop.
- The use of an alert device to operate a vehicle's lights or horn on public roads is not permitted.
- Only qualified personnel should install or service the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the unit.
- Electronic fuel injection, anti-skid braking, electronic cruise control or any other electronic systems may malfunction due to the lack of protection from radio signals. Check regularly that all cellular phone equipment in your vehicle is mounted and operating correctly.

Operating Environment

- Remember to follow any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger (in a hospital for example).

- Operation of any radio transmitting equipment, including cellular phones, may interfere with inadequately protected medical devices. Consult a physician or the manufacturer of the medical device if you have any questions. Other electronic equipment may also be subject to interference.
- As with other mobile radio transmitting equipment, you are advised that for satisfactory operations and personal safety, the equipment should only be used in the normal operating position.
- Always switch off the phone when at a refuelling point (service station). You are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants or where blasting operations are in progress.
- Do not store or carry flammable liquids, gases or explosive materials in the same compartment as the phone, its parts or accessories.
- Switch off your cellular phone when in an aircraft. The use of cellular phones in an aircraft is illegal and may be dangerous to the operation of the aircraft or disrupt the cellular network. Failure to observe these instructions may lead to the suspension or denial of cellular telephone services to the offender, legal action or both.

Care and Maintenance

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you fulfill the warranty obligations and enjoy this product for many years.

- Keep the phone and all its parts and accessories out of the reach of small children.
- Keep the phone dry. Precipitation, humidity and liquids containing minerals will corrode the electronic circuits.
- Do not use or store the phone in dusty, dirty areas as its components may be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries and warp or melt certain plastics.
- Do not store the phone in cold areas. When the phone warms up (to its normal temperature), moisture can form inside the phone, which may damage the electronic circuits.
- Do not attempt to open the phone. Non-expert handling of the phone may damage it.
- Do not drop or knock the phone. Rough handling may damage the internal circuits.

- Do not use harsh chemicals, cleaning solvents or strong detergents to clean the phone. Wipe it with a soft cloth slightly dampened in mild, soapy water.
- If the phone or any of its accessories are not working properly, take them to your nearest qualified service centre. The personnel there will assist you, and if necessary, arrange for the phone to be repaired.

Emergency Calls

Important! This phone, like any cellular phone, uses radio signals, cellular and landline networks, as well as user-programmed functions that cannot guarantee connection in all conditions. Therefore, you should never rely solely on any cellular phone for essential communications (medical emergencies for example).

Remember, to make or receive any calls, the phone must be switched on and in a service area with adequate cellular signal strength.

Emergency calls may not be possible on all cellular phone networks or when certain network services and/or phone features are in use. Check with local cellular service providers.

Glossary of Terms

Airtime - Actual time spent talking on the wireless phone. Most carriers bill customers based on how many minutes of airtime they use each month.

Antenna - A device for transmitting or receiving signals. The size and shape of antennas is determined, in part, by the frequency of the signal they receive. Wireless phones and the base station must have antennas.

Base Station - The fixed radio transmitter/receiver that maintains communications with mobile radio telephones within a given area. (Typically called a cell or cell site)

CDMA - (Code Division Multiple Access) A spread-spectrum approach to digital transmission. With CDMA, each conversion is digitized and then tagged with a code. The mobile phone deciphers only a particular code to pick the right conversation off the air. The transmitted signal is just above noise level across the available bandwidth.

Channel - Communications signals transmit along paths called channels.

Codec - Compression & Decompression.

Deactivation - The process of rendering a wireless phone inactive.

DTMF - (Dual-tone Modulated Frequency) You send DTMF signals when you enter numbers by pressing the digit keys.

EVRC - (Enhanced Variable Rate Codec) EVRC is a new global standard for compressing and decompressing voice signals. EVRC uses a lower bit rate (the number of bits sent per second) than existing CDMA vocoders, while providing significant improvements in voice quality. This technology enables your phone to provide superb voice quality while benefiting from the ability to process more cellular voice calls using less bandwidth than the voice codecs in CDMA networks today.

Frequency - A measure based on time, as one or more waves per second, in an electrical or light wave information signal. A signal's frequency is stated in cycles-per-second or Hertz (Hz).

Hands-Free - A feature that permits a driver to use a wireless phone without lifting or holding the handset - an important safety feature for automobiles, tractors and most other motorized vehicles.

LCD - (Liquid Crystal Display) Commonly used to refer to the screen display on the wireless phone.

LED - (Light Emitting Diode) Commonly used to refer to a small light on the wireless phone or on the Desktop Charger. The LED lights on the phone to indicate an incoming call. The lights on the charger indicate that battery charging is taking place.

Prepend - The addition of a prefix, such as an area code, to a phone number.

RF - Radio Frequency

Roaming - The ability to use a wireless phone to make and receive calls in places outside of the home service area.

Service Charge - The amount paid each month to receive wireless service.

Standby Time - The amount of time a fully charged wireless portable or transportable phone can be on and idle without being in use. (See Talk Time)

Talk Time - The length of time a person can talk on a portable or transportable wireless phone without recharging the battery.

Vocoder - Voice Coder. A device used to convert speech into digital signals.

Voicemail - A computerized answering service that answers a call, plays a greeting and records a message. Depending on the sophistication of the service, it can notify the subscriber, via a pager, of an incoming call or message. (Also called voice messaging)

Wireless - Radio-based Systems that allow transmission of telephone or data signals through the air without a physical connection, such as a metal wire (copper) or fiber optic cable.

Telefone Celular Modelo SCH-A105

Nº série eletrônico

DADOS DO COMPRADOR

Nome: _____

Endereço: _____

ESPAÇO A SER PREENCHIDO PELO REVENDEDOR

Revendedor: _____

Cidade: _____

Carimbo do Revendedor:

IMPORTANTE: A garantia somente será válida se este Certificado de Garantia for completamente preenchido no ato da compra pelo revendedor e apresentado junto com a Nota Fiscal original de venda deste telefone celular.

SAMSUNG

ELECTRONICS

Cidade: _____

CEP: _____

Estado: _____

Telefone: _____

Nº da Nota Fiscal: _____

Data da Compra: _____

Estado: _____

SERVIÇO CELULAR**SAC****0800 124 421**

SUA LINHA DIRETA COM A SAMSUNG

Este Produto está adequado para
uso no ano 2000 e subsequentes.

SAMSUNG

ELECTRONICS

I. ABRANGÊNCIA E PRAZO DE GARANTIA

SAMSUNG ELETRÔNICA DA AMAZÔNIA LTDA. (SAMSUNG), garante os telefones celulares e acessórios (exceto baterias) contra defeitos de material e mão-de-obra, em condições normais de uso e manutenção, pelo prazo de 3 (três) meses legal, mais 9 (nove) meses de garantia adicional, num total de 1 (um) ano a partir da data de aquisição do aparelho, identificada pela Nota Fiscal do produto e pelo preenchimento deste certificado. No caso de telefones ou acessórios que sejam instalados em veículos, o prazo será contado a partir da data de aquisição dos mesmos.

A SAMSUNG sem nenhum custo para o usuário, consertará ou substituirá o telefone celular ou acessórios, durante o prazo de garantia, desde que este seja enviado a uma assistência técnica SAMSUNG CELULAR, de acordo com os termos desta garantia, acompanhado deste certificado de garantia e da respectiva nota fiscal emitida no Brasil. O conserto, a critério da SAMSUNG, poderá incluir a substituição de peças ou placas, por novas ou reconcondicionadas equivalentes. Os telefones celulares, acessórios, baterias, peças ou placas substituídas serão garantidas pelo restante do prazo original. Todos os acessórios, baterias, peças, placas, equipamentos de telefones celulares e acessórios substituídos se tornarão propriedade da SAMSUNG.

II. CONDIÇÕES DE GARANTIA

A SAMSUNG não assume qualquer obrigação ou responsabilidade por acréscimos ou modificações desta garantia, salvo se efetuadas por escrito em caráter oficial. Exceto se houver contrato escrito separado entre a SAMSUNG e o usuário, a SAMSUNG não garante a instalação do equipamento ou acessório. A SAMSUNG não será de forma alguma responsável por qualquer acessório que não seja de seu fornecimento, que anexado ou usado com seus telefones celulares, ou pelo funcionamento de seus telefones ou acessórios com quaisquer outros acessórios que não os fornecidos pela SAMSUNG. Tais acessórios estão expressamente excluídos da garantia, e a SAMSUNG não será responsável por quaisquer danos causados ao produto, resultantes de tais fatos.

III. ITENS EXCLUÍDOS DESTA GARANTIA

A garantia não cobre:

(a) Defeitos ou danos resultantes do uso anormal pelo cliente do produto, como superfícies plásticas e outras peças expostas externamente arranhadas, trincadas ou quebradas, bem como derramamento de alimentos ou líquidos de qualquer natureza;

**GARANTIA LIMITADA DA SAMSUNG PARA TELEFONES CELULARES
ADQUIRIDOS NAS REVENDAS AUTORIZADAS NO BRASIL**

GARANTIA LIMITADA DA SAMSUNG PARA TELEFONES CELULARES ADQUIRIDOS NAS REVENDAS AUTORIZADAS NO BRASIL

(b) Defeitos ou danos decorrentes de testes, instalação, alteração, modificação de qualquer espécie em nossos produtos, bem como o conserto realizado por outras oficinas que não sejam SAMSUNG CELULAR; (c) Quebra ou danos que não foram constatados no ato da aquisição (gabinete, antena, acessórios, etc.); (d) Produtos que tenham tido o número de série removido, adulterado ou tomado ilegível; (e) Defeitos e danos decorrentes a utilização de componentes e acessórios não originais SAMSUNG (gabinete, antena, display, peças em geral, etc.); (f) Defeitos e danos causados por agentes naturais (enchente, maresia, descarga elétrica e outros).

IV. BATERIA

A SAMSUNG garante pelo prazo de 3 (três) meses legal e mais 3 (três) meses adicionais, totalizando 6 (seis) meses de garantia a partir da data de aquisição da bateria. Esta garantia não se aplica, qualquer que seja o tipo de bateria, se: (a) As baterias forem recarregadas por carregadores que não sejam originais da SAMSUNG; (b) Qualquer dos selos da bateria tiver sido violado ou contiver evidências de adulteração; (c) As baterias forem utilizadas em equipamentos ou serviços que não sejam os equipamentos de telefonia celular para os quais tenham sido especificados.

V. CONSIDERAÇÕES GERAIS

O único recurso oferecido é o conserto, substituição de peça ou produto, à opção da SAMSUNG. Esta garantia substitui todas as outras garantias expressas ou tácitas, incluindo sem limitação, garantias tácitas de comercialidade e adequação a um fim específico. A SAMSUNG não oferece nenhuma garantia quanto à cobertura, disponibilidade ou nível dos serviços oferecidos pela companhia telefônica, em hipótese alguma a SAMSUNG será responsável por indenização superior ao preço da compra do telefone celular, por qualquer perda de uso, perda de tempo, inconveniência, prejuízo comercial, perda de lucros ou economias, por outros danos diretos ou indiretos, decorrentes do uso ou impossibilidade de uso do produto.

ATENÇÃO

Não recarregue as baterias SAMSUNG em carregadores que não sejam os originais. O uso destes carregadores pode ocasionar graves acidentes.

SAMSUNG SCH-A105		Quick Reference Card	
BASIC OPERATION		INTERNAL PHONE BOOK	
Make a call	Phone number + SEND	Store a new number	Phone number + OK + OK
Receive a call	SEND or Open the phone	info memory	Label + OK + OK (or assign another location + OK) + name + OK
Adjust speaker volume	(In conversation mode) ⏮ / ⏭	Speed dial	<u>One-Touch</u> (001-009): Hold down the third digit.
Scan the last calls and dial	SEND + ⏮ Or ⏭ + SEND		<u>Two-Touch</u> (010-099): Press the second digit briefly, then hold down the third digit.
Switch to vibration mode	Press and hold # 📞	Scan memories	<u>Three-Touch</u> (100-229): Press the first and the second digit briefly, then hold down the third.
Voice dial	Press and hold *6	• name	⏮ + Name (⏮ Or ⏭) + OK
Record voice memo	Press ⏮ ➔	• location	⏮ + ⏮ Or ⏭ + OK
		Erasing a specific entry	⏮ Or ⏭ + ⏮ Or ⏭ + OK + MENU + 5 + OK

Main Menu (To access, press MENU)

1 : Calls	<ul style="list-style-type: none"> 1 : Outgoing 2 : Incoming 3 : Erase Logs 4 : Air Time 	<ul style="list-style-type: none"> 6 : Voice Dial 	<ul style="list-style-type: none"> 1 : Record 2 : Review/Erase 3 : Erase All 4 : Set Active
2 : Phone Book	<ul style="list-style-type: none"> 1 : Find Name 2 : My Phone # 3 : Add Entry 4 : Find Entry 	<ul style="list-style-type: none"> 7 : Setup 	<ul style="list-style-type: none"> 1 : Auto Retry 2 : Auto Receive 3 : Auto Hyphen 4 : Answering 5 : Tone Length 6 : Tone 7 : Set Time 8 : In Data/Fax 9 : Analog Call 0 : Set Mode * : Web Browser
3 : Sounds	<ul style="list-style-type: none"> 1 : Ring 2 : Key Beep 3 : Alert 4 : Alarm 5 : Diff. Ring 6 : Power on/off 		
4 : Display	<ul style="list-style-type: none"> 1 : Backlight 2 : Greeting 3 : Version 4 : Language 	<ul style="list-style-type: none"> 8 : Web Browser 	
5 : PIM	<ul style="list-style-type: none"> 1 : Scheduler 2 : To Do List 3 : Calculator 4 : World Time 5 : D-Day 	<ul style="list-style-type: none"> 0 : Security 	<ul style="list-style-type: none"> 1 : Lock 2 : Restrict 3 : Lock Code 4 : Emergency # 5 : Send PIN 6 : Clear Memory 7 : NAM Mode 8 : Block own # 9 : System Select 0 : Reset Phone

Licensed by QUALCOMM Incorporated under one or more of the following Patents.

U.S Patent No. 4,901,307 5,056,109 5,099,204

5,101,501 5,103,459 5,107,225

5,109,390