


FULL HD 5 Megapixel

Vehicle Video Recorder

User Manual

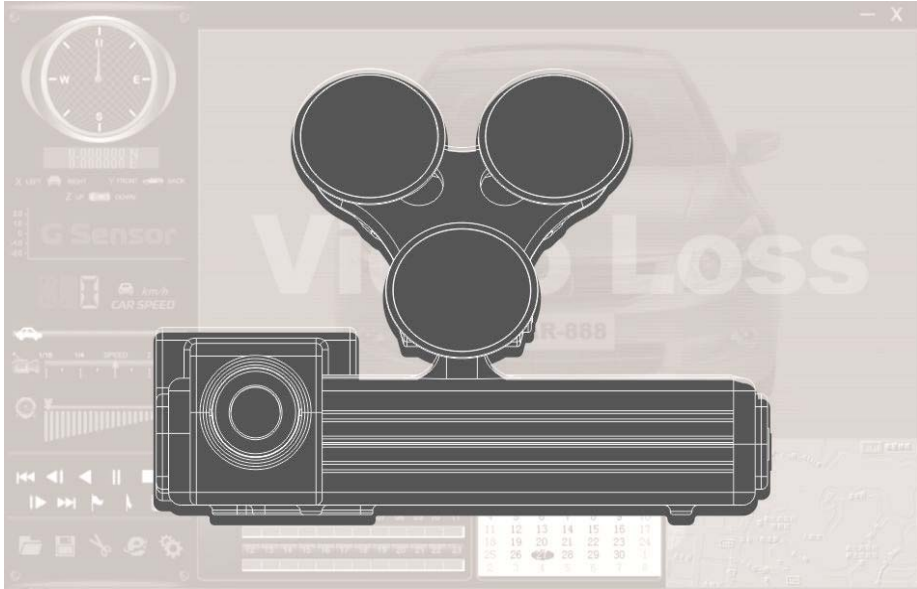

2012 NOV V1.1



TYPE B OPTIONAL

Two types for this Model:
Type A W/O GPS / Type B Built-in GPS

CAUTION BEFORE USE:

1. When you use the Micro SD card at the first time, please format it firstly.
2. The Micro SD card can be formatted by remote controller after connecting TV out cable to TV. Or you can format the memory card by operating the player software on PC.
3. Please don't take out the Micro SD card suddenly when connecting with power. It should be switch off first or it might are likely to cause the destruction of data.

Index

A. Feature Description	1
B. Schematic Diagram of The Installation Steps	2
C. Specification	3
D. Product Dimensions	5
E. Remote Controller Description.....	6
F. Main Menu Operating Description	7
G. Play The Recorded File	24
H. Software Operating Instruction	29
I. Formatting the Memory Card.....	37
J. Installation of Micro SD Card	40
K. Record Time Estimation (based on constant record mode with 8GB card).....	40
L. Operation for Saving Records as AVI Files	40

A. Feature

- Built-in Full HD 5M CMOS Sensor. Viewing angle approx. 105 degrees.
- Easy installation. Suitable for all types of vehicles use.
- Video record outside driving conditions and audio record inside the vehicle simultaneously.
- G-sensor, GPS and Image data are recorded and playable on client software. (GPS only for Type B model)
- Image data is securely stored on Micro SD Card (read/write speed 15MB/s), support Max. 32 GB and sudden disconnection from unexpected shock is completely prevented.
- G-sensor sensitivity can be adjusted according to vehicles and road situations. When detect a strong shock, system will start emergency recording and keep the files without being overwritten.
- The most user-friendly player software, easy to operate.
- With full time/date record, can be displayed in screen directly.
- Provides complete event log table, easy to search recorded files.
- Provides a variety of recording video formats and number of frames to select.
- Built-in Dual High Sensitivity Microphone.

B. Schematic Diagram of The Installation Steps

Two types of brackets installation for selection, suction-cups type and stick-holder type.

Suction-cups Type		
<p>A1. Make the bracket facing upward</p>	<p>A2. Assemble the suction cups, and insert the Micro SD card.</p>	<p>A3. Set up appropriate position by suction cups.</p>
Stick-holder Type		
<p>B1. Remove 3M sticker and adjust the best position to posted closely.</p>	<p>B2+B3. Stuck bracket into latch.</p>	
<p>1 Power line installs into USB port.</p>	<p>2 Plug in the cigarette adapter.</p>	<p>3 Set up appropriate position and fix power line.</p>
<p>4 Green light on : Power.</p>	<p>5 Red light flashing: Recording.</p>	<p>Schematic diagram of the wire installation.</p>


C. Specification

Items	Description
Chipset	Ambarella H.264 image compression chip
Sensor Device	Full HD 5M CMOS Sensor
View Angle	View angle approx. 105 degrees.
Voltage	5V± 5%; 650mA,
Operating Temperature	-10°C ~ +70°C (Inside vehicle)
Storage Device	For the performance issue, use Micro SD card Class 10 or above read / write speed 15MB/s recommend. (min capacity 4G, Max 32G)
Recording Frame and Content	1920x1080 (Full HD1080P/ 30F) 1280x720(HD720P/ 60F and HD720P/ 30F). Auto record when power up system. Recording frame: 30fps/60fps (NTSC/PAL) only select one.
Camera Mode	Resolution 3M, 5M, 8M(manual/ G-sensor/Timer)
Recording Content	TYPE A: Date, time, image, sound, G-Sensor data
	TYPE B: Date, time, image, sound, G-Sensor data , GPS data
Recording Format	Specific format for player software (recording mode).
Microphone	Built-in Dual High Sensitivity Microphone.
Input Device	(a) Enforced recording button, Remote controller. (b) GPS Mouse external extension hole.
Out Device	(a) TV-Out (1 Vp-p composite video output, 75 ohms), two kind of system: NTSC/PAL (b) Green light: Power/GPS signals. When power up to system, green light on(Type A). When GPS are positioning, green light will flash, and turn to light when complete positioning (Type B). (c) Red light: Recording
Time Setup	Auto-calibrating by GPS signals. If GPS is not available, the built in clock will be used.
G-Sensor	Built in Internal 3D G-Sensor


Accessories	<ul style="list-style-type: none"> (a) 5V cigarette Power adapter (b) RCA output cable (c) Remote controller (d) Product CD (e) Suction cup bracket (f) Bracket holder (g) Quick user guide (h) USB card reader (i) Micro SD Card (optional) (j) RCA AV cable (optional)
Important Notice	<ul style="list-style-type: none"> (a) GPS positioning speed will be affected by weather, window films, etc. Windows film may contain metal substances and have impact on GPS positioning. (TYPE B) (b) The light indicator distinguish between day and night mode, When power-on it will enter night mode first. (c) Machine must be installed in the area that wipe can be reached. (d) Micro SD card must be formatted by machine or client software first to be used properly. (e) After Micro SD card formatted, user needs to set up time zone data from OSD. Or Auto-calibrating by GPS signals directly, then the video file can be recorded the right time data. (f) Due to power consumption is over standard USB (signal output 500mA), when connected to the computer power supply, please use other power line. (h) For power cable installing, try not to bypass above the machine (GPS patch), Set the cable to bracket latch then wiring to the car ceiling, it can receive the GPS signal better. (i) The machine reserved for the RTC battery cover for easy changing battery (CR1220).

D. Product Dimensions


Front Panel UNIT : mm

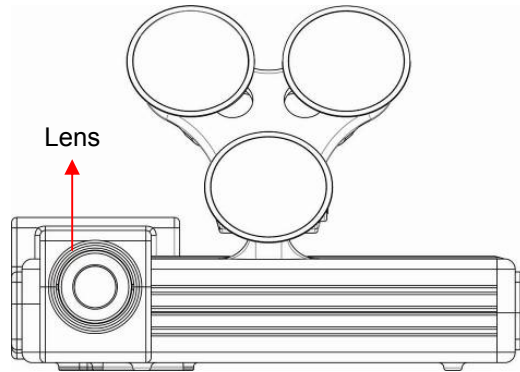


Rear Panel

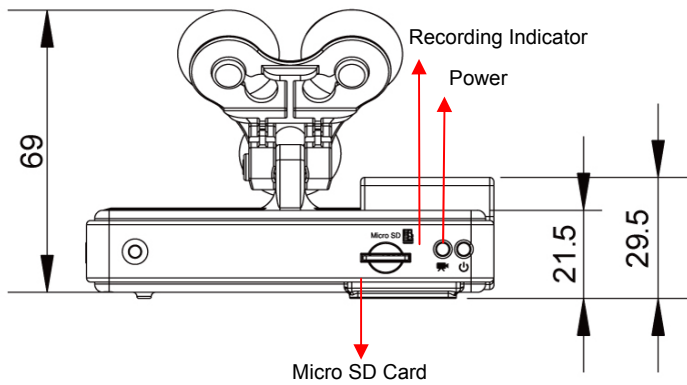


Side Panel

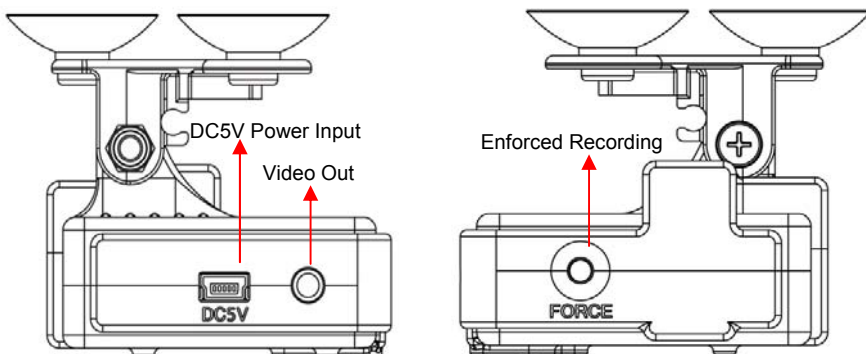

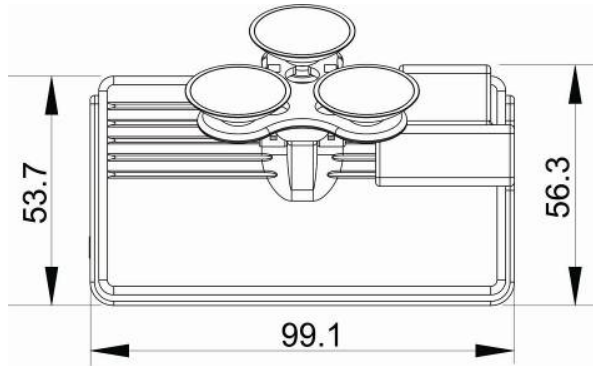


E. Remote Controller Description

Key mapping table for remote controller:

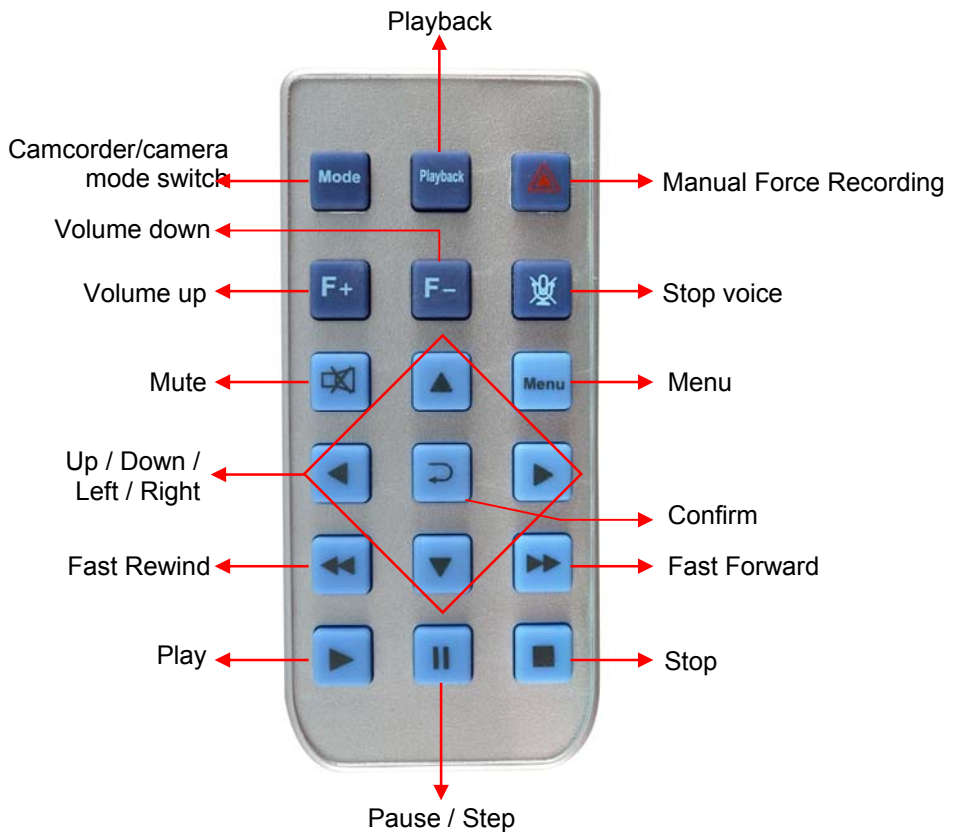

F. Main Menu Operating Description

Main menu table switch

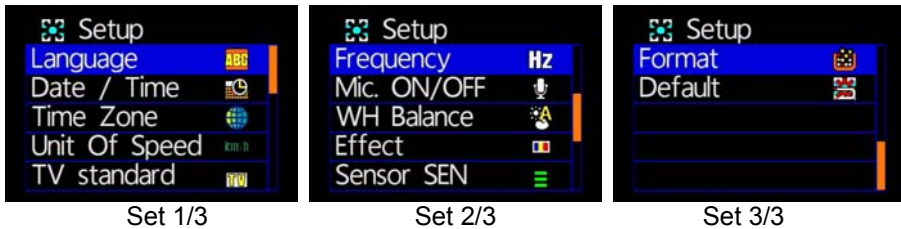

★Total three setting pages; click on the settings page, you can conduct more detailed and related setting (For detailed setting, please refer to the settings page instructions).



First stage Remote controller keys description

Moving menu options	[Left/Right Key]
Selecting items	[Up/Down Key]
Selected the item, confirm setting	[Confirm key]
Enter index, back to previous menu	[MENU key]

Main Menu Settings

Click button on the remote controller to enter the main menu setting page.

After entering the main menu settings page, press the button on the remote controller, choose the Settings page; then click on the remote controller to enter the settings page.

To exit the Settings page, click on the remote controller you can choose to leave and return to the settings page.

◆ Language Setting




★Support 13 languages: English / French / German / Italian /Japanese / Korean / Portuguese / Russian /Simplified Chinese /Spanish / Traditional Chinese / Turkish / Dutch


◆ Date / Time



Menu Options	[Up/Down Key]
Selecting Options	[Left/Right Key]+ [Confirm key]+ [Up/Down Key]
Selected the item Confirm setting	[Confirm key]
back to previous menu	[MENU key]

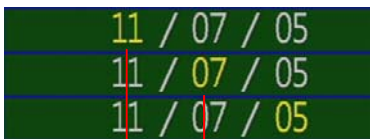



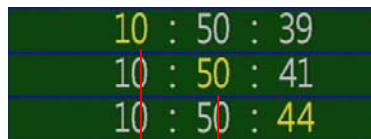

Year Mont Date



Hour Minute Second

- Date / time: Press the remote control button, enter the date / time setting
 - Press the remote control key, move to the year /

- month / day / hour / minutes / seconds
 - Press the remote control  button, can change the set of year / month / day / hour / minutes / seconds
 - After setting and then press remote control  key to the Select  button and then press  to confirm saving.
- ★Year Setting: to set behind 2 digits of AD year, to set hour for the 24-hour.

◆ Time Zone



★selecting the proper time zone for your position

◆ Unit Of Speed









★Off / km/h /mph, three choices.

★This function works in TYPE B only(with GPS).
It works when GPS positioning successfully.

◆ TV Standard




★NTSC/ PAL for selecting






- TV output format: click the remote control  button to enter the TV output format settings page.
- Press the remote control   key, select the video output format of driving recorder.
For example:  → , after setting up and then press the remote control  button to save the settings.

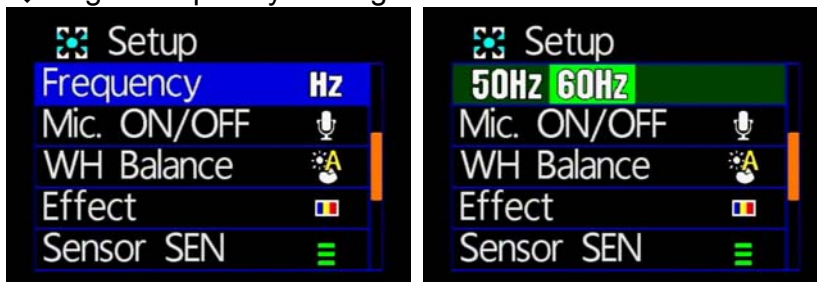★TV output format, according to different national systems using the input format for the TV set, the system is preset to NTSC (Taiwan TV image is NTSC). When input the image causing TV screen which appears black and white, beat, we can switch to PAL TV screen to check returning to normal status.

◆ Light Frequency Setting



★ 50Hz/ 60Hz for selecting

- Light frequency: press the remote control  button, enter the light frequency page to do the setting.
- Remote control   button, can change the light frequency setting.
For example:  → , after setting finished, press the selected remote control key to save the settings.

★Light frequency: according to different power frequency flicker and, thus, the wavelength, the wavelength is caused by the human eye brightness of the most important factor; general, the higher the frequency of light, the brighter the ambient feel. As the use of Taiwan's general power frequency 60HZ, 60HZ recommended to set the frequency for the light source is more suitable environment in Taiwan.

◆ Microphone Switch







★ OFF/ON



: Microphone off




: microphone on

- Microphone: press the remote  button, into the microphone switch pages.
- Press the remote control   key can be turned on or off the microphone.
- Setup is complete, press the remote control  key to store settings.

★Microphone to record the sound of inside vehicle information, if concern about personal privacy information, proposed close microphone function (off microphone function, converting the image files to video without sound state).

◆ White Balance

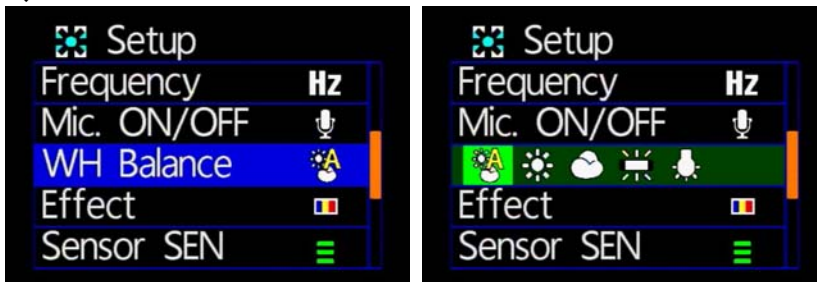

★Five ambient light option for selecting Auto / Daylight / Cloudy / Fluorescent / incandescent light



: Automatic mode





: Daylight mode

: Cloudy mode



: Fluorescent mode











: Incandescent mode

- White balance, press remote  button, into white balance settings page.
- Remote control   key to select different white balance mode.
- Setup is complete, press the remote  button to save the setting.

★White balance mode is set, regardless of the state in the camera or photography will open automatically.

★When take recording; suggest white balance set to automatic mode in order to open the white balance automatically to avoid the screen unclear.





The following table shows picture taken in various white balance mode.

Icon	Description	Picture	Application instructions
	Auto		The machine set automatically
	Sunlight		For fine weather
	Cloudy day		For cloudy, dark or twilight
	Fluorescent		For warm white, cool white (3-wavelength) fluorescent lighting
	Incandescent		For incandescent lamps and bulb-type 3-wavelength fluorescent



◆ Effects




★Color / B & W / Retro color

- Effects: press the remote  button, enter the effects settings page.
 - Press the remote control   button to select the effect model.
 - Setup is complete, press the remote  button to save the settings.
- ★Effects model setting, whether in photography or video mode it will automatically open.

The following table shows picture taken in various effect mode.

Icon	Description	Picture
	Color mode	
	Black mode	
	Retro mode	

◆ Sensing sensitivity

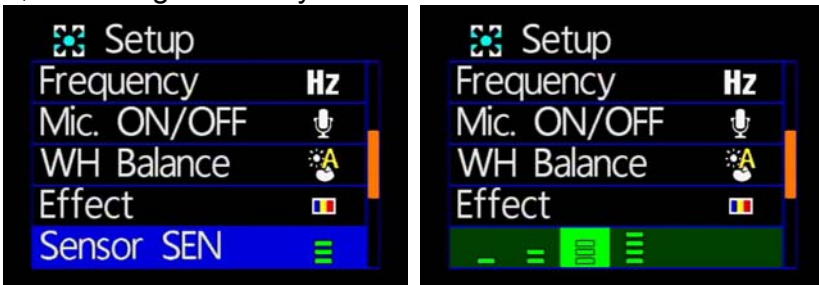

★Caution: You can adjust the sensitivity level (more number of green bars stands for higher sensitivity)



- Sensor sensitivity: press the button, enter the sensor sensitivity settings page.
- Press the remote control key, select the sensor sensitivity level.
- Setup is complete, press the button to save the settings

★Sensor sensitivity means the sensitivity of the reaction: when passing through a dark place, the vehicle turned on the white balance mode; when the higher sensitivity settings, after passing a little dark as long as it will open automatically, more likely to cause excessive light up the screen.




◆ Format



★cancel format / confirm format




- Format: press the button, enter the format settings page.

- Press the remote control   button, choose whether to format.
- To confirm the format, press the  button to do the Micro SD card format.

- ★When you click “cancel the format:”, it will return to the main Settings page.
- ★When determining to format the Micro SD card, all data in the Micro SD card will be erased, please back up any old data in advance to avoid old data be erased.
- ★A new Micro SD card must do the formatting operation first and then start the recording.

◆ Restore factory settings

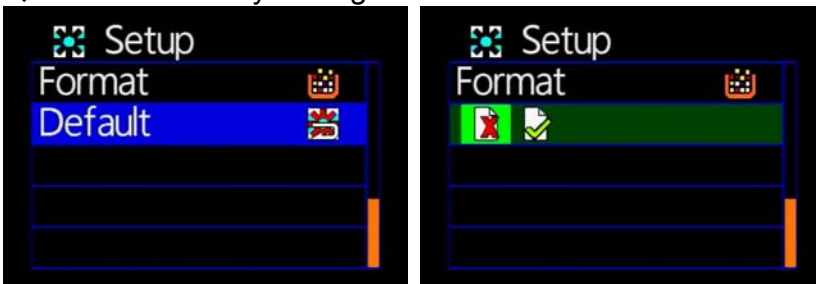





★cancel default setting / confirm default setting



: Cancel to restore factory settings



: confirm to restore factory settings





- Restore factory settings: press the remote control  button, enter the restore factory settings page.
- Press the remote control   key, whether you want to restore to factory settings.
- Confirm to restore factory settings, press the remote control  button, to return to the original setting






- ★When click “cancel to restore factory settings”, it will return to the main Settings page.
- ★When confirm “confirm to restore factory settings”, it will return to the factory value settings; when return to factory value, you could enter main menu to configure the related settings again.

Camcorder mode setting



Remote control keys description

Moving menu options	 [Up/Down Key]
Selecting items	 [Left/Right Key]
Selected the item, confirm setting	 [Confirm key]
Enter index, back to previous menu	 [MENU key]

Camcorder mode settings: press the remote control  key to enter the camcorder settings page. Enter the main page, press the remote control  key to select the camera or camcorder. Enter camcorder mode main page, press the remote control  key to select the setting. Press the remote control  key to enter the settings page. If leaves the settings page, press the select  button on the remote control, you can leave and return to the camcorder or the main page.

★Camera mode setting is total one page; Click the Settings page to enter more detail setting related (set for details, see the description of the settings page)

■ Video Resolution Setting



- Camcorder mode settings / image resolution, press remote controller button to enter image resolution setting page.
- Press the remote controller key to choose variety of image resolution.
- Setup is complete, press the remote controller button to save the settings.

Three video resolution modes for selecting:

1920 * 1080P (30): 1920 * 1080 screen resolution, 30 frames per second.

1280 * 720P (60): 1280 * 720 screen resolution, 60 frames per second.

1280 * 720P (30): 1280 * 720 screen resolution, 30 frames per second.

Icon	Description	Picture
	1920x1080P(30)	
	1280x720P(60)	
	1280x720P(30)	

◆ Quality Settings



★ more number of green bars stands for higher quality



- **Set the camcorder mode / quality:** press the remote control button to enter the quality settings.
- Press the remote control key to select the video quality.
- Setup is complete, press the remote control button to save the settings.


★Video quality setting higher, the better image quality.




◆ G-sensor Setting



★Caution: You can adjust the G-sensor sensitivity level (more number of green bars stands for higher sensitivity)

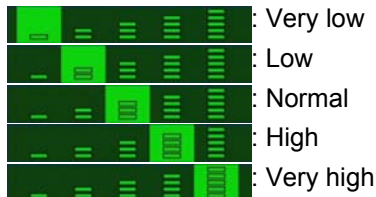★When emergency record is triggered, it will keep around 3 minutes emergency recording and keep the files without being overwritten







- Camcorder mode settings / G-sensor: press the remote controller  button to enter the G-sensor settings.
- Press the remote controller  button to select the sensitivity of G-sensor.
- Setup is complete, press the  button to save the settings.


★Note: the higher the sensitivity on behalf of gravity (G) the more sensitive the sensor, the more likely trigger mandatory recording; every trigger mandatory recording, before and after the accident will force to save 3 minute video and not be covered (when G-sensor trigger recording, all the lights will become darker).





Camera Mode Setting



Remote control keys description

Moving menu options	 [Up/Down Key]
Selecting items	 [Left/Right Key]
Selected the item, confirm setting	 [Confirm key]
Enter index, back to previous menu	 [MENU key]


Set the camera mode: press the  button on the remote control to enter the camera settings page.





To set directory on the main page, press the select  button on the remote control to select the camera or photograph; Into the camera mode of the main page, press the remote control  key selected to choose the Settings page and press the remote control  to enter the setting page; to leave the settings page, press the 

button on the remote control, you can leave and return to the camera or main setting page.

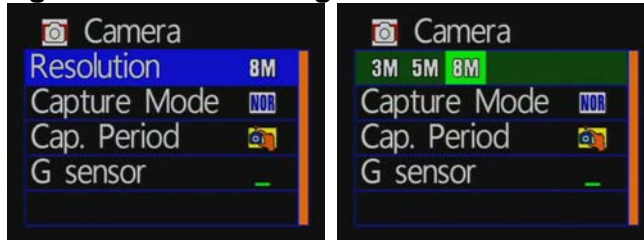★Camera mode is total one page; Click Settings page to more detail settings (the detailed settings, see the setting instructions on the settings page).

◆ **Image resolution setting:**









- Camera mode / image resolution: press the remote control  button to enter the setting page of image resolution.
- Press the remote control   button to select different image resolution.
- After setting, press the remote control  key, to store settings.

★There are three image resolution modes selectable:

8M: 3200 * 2400 screen resolution, picture quality is 800 million pixels.

5M: 2592 * 1944 screen resolution, picture quality is 500 million pixels.


3M: 2048 * 1536 screen resolution, picture quality is 300 million pixels.


Icon	Description	Picture
	3M: 300 million pixels	
	5M: 500 million pixels	
	8M: 800 million pixels	





★When the higher image resolution, the greater the amount of data stored in the file.

◆ Capture mode setting




 NOR: Normal mode

 G-S: G-Sensor mode with three pictures once

- Camera mode / capture mode: press the  button to enter the capture mode setting page.
- Press the remote control   key to select the capture mode.
- After setting, press the  button to save the settings.

★When the capture mode NOR selected, to set capture picture time from the camera cycle option.

◆ Camera Period Setting

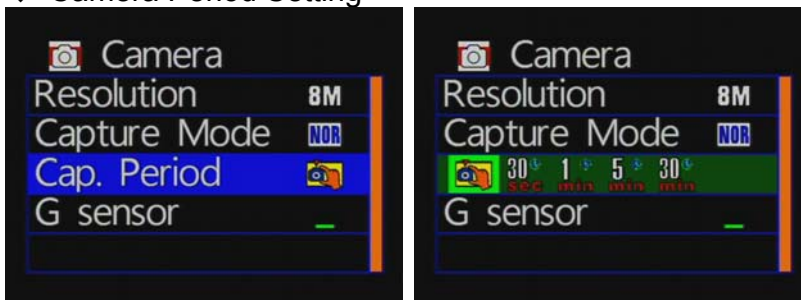

- Camera mode / capture period: press the remote control button to enter the settings page to set the period setting.
- Press the remote control button to select period of time to capture.
- Setup is complete, press the remote button to save the settings





★ When the capture mode NOR selected, the option to set the camera period setting.

★ Photographic period: 30 seconds / 1 minute / 5 minutes / 30 minutes, fixed shot once.

◆ G-sensor Setting



- Very low
- Low
- Normal
- High
- Very high

- Camera mode / G-sensor, press the remote control  button to enter the page to set the G-sensor.
- Press the remote control   button to set the sensitivity of G-sensor.
- Setup is complete, press the remote  button to save the settings.

★Note: the higher the sensitivity on behalf of gravity (G) the more sensitive the sensor, the more likely trigger mandatory photography;
Each time the force shooting is triggered, it will shoot three images once.

G. Play The Recorded File

Direct playback on machine side


■ Camcorder mode







Play back file screen

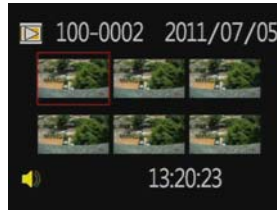







File selecting screen









Multi-files selecting screen

- Press  button on remote controller under LIVE recording mode to enter file playback menu.
- Press   button to adjust before and after clips.
- Press  button to play file.

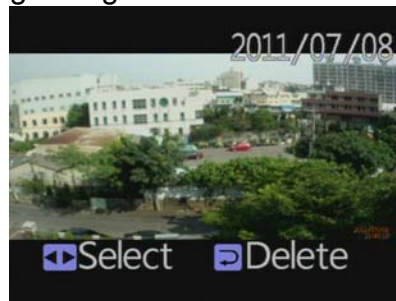★When in the playback file page, default is as single file mode. However, you can press the  button to enter into six separate screen page, and then press the     button to select the file you want to play. When you select OK, and then press the  button to return to a single file for playback page.

◆ Playback settings - Deleting a single file








- For playback file setting, press  button to enter setup page, press  button to move to delete one item, then press  enter into deleting page.
- Use  button moving to the file you want to delete, and then press  to start deleting.

★You must disable the protection function first in order to process the deleting procedures.

◆ Playback settings- Delete All



- Press  button to enter setup page, press  button to move to delete all item, then press  enter into deleting all page.
- Use  button moving to you want to delete all files, then press  to start deleting.


★You must disable the protection function first in order to process the deleting procedures.




◆ Playback file setting-protect



★Caution: When the picture has a lock-shaped icon indicates that the data in protection mode





- Press  button to enter setup page, press 


button to move to protect item, then press  enter into protect setting page.

- Use   button moving to you want to protect file, then press  to start protect setting.

■ Camera Mode




- Under camera mode, press  button entering into photo playback page.
- Press   button to select the file you want to play.
- Then press  button to play.

★When in playback page, press  button to do Clockwise rotation of photo.




◆ Photo playback settings-Delete one

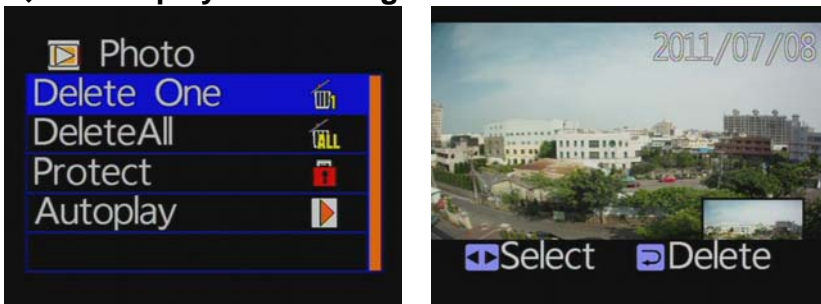

- Photo play setting, press button entering into setting page.
- Press button moving to delete one item. Then press button to enter delete page.
- Press button to select the file you want to delete. Then press button to start deleting.
- ★ You must disable the protection function first in order to process the deleting procedures.

◆ Photo playback settings-Delete All

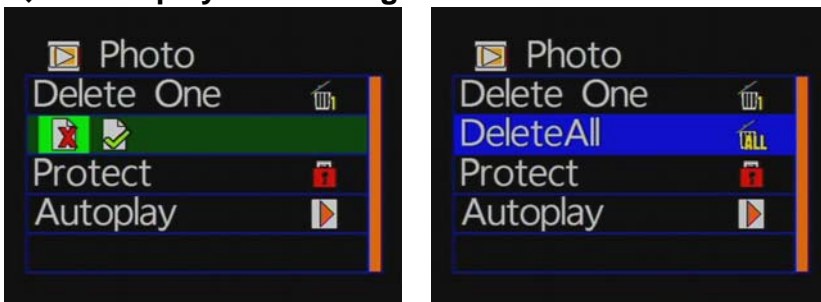

: Cancel delete all








: Confirm delete all

- Photo playback settings, press button enter setup page.
- Press button moving to delete all item. Then press button to enter delete all page.
- Press button to confirm delete all files. Then press button to start deleting all files.


★ You must disable the protection function first in order to process the deleting procedures.

◆ Photo playback settings-protect





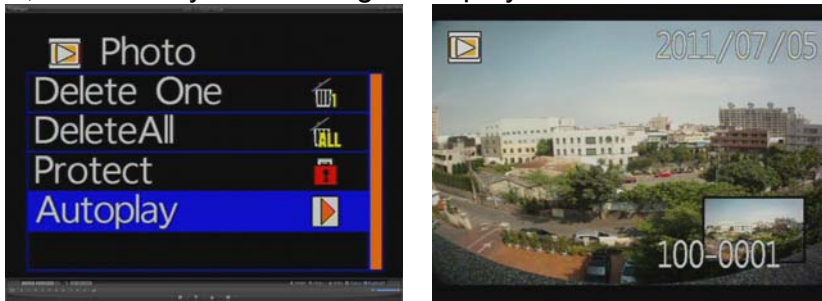


- Photo playback settings, press  button enter setup page.
 - Press   button to move to protect item, then press  enter into protect setting page.
 - Use   button moving to you want to protect file, then press  to start protect setting.
- ★Caution: When the picture has a lock-shaped icon indicates that the data in protection mode.





◆ Photo Playback Settings-Autoplay




★ 5 Sec duration per image / click menu to stop.

- Photo playback settings, press  button enter setup page. Press   button to move to auto play item, then press  enter into auto play setting page.
- When under Auto Play mode, about every 5 seconds to play the next photo. You can click the stop  button to return to photo playback page.

H. Software Operating Instruction





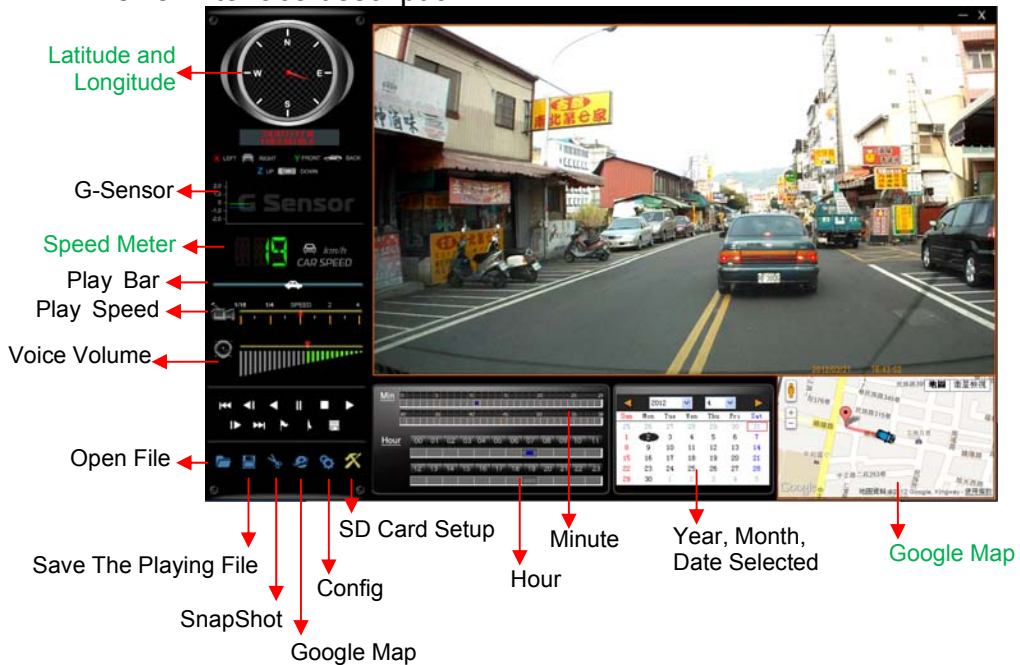












1. Remove Micro SD card from card slot of host side
2. Put the Micro SD card to the card reader
3. Connect card reader to the USB port of PC side
4. Choose the file to play: Execute "TransportStream.exe" , which is located in the product CD folder, Screen shown as below. Choose "Open the document" , and choose the file of memory card or hard disc and then click "Play key"  to do playback : when using playback. Click  key to show the historical routing from Google map.
 ©Note: To perform this software, please install Direct X 9.0 or above.

Viewer interface description



- ★ Direction, Latitude, Longitude, Speed Meter and Google Map are available for GPS function of TYPE B.

1. Operating Interface Description

1		Return to previous function
2		Forward Playback
3		Playback Key
4		Pause Key
5		Stop Key
6		Play Key
7		Backward Playback
8		Go To Next File
9		Flag to mark starting point of backup file
10		Flag to mark ending point of back up file
11		Back up the marking file
12		Playback, Open file, select files to play
13		Back up the current file
14		Snapshot Tool
15		Google Map, LIVE location display (TYPE B – GPS model only)
16		Configuration & Machine related settings.
17		Micro SD Card Setting

2. Player Interface Description:

- Show latitude and longitude position



- G-sensor : Impact sensor analyzer, forced saving the accident video before and after 1 to 3 minutes, not covered by other new files, protect the integrity of the incident video.

X: Induct about level of vehicles moving
Y: Induct around level of vehicles moving
Z: Induct Height fluctuation around level of vehicles moving



- Play BAR
Press left button of mouse and move around to pull BAR with fast-moving.



- Driving Speed






- Playback speed
Fast forward with 2 times or 4 times, and playback with 0.25 times, 0.0625 times.






- Volume control



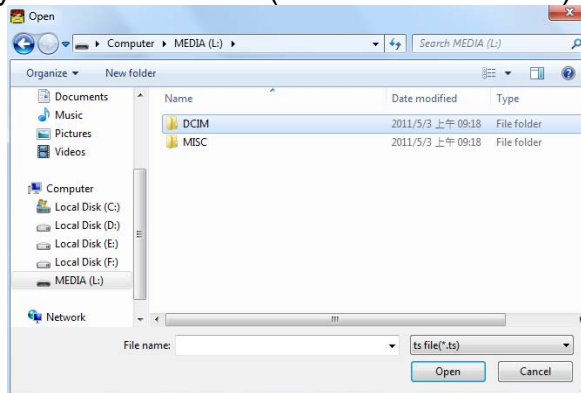


-  Select the file to playback
Select “Open the document” , and then choose the file of memory card or hard disc. (The file format is *.ts)

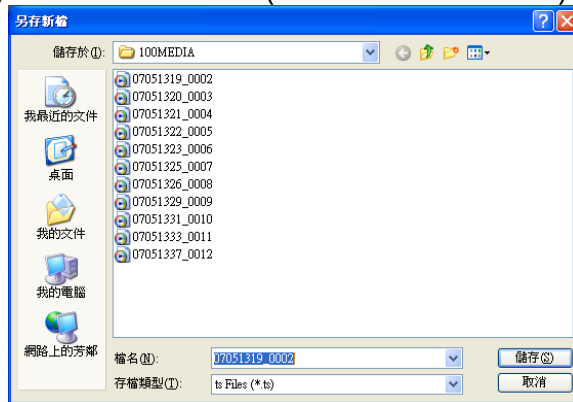


-  Save the playing file
Select “Save the playing file” , and then choose the file of memory card or hard disc. (The file format is *.ts)



-  Snapshot Tool
Play record from Micro SD card first and then use Snapshot tool to capture the screen. When select  Snapshot tool, it will appear the following window. (The picture of display screen will save in capture storage folder path.)

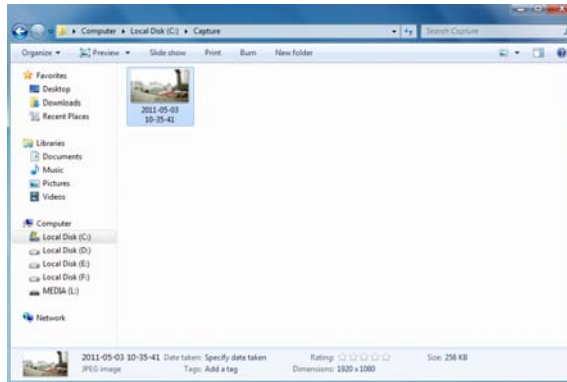


■  Google Map

Click  and then appear the window of Google Map to view the tracking of Vehicle. (This function needs to connect Internet.)




■  Configuration Setting


Announce related information of software version and data storage setting of Micro SD card

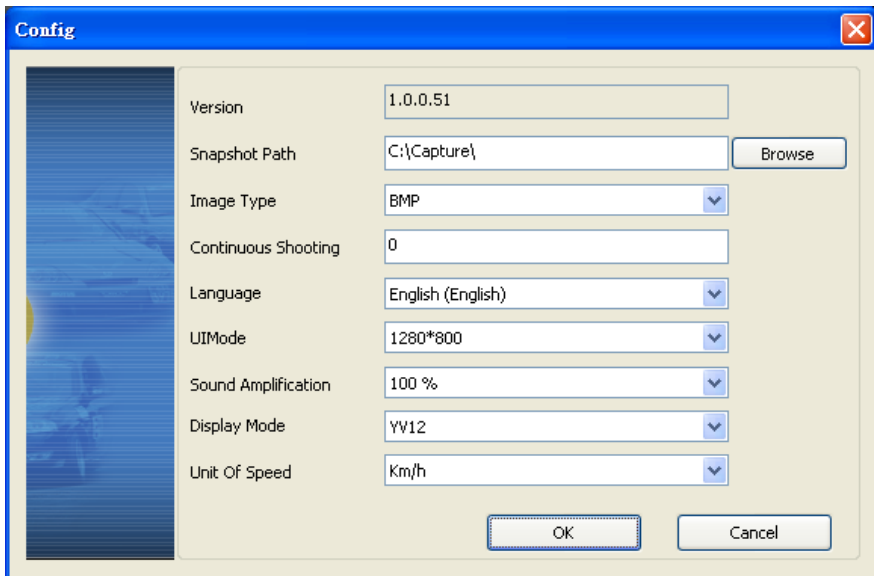

- (a) Version: Current Display Version
- (b) Path of snapshot: store location of PC client
- (c) Picture Type: save picture type as bmp or jpg format
- (d) Continuous snapshot: Default value is zero, can set continuous screen images capturing.
- (e) Language: Select a specific language system; please restart player software after setting up completed.
- (f) UI mode: Set up store type for different resolution, including 960x600, 1280x800, 1920x1080. Please insert Micro SD card before set up the resolution.
- (g) Volume Loud: Adjustment of voice volume loudly by percentage.
- (h) Display Mode: Default value YV12, two color modes can be selected: YV12 and RGB.
- (i) Speed unit: Km/h, Mile/h and Knot available

-  Micro SD card Setting

There will have default value before the device complete. Setting up Micro SD card or external monitor connecting can revise default value of this device.

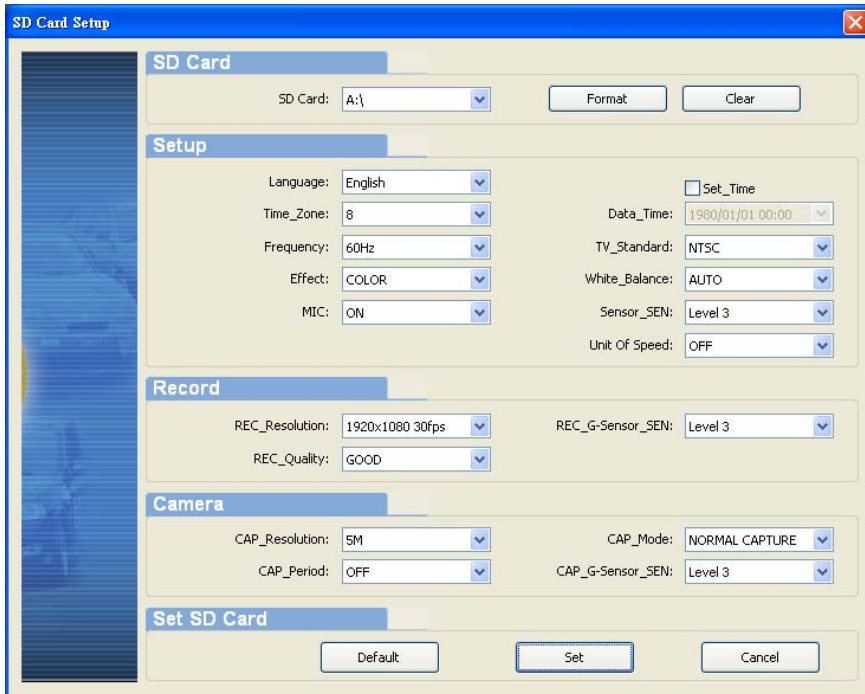

- (a) Micro SD card: Select the slot of Micro SD card
 - Format: Micro SD card formatted
 - Clear: Clear all recording data of Micro SD card to empty status.
- (b) Setup: Set up functions of this device
 - Language: Multi-languages available
 - Time_Zone: Default UCT+8
 - Date_Time: Tick time setting and select it.
 - Frequency: 50Hz for PAL system, 60Hz for NTSC system
 - TV_Standard: NTSC / PAL for different countries
 - Effect: Color (Default), Grayscale, Classic
 - White_Balance: Auto (Default), Sunlight, Cloudy, Fluorescent , Tungsten
 - MIC : ON (Default) / Off the microphone

- REC_G-Sensor_SEN: Default as “Level 3”
 - Speed Unit: Default as “Km/h”
- (c) Record: Set up record items of the device
- Resolution: 1920x1080P@ 30 fps (Default), 1280x720P@60/30 fps
 - G-Sensor: Default as “the third level”
 - Record Quality: Good (Default) , Normal, Best
- (d) Camera: Setting snapshot items
- CAP_Resolution: 3M, 5M (Default), 8M
 - Cap_Mode: Manual, Auto by G-Sensor detecting
 - Cap_Period: Off, 30 sec, 1 min, 5 min, 30 min
 - CAP_G-Sensor: Default as “Level 3”
- (e) Micro SD card setting: Restore, Store, And Cancel


■ **Playback date selection**

1. Selecting by date



Launch the Player, click the "open" to select the file or path of storage. Then on date table with Gray-brown color means having recording footage.

2. Selecting by Hours/Minutes (24-hours)

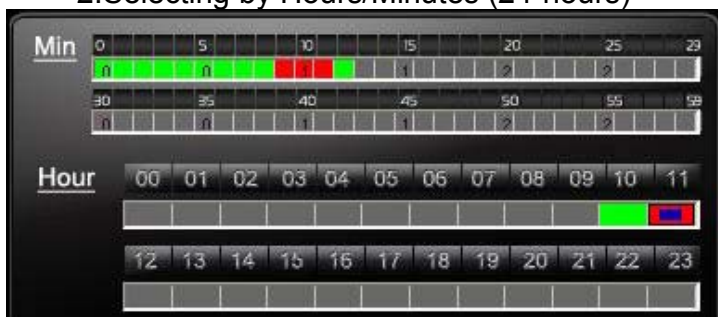

After select the "Date" with Gray-brown color, on Hour/Minutes table will display Red/Green color.

Green: normal record

Red: force record

3.Quick switching by minutes



Click the minutes table to change the recording footage immediately.

I. Formatting the Memory Card

Q. When will you need to format the Micro SD card?

Ans: Please format a new Micro SD card and start to record after installation into the video recorder.


Procedures of a new Micro SD card formatted as below:

Way 1. Format the Micro SD card by PC


Insert the Micro SD card into card reader and plug into USB port of PC.



1. Select the Disc from “My Computer” and mouse click right side for memory card format.

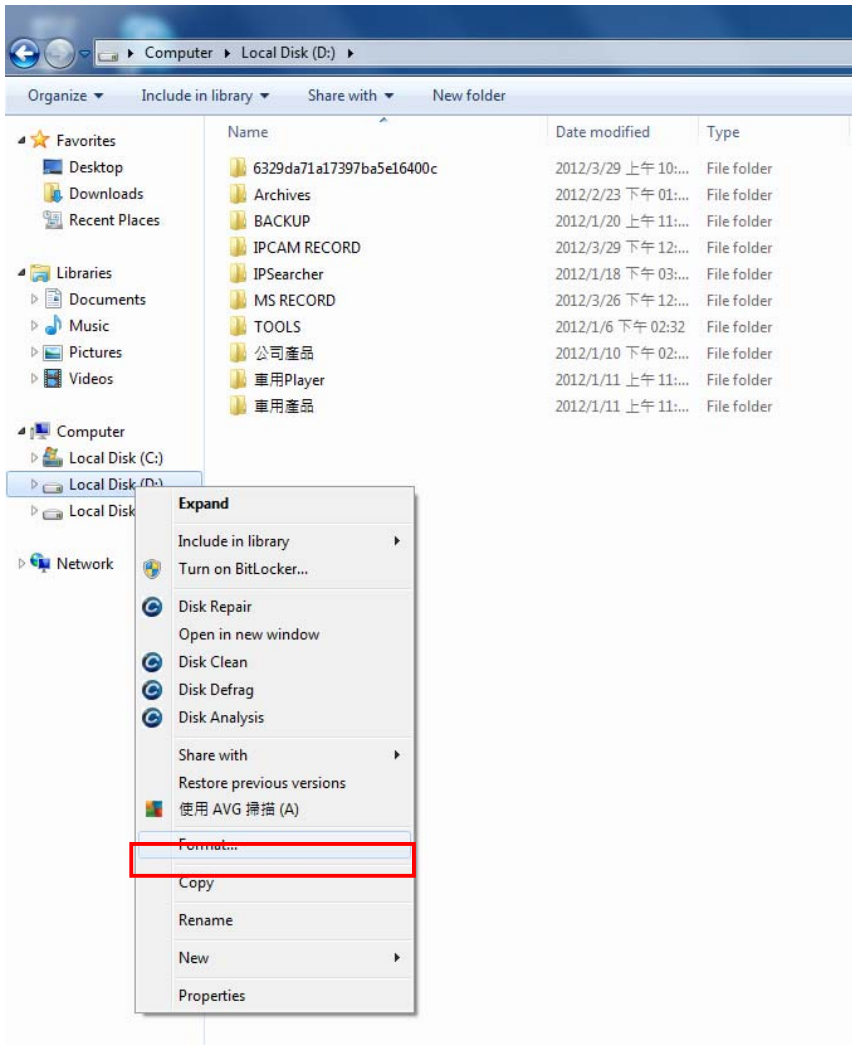

2. Please mind the file system as “FAT32” while formatted.

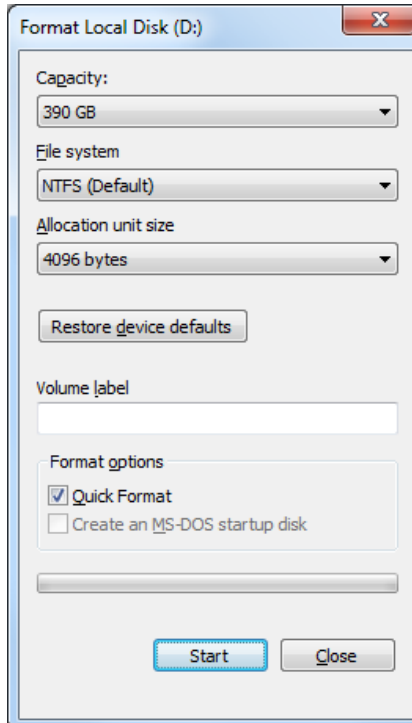


3. After format process, the Micro SD card can be used to record in vehicle video recorder directly.

Way 2. Format the Micro SD card by OSD screen of this device

1. Connect power cable to the device, insert the Micro SD card into the slot and select format item from OSD screen by remote controller.


Format Process:

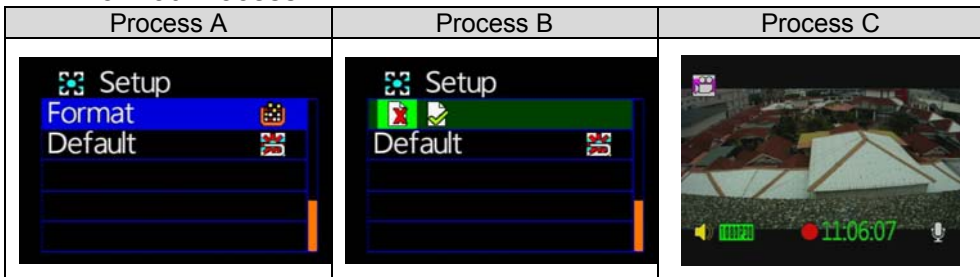

2. After the Micro SD card formatted, quit Menu page and back to LIVE view.

J. Installation of Micro SD Card

Install the Micro SD card into the device before record started.
Procedures for installation of Micro SD card as below:

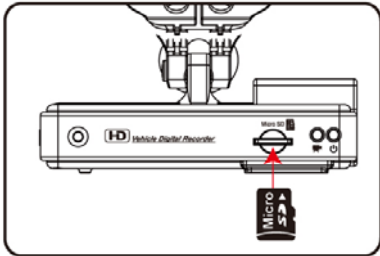




1. Insert the Micro SD card into the slot, please mind the install direction.
2. Push the Micro SD card into the slot flatly.
3. Installation completed after pushing the Micro SD card

K. Record Time Estimation (based on constant record mode with 8GB card)

* The chart of estimated record time listed below is for reference only. The length of time recorded can be varied due to variation in image size may be somewhat different.

Video Format (NTSC / PAL)			
Resolution	1080P30	720P60	720P30
Video Quality			
High	110 Min	105 Min	115 Min
Normal	115 Min	110 Min	135 Min
Low	135 Min	130 Min	155 Min

L. Operation for Saving Records as AVI Files

Play records from Micro SD card, select a time period to transfer to AVI file, decide the beginning point  and end point  and mark them respectively. Press backup mark  to transfer file as AVI file.



: On transferring file to AVI file now



: File transfer completed