MITSUBISHI Mitsubishi Programmable Controller MELSEG Leseries

MELSEC-L CPU Module User's Manual

Built-In Ethernet Function



-L MODEL -L

-L02CPU -L02CPU-P -L26CPU-BT -L26CPU-PBT

SAFETY PRECAUTIONS

(Read these precautions before using this product.)

Before using this product, please read this manual and the relevant manuals carefully and pay full attention to safety to handle the product correctly.

In this manual, the safety precautions are classified into two levels: "/ WARNING" and "/ CAUTION".



Under some circumstances, failure to observe the precautions given under "<u>CAUTION</u>" may lead to serious consequences.

Observe the precautions of both levels because they are important for personal and system safety.

Make sure that the end users read this manual and then keep the manual in a safe place for future reference.

[Design Precautions]



[Design Precautions]

- (4) When the programmable controller detects an abnormal condition, it stops the operation and all outputs are:
 - Turned off if the overcurrent or overvoltage protection of the power supply module is activated.
 - Held or turned off according to the parameter setting if the self-diagnostic function of the CPU module detects an error such as a watchdog timer error.
 Also, all outputs may be turned on if an error occurs in a part, such as an I/O control part, where the CPU module cannot detect any error. To ensure safety operation in such a case,

provide a safety mechanism or a fail-safe circuit external to the programmable controller. For a fail-safe circuit example, refer to "General Safety Requirements" in the MELSEC-L CPU Module User's Manual (Hardware Design, Maintenance and Inspection).

- (5) Outputs may remain on or off due to a failure of a component such as a transistor in an output circuit. Configure an external circuit for monitoring output signals that could cause a serious accident.
- In an output circuit, when a load current exceeding the rated current or an overcurrent caused by a load short-circuit flows for a long time, it may cause smoke and fire. To prevent this, configure an external safety circuit, such as a fuse.
- Configure a circuit so that the programmable controller is turned on first and then the external power supply. If the external power supply is turned on first, an accident may occur due to an incorrect output or malfunction.
- Configure a circuit so that the external power supply is turned off first and then the programmable controller. If the programmable controller is turned off first, an accident may occur due to an incorrect output or malfunction.
- For the operating status of each station after a communication failure, refer to relevant manuals for each network. Incorrect output or malfunction due to a communication failure may result in an accident.
- When changing data from a peripheral device connected to the CPU module to the running programmable controller, configure an interlock circuit in the program to ensure that the entire system will always operate safely. For other controls to a running programmable controller (such as program modification or operating status change), read relevant manuals carefully and ensure the safety before the operation. Especially, in the case of a control from an external device to a remote programmable controller, immediate action cannot be taken for a problem on the programmable controller due to a communication failure. To prevent this, configure an interlock circuit in the program, and determine corrective actions to be taken between the external device and CPU module in case of a communication failure.
- An absolute position restoration by the positioning function may turn off the servo-on signal (servo off) for approximately 20ms, and the motor may run unexpectedly. If this causes a problem, provide an electromagnetic brake to lock the motor during absolute position restoration.

[Design Precautions]

- Do not install the control lines or communication cables together with the main circuit lines or power cables. Keep a distance of 100mm or more between them. Failure to do so may result in malfunction due to noise.
- During control of an inductive load such as a lamp, heater, or solenoid valve, a large current (approximately ten times greater than normal) may flow when the output is turned from off to on. Therefore, use a module that has a sufficient current rating.
- After the CPU module is powered on or is reset, the time taken to enter the RUN status varies depending on the system configuration, parameter settings, and/or program size.
 Design circuits so that the entire system will always operate safely, regardless of the time.

[Installation Precautions]

 Shut off the external power supply for the system in all phases before mounting or removing a module. Failure to do so may result in electric shock or cause the module to fail or malfunction.

[Installation Precautions]

- Use the programmable controller in an environment that meets the general specifications in the MELSEC-L CPU Module User's Manual (Hardware Design, Maintenance and Inspection). Failure to do so may result in electric shock, fire, malfunction, or damage to or deterioration of the product.
- To interconnect modules, engage the respective connectors and securely lock the module joint levers. Incorrect interconnection may cause malfunction, failure, or drop of the module.
- Do not directly touch any conductive parts and electronic components of the module. Doing so can cause malfunction or failure of the module.
- Securely connect an extension cable to the connectors of a branch module and an extension module. After connections, check that the cable is inserted completely. Poor contact may cause malfunction.

[Wiring Precautions]

- Shut off the external power supply for the system in all phases before wiring. Failure to do so may result in electric shock or cause the module to fail or malfunction.
- After installation and wiring, attach the included terminal cover to the module before turning it on for operation. Failure to do so may result in electric shock.

[Wiring Precautions]

- Ground the FG and LG terminals to the protective ground conductor dedicated to the programmable controller. Failure to do so may result in electric shock or malfunction.
- Use applicable solderless terminals and tighten them within the specified torque range. If any spade solderless terminal is used, it may be disconnected when a terminal block screw comes loose, resulting in failure.
- Check the rated voltage and terminal layout before wiring to the module, and connect the cables correctly. Connecting a power supply with a different voltage rating or incorrect wiring may cause a fire or failure.
- Connectors for external devices must be crimped or pressed with the tool specified by the manufacturer, or must be correctly soldered. Incomplete connections may cause short circuit, fire, or malfunction.
- Securely connect the connector to the module.
- Do not install the control lines or communication cables together with the main circuit lines or power cables. Failure to do so may result in malfunction due to noise.
- Place the cables in a duct or clamp them. If not, dangling cable may swing or inadvertently be pulled, resulting in damage to the module or cables or malfunction due to poor contact.
- Check the interface type and correctly connect the cable. Incorrect wiring (connecting the cable to an incorrect interface) may cause failure of the module and external device.
- Tighten the terminal block screw within the specified torque range. Undertightening can cause short circuit, fire, or malfunction. Overtightening can damage the screw and/or module, resulting in drop, short circuit, fire, or malfunction.
- When disconnecting the cable from the module, do not pull the cable by the cable part. For the cable with connector, hold the connector part of the cable. For the cable connected to the terminal block, loosen the terminal screw. Pulling the cable connected to the module may result in malfunction or damage to the module or cable.
- Prevent foreign matter such as dust or wire chips from entering the module. Such foreign matter can cause a fire, failure, or malfunction.
- A protective film is attached to the top of the module to prevent foreign matter, such as wire chips, from entering the module during wiring. Do not remove the film during wiring. Remove it for heat dissipation before system operation.
- To use the high-speed counter function, ground the shield cable on the encoder side (relay box). Always ground the FG and LG terminals to the protective ground conductor. Failure to do so may cause malfunction.
- Mitsubishi programmable controllers must be installed in control panels. Connect the main power supply to the power supply module in the control panel through a relay terminal block.
 Wiring and replacement of a power supply module must be performed by qualified maintenance personnel with knowledge of protection against electric shock. For wiring methods, refer to the MELSEC-L CPU Module User's Manual (Hardware Design, Maintenance and Inspection).

[Startup and Maintenance Precautions]

- Do not touch any terminal while power is on. Doing so will cause electric shock or malfunction.
- Correctly connect the battery connector. Do not charge, disassemble, heat, short-circuit, solder, or throw the battery into the fire. Also, do not expose it to liquid or strong shock.
 - Doing so will cause the battery to produce heat, explode, ignite, or leak, resulting in injury and fire.
- Shut off the external power supply for the system in all phases before cleaning the module or retightening the terminal block screw. Failure to do so may result in electric shock.

[Startup and Maintenance Precautions]

- Before performing online operations (especially, program modification, forced output, and operating status change) for the running CPU module from the peripheral device connected, read relevant manuals carefully and ensure the safety. Improper operation may damage machines or cause accidents.
- Do not disassemble or modify the modules. Doing so may cause failure, malfunction, injury, or a fire.
- Use any radio communication device such as a cellular phone or PHS (Personal Handy-phone System) more than 25cm away in all directions from the programmable controller. Failure to do so may cause malfunction.
- Shut off the external power supply for the system in all phases before mounting or removing a module. Failure to do so may cause the module to fail or malfunction.
- Tighten the terminal block screw within the specified torque range. Undertightening can cause drop of the component or wire, short circuit, or malfunction. Overtightening can damage the screw and/or module, resulting in drop, short circuit, or malfunction.
- After the first use of the product (module, display unit, and terminal block), the number of connections/disconnections is limited to 50 times (in accordance with IEC 61131-2). Exceeding the limit may cause malfunction.
- After the first use of the SD memory card, the number of insertions/removals is limited to 500 times. Exceeding the limit may cause malfunction.
- Do not drop or apply shock to the battery to be installed in the module. Doing so may damage the battery, causing the battery fluid to leak inside the battery. If the battery is dropped or any shock is applied to it, dispose of it without using.
- Before handling the module, touch a conducting object such as a grounded metal to discharge the static electricity from the human body. Failure to do so may cause the module to fail or malfunction.
- Before testing the operation by the positioning function, set a low speed value for the speed limit parameter so that the operation can be stopped immediately upon occurrence of a hazardous condition.

[Disposal Precautions]

 When disposing of this product, treat it as industrial waste. When disposing of batteries, separate them from other wastes according to the local regulations. (For details on battery regulations in EU member states, refer to the MELSEC-L CPU Module User's Manual (Hardware Design, Maintenance and Inspection).)

[Transportation Precautions]

 When transporting lithium batteries, follow the transportation regulations. (For details on the regulated models, refer to the MELSEC-L CPU Module User's Manual (Hardware Design, Maintenance and Inspection).)

CONDITIONS OF USE FOR THE PRODUCT

(1) Mitsubishi programmable controller ("the PRODUCT") shall be used in conditions;

i) where any problem, fault or failure occurring in the PRODUCT, if any, shall not lead to any major or serious accident; and

ii) where the backup and fail-safe function are systematically or automatically provided outside of the PRODUCT for the case of any problem, fault or failure occurring in the PRODUCT.

(2) The PRODUCT has been designed and manufactured for the purpose of being used in general industries.

MITSUBISHI SHALL HAVE NO RESPONSIBILITY OR LIABILITY (INCLUDING, BUT NOT LIMITED TO ANY AND ALL RESPONSIBILITY OR LIABILITY BASED ON CONTRACT, WARRANTY, TORT, PRODUCT LIABILITY) FOR ANY INJURY OR DEATH TO PERSONS OR LOSS OR DAMAGE TO PROPERTY CAUSED BY the PRODUCT THAT ARE OPERATED OR USED IN APPLICATION NOT INTENDED OR EXCLUDED BY INSTRUCTIONS, PRECAUTIONS, OR WARNING CONTAINED IN MITSUBISHI'S USER, INSTRUCTION AND/OR SAFETY MANUALS, TECHNICAL BULLETINS AND GUIDELINES FOR the PRODUCT. ("Prohibited Application")

Prohibited Applications include, but not limited to, the use of the PRODUCT in;

- Nuclear Power Plants and any other power plants operated by Power companies, and/or any other cases in which the public could be affected if any problem or fault occurs in the PRODUCT.
- Railway companies or Public service purposes, and/or any other cases in which establishment of a special quality assurance system is required by the Purchaser or End User.
- Aircraft or Aerospace, Medical applications, Train equipment, transport equipment such as Elevator and Escalator, Incineration and Fuel devices, Vehicles, Manned transportation, Equipment for Recreation and Amusement, and Safety devices, handling of Nuclear or Hazardous Materials or Chemicals, Mining and Drilling, and/or other applications where there is a significant risk of injury to the public or property.

Notwithstanding the above, restrictions Mitsubishi may in its sole discretion, authorize use of the PRODUCT in one or more of the Prohibited Applications, provided that the usage of the PRODUCT is limited only for the specific applications agreed to by Mitsubishi and provided further that no special quality assurance or fail-safe, redundant or other safety features which exceed the general specifications of the PRODUCTs are required. For details, please contact the Mitsubishi representative in your region.

INTRODUCTION

Thank you for purchasing the Mitsubishi MELSEC-L series programmable controllers. This manual describes the functions of the CPU module and programming necessary for Ethernet communication.

Before using the product, please read this manual and the relevant manuals carefully and develop familiarity with the functions and performance of the MELSEC-L series programmable controller to handle the product correctly. When applying the program examples introduced in this manual to the actual system, ensure the applicability and confirm that it will not cause system control problems.

Please make sure that the end users read this manual.

■Relevant CPU modules: L02CPU, L26CPU-BT, L02CPU-P, and L26CPU-PBT

Remark This manual does not describe the CPU module functions other than those for Ethernet communication. For other CPU module functions, refer to the following. MELSEC-L CPU Module User's Manual (Function Explanation, Program Fundamentals) MELSEC-L CPU Module User's Manual (Built-In I/O Function) MELSEC-L CPU Module User's Manual (Data Logging Function)

(1) CPU module user's manual

Manual name <manual (model="" code)="" number=""></manual>	Description		
MELSEC-L CPU Module User's Manual (Hardware Design, Maintenance and Inspection) <sh-080890eng, 13jz36=""></sh-080890eng,>	Specifications of the CPU modules, power supply modules, display unit, branch module, extension module, SD memory cards, and batteries, information on how to establish a system, maintenance and inspection, and troubleshooting		
MELSEC-L CPU Module User's Manual (Function Explanation, Program Fundamentals) <sh-080889eng, 13jz35=""></sh-080889eng,>	Functions and devices of the CPU module, and programming		
MELSEC-L CPU Module User's Manual (Built-In I/O Function) <sh-080892eng, 13jz38=""></sh-080892eng,>	The general-purpose I/O function, interrupt input function, pulse catch function, positioning function, and high-speed counter function of the CPU module		
MELSEC-L CPU Module User's Manual (Data Logging Function) <sh-080893eng, 13jz39=""></sh-080893eng,>	The data logging function of the CPU module		

(2) Programming manual

Manual name <manual (model="" code)="" number=""></manual>	Description	
MELSEC-Q/L Programming Manual (Common Instruction) <sh-080809eng, 13jw10=""></sh-080809eng,>	Detailed description and usage of instructions used in programs	

(3) Operating manual

Manual name <manual (model="" number="" o<="" th=""><th>:ode)></th><th colspan="3">Description</th></manual>	:ode)>	Description		
GX Works2 Version1 Operating Manual (Common)	<sh-080779eng, 13ju63=""></sh-080779eng,>	System configuration, parameter settings, and online operations (common to Simple project and Structured project) of GX Works2		
GX Developer Version 8 Operating Manual	<sh-080373e, 13ju41=""></sh-080373e,>	Operating methods of GX Developer, such as programming, printing, monitoring, and debugging		

(4) I/O module and intelligent function module manua

Manual name <manual (model="" code)="" number=""></manual>	Description	
MELSEC-Q/L MELSEC Communication Protocol Reference Manual	Details of MELSEC communication protocol (MC protocol) that is used	
<sh-080008, 13jf89=""></sh-080008,>	for data communication between a target device and a CPU module	

SAFETY PRECAUTIONS	 . 1
CONDITIONS OF USE FOR THE PRODUCT	 . 7
NTRODUCTION	 . 8
RELEVANT MANUALS	 . 9
MANUAL PAGE ORGANIZATION	 12
TERMS	 15

CHAPTER 1 OVERVIEW

16

18

20

28

31

39

CHAPTER 3 CONNECTION OF PROGRAMMING TOOLS AND GOT

3.1	Setting for the CPU Module	21
3.2	Setting for the Programming Tool	:3
3.3	Searching CPU Modules on the Network	24
3.4	Communication via Routers	25
3.5	Precautions	26

CHAPTER 4 DIRECT CONNECTION TO PROGRAMMING TOOL (SIMPLE CONNECTION)

4.1	Setting Method	.29
4.2	Precautions	. 30

CHAPTER 5 MC PROTOCOL COMMUNICATION

5.1	Settir	ng Method		
5.2	5.2 MC Protocol Commands			
	5.2.1	Command list	34	
	5.2.2	Available devices	35	
5.3	Preca	autions	36	
5.4	Error	Codes for MC Protocol Communication		

CHAPTER 6 SOCKET COMMUNICATION FUNCTION

6.1	Com	munication Using TCP			
6.2	Communication Using UDP				
6.3	Preca	autions for the Socket Communication Function			
6.4	Sock	et Communication Function Instructions			
	6.4.1	Establishing a connection (SP.SOCOPEN)			
	6.4.2	Disconnecting a connection (SP.SOCCLOSE)			
	6.4.3	Reading out received data in the END processing (SP.SOCRCV)			
	6.4.4	Reading out received data during instruction execution (S.SOCRCVS)			
	6.4.5	Sending data (SP.SOCSND)			
	6.4.6	Reading out connection information (SP.SOCCINF)			
	6.4.7	Changing the target of a connection (UDP/IP) (SP.SOCCSET)			
	6.4.8	Changing the receive mode of a connection (SP.SOCRMODE)			
	6.4.9	Socket communication receive data read (S(P).SOCRDATA)			

	7.1 Setting Method	
	7.2 Precautions	
СНАРТ	ER 8 FILE TRANSFER FUNCTION (FTP)	90
	8.1 Setting for FTP Communication	
	8.2 Files Transferable Using FTP	
	8.3 Files That Can Be Deleted Using FTP	
	8.4 FTP Commands	
	8.4.1 List of FTP commands	
	8.4.2 How to specify an FTP command	
	8.4.3 Details of FTP commands	
	8.5 Precautions	
CHAPT	ER 9 REMOTE PASSWORD	109
	9.1 Communication Using Remote Password	
	9.2 Remote Password Setting	
	9.3 Precautions	
	9.4 Detection of Unauthorized Access and Actions	
CHAPT	ER 10 SIMPLE PLC COMMUNICATION FUNCTION	115
	10.1 Setting Method	
	10.2 Program to check communications.	
	10.3 Diagnostics	
	10.4 Errors related to the simple PLC communication function	
	10.5 Precautions	
APPEN	DICES	133
	Appendix 1 Operation Processing Time for Each Instruction	
	Appendix 2 Port Numbers Used by System.	
	Appendix 3 Added and Changed Functions.	
	Appendix 4 Performance List of Simple PLC Communication Function	
INDEX		137
INSTRI		130
		108
REVISI WARR/	ONS	

CHAPTER 7 TIME SETTING FUNCTION (SNTP CLIENT)

In this manual, pages are organized and the symbols are used as shown below.

The following page illustration is for explanation purpose only, and is different from the actual pages.

"" is used for screen names and items. 1. shows operating	7.1.1 Settin (1) Setting par (a) Operating 1. Open 2. Select (crise ameters procedure PLC Parameter [salog box. sect window > [Parameter] <> PLC parameter] he "LO Assignment" tab.	TER 7 VARIOUS SETTINGS		The chapter of the current page is shown.
© shows mouse operations.*1 [] is used for items in the menu bar and			7	h	
the project window.	tem Type Model Tane Pents Sark XY sociative considering Setting "Start X Ext when "11	Description Description Select the spin of the convected module. Select the spin of the convected module. Select the spin of the convected module. Set the number of points analyzed to each site. Configure the select set. Configure the select set. Select the following. - from Time Organ Mole - from T	Part R5 decision 7.12 Page 74, 5 decision 7.12 Page 74, 5 decision 7.13 Page 74, 5 decision 7.14 Page 74, 5 decision 7.19 Page 74, 5 decision 7.10 Page 75, 5 decision 7.17 Page 75, 5 decision 7.17 Page 75, 5 decision 7.17 Introductions Introductions		The section of the current page is shown.
operating examples.	range of an inport Encodedails, refe Desired Setthe type of Setthe type of Comparison Remark	It module is changed to X1000 to X100F. It of the following. L CPU Module User's Manual (Function Explanation, Program Fundamy the connected module in "Type". Setting a different type results in "SPLINIT LAY ent function module, the I/O points must also be the same in addition to the I/O a 0, Section 4.2.2) igent module is connected, I/O assignment can be omitted by selecting connected of an the Project vancoux.	entals) ERR *. segment setting. d modules from "Intelligent		Point Pshows notes that requires attention.
			73		

*1 The mouse operation example is provided below. (For GX Works2)

	🗰 MELSOFT Series GX Works2 (Unset Project) - [[PRG] MAIN]
	<u>: P</u> roject <u>E</u> dit <u>F</u> ind/Replace <u>C</u> ompile <u>V</u> iew <u>O</u> nline De <u>b</u> ug <u>D</u> iagnos
Menu bar	i 🗅 🖻 💾 📕 i 🔏 🗈 🖆 🗠 🗠 🖼 🖏 🖼 💷 🚚 🖉 🥷 👯 🙁 🗋
Ex. 🏾 🏷 [Online] 🖒 [Write to PLC]	□ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □
Select [Online] on the menu bar,	
and then select [Write to PLC].	Navigation 🕂 🗙 🙀 [PRG] MAIN 🔀
A window selected in the view selection area is displayed. Ex. Constraints of the view selection area is displayed. For project window [PLC Parameter] Select [Project] from the view selection area to open the Project window. In the Project window, expand [Parameter] and select [PLC Parameter].	Project Pro
View selection area	Viser Library

Pages describing instructions are organized as shown below.

The following page illustrations are for explanation purpose only, and are different from the actual pages.



• Instructions can be executed under the following conditions.

Execution condition	Any time	During on	On the falling edge	During off	On the falling edge	
Symbol	No symbol					

• The following devices can be used.

Setting	Interna (systei	II device m, user)	File	Link direct device		Intelligent function	Index register	Con	Othor ^{*3}
data	Bit	Word	register	Bit	Word	module U⊡\G⊡	Zn	*3	Other
Applicable device ^{*1}	X,Y,M,L,S M,F,B,SB,F X,FY ^{*2}	T,ST,C,D,W, SD,SW,FD, @□	R,ZR	-		UD\GD	Z	K, H, E, \$	P,I,J,U,D X,DY,N,B L,TR,BL\ S,V

*1 For details on each device, refer to the following

MELSEC-L CPU Module User's Manual (Function Explanation, Program Fundamentals)

*2 FX and FY can be used for bit data only, and FD for word data only.

*3 In the "Constant" and "Others" columns, a device(s) that can be set for each instruction is shown.

• The following data types can be used.

Data type	Description
Bit	Bit data or the start number of bit data
BIN 16-bit	16-bit binary data or the start number of word device
BIN 32-bit	32-bit binary data or the start number of double-word device
BCD 4-digit	Four-digit binary-coded decimal data
BCD 8-digit	Eight-digit binary-coded decimal data
Real number	Floating-point data
Character string	Character string data
Device name	Device name data

Unless otherwise specified, this manual uses the following terms.

Term	Description			
CPU module	The abbreviation for the MELSEC-L series CPU module			
Power supply module	The abbreviation for the MELSEC-L series power supply module			
Branch module	The abbreviation for the MELSEC-L series branch module			
Extension module	The abbreviation for the MELSEC-L series extension module			
END cover	A cover to be attached to the right side of the rightmost MELSEC-L series module			
Display unit	A liquid crystal display to be attached to the CPU module			
SD memory card	Secure Digital Memory Card, which is a flash memory device. The L1MEM-2GBSD and L1MEM-4GBSD are available.			
Extension cable	The abbreviation for the MELSEC-L series extension cable			
LCPU	Another term for the MELSEC-L series CPU module			
Programming tool	A generic term for GX Works2 and GX Developer			
GX Works2	The product name of the apfluere peakage for the MELSEC programmable controllers			
GX Developer				
CC-Link	The abbreviation for Control & Communication Link. A field network system where data processing for control and information can be simultaneously performed at high speed.			
MC protocol	The abbreviation for the MELSEC communication protocol, a protocol to access a CPU module from a target device in the Ethernet or serial communication			
FTP	The abbreviation for File Transfer Protocol, which is a standard network protocol used to exchange files			
SNTP	The abbreviation for Simple Network Time Protocol, which is a protocol for synchronizing the clocks of computer systems over a TCP/IP based network			

CHAPTER 1 OVERVIEW

The following describes the built-in Ethernet function of the CPU module.

(1) Connection of programming tools and GOTs (FP Page 20, CHAPTER 3)

- By using a hub, the CPU module can be connected to multiple programming tools and GOTs. Up to 16 external devices can be connected to a single CPU module at the same time.
- When CPU modules and a programming tool are connected to the same hub, these CPU modules can be searched from the programming tool. Displayed search results include IP addresses so that any of them can be specified.
- MELSOFT connection allows access through routers in an environment such as a corporate LAN.

(2) Direct connection to a programming tool (simple connection)

(Cranter Page 28, CHAPTER 4)

The CPU module can be directly connected to a programming tool with a single Ethernet cable only, without using a hub (simple connection).

For direct connection, the IP address and host name need not be specified in the transfer setup.

(3) MC protocol communication (Page 31, CHAPTER 5)

From an external device such as a personal computer or HMI, device data of the CPU module can be read or written, and this allows CPU module operation monitoring, data analysis, and production control.

(4) Socket communication function (Page 39, CHAPTER 6)

By using instructions dedicated to socket communication, any data can be transferred from and to the external devices connected through Ethernet using TCP or UDP.

(5) Time setting function (SNTP client) (Page 87, CHAPTER 7)

- Automatic time setting of the CPU module can reduce the maintenance cost for time setting.
- Because the same time information is shared among the CPU modules on Ethernet, in which order the problems have occurred will be clear, resulting in fast and easy problem resolution.
- Since the automatic time setting is enabled upon power-on of the CPU module, operations can be started based on accurate clock data.

(6) File transfer function (FTP) (Page 90, CHAPTER 8)

Each of the files stored in the CPU module can be read or written from the interfacing device with the FTP client function, and a large amount of data can be easily transferred.

(7) Remote password (Page 109, CHAPTER 9)

Remote password setting can prevent unauthorized access from the outside and enhance the security of the system.

(8) Simple PLC communication function (Page 115, CHAPTER 10)

Device data can be communicated between the CPU modules connected with Ethernet cable without programming.

CHAPTER 2 COMMUNICATION SPECIFICATIONS

	ltem		Specification			
	Data transfer spe	eed	100 or 10 Mbps			
	Communication	mode	Full-duplex or half-duplex			
	Transmission me	ethod	Base band			
Transmission specifications	Maximum distance between hub and node		100 m			
	Maximum	10BASE-T	Cascade connection: Up to four*2			
	number of nodes/ connection	100BASE-TX	Cascade connection: Up to two ^{*2}			
Number of	TCP/IP	•	Total of 16 for socket communications, MELSOFT connections, and MC			
connections	UDP/IP		protocol. One for FTP			
Connection apple *1	10BASE-T		Ethernet cable of category 3 or higher (STP/UTP cable) *3			
	100BASE-TX		Ethernet cable of category 5 or higher (STP cable)			

The following are the communication specifications of the built-in Ethernet port of the CPU module.

*1 Straight cables can be used.

When the CPU module is directly connected to GOT with Ethernet cable, a cross cable of Category 5e or lower can also be used.

*2 This number applies when a repeater hub is used.

When using a switching hub, check the number of cascaded stages with the manufacturer of the hub to be used.

*3 Use of STP cables is recommended in an environment with noise.

Hubs with 10BASE-T or 100BASE-TX ports^{*4} can be used.

Up to 16 external devices can access one CPU module at the same time.

*4 The ports must comply with the IEEE802.3 10BASE-T or IEEE802.3 100BASE-TX standards.

Point *P*

- When connected to a hub, the CPU module determines the cable used (10BASE-T or 100BASE-TX) and the communication mode (full-duplex or half-duplex) according to the hub.
 Set the hub into the half-duplex mode if the hub that does not have the auto-negotiation function.
- The operation of commercial devices used for the following applications is not guaranteed. Check the operation before using the module.
 - Internet (general public line)
 - (Internet-access service offerred by an Internet service provider or a telecommunications carrier)
 - · Firewall device(s)
 - Broadband router(s)
 - Wireless LAN
- If Ethernet communication is performed with "Specify service process execution counts" selected for "Service processing setting" in the PLC system tab of PLC parameter, a scan time increases by time for service processing. (approximately 500ms)

To reduce it to 500ms or less, select an item other than "Specify service process execution counts". (Example: Select "Specify service process time" and then enter a time value.)

• If broadcast storm occurs in the network, scan time may be increased.



CHAPTER 3 CONNECTION OF PROGRAMMING TOOLS AND GOT

This chapter explains how to connect the CPU module to a programming tool or GOT.



To start Ethernet communication, perform the following steps.



For the GOT setting, refer to the following manual.

GOT1000 Series Connection Manual (Mitsubishi Products)

3.1 Setting for the CPU Module

(1) PLC parameter setting

Select the "Built-in Ethernet Port Setting" tab and set the parameters.

C Project window c> [Parameter] c> [PLC Parameter] c> [Built-in Ethernet Port Setting]

IP Addres	Setting	nat DEC.	Open Setting		
IP Add	/88 192	168 3 39	FTP Setting		
Subnet	fask Pattern		Time Setting		
Default	Router IP Address		Set if it is needed(Default / Ch	anged)	
Communi	ation Data Code				
Bine Bine	y Code				
C ASC	Code				
□ Enat	e online change (FTP, MC Pr	otocol)			
🗆 Disal	le direct connection to MELSI	DFT			
🗌 Don	It respond to search for CPU (Built-in Ethernet port) on netv	vork		
("1)The items	indicated in green are set in N	ELSOFT Navigator.			
("1)The items	ndicated in green are set in M	ELSUFT Navigator.			

- **1.** Set the IP address of the CPU module.
- **2.** Set MELSOFT connection.
 - C Project window ⇔ [Parameter] ⇔ [PLC Parameter] ⇔ [Built-in Ethernet Port Setting]

	Protoc	ol	Open System		TCP Connection	Host Station Port No	Destination IP Address	Destination Port No.
1	UDP	-	MELSOFT Connection	4	-			
2	TCP	•	MC Protocol	7	5 🗕			
3	TCP	•	MELSOFT Connection					
4	TCP	-	MELSUFT Connection	•	-			
5	TCP	-	MELSOFT Connection	-	-			
6	TCP	-	MELSOFT Connection	-	-			
7	TCP	-	MELSOFT Connection	-	-			
8	TCP	•	MELSOFT Connection	-	-			
9	TCP	-	MELSOFT Connection	-	-			
10	TCP	•	MELSOFT Connection	-	-			
11	TCP	•	MELSOFT Connection	-	-			
12	TCP	-	MELSOFT Connection	-	-			
13	TCP	-	MELSOFT Connection	-	-			
14	TCP	-	MELSOFT Connection	-	-			
15	TCP	-	MELSOFT Connection	-	-			
16	TCP	-	MELSOFT Connection	-	-			
Host station port No, destination port No: Please input in HEX.								

Item	Setting
Protocol	Select "TCP" or "UDP" depending on the connected device.
Open System	Select "MELSOFT Connection".

(2) Writing to the CPU module

From the "Write to PLC" screen, write the parameter settings to the CPU module.

[™] [Online] ⇔ [Write to PLC]

After writing the parameters to the CPU module, power off and on or reset the CPU module to enable the parameters.

3.2 Setting for the Programming Tool

Configure the settings in the "Transfer Setup" dialog box.

Connection Destination window ⊲> [Connection1]



1. Select "Ethernet Board" for "PC side I/F".

In the "PC side IF Ethernet Board Setting" dialog box, select a "TCP" or "UDP" protocol. (Page 21, Section 3.1 Select the same protocol as the one set in the Open Setting dialog box.)

								-
PC side I/F	Ethernet	Boa	ird Se	ettin	3			\mathbf{X}
Network No.	1						ОК	
Station No.	1						Cancel	
This is the layout setting layout for the Ethernet board. Please execute the following setting. Network No.: Network No. of Ethernet module set in parameter. Station No.: Station No. that does not overlao on the same loop.								
Network No. with an Ether	and station met port of	No. CPU	are no (Built-	t used in Eth	l when ernet p	ort)	municating	
Protocol	TCP TCP							

2. Select "PLC Module" for "PLC side I/F".

Enter the IP address or host name of the CPU module in the "PLC side I/F Detailed Setting of PLC Module" dialog box, as shown below.

(For the host name, enter the name set in the Microsoft[®] Windows[®] hosts file.)

PLC side I/F Detailed Setting of PLC Module		
PLC Mode LCPU		ОК
C Ethernet Port Direct Connection	Connection via <u>H</u> UB	Cancel
* Please select "Connection via HUB" when you use hub(HUB) even if the equipments to be communicated is one. The load hangs to the line when "Ethernet Port Direct Connection" is selected with other equipment connected with hub(HUB) and it communicates and there is thing that influences the communication of other equipment.		

3. Set "Other Station Setting".

Select an item appropriate to the operating environment.

3.3 Searching CPU Modules on the Network

In a configuration using a hub, clicking <u>Find CPU (Bulk-in Ethernet port) on Network</u> in the "PLC side I/F Detailed Setting of PLC Module" dialog box will start searching for CPU modules connected to the hub where the programming tool is also connected, and display a list of them.



- CPU modules connected to cascaded hubs are also searched and a list of them is displayed.
- CPU modules connected via a router cannot be searched.
- Some CPU modules connected via wireless LAN may not be found since Ethernet communication may not be stable due to packet loss.
- If multiple CPU modules with the same IP address are found in the list, check the IP address parameters for the CPU modules. Starting communication with the IP address duplicated will cause a communication error.
- Appropriate CPU modules may not be found if a heavy load for service processing is applied.
 Increase the response waiting time value in the "Find CPU (Built-in Ethernet port)" dialog box, or the service processing time value in the Service processing setting tab of PLC parameter.
- By selecting the option shown below in the Built-in Ethernet port tab of PLC parameter, the Find CPU function can be disabled and the system does not respond to a search request on the network.

Enable online change (FTP, MC Protocol)	
Disable direct connection to MELSOFT	
\overline{M}_{L} Do not respond to search for CPU (Built in Ethemet port) on network $\lambda_{L}^{\rm C}$	

3.4 Communication via Routers

Router Router Corporate LAN Factory Control room

From the built-in Ethernet port, access is available via routers on a network such as a corporate LAN.*1

- *1 The following functions do not support the communication via routers.• Searching CPU modules on the network
 - · Simultaneous broadcast in socket communication

For access via routers, set the parameters as shown below.

Page 21, Section 3.1 (for other settigs)

♥ Project window ⇒ [Parameter] ⇒ [PLC Parameter] ⇒ [Built-in Ethernet Port Setting]



3.5 Precautions

(1) IP address duplication

Check that the IP address is not duplicated when configuring a network or connecting a new device to a network. If the IP address is duplicated, a device may communicate with the wrong device.

Check for the IP address duplication in the following ways.

- Check for the IP address duplication with the find CPU function.
- Disconnect the device from the line and send ping to the IP address of the disconnected device. Having a response means the IP address duplication.

(2) KeepAlive check

When the protocol is set to TCP, KeepAlive check is performed. (Checking for a response to a KeepAlive ACK message)

An alive check message is sent five seconds after reception of the last message from the connected device to check if the device returns a response or not. If no response is received, the alive check message will be resent at intervals of five seconds. When no response is received for 45 seconds, the connected device is regarded as non-existent and the connection is disconnected. If the connected device does not support the TCP KeepAlive function, the connection may be disconnected.

(3) Connections exceeding the setting

Do not exceed the number of connections set for the open settings parameters. Establishing too many TCP connections from a personal computer may cause the following states, depending on the application.

- Time before timeout error detection is increased.
- · An unexpected timeout error occurs in any of the communicating devices.

(4) Retransmission on TCP connection

If no ACK response is returned from the other end of a TCP connection, the ACK will be resent six times, starting in 0.3 seconds after the first transmission, and then 0.6, 1.2, 2.4, 4.8, and 9.6 seconds. When no TCP ACK response is returned within 19.2 seconds after the last retransmission, the device is regarded as faulty and the connection is disconnected. (As a result, the connection is disconnected in total of 38.1 seconds.)

(5) MELSOFT connection over UDP

For UDP communications with multiple MELSOFT devices, set the same number of connections as that of the connected MELSOFT devices on the screen displayed from PLC parameter.



Point P

When all MELSOFT devices start to communicate simultaneously, the communication may be difficult to succeed due to the concentration of communication. In this case, start each MELSOFT device at different timings not to concentrate the starts. For example, when using GOTs, set the rising time and the communication timeout time in each GOT.

(6) Sampling trace

When the sampling trace function has been executed by the programming tool from the built-in Ethernet port, stop the function before powering off or resetting the CPU module.

(7) Remote STOP or remote PAUSE

When remote STOP or remote PAUSE has been implemented by the programming tool from the built-in Ethernet port, perform the following before powering off or resetting the CPU module.

- Remote RUN
- Remote RESET

CHAPTER 4 DIRECT CONNECTION TO PROGRAMMING TOOL (SIMPLE CONNECTION)

The CPU module can be directly connected to the programming tool with an Ethernet cable, without using a hub (simple connection).

For direct connection, the IP address and host name need not be specified in the connection target setting. (Simultaneous broadcast is used.)



Point P

An Ethernet cable used for direct connection will be longer compared with the case of using a USB cable. This can cause an unauthorized connection from a remote location.

Unauthorized connections can be prevented by selecting the following option in the Built-in Ethernet port tab of the PLC parameter dialog box.



4.1 Setting Method

Set the items on the Transfer Setup screen.

Connection Destination window ⊲> [Connection1]



1. Select "Ethernet Board" for "PC side I/F".

2. Select "PLC Module" for "PLC side I/F".

In the "PLC side IF Detailed Setting of PLC Module" dialog box, select the Ethernet Port Direct Connection checkbox as shown below.



3. Complete setting of "Other Station Setting".

Select an item appropriate to the operating environment.

4.2 Precautions

(1) Connection to LAN line

When connecting the CPU module to a LAN line, do not set direct connection. Doing so will apply a load to the LAN line and adversely affect communications with other external devices.

(2) Indirect connection

Ex.

• Do not set up direct connection when a CPU module is connected to an external device in an one-to-one basis using a hub as shown below



 When two or more Ethernet ports are enabled in the network connections setting on the personal computer, communication by direct connection is not possible. In the setting, leave only one Ethernet port enabled for direct connection and disable other Ethernet ports.

(3) Conditions that disallow direct connection

When any of the following conditions is met, communication by direct connection may not be available. In that case, check the setting of the CPU module and/or personal computer.

• In the CPU module IP address bits, the bits corresponding to "0" in the personal computer subnet mask are all ON or all OFF.

CPU module IP address	:	64.	64.	255.	255
Personal computer IP address	:	64.	64.	1.	1
Personal computer subnet mask	:	255.	255.	0.	0

• In the CPU module IP address bits, the bits corresponding to the host address of the class in the personal computer IP address are all ON or all OFF.

Ex.	CPU module IP address	:	64.	64.	255.	255			
	Personal computer IP address	:	192.	168.	0.	1			
	Personal computer subnet mask	:	255.	0.	0.	0			
Remark • The IP Class	address pattern for each class is as follo A: 0.x.x.x to 127.x.x.x Class B:128.x.x.	ws. x to 19	91.x.x.x Cl	ass C:192.	x.x.x to 223.>	•••••			
 The host address for each class is the part shown with "0". Class A: 255. O Class B: 255.255. O Class C: 255.255.255. 									

CHAPTER 5 MC PROTOCOL COMMUNICATION

The built-in Ethernet port allows MC protocol communication. From an peripheral device such as a personal computer or HMI, device data of the CPU module can be read or written using MC protocol. Monitoring of CPU module operation, data analysis, and production control are available on a personal computer or HMI by these device data reading and writing.

Besides, the remote password function can prevent unauthorized access from outside of the system. (Free Page 109, CHAPTER 9)



Point /

From the peripheral device such as a personal computer or HMI, only the CPU module connected can communicate using MC protocol.

An access to a CPU on another station via CC-Link network is not allowed.

To start MC protocol communication, perform the following steps.



For the MC protocol communication, refer to the following manual.

MELSEC-Q/L MELSEC Communication Protocol Reference Manual



Setting for communication using the MC protocol is described below.

♥ Project window ⇔ [Parameter] ⇔ [PLC Parameter] ⇔ [Built-in Ethernet Port Setting]

	Input Format DEC.	Open Set FTP Sett	ng	
Subnet Mask P	192 188	Time Sett	ng	
Default Router	°Address	Set if it is need	led(Default / Changed)	
Communication D © Binary Code © ASCII Code	ta Code			
Enable online	change (FTP, MC Protocol)			
🗖 Do not respo	id to search for CPU (Built-in Ethern	et port) on network		
("1)The items indicate	d in green are set in MELSOFT Nav	rigator.		

- **1.** Select Binary or ASCII code as the communication data code used for MC protocol.
- 2. Select the "Enable online change (FTP, MC Protocol)" checkbox to enable data to be written to the CPU module even in the RUN state.

3. Set connections used for MC protocol communication.

C Project window ⇔ [Parameter] ⇔ [PLC Parameter] ⇔ [Built-in Ethernet Port Setting]

	Protoc	ol	Open System		TCP Connection		Host Station Port No.	Destination IP Address	Destination Port No.
1	UDP	-	MELSOFT Connection	-		•			
2	TCP	-	MC Protocol	•		•	0401		
3	UDP	-	MC Protocol	•		•	0402		
4		•		Ŧ		•			
5		-		-		•			
6		-		Ŧ		•			
- 7		•		•		•			
8		•		•		•			
9		•		Ŧ		•			
10		•		Ŧ		•			
11		•		•		•			
12		•		•		•			
13		•		•		•			
14		•		•		•			
15		•		•		•			
16		•		•		•			
Hos	t station p	ort N	lo, destination port No: Ple	ease End	input in HEX.	anc	el		

ltem	Description
Protocol	Select TCP or UDP depending on the target device.
Open System	Select "MC Protocol".
Host Station Port	Set the port number of the bost station (Setting range: 0401 H to 1387 H 1302 H to EEEEH) ^{*1}
No.	Set the port number of the nost station. (Setting range, 040 fritto 1367fr, 1392fr to FFF Eff)
No.	Set the port number of the host station. (Setting range: 0401H to 1387H, 1392H to FFFEH) ^{*1}

Since used by the system, 1388H to 1391H cannot be set. (Page 134, Appendix 2)

Point P

When the "Enable online change (FTP, MC protocol)" setting is disabled, if the CPU module in the RUN state receives a data write request from the target device, data will not be written and an NAK message will be returned.

5.2.1 Command list

The following commands are executable for MC protocol communication of the CPU module.

O: Available, ×: N/A

Function		_			CPU module state				
		Command (Subcomm	Description	Number of		RUN			
		and)*1		processed points	STOP	Write enabled	Write disabled		
		In units of bits	0401 (0001)	Reads bit devices in units of one point.	ASCII: 3584 points BIN: 7168 points				
Device memory	Batch read	In units of words	0401	Reads bit devices in units of 16 points.	960 words (15360 points)	0	0	0	
			(0000)	Reads word devices in units of one point.	960 points				
		In units of bits	1401 (0001)	Writes bit devices in units of one point.	ASCII: 3584 points BIN: 7168 points				
	Batch write	In units	1401	Writes bit devices in units of 16 points.	960 words (15360 points)	0	0	×	
		or words	(0000)	Writes word devices in units of one point.	960 points				
	Random read *2	In units	0403	Reads bit devices in units of 16 or 32 points by randomly specifying the target.	102 points	0	0	0	
		read *2 of	of words	(0000) Reads word devices in units of one or two points by randomly specifying the target.	192 points				
	Test (Random write)	In units of bits	1402 (0001)	Sets or resets bit devices in units of one point by randomly specifying the target.	188 points	0	0	×	
		In units	1402	Sets or resets bit devices in units of 16 or 32 points by randomly specifying the target.	*5				
		*2	(0000)	Writes word devices in units of one or two points by randomly specifying the target.	5				
	Monitor registration *2*3*4	Monitor registration *2*3*4	In units	0801	Registers bit devices to be monitored in units of 16 or 32 points.	192 points	0		0
			of words (0000) Registers word devices to be monitored in one or two points.	Registers word devices to be monitored in units of one or two points.	192 points	0	0	0	
	Monitor In units 0802 Monitors the devices registered. of words (0000) Monitors the devices registered.		Number of registered points	0	0	0			
Remote password	Unlock		1630 (0000)	Specifies a remote password to unlock the locked state.	-	0	0	0	
	Lock		1631 (0000)	Specifies a remote password to lock the unlocked state.	-	0	0	0	

*1 These commands are for QnA-compatible 3E frames.

*2 Devices, TS, TC, SS, SC, CS, and CC cannot be specified in units of words.

Specifying any of these for monitor registration will cause an error (4032H) at the time of monitoring execution.

*3 For monitor registration, monitoring conditions cannot be set.

*4 Do not execute monitor registration from multiple devices. If executed, the last monitor registration takes effect.

*5 Set the number of processed points so that the following condition is satisfied. (Number of word access points) × 12 + (Number of double-word access points) × 14 ≤ 1920 For bit devices, one point is regarded as 16 bits in word access and 32 bits in double-word access. For word devices, one point is regarded as one word in word access, and two words in double-word access.
5.2.2 Available devices

Classification	Classification Device		Device	code ^{*1}	Device number range		
Classification			ASCII	Binary	Device number range		
	Input		X*	9C _H	The number range of a device in a CPU module,	Hexadecimal	
	Output		Y*	9D _H	which is accessed to, can be specified.	Hexadecimal	
	Internal relay		M*	90 _H		Decimal	
	Latch relay	Latch relay		92 _H		Decimal	
	Annunciator		F*	93 _H		Decimal	
	Edge relay		V*	94 _H		Decimal	
	Link relay		В*	A0 _H		Hexadecimal	
	Data register		D*	A8 _H		Decimal	
	Link register		W*	B4 _H		Hexadecimal	
		Contact	TS	C1 _H	The number range of a device in a CPU module, which is accessed to, can be specified. Note that the access to a local device is not possible.		
	Timer	Coil	тс	C0 _H		Decimal	
Internal user device		Current value	TN	C2 _H			
	Retentive timer	Contact	SS	C7 _H			
		Coil	SC	C6 _H		Decimal	
		Current value	SN	C8 _H			
	Counter	Contact	CS	C4 _H			
		Coil	СС	C3 _H		Decimal	
		Current value	CN	C5 _H			
	Link special relay		SB	A1 _H		Hexadecimal	
	Link special register		SW	В5 _Н		Hexadecimal	
	Step relay		S*	98 _H		Decimal	
	Direct input ^{*2}		DX	A2 _H	The number range of a device in a CPU module, which is accessed to, can be specified.	Hexadecimal	
	Direct output*	2	DY	A3 _H		Hexadecimal	
Internal overtern device	Special relay		SM	91 _H		Decimal	
internal system device	Special regist	er	SD	A9 _H		Decimal	
Index register	Index register		Z*	CCH		Decimal	
File register	File register		R*	AF _H		Decimal	
rile register	File register		ZR	B0 _H		Hexadecimal	
Extended data register	Extended data	a register	D*	A8 _H		Decimal	
Extended link register	Extended link	register	W*	B4 _H		Hexadecimal	

The following table lists the devices available in the commands used for MC protocol communication.

1 Device code is the code that is specified in the MC protocol message. When data are communicated using ASCII code, use the device code of two characters. For the device code of one character, add "" (ASCII code: 2A_H) or add space (ASCII code: 20_H) after the character.

*2 For the L02CPU and L02CPU-P, devices of DX/DY400 or later number cannot be used. To access the devices of X/Y400 or later number, use X or Y device.

For the L26CPU-BT and L26CPU-PBT, devices of DX/DY1000 or later number cannot be used. To access the devices of X/Y1000 or later number, use X or Y device.

5.3 Precautions

(1) Number of devices

Only the external devices whose open system is set to "MC Protocol" can be connected concurrently using MC protocol.

♥ Project window ⇔ [Parameter] ⇔ [PLC Parameter] ⇔ [Built-in Ethernet Port Setting]

IOpen Setting]

(2) Data communication frame

The QnA-compatible 3E frames only are applicable to CPU modules.

(3) Access range

- Only the connected CPU module can be accessed. Accessing another module will cause an error.
- · Accessing another station on a network such as CC-Link is not allowed via the connected CPU module.

(4) When UDP is selected for Protocol

- If a new request message is sent to a UDP port after the previous request message is sent to the same port and before no response is returned, the new request message will be discarded.
- Setting the same host station port number for multiple UDP connections is regarded as one setting. For communication with multiple devices using the same host station port number, select TCP.

(5) File access during MC communication

The CPU module will perform file access processing prior to Ethernet communication processing. Because of this, processing of the MC protocol function may be delayed if a file is accessed by FTP or a programming tool during use of the MC protocol function.

When accessing a file while response time monitoring is performed on the connected device with the MC protocol function, add the time required for file access to the monitoring time.

(6) Receiving a response message

The following shows an example of receive processing on the other device side.



Point P

For Ethernet communication, TCP socket functions are used inside personal computers.

The functions do not have boundary concept. Therefore, if the sender sent data by calling the "send" function once, the receiver needs to call the "recv" function once or more times to read out the data. ("send" does not correspond to "recv" on the one-to-one basis.)

For this reason, the processing shown above is always required on the program of the receiving device. Note that, if the "recv" function is used in blocking mode, data may be read by calling the function once.

When an error occurs during MC protocol communication, an error code is sent from the CPU module to the external device. The following table lists error codes, error descriptions, and corrective actions.

Error code (Hexadecimal)	Description	Corrective action
4000H to 4FFFH	Errors detected by the CPU module (Errors occurred in other than MC protocol communication)	Refer to the following manual. MELSEC-L CPU Module User's Manual (Hardware Design, Maintenance and Inspection)
0055 _H	Although online change is disabled, the connected device requested the RUN-state CPU module for data writing.	Before enabling online change, write the data.Change the CPU module state to STOP and write the data.
С050н	When "Communication Data Code" is set to ASCII Code, ASCII code data that cannot be converted to binary were received.	 Select Binary Code for "Communication Data Code", and restart the CPU module. Correct the send data of the connected device and resend the data.
C051H to C054H	The number of read or write points is outside the allowable range.	Correct the number of read or write points, and resend the data to the CPU module.
С056н	The read or write request exceeds the maximum address.	Correct the start address or the number of read or write points, and resend the data to the CPU module. (The maximum address must not be exceeded.)
С058н	The request data length after ASCII-to-binary conversion does not match the data size of the character area (a part of text data).	Check and correct the text data or the request data length of the header, and resend the data to the CPU module.
С059н	 The command and/or subcommand are specified incorrectly. The CPU module does not support the command and/or subcommand. 	 Check the request. Use commands and/or subcommands supported by the CPU module.
С05Вн	The CPU module cannot read data from or write data to the specified device.	Check the device to be read or written.
C05CH	The request data is incorrect. (e.g. reading or writing data in units of bits from or to a word device)	Correct the request data and resend it to the CPU module. (e.g. subcommand correction)
C05DH	No monitor registration	Perform monitor registration before monitoring.
C05FH	The request cannot be executed to the CPU module.	 Correct the network number, PC number, request destination module I/O number, or request destination module station number. Correct the read/write request data.
С060н	The request data is incorrect. (ex. incorrect specification of data for bit devices)	Correct the request data and resend it to the CPU module.
С061н	The request data length does not match the number of data in the character area (a part of text data).	Check and correct the text data or the request data length of the header, and resend the data to the CPU module.
C06FH	The CPU module received a request message in ASCII format when "Communication Data Code" is set to Binary Code, or received it in binary format when the setting is set to ASCII Code. (This error code is only registered to the error history, and no abnormal response is returned.)	 Send a request message that matches the "Communication Data Code" setting. Change the "Communication Data Code" setting so that it will match the request message.
С070н	The device memory extension cannot be specified for the target station.	Read data from or write data to the device memory without specifying the extension.
С0В5н	The CPU module cannot handle the data specified.	Correct the request data.Stop the current request.
С200н	The remote password is incorrect.	Correct the remote password, and unlock and lock the remote password function again.
С201н	The port used for communication is locked with the remote password. Or, because of the remote password lock status with "Communication Data Code" set to ASCII Code, the subcommand and later part cannot be converted to a binary code.	Unlock the remote password before communication.
C204H	The connected device is different from the one that requested for unlock processing of the remote password.	From the device that requested the unlock processing, request for lock processing of the remote password.

CHAPTER 6 SOCKET COMMUNICATION FUNCTION

The socket communication function allows data communications with the devices on Ethernet by TCP or UDP using various dedicated instructions.



*1 The area is used for storing data received from the connected open devices.

Remark

• For dedicated instructions used for the socket communication function, refer to: F Page 58, Section 6.4

• Access through routers is also available (except for simultaneous broadcast). When configuring the settings for it, set the subnet mask pattern and default router IP address. (

(1) Port numbers

In socket communication, port numbers are used to identify respective communications and thereby multiple communications are available both on TCP and UDP.

For sending

Specify the port number of the CPU module from which data are sent, and the port number of the destination device.

For receiving

Specify the port number of the CPU module, and read out the data sent to the port.



6.1 Communication Using TCP

TCP (Transmission Control Protocol) establishes a connection to a device with a port number, and preforms reliable data communications.

To perform socket communication using TCP, confirm the following in advance.

- · IP address and port number of the target device
- · IP address and port number of the CPU module
- Which side will open a connection, the target device or CPU module? (Active open or Passive open)

(1) TCP connection

There are two types of open operation for TCP connection: Active open and Passive open.

Firstly, the device waiting for a TCP connection performs a Passive open at the specified port.

The other device performs an Active open by specifying the port number of the device which is waiting in Passive open state.

Through the above process, a TCP connection is established and communication is available.

(a) Active open

Active open is a TCP connection method, which actively opens a connection to the device that is passively waiting for a TCP connection.

(b) Passive open

The following two types of Passive open methods are available for TCP connection.

• Unpassive :

Allows a connection regardless of the IP address and port number of the connected device. (The IP address and port number of the device connected can be acquired using the SP.SOCCINF instruction.)

• Fullpassive :

Allows a connection to the device only when the specified IP address and port number are met. A connection made by another device that does not have the specified IP address and port number is automatically disconnected before communication.



The expressions of Active and Passive opens may vary according to the device.
Active open: TCP connection initiating device, client, connecting side, etc.
Passive open: TCP connection waiting device, server, listening side, etc.

(2) Program example for Active open

The following shows a communication flow of an Active open.



(a) Parameter setting

The following parameters are set for the sample program.

- C Project window ⇔ [Parameter] ⇔ [PLC Parameter] ⇔ [Built-in Ethernet Port Setting]
 - ⊲>[Open Setting]

	Protocol	Open System		TCP Connection	Host Station Port No	Destination IP Address	Destination Port No
1	TCP ·	 Socket Communication 	-	Active 👻	1000	192,168, 3, 40	1000
2		-	-	-			
3		-	-	-			
4		-	-	-			
5		-	-	-			
6		-	•	-			
7		-	-	-			
8		-	•	-			
9		-	•				
10		-	-				
11		•	•	-			
12		•	•	-			
13			•	•			
14				-			
10		-	- <u>-</u>	*			
16 Host station port No, destination port No: Please input in HEX. End Cancel							

Item	Setting
Protocol	TCP
Open System	Socket Communication
TCP Connection	Active
Host Station Port No.	1000н (Setting range: 0001н to 1387н, 1392н to FFFEн) ^{*1}
Destination IP Address	192.168.3.40 (Setting range: 0.0.0.1 to 223.255.255.254)
Destination Port No.	1000н (Setting range: 0001н to FFFEн)

*1 Since used by the system, 1388H to 1391H cannot be set. (FF Page 134, Appendix 2)

(b) Devices used in the program

The following table lists the device numbers and applications used in the sample program.

Device number	Application
M1000	Open direction
D100 to D109	SP.SOCOPEN instruction control data
M100 and M101	SP.SOCOPEN instruction completion device
M1002	Normal open indication
M1003	Open error indication
M3000	Send direction
D3000 and D3001	SP.SOCSND instruction control data
M300 and M301	SP.SOCSND instruction completion device
D300 to D303	Send data length and send data (6 bytes of 12H, 34H, 56H, 78H, 9AH, and BCH)
M3002	Normal send indication
M3003	Send error indication
M4000	Close direction
M4001	Disconnection by the other device
SD1282	Open completion signal
SD1284	Open request signal
SD1286	Receive state signal
SD1288	Connection state signal
D200 and D201	SP.SOCCLOSE instruction control data
M200 and M201	SP.SOCCLOSE instruction completion device
M4002	Normal close indication
M4003	Close error indication
M4004	Closing flag
D400 to D403	SP.SOCRMODE instruction control data
D5000 and D5001	SP.SOCRCV instruction control data
M500 and M501	SP.SOCRCV instruction completion device
D500 and higher	Receive data length and receive data
M5002	Normal receive indication
M5003	Receive error indication

(c) Sample program

[<				- *1 l
SM402	—[моv	K1	D402	Setting TCP receive mode to 1
	—[моv	K6	D403	I Setting receive data size to 6
		_K1	D400	Changing TCP receive mode of
< <connection (active)="" no.1="" open="" processing="">></connection>				Connection No.1
	—[моур	H0	D100	Setting Execution/completion type to 0
SP.SOCOPEN "U0"	K1	D100	M100	Connection No.1 open
		-[SET	M1002	Normal completion
		-(SET	M1003	Error completion
< <data sending="">></data>				
	—[моур	K6	D300	Setting send data length
	—[моур	H3412	D301	
	—[моур	H7856	D302	} ≻ Setting send data
	—[моур	H0BC9A	D303	
[sp.socsnd "u0" K1	D3000	D300	M300	Sending data to Connection No.1
M300 M301		[SET	M3002	Normal completion
M301		[SET	M3003	Error completion
< <data receiving="">></data>				
SD1282.0 SD1286.0 M500 SD1280.0 SD1286.0 M500 SD1280.0 SD1286.0 K1	D5000	D500	M500	Receiving data
M500 M501		[SET	M5002	Normal completion
M501		-(SET	M5003	Error completion
< <connection close="" no.1="" processing="">></connection>				
		-[PLS	M4001	Processing for disconnection by the target
M4000 SD1282.0 M4004 	K1	D200	M200	Connection No.1 close
		-[SET	M4004	Setting closing flag
M200 M201		-ESET	M4002	Normal completion
M201		-[SET	M4003	Error completion
		-[rst	M4004	Resetting closing flag
			FIND	1
				7

*1 There are two kinds of TCP receive modes: TCP standard receive mode and TCP fixed-length receive mode. For fixing the data size, run the program enclosed by a dotted line. (It can be omitted when the data size is not fixed.)

For the TCP receive mode, refer to the section for the SP.SOCRMODE instruction. (Frage 82, Section 6.4.8)

(d) Precaution for Active open communication

Configure an interlock circuit using the Open completion signal (SD1282) and Open request signal (SD1284) in the program.

The following chart shows on/off timings of the Open completion signal and Open request signal.



(3) Program example for Passive open

The following shows a communication flow of a Passive open.



(a) Parameter setting

The following parameters are set for the sample program.

- ♥ Project window ⇒ [Parameter] ⇒ [PLC Parameter] ⇒ [Built-in Ethernet Port Setting]
 - ⊲>[Open Setting]

	Protocol	Open System		TCP Connection	Host Station Port No.	Destination	Destination Port No.
1	TCP 👻	Socket Communication	•	Unpassive 👻	1000	II Address	1 01(110)
2	-		•	-			
3	-		•	-			
4			-				
5	-		•	-			
6	-		•	-			
7	-		•	-			
8	-		•	-			
9	-		•	-			
10	-		•				
11	-		•				
12	-		•				
13	-		•				_
14	-		•	-			-
15	-		•	-			
16	-		•	-			

Item	Setting
Protocol	TCP
Open System	Socket Communication
TCP Connection	Unpassive
Host Station Port No.	1000н (Setting range: 0001н to 1387н, 1392н to FFFEн) ^{*2}
Destination IP Address	Blank ^{*1} (Setting range: 0.0.0.1 to 223.255.255.254)
Destination Port No.	Blank ^{*1} (Setting range: 0001н to FFFEн)

*1 When "Fullpassive" is selected for "TCP Connection", a value must be set.

*2 Since used by the system, 1388H to 1391H cannot be set. (FP Page 134, Appendix 2)

(b) Devices used in the program

The following table lists the device numbers and applications used in the sample program.

Device number	Application
M3000	Send direction
D3000 and D3001	SP.SOCSND instruction control data
M300 and M301	SP.SOCSND instruction completion device
D300 to D303	Send data length and send data (6 bytes of 12H, 34H, 56H, 78H, 9AH, and BCH)
M3002	Normal send indication
M3003	Send error indication
D400 to D403	SP.SOCRMODE instruction control data
SD1282	Open completion signal
SD1286	Receive state signal
D5000 and D5001	SP.SOCRCV instruction control data
M500 and M501	SP.SOCRCV instruction completion device
D500 and higher	Receive data length and receive data
M5002	Normal receive indication
M5003	Receive error indication
D6000 and D6001	SP.SOCCINF instruction control data
D6010 to D6014	SP.SOCCINF instruction completion device

(c) Sample program



- *1 There are two kinds of TCP receive modes: TCP standard receive mode and TCP fixed-length receive mode.For fixing the data size, run the program enclosed by a dotted line. (It can be omitted when the data size is not fixed.)
- For the TCP receive mode, refer to the section for the SP.SOCRMODE instruction. (FF Page 82, Section 6.4.8) *2 For acquiring information of the device connected on TCP, run the program enclosed by a dotted line.
- (It can be omitted when the information acquisition is not needed.)

(d) Precaution for Passive open communication

 Configure an interlock circuit using the Open completion signal (SD1282) and Open request signal (SD1284) in the program.

The following chart shows on/off timings of the Open completion signal and Open request signal.



• When a device establishes a connection by Passive open, the IP address and port number of the connected device can be acquired using the SP.SOCCINF instruction.

For the SP.SOCCINF instruction, refer to: Page 77, Section 6.4.6

• On TCP, one connection is established with one target device.

To communicate with multiple devices from one port number, prepare the same number of connections as that of the target devices.

A connection that exceeds the preset number of connections will be disconnected immediately.

Do not accept a connection from a device until the CPU module is placed in the wait-for-open state.
 If a TCP connection request is received before entering the wait-for-open state after completion of CPU startup, the request will be recognized as an error, and a forced close message for the connection will be returned to the interfacing device.

In this case, wait until the CPU state is changed to the wait-for-open state and then retry the connection from the device.

· Do not execute the SP.SOCCLOSE instruction in a program.

Doing so will disable data transfer since the Open completion signal and Open request signal of the corresponding connection turn off for close processing.

To reopen a closed connection, execute the SP.SOCOPEN instruction.

For the SP.SOCOPEN instruction, refer to: Page 59, Section 6.4.1

6.2 Communication Using UDP

UDP (User Datagram Protocol) is a simple protocol that does not perform data sequencing and retransmission. To perform socket communication using UDP, confirm the following in advance.

- · IP address and port number of the target device
- · IP address and port number of the CPU module

(1) Program example

This section provides a program example for communication using UDP.

(a) Parameter setting

The following parameters are set for the sample program.

- [™] Project window ⇔ [Parameter] ⇔ [PLC Parameter] ⇔ [Built-in Ethernet Port Setting]
 - IOpen Setting]

	Protocol	Open System		TCP Connection	Host Station	Destination	Destinatio Port No
1	UDP 👻	Socket Communication	•	-	1000	192.168. 3.40	1000
2	-	Î	•	-			
3	•		•	-			
4	-		•	-			
5	-		•	-			
6	•		•	•			
7	-		•	-			
8	-		•	•			
9	•		•	•			
10	-		•	-			
11	-		•	-			
12	-		•				
13	-		•	-			
14	•		•	-			
15	-		•	-			
16	-		•	-			
Host station port No, destination port No: Please input in HEX.							

Item	Setting
Protocol	UDP
Open System	Socket Communication
TCP Connection	Blank
Host Station Port No.	1000н (Setting range: 0001н to 1387Н and 1392н to FFFEн) ^{*1}
Destination IP Address	192.168.3.40 (Setting range: 0.0.0.1 to 223.255.255.255.255.255.255.255)
Destination Port No.	1000н (Setting range: 0001н to FFFEн/FFFFн)

*1 Since used by the system, 1388H to 1391H cannot be set. (

(b) Devices used in the program

The following table lists the device numbers and applications used in the sample program.

Device number	Application
M3000	Send direction
D3000 and D3001	SP.SOCSND instruction control data
M300 and M301	SP.SOCSND instruction completion device
D300 and D303	Send data length and send data (6 bytes of 12н, 34н, 56н, 78н, 9Ан, and ВСн)
M3002	Normal send indication
M3003	Send error indication
D5000 to D5001	SP.SOCRCV instruction control data
M500 to M501	SP.SOCRCV instruction completion device
SD1282	Open completion signal
SD1286	Receive state signal
SD1288	Connection state signal
M3001	Target change direction
D500 and higher	Receive data length and receive data
M5002	Normal receive indication
M5003	Receive error indication
D400 to D404	SP.SOCCSET instruction control data
D450 to D451	SP.SOCCINF instruction control data
D460 to D464	SP.SOCCINF instruction connection information

(c) Sample program

< <target changing<="" th=""><th></th><th></th><th> </th><th></th><th></th><th></th><th></th><th></th><th>_</th><th>*1</th></target>			 						_	*1
M3001	SD1282.0				[DMOVP	H0A6155	iDE	D402	3	Setting target IP address
						-Емоур	H2001	D404	3	Setting target port No.
 			 	[SP.SO			K1		-]	Changing setting of Connection No.1
< <data sending="">> M3000</data>	SD1282.0	SD1288.A				-[моур	K6	D300	3	Setting send data length
						-Емоур	H3412	D301	Э)
						-Емоур	H7856	D302	3	> Setting send data
						-Емоур	H0BC9A	D303	Э	J
			-[SP.SOCSND	″U0″	K1	D3000	D300	M300	3	Sending data to Connection No.1
M300	M301						-ESET	M3002	3	Normal completion
	M301	•					[SET	M3003	3	Error completion
<>Data receiving>: SD1282.0	> 0 SD1286.0	M500	 		″U0″	K1	D450	D460		*2 Obtaining information of 」 target device
			-[sp.socrcv	″U0″	K1	D5000	D500	M500	3	Receiving data
M500	M501						-[SET	M5002	3	Normal completion
	M501						-ESET	M5003	3	Error completion
								-[end	3	

- *1 For changing the target device, run the program enclosed by a dotted line. (It can be omitted when the communication target is not changed.)
 For details, refer to the section of the SP.SOCCSET instruction. (SP Page 80, Section 6.4.7)
- *2 For acquiring information of the target device connected on UDP, run the program enclosed by a dotted line. (It can be omitted when the information acquisition is not meeded.)

(2) Simultaneous broadcast

For simultaneous broadcast using UDP, set the parameters as follows.

- Destination IP Address: FF.FF.FF.FFн
- Destination Port No.: FFFFн



Destination IP Address	Destination Port No.	Receiving	Sending
Other than FF.FF.FF.FFH	Other than FFFFH	Receives only the data sent from the specified IP address and port No. among the entire data sent to the host station port No.	Sends data from the host station port No. to the specified IP address and port No
Other than FF.FF.FF.FFH	FFFFH	Receives the data sent from all ports of the specified IP address among the entire data sent to the host station port No.	N/A
FF.FF.FF.FFH	Other than FFFFH	Receives the data sent from the specified port No. of all the IP addresses among the entire data sent to the host station port No.	Sends data to the port No. specified in the settings for simultaneous broadcast.
FF.FF.FF.FFH	FFFFH	Receives all data that have sent to the host station port No.	N/A

(3) Precautions

(a) Use of UDP

Data may be lost, or may arrive out of order. Consider the application of TCP if any problem is expected.

(b) Sending and receiving data

Data sending process may be terminated even if the communication line between the CPU module and target device is not connected due to a reason such as cable disconnection. To avoid this, it is recommended to provide communication procedures at the user's discretion.

(c) Changing the target

Use the SP.SOCCSET instruction to change the target device. For the SP.SOCCSET instruction, refer to: Page 80, Section 6.4.7

(d) Open completion signal and Open request signal

Once UDP is selected for a connection, the Open completion signal and Open request signal of the connection are always on.

(e) SP.SOCCLOSE instruction

Do not execute the SP.SOCCLOSE instruction in the program. Doing so will disable data transfer since the Open completion signal and Open request signal of the corresponding connection turn off for close processing. To reopen the closed connection, execute the SP.SOCOPEN instruction. For the SP.SOCOPEN instruction, refer to:

(f) Simultaneous broadcast targets

With simultaneous broadcast, data can be sent to the devices which are connected to the same hub of the CPU module, and to those connected to the cascaded hub(s). Data cannot be received from the devices connected through routers.

(g) Receiving data using simultaneous broadcast

When data are received through a connection of simultaneous broadcast, the IP address and port number of the sender can be acquired by the SP.SOCCINF instruction.

For the SP.SOCCINF instruction, refer to: F Page 77, Section 6.4.6

(h) Connection of simultaneous broadcast

Data cannot be sent when FFFFH is specified for the port number of the transmission target. To send data, specify a value other than FFFFH.

(i) Destination IP address of the message transferred by simultaneous broadcast

Use a CPU module IP address of which all the bits corresponding to the host address are on. When the subnet musk pattern is specified, apply the pattern before using the above mentioned IP address.

Ex.	IP address of the CPU module side	:	64.	168.	3.	39
	Subnet mask pattern	:	None			
	IP address of simultaneous broadcast	:	64.	255.	255.	255
Ex.	IP address of the CPU module side	:	64.	168.	3.	39
	Subnet mask pattern	:	255.	255.	255.	0
	IP address of simultaneous broadcast	:	64.	168.	3.	255

6.3 Precautions for the Socket Communication Function

This section provides other precautions for the socket communication function.

(1) Port number

Host station port number, 0001H to 03FFH, are assigned for reserved port numbers (WELL KNOWN PORT NUMBERS) and F000H to FFFEH are for other communication functions. Therefore, using 0400H to 1387H and 1392H to EFFFH is recommended.

Since used by the system, 1388H to 1391H cannot be set. (FFP Page 134, Appendix 2) Do not specify 0014H and 0015H for the socket communication function when using the FTP function. Do not specify 007BH for the socket communication function when using the time setting function (SNTP).

(2) Reading out received data

Read out received data when the Receive state signal (SD1286) has turned on. Communication via the built-in Ethernet port may be affected if a considerable amount of received data have not been read out for a long time.

(3) Conditions for closing

In TCP communications, even if no close request is sent from the connected device, the Open completion signal will turn off to close the connection in the following cases.

- · Alive check is timed out.
- · Forced close is received from the connected device.

(4) Elements for TCP connection

The following four elements control TCP connections, and only one connection can be established with a unique setting for these elements. To use multiple TCP connections at the same time, at least one of the four elements must be different.

- · IP address of the CPU module
- · Port number of the CPU module
- · IP address of the target device
- · Port number of the target device

(5) Reestablishment of the same connection

Allow eight seconds or more before reestablishing a connection of the same target IP address, the same host station port number, and the same target port number after closing it.

If the reestablishment is time-critical, it is recommended to change the host station port number on the Active open side.

(6) Precautions for file access during communication

The CPU module will perform file access processing prior to Ethernet communication processing. Because of this, processing of the socket communication function may be delayed if a file is accessed by FTP or a programming tool during the processing.

When accessing a file while response time monitoring is performed on the connected device with the socket communication function, add the time required for file access to the monitoring time.

(7) Checking receive data length

Since no delimiter is provided for TCP communication data, on the receiving end, separate data blocks that are sent continuously may be combined, or data sent all at once may be segmented.

The receive data length must be confirmed on the receiving side as necessary.

When data are received on the CPU side and the data length is determined, the fixed-length mode is recommended.

When receiving data on the target device side, confirm the receive data length as shown below.



6.4 Socket Communication Function Instructions

The socket communication function instructions are provided for the CPU module to use the socket communication function.

This section explains the socket communication function instructions.

The following is a list of the instructions.

Instruction	Description	Reference
SP.SOCOPEN	Establishes a connection.	Page 59, Section 6.4.1
SP.SOCCLOSE	Closes a connection.	Page 64, Section 6.4.2
SP.SOCRCV	Reads out received data (in END processing).	Page 67, Section 6.4.3
S.SOCRCVS	Reads out received data (upon instruction execution).	Page 70, Section 6.4.4
SP.SOCSND	Sends data.	Page 73, Section 6.4.5
SP.SOCCINF	Reads out connection information.	Page 77, Section 6.4.6
SP.SOCCSET	Changes the target of the connection for UDP/IP communication.	Page 80, Section 6.4.7
SP.SOCRMODE	Changes receive mode of the connection.	Page 82, Section 6.4.8
S(P).SOCRDATA	Reads out data from the socket communication receive data area.	Page 85, Section 6.4.9

Point P

- For configuration of data communication using the socket communication function, refer to: F Page 41, Section 6.1, Page 50, Section 6.2
- If the instruction has a completion device, do not change any data, such as control data and request data, that are specified for the instruction until the execution of the instruction is completed.
- Do not execute any socket communication function instruction in an interrupt program.
- For error codes, refer to the following.
 - MELSEC-Q/L Programming Manual (Common Instructions)

6.4.1 Establishing a connection (SP.SOCOPEN)

		Command						
SP.SOCOPEN	Ť		SP.SOCOPEN	U0	S1	S2	D	
	_							

Setting	Interna	l device	J III			Zn	Constant	Othors	
data	Bit	Word	κ, Ζκ	Bit	Word		211	К, Н	Others
S1	-	0	0			-		0	-
\$2	-	Δ^{*1}	∆*1		-				-
D	△*1	-	∆*1			-		-	-

*1 File registers set for each local device or program cannot be used.

(1) Setting data

Setting data	Description	Set by ^{*2}	Data type
U0	Dummy	-	Character string
S1	Connection number (Setting range: 1 to 16)	User	BIN 16-bit
\$2	Start number of the device from which control data are stored	User, system	Device name
D	Start number of the device which turns on for one scan upon completion of the instruction	System	Bit
	D+1 also turns on when failed.		

*2 The "Set by" column indicates the following.

User: The data must be set before executing the SP.SOCOPEN instruction. System: The CPU module stores the execution result of the SP.SOCOPEN instruction.

(2) Control data

Device	ltem	Description	Setting range	Set by ^{*3}
€2)+0	Execution/ completion type	Specify which settings are used to open a connection, parameter settings configured by a programming tool or control data settings \$2+2 to \$2+9. 0000H: Connection is opened according to the settings set in "Open settings" of PLC parameter. 8000H: Connection is opened according to the values specified for control data \$2+2 to \$2+9.	0000н 8000н	User
\$2+1	Completion status	Completion status is stored 0000н: Completed Other than 0000н: Failed (Error code)	-	System
€2+2	Application setting area	b15b14b13 to b10 b9 b8 b7 to b0 (2)+2 3 0 [2][1] 0 [1] Communication method (protocol) 0: TCP/IP 1: UDP/IP [2] Socket communication procedure 1: Nonprocedural (fixed) [3] Open system 00: Active open or UDP/IP 10: Unpassive open 11: Fullpassive open	-	User
\$2+3	Host station port number	Specify the port number of the host station.	1н to 1387н 1392н to FFFEн	
©2+4 ©2+5	Target device IP address ^{*4}	Specify the IP address of the target device.	1н to FFFFFFFн (FFFFFFFн: Simultaneous broadcast)	
\$2+6	Target device port number ^{*4}	Specify the port number of the target device.	1н to FFFFн (FFFFн: Simultaneous broadcast)	
\$2+7 to \$2+9	-	Use prohibited	-	System

*3 The "Set by" column indicates the following. User: The data must be set before executing the SP.SOCOPEN instruction. System: The CPU module stores the execution result of the SP.SOCOPEN instruction.

*4 For the Unpassive open, the IP address and port number of the target device are ignored.

*5 Host station port numbers, 0001н to 03FFн, are assigned for reserved port numbers (WELL KNOWN PORT NUMBERS) and F000н to FFFEн are for other communication functions. Therefore, using 0400н to 1387н and 1392н to EFFFн is recommended. (

(3) Function

This instruction opens a connection specified in SJ.

The set values used for the open processing is selected in +0.

The result of the SP.SOCOPEN instruction can be checked with the completion device, D+0 and D+1.

- Completion device D+0

Turns on in the END processing of the scan after completion of the SP.SOCOPEN instruction, and turns off in the next END processing.

Completion device D+1

Turns on or off according to the result of the SP.SOCOPEN instruction.

State	Description
When completed	Remains off.
When failed	Turns on in the END processing of the scan after the SP.SOCOPEN instruction is completed and turns off in the next END processing.



• A connection with no parameters (no protocol is specified) can be opened. In this case, specify 8000H for 1 sig +0 and configure open settings in 2+2 to 2+9.

(4) Error

A detection of an operation error turns on the Error flag (SM0) and a corresponding error code is stored in SD0 when:

- The connection number specified for (s) is other than 1 to 16.
- The device numbers specified for (s2) and (b) exceed the device point range.
- (Error code: 4101)

(Error code: 4101)

An invalid device is specified.

(Error code: 4004)

(5) Program examples

(a) Opening a connection using parameter settings

When M1000 is turned on, connection No.1 is opened using the parameters set in "Open settings" of PLC parameter.

· Devices used

Device number	Application
SD1282	Open completion signal
SD1284	Open request signal
SD1288	Connection state signal
D100	SP.SOCOPEN instruction control data
M100	SP.SOCOPEN instruction completion device

Program

M1000	SD1282.0 SD1284.0 SD1288.4	·			[моур	H0	D100	}	Setting Execution/ completion type to 0H
			-SP.SOCOPEN	″U0″	K1	D100	M100	3	Connection No.1 open
M100	M101					-[set	M150	3	Normal completion
	M101					-[set	M151	3	Error completion
							-[END	3	

(b) Opening a connection using control data settings

When M1000 is turned on, connection No.1 is opened using control data.

· Devices used

Device number	Application
SD1282	Open completion signal
SD1284	Open request signal
SD1288	Connection state signal
D100	SP.SOCOPEN instruction control data
M100	SP.SOCOPEN instruction completion device

Program

	SD1282.0 SD1284.0 SD1288.A			-[моур	H8000	D100	3	Setting Execution/ completion type to 8000н
				-[моур	H200	D102	3	Setting Application area to 200 _H (TCP/IP, Active open)
				-[моур	H1000	D103	3	Setting port No. of host station to 4096
			[dmovp	H0A614F	0E	D104	3	Setting target IP address to 10.97.79.14
		 		-[movp	H1000	D106	3	Setting port No. of target device to 4096
		[SP.SOCOPEN	″U0″	K1	D100	M100	3	Connection No.1 open
M100	M101				[set	M150	3	Normal completion
	M101				-[SET	M151	3	Error completion
						-[end	3	

6.4.2 Disconnecting a connection (SP.SOCCLOSE)

	Command						
SP.SOCCLOSE	┝────┤┝─────	SP.SOCCLOSE	U0	S1	\$2	D -	-

Setting	Internal device		D 7D	J□	1/□		Zn	Constant	Othors
data	Bit	Word	π, 2π	Bit	Word	ULIGE	2	К, Н	others
§1	-	0	0			-		0	-
\$2	-	\triangle^{*1}	Δ^{*1}			-		-	-
D	△*1	-	∆*1			-		-	-

*1 File registers set for each local device or program cannot be used.

(1) Setting data

Setting data	Description	Set by ^{*2}	Data type		
U0	Dummy	-	Character string		
SI	Connection number (Setting range: 1 to 16)	Imber (Setting range: 1 to 16) User			
\$2	Start number of the device from which control data are stored		Device name		
D	Start number of the device which turns on for one scan upon completion of the instruction	System	Bit		
	D+1 also turns on when failed.				

*2 The "Set by" column indicates the following.
 User: The data must be set before executing the SP.SOCCLOSE instruction.
 System: The CPU module stores the execution result of the SP.SOCCLOSE instruction.

(2) Control data

Device	ltem	Description	Setting range	Set by ^{*3}
§2+0	System area	-	-	-
\$2+1	Completion status	Completion status is stored 0000н: Completed Other than 0000н: Failed (Error code)	-	System

*3 The "Set by" column indicates the following. System: The CPU module stores the execution result of the SP.SOCCLOSE instruction.

(3) Function

This instruction closes a connection specified in (Disconnection of a connection)

The result of the SP.SOCCLOSE instruction can be checked with the completion device, D+0 and D+1.

- Completion device D+0
 Turns on in the END processing of a scan after completion of the SP.SOCCLOSE instruction, and turns off in
 the next END processing.
- Completion device D+1

Turns on or off according to the result of the SP.SOCCLOSE instruction.

State	Description
When completed	Remains off.
When failed	Turns on in the END processing of a scan after completion of the SP.SOCCLOSE instruction, and turns off in the next END processing.



(4) Error

A detection of an operation error turns on the Error flag (SM0) and a corresponding error code is stored in SD0 when:

The connection number specified for (s) is other than 1 to 16.
 (Error code: 4101)
 The device numbers specified for (s) and (b) exceed the device point range.
 (Error code: 4101)
 An invalid device is specified.
 (Error code: 4004)

Remark
Do not use Passive open for execution of the SP.SOCCLOSE instruction. Doing so will turn off the Open completion signal and Open request signal of the connection and cause close processing, which disables data transfer.

(5) Program example

When M2000 is turned on or when the connected device disconnects connection No.1, connection No.1 is disconnected by the following program.

Devices used

Device number	Application
SD1282	Open completion signal
SD1284	Open request signal
D200	SP.SOCCLOSE instruction control data
M200	SP.SOCCLOSE instruction completion device

Program

SD1282.0	SD1284.0					[PLS	M161	3	Processing for disconnection of Connection No.1by the target
M2000	SD1282.0 M2	10	SP.SOCCLOSE	″U0″	K1	D200	M200	3	Connection No.1 close
M161						[SET	M210	Э	Setting SP.SOCCLOSE executing flag
M200	M201					ESET	M202	Э	Normal completion
	M201					[SET	M202	Э	Error completion
						[RST	M210	3	Resetting SP.SOCCLOSE executing flag
							-END	3	

6.4.3 Reading out received data in the END processing (SP.SOCRCV)

	Command						1
SP.SOCRCV		SP.SOCRCV	U0	S1	S2	D1	02

Setting	Internal device		D 7D	J □\□			7n	Constant	Others
data	Bit	Word	κ, 2κ	Bit	Word		211	К, Н	Others
S1	-	0	0			-		0	-
\$2	-	∆*1	∆*1			-		-	-
01	-	∆*1	∆*1			-		-	-
D2	∆*1	-	∆*1			-		-	-

*1 File registers set for each local device or program cannot be used.

(1) Setting data

Setting data	Description	Set by ^{*2}	Data type	
UO	Dummy	-	Character string	
\$	Connection number (Setting range: 1 to 16)	User	BIN 16-bit	
\$2	Start number of the device from which control data are specified		Device name	
Ø	Start number of the device from which receive data are stored	System		
62	Start number of the device which turns on for one scan upon completion of the instruction ^(D2) +1 also turns on when failed.	Gyötem	Bit	

*2 The "Set by" column indicates the following. User: The data must be set before executing the SP.SOCRCV instruction. System: The CPU module stores the execution result of the SP.SOCRCV instruction.

(2) Control data

Device	ltem	Description	Setting range	Set by ^{*3}
§2+0	System area	-	-	-
§2)+1	Completion status	Completion status is stored. 0000н: Completed Other than 0000н: Failed (Error code)	-	
D)+0	Receive data length	The length of the data which were read out from the Socket communication receive data area is stored (in bytes).	0 to 2046	System
©)+1 to ©)+n	Receive data	The data which were read out from the Socket communication receive data area are stored in order.	-	

*3 The "Set by" column indicates the following.

System: The CPU module stores the execution result of the SP.SOCRCV instruction.

(3) Function

This instruction reads out received data of the connection specified in (5) from the Socket communication receive data area in the END processing after execution of the SP.SOCRCV instruction.



The result of the SP.SOCRCV instruction can be checked with the completion device 12+0 and 12+1.

Completion device
 2+0

Turns on in the END processing of the scan after completion of the SP.SOCRCV instruction, and turns off in the next END processing.

Completion device D2+1

Turns on or off according to the result of the SP.SOCRCV instruction.

State	Description
When completed	Remains off
When failed	Turns on in the END processing of the scan after completion of the SP.SOCRCV instruction, and turns off in the next END processing.

The following figure shows the timing of reception processing with the SP.SOCRCV instruction.



(4) Error

A detection of an operation error turns on the Error flag (SM0) and a corresponding error code is stored in SD0 when:

• The connection number specified for ${}^{\textcircled{3}}$ is other than 1 to 16.	
	(Error code: 4101)
 The received data size exceeds the size of the receive data storage device. 	
	(Error code: 4101)
• The device numbers specified for \mathfrak{D} , \mathfrak{D} , and \mathfrak{D} exceed the device point range.	
	(Error code: 4101)
An invalid device is specified.	
	(Error code: 4004)

(5) Program example

When M5000 is turned on, data received from the connected device are read out.

• Devices used

Device number	Application
SD1282	Open completion signal
SD1286	Receive state signal
D5000	SP.SOCRCV instruction control data
D500	Receive data length and receive data storage location
M500	SP.SOCRCV instruction completion device

Program

M5000	SD1282.0 SD1286.0	M500	[sp.socrcv	″U0″	K1	D5000	D500	M500	3	Reading receive data of Connection No.1
M500	M501						-[SET	M502	3	Normal completion
	M501							M503	٦	Error completion
	11						LOLI	_	_	
-								-[END	3	

Point P

- To avoid receiving large amounts of data, the volume of received data can be limited by setting the receive data size using the SP.SOCRMODE instruction.
- Consecutively sent data can be consecutively read out by connecting the completion device of the SP.SOCRCV instruction to the execution command at the normally closed contact.

6.4.4 Reading out received data during instruction execution (S.SOCRCVS)

	Command				1	
S.SOCRCVS		S.SOCRCVS	U0	S	D —	

Setting	Internal	l device	D 7D	JD/D			Zn	Constant	Othors
data	Bit	Word	π, Ζπ	Bit	Word	00.00	211	К, Н	Others
S	-	0	0			-		0	-
D	-	0	0	-				-	-

(1) Setting data

Setting data	Description	Set by ^{*1}	Data type
U0	Dummy	-	Character string
S	Connection number (Setting range: 1 to 16)	User	BIN 16-bit
D	Start number of the device from which received data are stored	System	Device name

*1 The "Set by" column indicates the following. User: The data must be set before executing the S.SOCRCVS instruction. System: The CPU module stores the execution result of the S.SOCRCVS instruction.

(2) Control data

Device	Item	Description	Setting range	Set by ^{*2}
(D)+0	Receive data length	The length of the data which were read out from the Socket communication receive data area is stored (in bytes).	0 to 2046	
D+1toD+n	Receive data	The data which were read out from the Socket communication receive data area are stored in ascending order of addresses.	-	System

*2 The "Set by" column indicates the following.

System: The CPU module stores the execution result of the S.SOCRCVS instruction.
(3) Function

This instruction reads out received data of the connection specified in (s) from the Socket communication receive data area.



The following figure shows the timing of reception processing with the S.SOCRCVS instruction.



(4) Error

A detection of an operation error turns on the Error flag (SM0) and a corresponding error code is stored in SD0 when:

The connection number specified for (s) is other than 1 to 16. (Error code: 4101)
The received data size exceeds the size of the receive data storage device. (Error code: 4101)
The device number specified for (b) exceeds the device point range. (Error code: 4101)
An invalid device is specified. (Error code: 4004)

(5) Precaution

Do not use both this and SP.SOCRCV instructions when reading out receive data of the same connection.

(6) Program example

When M5000 is turned on, data received from the connected device are read out.

· Devices used

Device number	Application				
SD1282	Open completion signal				
SD1286	Receive state signal				
D5000	Receive data length and receive data storage location				
• Program	Reading receive				
	CVS "U0" K1 D5000] data of Connection No.1 [END]				

Point /

- To avoid receiving large amounts of data, the volume of received data can be limited by setting the receive data size using the SP.SOCRMODE instruction.
- Data reception can be speeded up by placing a receive processing program at the beginning of multiple programs.

6.4.5 Sending data (SP.SOCSND)

		Command							1
SP.SOCSND	1 I		SP.SOCSND	U0	S1	S2	\$3	D -	_
	_								

Setting	Interna	l device	D 7D	JD/D			7n	Constant	Othere	
data	Bit	Word	κ, 2κ	Bit	Word	ULIGL	211	211	К, Н	Others
S1	-	0	0			-		0	-	
\$2	-	∆*1	Δ*1			-		-	-	
\$3	-	0	0			-		-	-	
D	△*1	-	\triangle^{*1}			-		-	-	

*1 File registers set for each local device or program cannot be used.

(1) Setting data

Setting data	Description	Set by ^{*2}	Data type
UO	Dummy	-	Character string
S1	Connection number (Setting range: 1 to 16)	User	BIN 16-bit
\$2	Start number of the device where control data are specified	System	Device name
\$3	Start number of the device from which send data are stored	User	Device name
D	Start number of the device which turns on for one scan upon completion of the instruction	System	Bit
<u> </u>	D+1 also turns on when failed.		

*2 The "Set by" column indicates the following.

User: The data must be set before executing the SP.SOCSND instruction. System: The CPU module stores the execution result of the SP.SOCSND instruction. 6

(2) Control data

Device	ltem	Description	Setting range	Set by ^{*3}
\$2 +0	System area	-	-	-
\$2+1	Completion status	Completion status is stored. 0000н: Completed Other than 0000н: Failed (Error code)	-	System
\$3+0	Send data length	The length of send data is specified (in bytes).	1 to 2046	
\$3+1 to \$3+n	Send data	Send data are specified.	-	User

*3 The "Set by" column indicates the following.
 User: The data must be set before executing the SP.SOCSND instruction.
 System: The CPU module stores the execution result of the SP.SOCSND instruction.

(3) Function

This instruction sends data set in (S) to the target device of the connection specified by (S).



The result of the SP.SOCSND instruction can be checked with the completion device, D+0 and D+1.

• Completion device D+0

Turns on in the END processing of the scan after completion of the SP.SOCSND instruction, and turns off in the next END processing.

Completion device D+1

Turns on or off according to the result of the SP.SOCSND instruction.

State	Description
When completed	Remains off.
When failed	Turns on in the END processing of the scan after completion of the SP.SOCSND instruction, and turns off in the next END processing.

The following figure shows the timing of reception processing with the SP.SOCRCV instruction.



(4) Error

A detection of an operation error turns on the Error flag (SM0) and a corresponding error code is stored in SD0 when:

The connection number specified for S is other than 1 to 16. (Error code: 4101)
 The device numbers specified for S, S, and Dexceed the device point range. (Error code: 4101)
 An invalid device is specified. (Error code: 4004)

(5) Program example

When M3000 is turned on, data (1234, 5678, and 8901) are sent to the target device using the socket communication function.

· Devices used

Device number	Application
SD1282	Open completion signal
D3000	SP.SOCSND instruction control data
D300	Send data length and send data storage location
M300	SP.SOCSND instruction completion device

Program

6



6.4.6 Reading out connection information (SP.SOCCINF)

		Command						1
SP.SOCCINF	1 T		SP.SOCCINF	U0	S1	\$2	D	
	_							

Setting	Interna	l device	D 7D	J¤\¤			Zn	Constant	Othors		
data	Bit	Word	κ, 2κ	Bit	Word	0LIGL	01.01	00.00	211	К, Н	Others
S1	-	0	0			-		0	-		
\$2	-	0	0	-			-	-			
D	-	0	0	-			-	-			

(1) Setting data

Setting data	Description	Set by ^{*1}	Data type	
UO	Dummy	-	Character string	
S1	Connection number (Setting range: 1 to 16)	User	BIN 16-bit	
\$2	Start number of the device from which control data are stored			
D	Start number of the device from which connection information is stored	System	Device name	

*1 The "Set by" column indicates the following.
 User: The data must be set before executing the SP.SOCCINF instruction.
 System: The CPU module stores the execution result of the SP.SOCCINF instruction.

6

(2) Control data

Device	ltem	Description	Setting range	Set by ^{*2}
§2+0	System area	-	-	-
\$2+1	Completion status	Completion status is stored. 0000н: Completed Other than 0000н: Failed (Error code)	-	
©+0 ©+1	Target device IP address	IP address of the target device is stored.	1н to FFFFFFFH 0н: No target (FFFFFFFFH: Simultaneous broadcast)	
(D)+2	Target device port number	Port number of the target device is stored.	1н to FFFFн (FFFFн: Simultaneous broadcast)	
D+3	Host station port number	Port number of the host station is stored.	1н to 1387н 1392н to FFFEн *3	System
(D)+4	Application setting area	b15b14 b13 to b10 b9 b8 b7 to b0 (D)+4 [3] 0 [2][1] 0 [1] Communication method (protocol) 0: TCP/IP 1: UDP/IP [2] Socket communication procedure 1: Nonprocedural (fixed) [3] Open system 00: Active open or UDP/IP 10: Unpassive open 11: Fullpassive open	-	

*2 The "Set by" column indicates the following.

System: The CPU module stores the execution result of the SP.SOCCINF instruction.

*3 Host station port numbers, 0001H to 03FFH, are assigned for reserved port numbers (WELL KNOWN PORT NUMBERS) and F000H to FFFEH are for other communication functions. Therefore, using 0400H to 1387H and 1392H to EFFFH is recommended. (

(3) Function

This instruction reads out connection information specified in S.

(4) Error

A detection of an operation error turns on the Error flag (SM0) and a corresponding error code is stored in SD0 when:

 The connection number specified for (s) is other than 1 to 16. 	
	(Error code: 4101)
• The device numbers specified for 🕸 and 🛈 exceed the device point range.	
	(Error code: 4101)
An invalid device is specified.	
	(Error code: 4004)

(5) Program example

When M5000 is turned on, connection information of connection No.1 is read out.

· Devices used

Device number	Application
D500	SP.SOCSND instruction control data
D5000	Storage location of connection information

Program

м5000	 ″U0″	K1	D500	D5000	3	Reading connection information of Connection No.1
	 			END	3	

6.4.7 Changing the target of a connection (UDP/IP) (SP.SOCCSET)

		Command					
SP.SOCCSET			SP.SOCCSET	U0	S1	\$2	
	_						

Setting	Internal	l device	D 7D	JD/D			Zn	Constant	Othors			
data	Bit	Word	π, 2π	Bit	Word		0L/GL	ULIGL	0LIGL	211	К, Н	Others
§1	-	0	0			-		0	-			
\$2	-	0	0			-		-	-			

(1) Setting data

Setting data	Description	Set by ^{*1}	Data type
U0	Dummy	-	Character string
S1	Connection number (Setting range: 1 to 16)	User	BIN 16-bit
\$2	Start number of the device from which control data are stored	User, System	Device name

*1 The "Set by" column indicates the following.
 User: The data must be set before executing the SP.SOCCSET instruction.
 System: The CPU module stores the execution result of the SP.SOCCSET instruction.

(2) Control data

Device	ltem	Description	Setting range	Set by ^{*2}
§2+0	System area	-	-	-
\$2+1	Completion status	Completion status is stored. 0000H: Completed Other than 0000H: Failed (Error code)	-	System
©2+2 ©2+3	Target device IP address	IP address of the target device is specified.	1н to FFFFFFFн (FFFFFFFн: Simultaneous broadcast)	lisor
\$2)+4	Target device port number	Port number of the target device is specified.	1н to FFFFн (FFFFн: Simultaneous broadcast)	Use

*2 The "Set by" column indicates the following. User: The data must be set before executing the SP.SOCCSET instruction. System: The CPU module stores execution result of the SP.SOCCSET instruction.

(3) Function

This instruction changes the IP address and port number of the target device of which connection is specified in (s).

(Note that this instruction is available only for UDP/IP communications.)

Point P

- The target device can be changed without closing the connection by using the SP.SOCCSET instruction.
- The set values take effect at the following SP.SOCCSET instruction execution timing:
 - When data exist in the socket communication receive data area: After execution of the SP.SOCRCV or S.SOCRCVS instruction, only once after execution of the SP.SOCCSET instruction
 - When no data exists in the socket communication receive data area: After execution of the SP.SOCCSET instruction

(4) Error

A detection of an operation error turns on the Error flag (SM0) and a corresponding error code is stored in SD0 when:

•	The connection number specified for \mathfrak{S} is other than 1 to 16.	
		(Error code: 4101)
,	The device number specified for 🕸 exceeds the device point range.	
		(Error code: 4101)
,	An invalid device is specified.	. , ,
		(Error code: 4004)

(5) Precaution

Do not change the target device using the SP.SOCCSET instruction during execution of the SP.SOCSND instruction.

(6) Program example

When M4000 is turned on, the connection destination (IP address and port number of the target device) of connection No.1, which is open, is changed.

· Devices used

Device number	Application
SD1282	Open completion signal
D400	SP.SOCCSET instruction control data
D400	SP.SOCCSET instruction control data

Program

M4000	SD1282.0	[dmovf	P H0A6155	DE	D402	3	Setting target IP address to 10.97.85.222
			—[моvр	H2001	D404	3	Setting port No. of target device to 8193
	l	[SP.SOCCSET	″U0″	K1	D400	3	Changing setting of Connection No.1
					END	З	

.

6.4 Socket Communication Function Instructions6.4.7 Changing the target of a connection (UDP/IP) (SP.SOCCSET)

6.4.8 Changing the receive mode of a connection (SP.SOCRMODE)

		Command					
SP.SOCRMODE			SP.SOCRMODE	U0	SI	S2	_
	_	l					

Setting	Internal	l device	D 7D	JD/D			7n	Constant	Othoro
data	Bit	Word	κ, 2κ	Bit	Word	ULIGL	211	К, Н	Others
S1	-	0	0			-		0	-
\$2	-	0	0			-		-	-

(1) Setting data

Setting data	Description	Set by ^{*1}	Data type
UO	Dummy	-	Character string
S1	Connection number (Setting range: 1 to 16)	User	BIN 16-bit
\$2	Start number of the device from which control data are stored	User, System	Device name

*1 The "Set by" column indicates the following. User: The data must be set before executing the SP.SOCRMODE instruction. System: The CPU module stores the execution result of the SP.SOCRMODE instruction.

(2) Control data

Device	ltem	Description	Setting range	Set by ^{*3}
§2+0	System area	-	-	-
§2+1	Completion status	Completion status is stored. 0000н: Completed Other than 0000н: Failed (Error code)	-	System
\$2+2	TCP receive mode ^{*2}	TCP receive mode is stored. 0: TCP standard receive mode 1: TCP fixed-length receive mode	0 or 1	User
\$2+3	Receive data size	Receive data size in the socket communication is stored (in bytes).	1 to 2046	

*2 Invalid for connections in UDP communications.

*3 The "Set by" column indicates the following.

User: The data must be set before executing the SP.SOCRMODE instruction. System: The CPU module stores the execution result of the SP.SOCRMODE instruction.

(3) Function

This instruction changes the TCP receive mode and receive data size of the connection specified in \mathfrak{D} . The mode is changed as specified in $\mathfrak{D}+2$. (This instruction is invalid for UDP connections.)

(a) TCP standard receive mode

When data are received, they are stored in the Socket communication receive data area, and SD1286 turns on. If data are received exceeding the specified receive data size, the excess data are read out the next time. **Ex.** The receive data size is set to 300 bytes, and 500-byte data are received.



(b) TCP fixed-length receive mode

When data are received, they are stored in the Socket communication receive data area, and SD1286 (Receive state signal) turns on. However, if the size of the data does not reach the specified receive data size, SD1286 does not turn on.

Data reception is repeated and once the data size reaches to the specified size, SD1286 turns on.

If data are received exceeding the specified receive data size, the excess data are read out the next time.

Ex. The receive data size is set to 300 bytes, and 200-byte data are consecutively received.



Effective use of devices

Devices can be effectively used by setting the receive data size to less than 1024 words while the default size of the receive data storing devices for the SP.SOCRCV and S.SOCRCVS instructions is 1024 words.

- Prevention of receive data fragmentation
 Data from the connected device may be fragmented depending on the line type. To prevent this, the receive data size can be specified in the TCP fixed-length receive mode.
- Prevention of receive data binding
 Separately sent data may be combined depending on the interfacing device due to a delay in receive processing of the program.
 To prevent this, the receive data size can be specified in the TCP fixed-length receive mode.

Remark	• • •
The set values will take effect at the following timing of the SP.SOCRMODE instruction execution.	
 Before opening: Values take effect after opening a connection. 	
 When there are data in the Socket communication receive data area: 	
Values take effect after execution of the SP.SOCRCV or S.SOCRCVS instruction once after the S.SOCRMO instruction.	DDE
 When there is no data in the Socket communication receive data area: 	
Values take effect after the SP.SOCRMODE instruction is executed.	
• • • • • • • • • • • • • • • • • • • •	• • •

(4) Error

A detection of an operation error turns on the Error flag (SM0) and a corresponding error code is stored in SD0 when:

 The connection number specified for (s) is other than 1 to 16. 	
	(Error code: 4101)
 The device number specified for	
	(Error code: 4101)
Invalid device is specified.	
	(Error code: 4004)
Remark •••••	

Even when the Receive state signal is not on in the TCP fixed-length receive mode, the data received at the point can be read out with the SP.SOCRDATA instruction. This allows you to check whether the data sent from the connected device is adequate in size.

. .

(5) Program example

When M4000 is turned on, connection No.1 is set to theTCP fixed-length receive mode and the receive data size is set to 256 bytes.

After execution of the instruction and when the receive data size of connection No.1 reaches 256 bytes, the Receive state signal is turned on.

Device used

Device number	Application
D400	SP.SOCRMODE instruction control data

Program

M4000		[моур	K1	D402]	Setting TCP receive mode to 1
		[MOVP	K256	D403]	Setting receive data size to 256
	[SP.SOCRMOI	DE ″U0″	K1	D400]	Changing receive mode of Connection No.1
				END]	

6.4.9 Socket communication receive data read (S(P).SOCRDATA)



Setting	Interna	l device	D 7D	J⊏	ם/ו		Zn	Constant	Othors
data	Bit	Word	π, 2π	Bit	Word	ULIGE	211	К, Н	Others
S1	-	0	0			-		0	-
\$2	-	0	0			-		-	-
D	-	0	0			-		-	-
n	-	0	0			-		0	-

(1) Setting data

Setting data	Description	Set by ^{*1}	Data type		
UO	Dummy	-	Character string		
S1	Connection number (Setting range: 1 to 16)		BIN 16-bit		
\$2	Start number of the device from which control data are stored	User			
D	Start number of the device where read data are stored		Device fiame		
n	Number of read data (1 to 1024 words)		BIN 16-bit		

*1 The "Set by" column indicates the following. User: The data must be set before executing the S(P).SOCRDATA instruction.

(2) Control data

Device	Item	Description	Setting range	Set by ^{*2}
<u>\$2</u> +0	System area	-	-	-
\$2) +1	Completion status	Completion status is stored. 0000н: Completed Other than 0000н: Failed (Error code)	-	System

*2 The "Set by" column indicates the following.

System: The CPU module stores the execution result of the S(P).SOCRDATA instruction.

(3) Function

This instruction reads out the data of the amount specified for n from the Socket communication receive data area of which connection is specified in (a), and stores them in the device specified in (b) or higher. No processing is performed when the number of read data (n) is 0.

6

Point P

- Data of the receive data length can be read out by setting the number of read data to one word. This allows change of the device storing receive data, upon execution of the SP.SOCRCV or S.SOCRCVS instruction.
- In the following order, based on the data currently received, the size of the data received the next time can be specified.
 Check the data currently received using the S(P).SOCRDATA instruction.
 - 2. Specify the size of the data to be received the next time using the SP.SOCRMODE instruction.
 - 3. Read out the data currently received using the SP.SOCRCV or S.SOCRCVS instruction.

Remark			• •	 •	0.0	 		•	•	•	 	•	•	•	•	. (•	•	 	•	•	• •	 	۰	•			•	•	•

- Even if the S(P).SOCRDATA instruction is executed, the next receive data will not be stored in the Socket communication receive data area because the area is not cleared and the Receive state signal does not change.
- To update the receive data, read out the data using the SP.SOCRCV or S.SOCRCVS instruction.

(4) Error

A detection of an operation error turns on the Error flag (SM0) and a corresponding error code is stored in SD0 when:

 The connection number specified for Is other than 1 to 16. 	
	(Error code: 4101)
 The device numbers specified for ACD, and n1 exceed the device point range. 	
	(Error code: 4101)
An invalid device is specified.	
	(Error code: 4004)

(5) Program example

When M4000 is turned on, the receive data length of connection No.1 is read out.

Devices used

Device number	Application
SD1282	Open completion signal
SD1286	Receive state signal
D400	S.SOCRDATA instruction control data
D4000	Storage location where data are read out
K1	Number of read data (one word)

Program

M4000	SD1282.0 SD1286.0	[S.SOCRDATA	″U0″	K1	D400	D4000	K1	3	Reading receive data length of Connection No.1
							END	3	

CHAPTER 7 TIME SETTING FUNCTION (SNTP CLIENT)

The CPU module collects time information from a time information server on LAN, and automatically sets its own time. With this time setting function, the CPU module queries the server for time information at the specified timing, and can set the time information sent from the server as its own clock data.

The time setting can performed at the following timing.

- · When the programmable controller is powered off and then on, or is reset
- · At the specified time intervals (Execution interval)
- · At the specified clock time (Execution time)
- According to the special relay state^{*1}
- *1 Time is set when SM1270 is turned on for one scan.



Point P

- Confirm the connection of the hub or the interfacing device in advance when setting time at the timing of CPU module power-on or reset.
- The time setting results can be checked with the special register (SD1270 to SD1275).
- During execution of the time setting function, other time setting operations are ignored.



7.1 Setting Method

Configure the time settings in the Built-in Ethernet port tab of the PLC parameter dialog box.

C Project window <> [Parameter] <> [PLC Parameter] <> [Built-in Ethernet Port Setting]

⊲> [Time Setting]

Built-in Ethernet Port Time Setting
Time Setting
SNTP Function Setting Used
SNTP Server IP Address 192 168 0 200
Input Format DEC.
Time Zone (GMT+9:00)
Execute time setting at turn ON/reset
At Error Occurrence Stop
C Execution Interval Minute
Default Check End Cancel

Item	Description	Setting range
SNTP Function Setting	Select whether to use this function or not.	Used or Not used
SNTP Server IP Address	Specify the IP address of the SNTP server.	0.0.0.1 to 223.255.255.254
Time Zone	Specify a time zone in which the time is to be synchronized. Japan Standard Time "GMT+9:00".is set by default.	(GMT-12:00 to GMT+13:00)
Execute time setting at turn ON/ reset	Select whether to execute the time setting function upon power-on or reset of the CPU module.	-
At Error Occurrence	Select whether to stop or continue the time setting when an error is detected upon power-on or reset of the CPU module.	Continue or Stop
Execution Interval *2	Select this when executing the time setting function at fixed time intervals.	1 to 1440 (min.)
Execution Time *2	Select this when executing the time setting function at a specified time. (in increments of 30 minutes)	00:00 to 23:30

*2 Either of these two options must be selected.

7.2 Precautions

(1) Communication timeout

A communication timeout occurs when 20 seconds have elapsed without receiving any response after sending a time query.

At the time of a communication timeout, the value in SD1270 is FFFFH.

(2) Delay resulted from the time required for communication

A delay occurs and affects the set time as a result of the time spent for communication with the SNTP server computer. For a high-accuracy time setting, specify an SNTP server computer that is networked as close to the CPU module as possible.

CHAPTER 8 FILE TRANSFER FUNCTION (FTP)

The CPU module supports the server function for FTP (File Transfer Protocol) which is a protocol designed for file transfer to or from the connected device.

The device with the FTP client function can directly access any files located in the CPU module.



The following operations can be performed between the connected device with the FTP client function and the CPU module.

(a) Reading files from the CPU module (download)

The files in the CPU module can be stored in the connected device.

(b) Writing files to the CPU module (upload)

The files stored in the connected device can be registered to the CPU module.

(c) Browsing the names of the files in the CPU module

The files registered to the CPU module can be checked from the connected device.



Access through routers is also available. When configuring the settings for it, set the subnet mask and default router IP address. (

8.1 Setting for FTP Communication

(1) Operation on the CPU module side

♥ Project window <> [Parameter] <> [PLC Parameter] <> [Built-in Ethernet Port Setting]



- **1.** Set the IP address of the CPU module.
- 2. Select "Enable online change (FTP, MC Protocol)" when data need to be written even while the CPU module is in RUN state.
- **3.** Configure the FTP settings.

Built-in Ether	net Port FTP Para	meter Setting 🛛 🛛 🔀
FTP Paramete	ers	
	FTP	Used
	Login Name	MELSEC
	Password Current	XXXX
	New	XXXX
	Command Input Monitoring Timer	1800 × 500ms (132767)
Default	Check	End Cancel

Item	Description
FTP	Select "Used".
Login Name	Set a login name for file transfer request (log in) from the connected device. (Default: MELSEC)
Password	Set an FTP password for file transfer request from the connected device. To change the password, enter both old and new passwords for confirmation. (Default: MELSEC)
Command Input Monitoring Timer	Set a time for monitoring command input performed by the CPU module. When no command is input within the set period of time, the FTP connection is disconnected. (Setting range : 1 to 32767 (× 500ms)) Set a time value larger than the time required for file transfer.

(2) Operation on the connected device (FTP client) side

The following describes the procedure and processing on the connected device side, which is required for using the FTP server function of the CPU module.

Various FTP commands and how to enter each of them are also shown.

(<ret> indicates an input of the CR, Enter, or Return key.)



(a) Logging in to the CPU module

The following explains the operation flow from starting an FTP session until log-in to the CPU module.

Ex.Start up the FTP from the MS-DOS prompt of Microsoft[®] Windows[®].

	C	Command Prompt - ftp	- 🗆 ×]
	Mi	icrosoft Windows XP [Version 5.1.2600] C) Copyright 1985-2001 Microsoft Corp.	^]
1.		:\Documents and Settings\ZB03341>ftp tp> open 192.168.3.39]
2.	Cc 22	onnected to 192.168.3.39. 20 LnCPU FTP server ready.		
3.		ser (192.168.3.39:(none)): MELSEC 31 Password required.		
4.	23	assword: 30 User logged in. tr>		
				1

- **1.** Start an FTP session. (FTP <ret>)
- 2. Open a connection to the FTP server (open "IP address of the CPU module" <ret>)
- **3.** Specify the login name (Login name <ret>)
- 4. Specify the password (Password <ret>)

(b) Locking and unlocking a remote password

If the FTP communication port is specified as a remote password check target in the remote password settings, unlock the remote password using the following command. (quote password-unlock "Remote password" <ret>)

When terminating the operation, lock the unlocked remote password using the following command. (quote password-lock <ret>)

Point

If the FTP communication port is specified as a remote password check target, any other commands cannot be used until the remote password is unlocked.

(c) Entering file password 32

When file password 32 (write or read password) is set for the target file, the password must be entered with the following command before accessing the file.

- Write password (quote passwd-wr "write password" <ret>)
- Read password (quote passwd-rd "read password" <ret>)

The following table lists the files that can be transferred using the file transfer function.

					○ :Available, × :N/A
File type	Program memory *2 *3	Standard RAM	Standard ROM ^{*4}	SD memory card ^{*4}	File name or extension
	Drive 0	Drive 3	Drive 4	Drive 2	
Parameter	0	×	×	×	PARAM.QPA
Intelligent function module parameter	0	×	x	×	IPARAM.QPA
Program	0	×	×	×	.QPG
Device comment	0	×	×	×	.QCD
Device initial value	0	×	×	×	.QDI
File register	×	0	×	×	.QDR
Local device	×	×	×	×	.QDL
Sampling trace file	×	×	×	×	.QTD
Programmable controller user data *1	×	×	0	0	Arbitrary file name
Label programming invertible conversion information	×	×	×	×	.C32
Drive heading	×	×	×	×	QN.DAT
Device data storage file	×	×	×	×	DEVSTORE.QST
Module error log file	×	×	×	×	IERRLOG.QIE
Data logging setting file	×	×	×	×	LOGCOM.QLG, LOG01.QLG to LOG10.QLG
Data logging file	×	×	×	0	.CSV
Menu definition file	×	×	×	×	MENUDEF.QDF
User-set system area	×	×	×	×	-

*1 The SP.FWRITE or SP.FREAD instruction in the program will write or read the file respectively. For details, refer to the following manual.

MELSEC-Q/L Programming Manual (Common Instructions)

*2 Files can be written to the program memory only when the CPU module is in the STOP state.

*3 Write destination is the program cache memory.

The user should back up files using the "pm-write" command as required. (F Page 96, Section 8.4.1) *4 The following number of files can be stored using FTP.

[Maximum number of files storable on the drive - 1]

8.3 Files That Can Be Deleted Using FTP

The following table lists the files that can be deleted using the file transfer function.

File type	Program memory *2*3	Standard RAM	Standard ROM *4	SD memory card ^{*4}	File name or extension	
	Drive 0	Drive 3	Drive 4	Drive 2		
Parameter	Δ	-	0	0	PARAM.QPA	
Intelligent function module parameter	Δ	-	0	0	IPARAM.QPA	
Program	Δ	-	0	0	.QPG	
Device comment	Δ	-	0	0	.QCD	
Device initial value	Δ	-	0	0	.QDI	
File register	-	0	-	-	.QDR	
Local device	-	0	-	-	.QDL	
Sampling trace file	-	0	-	-	.QTD	
Programmable controller user data ^{*1}	-	-	0	0	Arbitrary file name	
Label programming invertible conversion information	Δ	-	0	0	.C32	
Drive heading	Δ	-	0	0	QN.DAT	
Device data storage file	-	-	Δ	-	DEVSTORE.QST	
Module error log file	-	×	-	-	IERRLOG.QIE	
Data logging setting file	-	-	0	0	LOGCOM.QLG, LOG01.QLG to LOG10.QLG	
Data logging file	-	-	-	0	.CSV	
Menu definition file	-	-	0	0	MENUDEF.QDF	
User-set system area	-	-	-	-	-	

O: Deletable, △: Not deletable only in RUN state, ×: Not deletable, -: Not writable

*1 The SP.FWRITE or SP.FREAD instruction in the program will write or read the file respectively. For details, refer to the following manual.

MELSEC-Q/L Programming Manual (Common Instructions)

*2 Files can be written to the program memory only when the CPU module is in the STOP state.

*3 Write destination is the program cache memory.

The user should back up files using the "pm-write" command as required. (F Page 96, Section 8.4.1)
*4 The following number of files, which can be written using FTP, can be stored. [Maximum number of files storable on the drive - 1]

Point *P*

When the online change settings is disabled in the "Built-in Ethernet Port Setting" tab of PLC Parameter, deleting a file in RUN state will cause an error.

8.4.1 List of FTP commands

	Function		CPU module s	Remote password		
			RI			
Command			Write enabled *1	Write disabled *1	Unlocked *2	Locked *2
binary *5	Notifies the FTP server of file transfer without conversion.	0	0	0	0	×
bye	Disconnects the line to the FTP server and terminates the session.	0	0	0	0	0
close	Disconnects the line to the FTP server.	0	0	0	0	0
delete	Deletes a file in the CPU module.*4	0	0	×	0	×
dir	Displays file information of the CPU module.*4	0	0	0	0	×
get	Reads a file from the CPU module. ^{*4}	0	0	0	0	×
ls	Displays file names of the files stored in the CPU module.*4	0	0	0	0	×
mdelete	Deletes file(s) stored in the CPU module.*4	0	0	×	0	×
mdir	Stores file information of the CPU module into a file.*4	0	0	0	0	×
mget	Reads file(s) from the CPU module.*4	0	0	0	0	×
mls	Stores CPU module's file names into a file.*4	0	0	0	0	×
mput	Writes file(s) to the CPU module.	0	0	×	0	×
open	Connects to the FTP server.	0	0	0	0	0
put	Writes a file to the CPU module.	0	0	×	0	×
pwd	Displays the current directory of the CPU module.	0	0	0	0	×
quit	Disconnects the line to the FTP server and terimnates the connection.	0	0	0	0	0
quote	Sends an FTP server subcommand. ^{*3}	0	0	0	0	0
rename	Changes a CPU module file name.*4	0	0	×	0	×
user	Inputs the user name and password of the CPU module.	0	0	0	0	0

O : Available, × : N/A

*1 Whether the online change settings is enabled or not is indicated in the "Built-in Ethernet Port" tab in the PLC Parameter dialog box.

*2 These indicate whether the remote password can be used or not when the FTP communication port is specified as a remote password check target in the remote password setting. For remote passwords, refer to: F Page 109, CHAPTER 9

*3 On the next page, subcommands available with the "quote" command are shown.

*4 Each of these commands can include a folder name in the file specification.

*5 This command is set automatically in the CPU module. Therefore, a file transfer is coded in binary regardless of the "Communication Data Code" of the "Built-in Ethernet Port Setting" in PLC Parameter.

The following table lists the subcommands available with the command, "quote".

O : Available, × : N/A

			PU module s	Remote password		
Subcommand	Function		RUN			
		STOP	Write enabled	Write disabled	Unlocked	Locked
change	Displays or changes the CPU module file attribute. *2	0	0	×	0	×
password-lock	Locks an unlocked remote password.	0	0	0	0	× *1
password-unlock	Unlocks an locked remote password.	0	0	0	0	0
status	Displays the operation information of the CPU module.	0	0	0	0	×
run	Changes the CPU module state to RUN.	0	0	0	0	×
stop	Changes the CPU module state to STOP.	0	0	0	0	×
pm-write	Writes data to the program memory.	0	×	×	0	×
passwd-rd	Sets, displays, or clears file password 32 (read password).	0	0	0	0	×
passwd-wr	Sets, displays, or clears file password 32 (write password).	0	0	0	0	×

*1 Even if the subcommand is executed, the remote password remains locked with no error occurred.

*2 This command can include a folder name in the file specification.

8.4 FTP Commands 8.4.1 List of FTP commands This section explains how to specify a file with an FTP command on the FTP client (connected device), which is supported by the CPU module

(1) File specification

A file can be specified for an FTP command on the FTP client side as follows:

- For CPU modules, each file is specified using a drive name and a file name.^{*2}
- When specifying a file in the CPU module using the FTP function, specify the target file in the following order.
 [Specification format]
 [Example]
 Drive name:\Folder name^{*1}\File name.Extension
 3:\MAINSEQ1.QDR (other than drive 2)
 2:\LOGGING\LOG01\0000001\LOG01_0000001.CSV (drive 2)
 [Specification details]
 Refer to (a) and (b) below.
- *1 Only for a file in drive 2, the folder name can be specified.
- *2 Use "\" as a delimiter.

(a) Drive name (drive No.)

Specify the drive name of the file transfer target memory.

For the CPU module's memories and drive names, refer to: F Page 94, Section 8.2

(b) Folder name, file name, and extension

Specify a folder name and a file name according to the rules described in the following manual.

MELSEC-L CPU Module User's Manual (Function Explanation, Program Fundamentals)

- Set an extension predetermined by the CPU module. F Page 94, Section 8.2
- For details of the file names and extensions, refer to the following manual.

Derating manual of the programming tool used

- For an FTP command which can be used for multiple files, specify the file name and extension using a wild card character (* or ?).
 - *: Indicates all files having any characters (including no character) from the position where "*" is used.
 - ?: Indicates all files having any characters (including no character) at the position where "?" is used. (Multiple "?" can be used.)

Some FTP clients have other restrictions on the characters that can be used for file names.

Point *P*

The part enclosed with brackets in the specification format can be omitted.

8.4.3 Details of FTP commands

Details of the FTP commands on the FTP client side, which are supported by the CPU module, and how to use each of them are described below.

Point P

Note that some FTP commands may not function as described in this manual, depending on the FTP application used on the FTP client side.

Check the functions and operation methods, referring to the manual(s) for the FTP client.

(1) FTP server support commands

●binary	
[Function]	Notifies the FTP server of file transfer without conversion.
	This command is set automatically in the CPU module
[Specification format]	binary (abbreviated to "bin")
●bye	
[Function]	Disconnects the line to the FTP server, and terminates the FTP session.
[Specification format]	bye
[Identical command]	quit
●close	
[Function]	Disconnects the line to the FTP server.
[Specification format]	close
●delete	
[Function]	Deletes a file stored in the CPU module.
[Specification format]	delete "file path name"
[Example]	When deleting a file stored in an SD memory card: delete 2:\MAINSEQ1.USR
[Similar command]	mdelete
●dir	
[Function]	Displays the names, creation dates, and sizes of the files stored in the CPU module.
[Specification format]	dir [drive name:\]
[Example]	When displaying the detailed information of the files stored in an SD memory card: dir 2:\
[Similar command]	ls

eget

[Function]	Reads a file from the CPU module.
[Specification format]	get "source file path name" [destination file path name]
[Example 1]	When reading a file stored in the standard RAM and saving it under the same file name: get 3:\MAINSEQ1.QDR
[Example 2]	When reading a file stored in the standard RAM and saving it under a different file name: get 3:\SEQ1BAK.QDR \SEQ\SEQ10LD.QDR
[Note]	 When no destination file path name (FTP client side) is specified, the file is saved in the FTP client using the same source file name (CPU module side). The transfer destination is on the current directory where FTP is started up and

connected to the server.

delete

●ls

[Function]	Displays the names of the files stored in the CPU module.
[Specification format]	Is [drive name:\]
[Example]	When displaying the names of the files stored in an SD memory card: Is 2:\
[Similar command]	dir
●mdelete	
[Function]	Deletes a file stored in the CPU module. To delete multiple files, specify the file name and extension within the file path name using a wild card character (* or ?).
[Specification format]	mdelete "file path name" (abbreviated to "mdel")
[Example]	When deleting all the files whose extensions are "QPG" from the program memory:

When deleting all the files whose extensions are "QPG" from the program memory: mdelete 0:*.QPG

[Similar command]

emdir

[Function]	Saves detailed information (file names, creation dates, and sizes) of the files stored in the CPU module as log data into a file on the FTP client side.
[Specification format]	mdir "source drive name" :\"destination file path name"
[Example]	When saving detailed information of the files stored in an SD memory card into the S990901.LOG file: mdir 2:\ S990901.LOG
[Note]	 Type "\" immediately after the source drive name. Specify a source drive name when specifying a destination file path name (FTP client side). Without a destination file path name, the file is saved using a file name determined by the FTP application on the FTP client side. The transfer destination is on the current directory where FTP is started up and connected to the server.
[Similar command]	mls

[Similar command]

●mget	
[Function]	Reads out a file from the CPU module. To read out multiple files, specify the file name and extension within the file path name using a wild card (* and/or ?). When reading multiple files, reception is checked for each file transfer.
[Specification format]	mget "file path name"
[Example]	When reading all the files whose extensions are "USR" among the files stored in an SD memory card: mget 2:*.USR
[Note]	The file read out is saved on the FTP client side under the same file name. The storage destination is on the current directory where FTP is started up and connected to the server.
●mis	
[Function]	Stores the names of the files in the CPU module as log data into a file on the FTP client side.
[Specification format]	mls "source drive name":\"destination file path name"
[Example]	When storing the names of the files in an SD memory card into the S990901F.LOG file: mls 2:\ S990901F.LOG
[Note]	 Type "\" immediately after the source drive name. Specify a source drive name when specifying a destination file path name (FTP client side). Without a destination file path name, the file is stored using a file name determined by the FTP application on the FTP client side. The transfer destination is on the current directory where FTP is started up and connected to the server.
[Similar command]	mdir
●mput	
[Function]	Writes a file to the CPU module. To write multiple files, specify the file name and extension within the file path name using a wild card (* or ?). When writing multiple files, transmission is checked for each file transfer.
[Specification format]	mout "source file path name"
	input source me patriname
[Example]	When writing all the files whose extensions are "USR": mput *.USR
[Example] [Note]	When writing all the files whose extensions are "USR": mput *.USR The storage destination file name is the same as that on the FTP client side. The transfer destination is the memory in which current parameter files are stored.
[Example] [Note] ●open	When writing all the files whose extensions are "USR": mput *.USR The storage destination file name is the same as that on the FTP client side. The transfer destination is the memory in which current parameter files are stored.
[Example] [Note] ●open [Function]	When writing all the files whose extensions are "USR": mput *.USR The storage destination file name is the same as that on the FTP client side. The transfer destination is the memory in which current parameter files are stored. Connects to the FTP server by specifying the host name or IP address and port number of the FTP server.
[Example] [Note] •open [Function] [Specification format]	 When writing all the files whose extensions are "USR": mput *.USR The storage destination file name is the same as that on the FTP client side. The transfer destination is the memory in which current parameter files are stored. Connects to the FTP server by specifying the host name or IP address and port number of the FTP server. open "host name" [port number] open "IP address" [port number]
[Example] [Note] •open [Function] [Specification format]	 When writing all the files whose extensions are "USR": mput *.USR The storage destination file name is the same as that on the FTP client side. The transfer destination is the memory in which current parameter files are stored. Connects to the FTP server by specifying the host name or IP address and port number of the FTP server. open "host name" [port number] open "IP address" [port number] Host name: Host name set in the Microsoft[®] Windows[®] hosts file IP address: CPU module IP address Port number: Port number to be used
[Example] [Note] •open [Function] [Specification format]	 When writing all the files whose extensions are "USR": mput *.USR The storage destination file name is the same as that on the FTP client side. The transfer destination is the memory in which current parameter files are stored. Connects to the FTP server by specifying the host name or IP address and port number of the FTP server. open "host name" [port number] open "IP address" [port number] Host name: Host name set in the Microsoft[®] Windows[®] hosts file IP address: CPU module IP address Port number: Port number to be used When connecting to the FTP server by specifying a host name: open HOST
[Example] [Note] •open [Function] [Specification format] [Example 1] [Example 2]	 When writing all the files whose extensions are "USR": mput *.USR The storage destination file name is the same as that on the FTP client side. The transfer destination is the memory in which current parameter files are stored. Connects to the FTP server by specifying the host name or IP address and port number of the FTP server. open "host name" [port number] open "IP address" [port number] Host name: Host name set in the Microsoft[®] Windows[®] hosts file IP address: CPU module IP address Port number: Port number to be used When connecting to the FTP server by specifying an IP address: open 192.0.1.254

●put

[Function]	Writes a file to the CPU module.
[Specification format]	put "source file path name" [destination file path name]
[Example 1]	When writing the MAINSEQ1.QDR file to the standard RAM with the same file name: put MAINSEQ1.QDR 3:\MAINSEQ1.QDR
[Example 2]	When writing the MAINSEQ.QDR file to the standard RAM with a different file name: put MAINSEQ.QDR 3:\MAINSEQ1.QDR
[Note]	 If no directory is specified for the source file path name (FTP client side), the file on the current directory where FTP is started up and connected to the server is written. When no destination file path name (FTP server side) is specified, the file is saved in the

memory in which current parameter files are stored.

●pwd

[Function]	Displays the current directory name of the CPU module.
[Specification format]	pwd
[Note]	"\" is displayed as the execution result of the "pwd" command.

●quit

[Function]	Disconnects the line from the FTP server and terminates the FTP session.
[Specification format]	quit
[Identical command]	bye

●quote

[Function]	Sends an FTP server subcommand (a subcommand dedicated to CPU modules)
[Specification format]	quote
[Example]	quote password-lock
[Note]	Only CPU module dedicated subcommands can be specified. Refer to (2).

●rename

[Function]	Renames a CPU module file.
[Specification format]	rename "old file path name" "new file path name" (abbreviated to "ren")
[Example]	When renaming a file stored in the standard RAM: rename 3:\MAINSEQ1.QDR 3:\SEQ1OLD.QDR
[Note]	Either of the following response codes is displayed upon completion. 350 Need more info. 250 Rename successful.

●user

[Function]	Inputs the user name and password of the connected FTP server.
[Specification format]	user "user name" [FTP password] • User name: Login name set with a CPU module parameter • FTP password: FTP password set with a CPU module parameter
[Example 1]	When specifying a user name: user CPU
[Example 2]	When specifying a user name and password: user CPU CPU

(2) CPU-module-dedicated subcommands

The CPU-module-dedicated subcommands affixed to an FTP command, "quote," are described below.

●change	
[Function]	Displays or changes the attribute of a file stored in the CPU module.
[Specification format 1]	 When displaying the file attribute: quote change "file path name" Either of the following is displayed as an execution result upon completion. When the specified file is read-only: R When the specified file is writable and readable: W
[Specification format 2]	 When changing the file attribute: quote change "file path name" "attribute" Use either of the following to specify the attribute. To change it to a read-only file: r To change it to a writable and readable file: w
[Example 1]	When displaying the attribute of the file stored in the standard RAM: quote change 3:\MAINSEQ1.QDR
[Example 2]	When changing the attribute of the file stored in the standard RAM: quote change 3:\MAINSEQ1.QDR r
●password-unlock	
[Function]	Specify the remote password set in the CPU module to unlock the password. *2
[Specification format]	 quote password-unlock [remote password] Remote password: Specify the remote password set with a parameter for the CPU module.
	The following is displayed as an execution result upon completion. 200 Command Okey
	The following is displayed if the entered remote password does not match the setting. 556 Password Error
	The following is displayed if another command is requested before unlock processing of the remote password. 555 Password Locked
[Example]	When specifying a remote password (1234): quote password-unlock 1234
[Note]	 The remote password is locked when you log in if the remote password check is enabled for the FTP communication port. By executing this command before various FTP operations, the password is unlocked, allowing file operations of the CPU module. Unlock processing will be completed if the remote password is unlocked when the remote password check is disabled for the FTP communication port.

*2 Use this command only when the FTP communication port is specified as a remote password check target.

●password-lock

[Function]	Locks the remote password set in the CPU module. ^{*3}
[Specification format]	quote password-lock
	The following is displayed as an execution result upon completion.
	200 Command Okey
[Example]	When locking the remote password:
	quote password-lock

*3 Use this command only when FTP communication port is specified as a remote password check target.

●run

[Function]	Changes the CPU module state to RUN. (Remote RUN.) At this time, device memory clear can be specified.
[Specification format]	 quote run [mode [clear mode]] Mode: Specify whether to force remote RUN or not. 0: Normal RUN (default) 1: Forced RUN Clear mode: Specify the CPU module device memory clear (initialization) processing performed when the operation starts by executing remote RUN. 0: Do not clear device (default) 1: Clear other than the latch range 2: Clear all including the latch range The following message is displayed as an execution result upon completion. 200 Command successful
[Example 1]	When executing remote RUN, with "Normal RUN" and "Do not clear device" specified: quote run
[Example 2]	When executing remote RUN, with "Forced RUN" and "Do not clear device" specified: quote run 1
[Example 3]	When executing remote RUN, with "Forced RUN" and "Clear other than the latch range": specified quote run 1 1
[Note]	 Forced RUN should be used only to force remote RUN to the CPU module from another device when a device that executed remote STOP to the CPU module have a problem and cannot perform remote RUN. With Normal RUN, the CPU module state cannot be changed from STOP/PAUSE to RUN if the previous state is set by a different device. Specify the clear mode at the start of an operation, according to the system arrangement. After completing the specified clear processing, the CPU module runs in accordance with the PLC parameter settings ("Initial Device value" setting on the PLC file tab).
●status	
[Function]	Displays information of the CPU module operation. This command is used to check the information on the CPU module operation before transferring a file to the CPU module.
[Specification format]	 quote status One of the following is displayed as an execution result upon completion. When the CPU module is in RUN state: "RUN" When the CPU module is in STOP state: "STOP" When the CPU module is in PAUSE state: "PAUSE"

●stop	
[Function]	Changes the CPU module state to STOP (remote STOP).
[Specification format]	quote stop The following message is displayed as an execution result upon completion. 200 Command successful
[Note]	Before writing data to the program memory, set the CPU module into the STOP state using this command.
●pm-write	
[Function]	Transfers program cache memory to the program memory.
[Specification format]	quote pm-write The following message is displayed as an execution result upon completion. 200 Command successful
[Note]	Before writing data, set the CPU module to STOP.
●passwd-rd	
[Function]	Sets, displays, and clears the read password (file password 32) that is registered to the file transfer target. With this command, the CPU module checks the read password when access is made to the transfer target file.
[Specification format]	 quote passwd-rd [read password] Any of the following is displayed as an execution result upon completion. When setting a read password: 200 Command successful When displaying a read password: 200 Read-password is [read password] When clearing a read password: 200 Command successful When attempting to display a read password with no read password set: 200 Read-password is not set.
[Example 1]	When setting a read password (ABCD1234@efgh): quote passwd-rd ABCD1234@efgh
[Example 2]	When displaying a read password that is currently set to FTP: quote passwd-rd
[Example 3]	When clearing a read password that is currently set to FTP: quote passwd-rd c, or quote passwd-rd C
[Note]	 One read password can be set to FTP of the CPU module. When the transfer target file is changed, if a read password is preset for the new target file, set the read password of the target file again. When the CPU module is logged in, the read password is cleared.

•passwd-wr

[Function]	Sets, displays, and clears the write password (file password 32) that is registered to the file transfer target. With this command, the CPU module checks the write password when access is made to the transfer target file.
[Specification format]	 quote passwd-wr [write password] Any of the following is displayed as an execution result upon completion. When setting a write password: 200 Command successful When displaying a write password: 200 Write-password is [write password] When clearing a write password: 200 Command successful When attempting to display a write password with no write password set: 200 Write-password is not set.
[Example 1]	When setting a write password (1234@ABCDefgh): quote passwd-wr 1234@ABCDefgh
[Example 2]	When displaying a write password that is currently set to FTP: quote passwd-wr
[Example 3]	When clearing a write password that is currently set to FTP: quote passwd-wr c, or quote passwd-wr C
[Note]	 One write password can be set to FTP of the CPU module. When the transfer target file is changed, if a write password is preset for the new target file, set the write password of the target file again. When the CPU module is logged in, the write password is cleared.
8.5 Precautions

(1) FTP clients

- Some FTP clients may have FTP command specifications different from those described in this manual. In such a case, check the functions and operation methods, referring to the manuals for the FTP client.
- An FTP operation from Microsoft[®] Internet Explorer is not allowed. If it is attempted, an error will occur in Internet Explorer.

(2) CPU module side processing

- · Files only in the drives of the host station CPU module can be accessed.
- During file access, do not power off the CPU module, reset the CPU module, or remove an SD memory card. Doing so may corrupt the file. Stop accessing to an SD memory card, and then power off the CPU module, reset the CPU module, or remove an SD memory card. All of SD memory card operations can be disabled by SM606 (SD memory card forced disable instruction). For the forced disablement of SD card, refer to the following.

MELSEC-L CPU Module User's Manual (Hardware Design, Maintenance and Inspection)

- During file access, do not operate the file from a peripheral such as a programming tool. (Also do not
 perform online operations such as online change, scam time measurement, registration of the step number
 set for a monitoring condition). If the file is operated during operation of the FTP function, an error may occur
 in the peripheral. Perform the processing suspended due to an error again after performing the FTP function.
- If an access is attempted from an FTP client during backup or restoration for the CPU module change function using an SD memory card, an error will occur.
 Reexecute it after completion of the backup or restoration.
 An error will also occur if backup or restoration is performed during access from an FTP client.
 In that case, reexecute it after disconnecting the FTP client.

(3) Communication processing

- If a timeout error occurs during file transfer, the TCP connection will be closed (disconnected). To restart the file transfer, log in to the CPU module once again from the FTP client.
- For each FTP connection, the existence of the target device is checked. For details, refer to: F Page 26, Section 3.5
- The processing time for file transfer depends on the factors such as the Ethernet line congestion, the number of connections simultaneously used (communication processing of other connections), and the system configuration.
- Only one FTP client can log in to a CPU module at the same time. If another FTP client attempts to connect to a CPU module that is already in the logged-in state, the connection cannot be established, resulting in an error.
- An attempt to execute another communication (MELSOFT connection or MC protocol) using UDP during file transfer using FTP may cause an error such as a timeout error.
 Execute it after completion of the file transfer, or use TCP.

(4) File writing

- An existing file cannot be overwritten and saved.
- Either delete a file with the file delete command (delete or mdelete) or rename the file with the file rename command (rename), and then write the file.
- Writing is not allowed to read-only files and files locked by a function other than FTP. If attempted, a write error occurs.
- File transfer (writing a file) cannot be executed when the SD memory card is write-protected. If attempted, a write error occurs.
- When a file is written, a temporary file (FTP_I***.TMP) is created automatically. This file is renamed to the desination file name upon completion. However, if power failure or reset of the CPU module occurs during the file writing, this temporary file may remain. If this occurs, delete the temporary file.
- Before writing or deleting data to the file register in the standard RAM, set the CPU module to STOP.
- When the file register in the standard RAM is set as an auto refresh device, do not perform any writing or deletion to the corresponding drive.
- When writing a large file to an SD memory card, set the CPU module to STOP. If writing is performed in the RUN state, a communication error may occur.

(5) File deletion

- The timing for deleting files must be determined by the user, considering the overall system including the CPU module and programming tool.
- A file cannot be deleted if the SD memory card is write-protected. If attempted, an error occurs.

(6) Password for FTP

When you forgot the FTP password, set the FTP parameters again by the following steps.

- **1.** Read out the parameters from the CPU module to the programming tool.
- **2.** In the FTP Parameter Setting dialog box, click the "Default" button to return all the FTP parameters to default values.

C Project window (Parameter] (PLC Parameter] (PLC Parameter] (PLC Parameter) (

- **3.** Configure the FTP parameter settings again.
- **4.** Write the parameters to the CPU module from the "Write to PLC" screen.

[™] [Online] <> [Write to PLC]

5. Power off and then on or reset the CPU module to enable the parameters.

CHAPTER 9 REMOTE PASSWORD

A remote password is checked when a connection is requested for the following.

- Communication using a programming tool
- · Communication using MC protocol
- File transfer (FTP)

Point P

The remote password function is one of the preventive methods against unauthorized access (e.g. destruction of data and programs) from external devices.

However, this function cannot completely prevent unauthorized access.

Other preventive measures should be taken at users' discretion if security of the programmable controller system needs to be maintained against unauthorized access from external devices. We cannot be held responsibility for any problems caused by unauthorized access.

[Examples of measures against unauthorized access]

- · Install a firewall.
- Set up a personal computer as a relay station, and control the relay of communication data using an application program.
- · Set up an external device that can control access rights as a relay station.
- For devices that can control access rights, please consult your network service provider or networking equipment vendors.

9.1 Communication Using Remote Password

Communication is performed in the order described below when a remote password is set for the CPU module.

(1) Allowing access (unlock processing)

On a communication device such as a personal computer, unlock the remote password set for the CPU module. If it is not unlocked, an error will occur on the connected device because the CPU module will prohibit any access.

(2) Access processing

Access the CPU module after completion of the remote password unlock processing.

(3) Prohibiting access (lock processing)

Enable/ Disable

Remote password

check

When terminating access from the personal computer, lock the remote password to prohibit an access from any other personal computers.

CC-Link



Remote password

parameter

9.2 Remote Password Setting

(1) Setting a remote password

Set a remote password and a target connection in the programming tool, and write the data to the CPU module.

[™] Project window ⇔ [Parameter] ⇔ [Remote Password]

Remote Password Setting								
Password Setting Password Setting Password Active Mod	Character in passwo 4 charact a-z, Speci lule Setting	s that can be used rd ers. Numbers, A-Z al characters.						
Model Name	StartXY	Condition						
LCPU	·	Detail						
	r							
	-							
	,							
	-							
· · · · · ·	-							
Necessary Setting(No Setting / Already Set)								
Clear	End	Cancel						

				-					
emote Password	Detail Setting								
User Connection N	0.								
Connection 1 Connection 5 Connection 9 Connection 13	Connection 2 Connection 6 Connection 10 Connection 14	Connection 3 Connection 7 Connection 11 Connection 15	Connection 4 Connection 8 Connection 12 Connection 16						
System Connection									
MELSOFT Tran	smission Port(TCP/IP)								
MELSOFT Tran	smission Port(UDP/IP)								
FTP Transmissio	FTP Transmission Port/TCP/IP)								
Direct Connection	on of MELSOFT								
Regard as Error when Remote Password Mismatch Count Reaches Upper Limit									
Upper Limit of Mi	smatch	10 Count							
✓ Clear Mismatch Count when Remote Password Matches									
When the remote password is enabled, write the parameter to the PLC and reset the PLC, or turn off the power and turn on the power again.									
	End	Cancel							

	ltem	Description	Setting range	
Password Sett	ng	Enter a remote password to be set for the CPU module.*1	Up to four characters	
Password Active	Model Name	Select a CPU model to enable the remote password for the built-in Ethernet port of the CPU module. Only one CPU model is selectable.	LCPU	
Setting	Condition	Click this to display the "Remote Password Detail Setting" dialog box.	-	
User Connection No.	Connection 1 to 16	Select one of them when the remote password is to be enabled for the built-in Ethernet port. (Setting of an unused connection or MELSOFT connection is ignored.)		
	MELSOFT Transmission Port (TCP/IP) *2		Select the	
System	MELSOFT Transmission Port (UDP/IP) *2 *3	Select one of them when the remote password is to be enabled for	checkboxes	
Connection	FTP Transmission Port (TCP/IP)	the built-in Ethernet port.	appropriate to the target connection.	
	Direct Connection of MELSOFT			
Regard as Erro Reaches Uppe	r when Remote Password Mismatch Count r Limit	Select this when enabling this operation. (Useful for detecting unauthorized access) (
Upper Limit of	Mismatch	Specify the maximum number of mismatches.	1 to 65535	
Clear Mismatcl	Count when Remote Password Matches	Select the checkbox when this operation is to be performed.	-	

*1 One-byte alphanumeric and special characters can be used for remote password entry. (Case-sensitive)

*2 To enable the remote password for the port for which the open system is set to "MELSOFT Connection" in PLC Parameter, select the following checkbox. When Protocol is set to "TCP" → "MELSOFT Transmission Port (TCP/IP)".

When Protocol is set to "UDP" \rightarrow "MELSOFT Transmission Port (UDP/IP)".

*3 When connecting the CPU module and a GOT via Ethernet, do not select "MELSOFT Transmission Port (UDP/IP)".

*4 Select this checkbox to enable the remote password for the CPU module that is directly connected to the programming tool using the built-in Ethernet port. (PPP Page 28, CHAPTER 4)

(2) Writing to the CPU module

Write the remote password to the CPU module from the "Write to PLC" screen.

[™] [Online]⇔[Write to PLC]

After writing the parameters to the CPU module, power off and then on or reset the CPU module to enable the parameters.

(3) Unlocking or locking the remote password

The remote password is unlocked or locked from an external device such as a personal computer, as described below.

(a) When using MELSOFT connection

Enter a remote password in the following dialog box that appears during communication.

When the remote password is entered, the programming tool performs unlock processing and then accesses the CPU module

Enter remote password	×
Remote password incorrect. Enter again.	Execute
	Cancel
Remote password	

(b) When using MC protocol

Use commands dedicated to MC protocol. (FP Page 34, Section 5.2.1)

(c) When using the FTP function

Use the "password-lock" and "password-unlock" commands. ([] Page 96, Section 8.4.1)

(d) When using the simple PLC communication function

Unlock the remote password in the "Destination Setting List" dialog box of Simple PLC Communication Setting.

Project window <> [Parameter] <> [PLC Parameter] <> [Built-in Ethernet Port Setting] <> [Simple PLC Communication Setting] <> [Destination Setting List]

Desti	nation Setting List									X
						IP Addre	ss/Port No. In	put Format	DEC 💌	
		Τ			Network		Remote	Host Station		•
No.	Module Type		IP Address	Port No.	No.	Station No.	Password	Port No.	Host Station No.	
:	MELSEC-Q/L (Built-in Ethernet Function)	-	No Setting				No Setting			
		-								
		•								
		-	Remote Dass	word Setting						
		-	Remote P dast	voru setting						_
		1	-			- H				
			Remote Pa	assword		- H				
		-	1	,		- E				
10		-			Cancel					
1		-		<u> </u>						
12		-								
13		-								
14		-								
15		•								
16		•								
1.		-								
10		1								
20										•
Degu	red Settings (Upset / Set)	Opti	ional Settings (Ups	ot / Set)					
noqu	in source of sou	opu	iona socarigs (one		·					
			Check	ОК	Car	ncel				
						_				

9.3 Precautions

(1) When a remote password is set for UDP connections

- Determine a target device before data communication. (The communication target needs to be determined because, after unlocking of the remote password, communication is available with any other devices.)
- At the end of data communication, always lock the remote password.
 (If the lock processing is not performed, the unlock state is held until a timeout occurs. No communication for 10 minutes causes a timeout, and the CPU module automatically performs lock processing.)

To prevent unauthorized access using the remote password setting, it is recommended to set all connection protocols to TCP/IP and disable direct connection with the parameter.

(2) When a TCP/IP connection is closed before lock processing

The CPU module automatically performs lock processing.

9.4 Detection of Unauthorized Access and Actions

When the remote password mismatch count reaches the upper limit in unlock processing, "REMOTE PASS FAIL" (error code: 2700) is detected.

If this occurs, unauthorized access from the outside of the system can be considered as a cause of the error.

Take the following actions as needed.

- **1.** Monitor the Remote password count (SD979 to SD999) and identify the connection of which remote mismatch count has reached the upper limit in unlock processing.
- **2.** Stop the communication by disabling the connection as shown below.
- Select the connection in the "Ethernet diagnostics" dialog box, and force it to be deactivated.

(Common)) (GX Works2 Version1 Operating Manual (Common))

Ethernet Diagnostics										
C Module No. 1st Module	<u> </u>) I/O Address 👖	0000	€ CP	U PLC	No.1 💌	Change IP #	Address Display – C HEX		
Parameter Status Error History Status of Each Connection Connection Status Time Setting Status										
Connection No. /Function	Host Station Port No.	Destination IP Address	Destination Port No.	Latest Error Code	Protocol	Open System	TCP Status	Remote Password Status	Unlock Error Count	Forced Deactivation Status
1		192.168.3.1	05AC		TCP	MELSOFT Connection	Connecting	Invalid or Locked	0	Allowed
2										
3										
4										
5										
6										
7										
8										
9										
10										
11										
12										
13										
14										
15										
16										
FTP		0.0.0.0					Disconnected	Invalid or Locked	0	Allowed
MELSOFT Direct Connection		0.0.0.0						Invalid or Locked	0	Allowed
Clear Latest Error Code Clear Unlock Error Count Disable Deactivation of Selected Row Force Deactivation of Selected Row										
PING Test Loop Test	COM.E	RR Off			Start Mo	nitor Stop Monito	r			Close

♥ [Diagnostics] ⇒ [Ethernet Diagnostics] ⇒ "Status of Each Connection"

- Turn on the force deactivation flag of the connection in the special register (SD1276, SD1277).
- **3.** Clear the "REMOTE PASS FAIL" error (error code: 2700).

The remote password count (SD979 to SD999) is also cleared.

4. Inform your system administrator that the number of unlock processing failures exceeded the limit, and take appropriate actions.

Point P

If the error is detected due to frequent incorrect typing by authorized users, prevent this by the following operations.

- Enable "Clear Mismatch Count when Remote Password Matches" in the "Remote Password Detail Setting" dialog box.
- · Clear the accumulated count of remote password mismatches using the special relay (SM1273).

CHAPTER 10 SIMPLE PLC COMMUNICATION FUNCTION PNote10.1

The simple PLC communication function allows data communications between specified devices at the specified timing just by doing simple settings from a programming tool. Specify one device (transmission source) to one device (transmission destination). The communications are performed between the specified devices. The communications using this function are not possible when a stop error occurs in the CPU module where the parameters are set.



Point P

The communications using this function are possible only for the CPU modules connected with Ethernet cable. The following communications are not possible.

- · Communication with a CPU module on other stations via CC-Link network.
- · Communication with a CPU module except the connected Built-in Ethernet port QCPU when multiple CPU system is configured.
- · Communication with a CPU module that does not control the connected Ethernet module when multiple CPU system is configured.

Remark

- The communications can be performed only with a Mitsubishi programmable controller. The communications with the programmable controllers manufactured by other companies are not possible. (Page 119, Section 10.1 (3) (b))
- Access via routers is also possible. For the access, set the subnet mask pattern and the default router IP address. Page 25, Section 3.4)

Note10.1 LCPU

Check the versions of the CPU module and GX Works2 when using the simple PLC communication function.

(Page 134, Appendix 3)

10.1 Setting Method

To use this function, configure the settings in "Simple PLC Communication Setting". Up to 64 devices can be set in "Simple PLC Communication Setting".

🏷 Project window 🗢 [Parameter] 🖒 [PLC Parameter] 🖒 [Built-in Ethernet Port Setting]

[Base Setting]

Simple	Simple PLC Communication Setting																	
Host St	Host Station IP Address:																	
	IP Address/Port No. Display Format DEC Besic Extended Extended																	
Setting	Communication	Communicati	ion Setting:	De	stinal	ion			Bit Devid	се					Word De	evice		-
No.	Pattern	Execution In	terval (ms)/	(IP	Addr	ess)		Tran	sfer from		Tran	nsfer to		Trans	fer from		Tran	15
		Request	Contact	Transfer from	->	Transfer to	Points	Туре	Start No.	·> [Туре	Start No.	Points	Туре	Start No.	->	Туре	9
1	-		•	-	->	-		•	-	->	•			•		->		6
2	-		•	-	->	-			-	->	-			•		->	-	6
3	-		•	-	->	-			-	->	-			•		->	-	1
4	-		-	•	->				-	->	-			-		->	-	6
5	-		-	•	->				-	->	-			-		->	-	C
6	-		-	•	->				-	->	-			-		->	-	E
7	-		-	-	->	-			-	->	-			-		->	-	6
8	-		-	-	->	-			-	->	-			-		->	-	- T
																	-	
Laten	Latency Time Comments for the specified setting No. Latency Time s (0s to 255s)																	
		Destination S	Setting List	Batch Assignment		Clear Che	eck		Appl	ly			Cancel]			

[Extended Setting]

Sim	ple P	LC C	ommunication Setti	ing												×
Hos	t Stal	ion IF	Address: LEC. Not. 3.24													
										IP Address,	/Port No. Disp	olay Format DE	:C 💌	Basic	Extended	
Set	ing F	leque	st Contact Device to Stop	Execu	tion Status Flag	Status !	Save Destination	Exec	utio	n Interval (Current Value)		Communication	Communication			
N	o.	Fixed	Interval Communication		Device		Device		5av	e Destination Device	Protocol	Time-out	Retry		C	om
		Туре	Device No.	Туре	Device No.	Туре	Device No.	Тур	э	Device No.	1	Time (ms)	Count			
	L [•		•	-			-							
	2		•			-			-							
	3		•			-			-							
	ŧ		•			-			-							
	5		•			-			-							
	5		•		•	-			-							
	7		,			-			-							
	3		,		•	-			-							-
•													1			•
	tenco	Time				Commer	ts for the specifi	ed set	ina	No.						
L	atenc	y Time	e O s	(0s to 2	55s)											
			,													
			Destination Se	tting List	Batch Ass	ignment	Cle	ar		Check		Apply	Cano	el		

Simple PLC Communication Setting consists of Base Setting (essential) and Extended Setting (optional). To switch the

dialog boxes, use the Basic / Extended

/ Extended button on the top right of the dialog box.

(1) Communication Pattern

Select it from the following items.

Setting item	Description
Read	Read the data of the specified destination device (transmission source) to the specified device of the host station (transmission destination).
Write	Write the data of the specified device of the host station (transmission source) to the specified destination device (transmission destination).
Transfer	Read the data of the specified destination device (transmission source) and write it to another specified destination device (transmission destination). ^{*1}

*1 The device data is not reflected in the CPU module where the parameters are set (the CPU module that relays the data).

(2) Communication Setting: Execution Interval (ms)/Request Contact

Select the communication timing from the following items.

Se	etting item	Description	Setting range
Fixed Interval		Data are communicated between the devices at a specified execution interval.	-
	Execu-tion Interval	Execution interval is set.	10ms to 65535ms (1ms unit)
On	Request	Data are communicated between the devices only when requested.	-
	Request Contact ^{*1}	Data are communicated at the rising (OFF to ON) of the device that is specified as Request Contact. The ON/OFF status of Request Contact is confirmed in the END processing.	Х, М, В

*1 Request Contact cannot be specified overlapped with the following devices.

Request Contact Device to Stop Fixed Interval Communication

Execution Status Flag Device

 $\ensuremath{\cdot}$ Source device when the host station is a transmission destination device

- Request Contact Device to Stop Fixed Interval Communication that is used for other setting No.
- Execution Status Flag Device that is used for other setting No.

• Source device when the host station is a transmission destination device, which is used for other setting No.

Point P

• Actual time of execution interval may be longer than the value of the setting because the time is affected by the specified devices or Ethernet line congestion. For the preventive measures, refer to the troubleshooting described in the following manual.

MELSEC-L CPU Module User's Manual (Hardware Design, Maintenance and Inspection)

If latency time is set, data communication is started after the latency time has passed. (Page 127, Section 10.1 (12))

(3) Register Destination

(a) Setting of devices for communications

Set the devices for both transmission source and transmission destination. Up to 64 devices can be registered. This setting also can be done in "Destination Setting List" dialog box that will open by clicking <u>Destination Setting List</u> button in "Simple PLC Communication Setting" dialog box. Use Destination Setting List dialog box as well to change the setting information.

Register Destination							
Registration No. 1 IP Address/Port No. Input Format							
Module Type							
IP Address							
Port No.							
Network No.							
Station No.							
Remote Password (*)							
Host Station Port No.							
Host Station							
Set the field marked with (*) as needed.							
Register Cancel							

Setting item	Description	Setting range		
IP Address/Port No. Input Format	Select the input format of IP address and port No.	DEC/HEX		
Module Type	Select the device for communications.	[Page 119, Section 10.1 (3) (b)		
IP Address	Set the IP address of the device.	0.0.0.1 to 223.255.255.254		
Port No.	Set the port No. of the device.	0401_{H} to 1387_{H} , 1392_{H} to FFFE _H		
Network No.	Set the network No. of the device (host station).	1 to 239		
Station No.	Set the station No. of the device.	1 to 64		
Remote Password	If a remote password is set for the destination device, the communication is possible by entering the password.	4 characters or less (one-byte alphanumeric and special characters)		
Host Station Port No.	Set the port No. of the host station.	0401_{H} to 1387_{H} , 1392_{H} to EFFF _H		
Host Station No.	Set the station No. of the host station.*1	1 to 64		

*1 Set the station number not to overlap the numbers set for other devices on the same Ethernet network (such as Ethernet module, programming tool, and GOT).

Point *P*

If the L/Q/QnA series modules are used for the simple PLC communication, $F000_H$ to $FFFE_H$ is automatically selected for the port No. of the host station. Therefore, when using the simple PLC communication function, do not set $F000_H$ to $FFFE_H$ to Host Station Port No. for the establishing a connection instruction (SP.SOCOPEN) of the socket communication function. If $F000_H$ to $FFFE_H$ is set, the instruction may not be completed properly.

(b) Model Type List

The following table shows the communication devices and specifications applicable to each model.

Model Type	Device for communications	Communication specification	
MELSEC-Q/L (Built-in Ethernet	QCPU (Built-in Ethernet port)		
Function)	LCPU		
	Basic model QCPU + Ethernet module		
	High Performance model QCPU + Ethernet module	MELSOFT connection	
	Process CPU + Ethernet module		
	Universal model QCPU + Ethernet module		
MELSEC-QnA (Ethernet Module)	QnACPU + Ethernet module		
	ACPU + Ethernet module	MC protocol A-	
MELSEC-A (Ethernet Module)	High Performance model QCPU (A mode) + Ethernet module	compatible 1E frame (binary code communication)	

(c) Setting for each device for communications

The settings vary depending on the device for communications.

O: Setting is required. A: Setting is required if the password is set for destination device for communications. X: Setting is not required.

	Setting item					
Device for communications	IP Address	Network No.	Station No.	Port No.	Remote Password	
MELSEC-Q/L (Built-in Ethernet Function)	0	×	×	×	Δ	
MELSEC-Q (Ethernet Module)	0	O ^{*1*2}	O ^{*1*2}	×	Δ	
MELSEC-QnA (Ethernet Module)	0	O ^{*1*2}	O ^{*1*2}	×	×	
MELSEC-A (Ethernet Module)	0	×	×	O ^{*1}	×	

*1 Setting of the host station is required.

*2 For "MELSEC-Q (Ethernet Module)" and "MELSEC-QnA (Ethernet Module)", settings of these items in "Simple PLC Communication Setting" are required because these modules perform communication processing by using the network No. and the station No.



(4) Settings for destination devices for communications

If following devices are used as the destination devices for communications, the settings of these devices are also required.

Destination	Necessary setting					
device for communications	Parameters	Programming tool	DIP switch on the front of the module			
MELSEC-Q/L (Built-in Ethernet Function)	Set the following items (for the numbers of the devices) in "Open Setting". ^{*1} • Protocol: "UDP" • Open System: "MELSOFT Connection"					
MELSEC-Q (Ethernet Module)	Set the following items from the Ethernet setting of Network Parameter. • "Send Frame Setting" of "Operation Setting": "Ethernet(V2.0)" • "Station No.<->IP Information System" of "Station No.<->IP Information": "Automatic Response System"					
MELSEC-QnA (Ethernet Module)	Set the following items from the Ethernet setting of Network Parameter. • "Send Frame Setting" of "Operation Setting": "Ethernet (V2.0)" • "Station No.<->IP Information System" of "Station No.<->IP Information": "Automatic Response System"	 Create an initial processing program and turn off the bits (6 and 7) in the special function setting area (address: 4(4_H)) of buffer memory. Turn on the bit 15 in the exchange instruction area during STOP (address: 103(67_H)) of buffer memory.^{*4} 	 Set the following items. SW3 (Automatic start up mode setting): ON^{*3} SW7 (CPU exchange timing setting): ON^{*2} 			
MELSEC-A (Ethernet Module) ^{*5}		 Createv an initial processing program and do the settings as shown below. Set the IP address and the port No. by referring (3) in this section. Set "UDP" for the communication method. Turn on the bit 15 in the exchange instruction area during STOP (address: 496(1F0_H)) of buffer memory, and the bits corresponding to the connection No. used for bits 0 to 7.^{*4} 	Set the following items. • SW2 (Data code setting): OFF • SW7 (CPU exchange timing setting): ON ^{*2}			

*1 The module has the setting by default to communicate with one device whose protocol is "UDP".

*2 To execute the simple PLC communication function when the CPU module (destination device for communications) is in RUN state, turn on this switch.

*3 If Ethernet module is in Automatic startup mode, turn on this switch.

*4 To execute the simple PLC communication function when the CPU module (destination device for communications) is in STOP state or in stop error state, turn on the bits.

*5 The module cannot communicate regardless of the setting if a stop error occurs in it.

(5) Available devices

The devices that can be specified as transmission source and transmission destination vary depending on the destination device for communications. Both a bit device and a word device can be set for the same setting No. Set the total points of setting No.1 to No.64 (up to 4096 words^{*1}) for the device points.

*1 The maximum number that can be set for each setting No. is 512 words. (Maximum points of a word device: 256 points + Maximum points of a bit device: 4096 points)

Destination device for communications	Туре	Available device ^{*2}
	Bit device	X, Y, M, L, B, SB, SM
MELSEC-Q (Ethernet Module), MELSEC-Q/L (Built-in Ethernet Function)	Word device	D, D (extended data register) ^{*3} , W, W (extended link register) ^{*3} , R, ZR, SW, SD
MELSEC On (Ethornot Modulo)	Bit device	X, Y, M, L, B, SB, SM
	Word device	D, W, R, ZR, SW, SD
MELSEC-A (Ethernet Module)	Bit device	X, Y, M ^{*4} , B
	Word device	D, W, R

*2 The size of a bit device and a word device can be specified in units of 16 points and one point respectively. Use 0 or multiples of 16 to specify the device number of a bit device.

*3 The devices are compatible with the following modules:

Universal model QCPU whose serial number (first five digits) is "09042" or later (except the Q00UJCPU)
 LCPU

*4 Use "M9000 + multiples of 16" when specifying the device of M9000 or later.

Point P

- Do not write any data to the special relay and the special register that are set on the system side. Doing so may cause a system failure or communication failure.
- For I/O processing when X and Y are specified as transmission destination, refer to the following:
 MELSEC-L CPU Module User's Manual (Function Explanation, Program Fundamentals)

(a) Timing of write or read of the device data

The data of a bit device and a word device set for each setting No. are communicated in the END processing.^{*1} Even so, depending on the destination device for communications, data communications for one setting may not be done completely, resulting in data inconsistency.

Destination device for	Devic	e data	Data inconsistency for one setting	
communications	Bit device	Word device	Data inconsistency for one setting	
MELSEC-Q/L (Built-in Ethernet Function)	Data of a bit device and a word device are guaranteed to be communicated by setting unit.		Data inconsistency of a bit device and a word device is the same level because the data of both devices are communicated at the same timing.	
MELSEC-Q (Ethernet Module) MELSEC-QnA (Ethernet Module)	Data of a bit device are guaranteed to be communicated by setting unit.Data of a word de are guaranteed to communicated by setting unit.		 If both a bit device and a word device are set for the same setting No., the level of data inconsistency of both devices may be different because the data of each device is communicated at different timing.^{*2} 	
MELSEC-A (Ethernet Module) ^{*5}	Within the setting range, data of a bit device are guaranteed to be communicated in units of 32 bits (2 words).	Within the setting range, data of a word device are guaranteed to be communicated in units of 2 words.	 If both a bit device and a word device are set for the same setting No., the level of data inconsistency of both devices may be different because the data of each device is communicated at different timing.^{*2} If the data of 32 bits (2 words) or larger is communicated, data inconsistency might differ in units of 32 bits (2 words).^{*3} 	

*1 If the COM instruction is used, the data are written or read not only in the END processing but also during sequence scan (at the execution of the COM instruction).

*2 The order of the write and read is shown below.

• When "Write" is set for Communication Pattern: A word device comes first, then a bit device.

• When "Read" is set for Communication Pattern: A bit device comes first, then a word device.

• When "Transfer" is set for Communication Pattern: The host station reads the data of transmission source in order of a bit device and a word device, and writes them to transmission destination in order of a word device and a bit device.

*3 Because the write and read is performed from the data with smaller device number, use the device with the largest No. to secure the data.

(6) Request Contact Device to Stop Fixed Interval Communication

Select the device from X, M, B and specify it as Request Contact Device to Stop Fixed Interval Communication^{*1} If "Fixed Interval" is set for Communication Setting, the communications for the specified setting No. temporarily stop when Request Contact Device to Stop Fixed Interval Communication turns on. The communications re-start when Request Contact Device to Stop Fixed Interval Communication turns off. The ON/OFF status is confirmed in the END processing. This stop request is enabled when the communication status is "Communicating" or "Error".

- *1 Request Contact Device to Stop Fixed Interval Communication cannot be specified overlapped with the following devices.
 - Request Contact
 - Execution Status Flag Device
 - · Source device when the host station is a transmission destination device
 - Request Contact that is used for other setting No.
 - Execution Status Flag Device that is used for other setting No.
 - Source device when the host station is a transmission destination device, which is used for other setting No.

Point *P*

- When communications are stopped by the request to stop fixed interval communication, the data communications at a specified execution interval, which is performed when "Fixed Interval" is set for Communication Setting, is ignored.
- The stop time by the request to stop fixed interval communication is not counted as Execution Interval (Current Value).
- If the communications are stopped by the request to stop fixed interval communication during retry of communication, the retry count is reset to 0.

(7) Execution Status Flag Device

Select the device from X, M, B and specify it as a device to store the execution status.^{*1} The ON/OFF status below indicate the execution status.

- · ON: Communicating (the state of "Status" being "3H")
- OFF: Communication Stop
- *1 Execution Status Flag Device cannot be specified overlapped with the following devices.
 - Request Contact
 - Request Contact Device to Stop Fixed Interval Communication
 - · Source device when the host station is a transmission destination device
 - Request Contact that is used for other setting No.
 - Request Contact Device to Stop Fixed Interval Communication that is used for other setting No.
 - Execution Status Flag Device that is used for other setting No.
 - · Source device when the host station is a destination device, which is used for other setting No.

Point P

For examples of how to use this device, refer to: For Page 127, Section 10.2.

(8) Status Save Destination Device

Select the device from D, D (extended data register), W, W (extended link register), R, ZR and specify it as a device to store the communication status.^{*1} The values listed below indicate the communication status.

	Setting and description				
ltem	CommunicationCommunicationStatusSetting		Description		
		Fixed Interval is set.	When waiting for the latency time to pass Or during the time until communications start after the CPU module is powered off and on or reset		
1 _H	Preparing	On Request is set.	When waiting for the latency time to pass Or during the time until communications start after the CPU module is powered off and on or reset (including the waiting time of check if the hub is connected or not)		
2 _H	Waiting for the Request	Only On Request is set.	When waiting for the communication request by Request Contact		
3		Fixed Interval is set.	When device data communications at a specified execution interval are possible		
ЪН	Communica-ting	On Request is set.	When device data are communicated according to the states of Request Contact		
4 _H	Communica-tion Stop	Only Fixed Interval is set.	When the simple PLC communication function is stopped by the request to stop fixed interval communication		
Error Code No.	The corresponding e	error code is stored.			

*1 Status Save Destination Device cannot be specified overlapped with the following devices.

Status Save Destination Device

• Execution Interval (Current Value) Save Destination Device

Source device when the host station is a transmission destination device

Status Save Destination Device that is used for other setting No.

• Execution Interval (Current Value) Save Destination Device that is used for other setting No.

• Source device when the host station is a transmission destination device, which is used for other setting No.

Point P

For examples of how to use this device, refer to: F Page 127, Section 10.2.

(9) Execution Interval (Current Value) Save Destination Device

Select the device from D, D (extended data register), W, W (extended link register), R, ZR and specify it as a device to store Execution Interval (Current Value).^{*1}

Execution Interval (Current	nterval" is set for Communication Setting, the actual execution interval of the
Value) is stored.	ations is stored. If the communications have never been performed properly, "0"

*1 Execution Interval (Current Value) Save Destination Device cannot be specified overlapped with the following devices. • Status Save Destination Device

- Execution Interval (Current Value) Save Destination Device
- Source device when the host station is a transmission destination device
- Status Save Destination Device that is used for other setting No.
- Execution Interval (Current Value) Save Destination Device that is used for other setting No.
- Source device when the host station is a transmission destination device, which is used for other setting No.

Point P

For examples of how to use this device, refer to: \square Page 127, Section 10.2.

(10)Time-out period and Retry count

Setting item	Description	Setting range
Time-out Period	Set the time interval until an error is detected or the retry of communication is performed when the destination device for communications does not respond or communications fail.	10ms to 65535ms (1ms unit) ^{*1}
Retry Count	Set the number of communication retry to be performed when the destination device for communications does not respond or communications fail.	0 to 255*2

*1 When the destination device for communications is "MELSEC-A (Ethernet Module)", the value is fixed at 65535ms.

*2 When the destination device for communications is "MELSEC-A (Ethernet Module)", the value is fixed at 0.

Ex. Error detection timing when 2 is set for Retry Count



Point /

The error is detected if the destination device does not respond or communications fail by when the following time has passed:

(Retry Count + 1) × Time-out Period

(a) Precautions for retry of communication

- Communications at a specified execution interval (when "Fixed Interval" is set for Communication Setting) or communications according to the ON status of Request Contact (when "On Request" is set for Communication Setting) are ignored during retry of communication because that period is regarded as Timeout Period.
- During retry of communication, the data at the time of communication error is sent to the destination device (for writing of device data) and the data at the time of the retry of communication is received (for reading of device data).

(11)Comment

Comment can be set by entering up to 32 one-byte characters (16 double-byte characters).

(12)Latency Time

By setting the latency time, the start timings of the communications can be shifted so that the errors due to concentration of the communications are prevented. During the latency time, "Preparing" is indicated in Communication Status.

Setting item	Description	Setting range	
Latency Time	Set the time required to start communications after completion of the CPU module startup.	0s to 255s (1s unit)	

Point P

Communications at a specified execution interval (when "Fixed Interval" is set for Communication Setting) or communications at the rising (OFF to ON) of Request Contact (when "On Request" is set for Communication Setting) are ignored during the latency time.

10.2 Program to check communications

This section shows the program used to check communications when "On Request" is set for Communication Setting.

(1) Devices used for the program

Device number	Application
M0	Request Contact for setting No.1
M100	Execution Status Flag Device for setting No.1
M200	Flag to check if Request Contact turns on (when Status is "Communicating")
D1000	Status Save Destination Device for setting No.1

(2) Program example



10.3 Diagnostics

The communication status of the simple PLC communication function can be checked in "Simple PLC Communication Status" tab of the "Ethernet Diagnostics" dialog box.

♥ [Diagnostics] ⇔ [Ethernet Diagnostics]

For detail on Ethernet diagnostics, refer to the following.

GX Works2 Version1 Operating Manual (Common)

10.4 Errors related to the simple PLC communication function

If an error related to this function occurs, it is not regarded as a diagnostic error in the CPU module. Instead the simple PLC communication status (the corresponding error code) is stored.

(1) Errors caused by the operation status of the CPU module or the operations of each function

The errors are not stored in the history of Ethernet diagnostics.

Error code	Error item	Error timing	Description	Corrective action	
4900H		When the parameters are written from the "Write to PLC" window	After the values in "Device" of PLC Parameter of the CPU module, where the simple PLC communication function had been set, were changed, the parameters were written to the CPU module from the "Write to PLC" window.	Power off and on the CPU module. Or reset the CPU module.	
4901H	Other errors	Other errors	If an error related to the simple PLC communication function occurs (at corresponding setting No.)	The file register used for the simple PLC communication function became out of range due to the block number change of the file register.	Correct the device number of the file register. And power off and on the CPU module or reset the module.
4902H		If an error related to the simple PLC communication function occurs (at the other setting No.)	The communication was stopped because an error occurred at the other setting No., for which the same destination device of the corresponding setting No. had been set.	Remove the error cause.	
4903H		If a stop error occurs	The communication was stopped because a stop error occurred in the CPU module where the simple PLC communication function had been set.	Power off and on the CPU module. Or reset the CPU module.	

(2) Errors caused by communication failure

The errors are stored in the history of Ethernet diagnostics. The error codes to be stored are the same as those of communication related errors. For error descriptions and the corrective actions, refer to the following. MELSEC-L CPU Module User's Manual (Hardware Design, Maintenance and Inspection)

(3) Operations after the error

After the occurrence of the error, if the conditions are restored for proper communications, data communications are re-started at the following timing.

- When "Fixed Interval" is set for Communication Setting: At the timing of the execution interval
- When "On Request" is set for Communication Setting: At the rising (OFF to ON) of Request Contact

10.5 Precautions

This section provides precautions for the simple PLC communication function.

(1) The timing when the settings are enabled

The settings for this function are enabled at the following timing.

- · When powering off and on the CPU module
- · When resetting the CPU module

Even if the values of the settings are changed and the CPU module state is changed from STOP to RUN during execution of this function, the CPU module keeps operating with the previous settings. If the device setting of PLC parameter is changed and the parameters are written from the "Write to PLC" window, though, an error (error code: $4900_{\rm H}$) is detected while the parameters are being written.

(2) Communications with other CPU modules

The communications are possible only between the CPU modules connected with Ethernet cable. (Communications with the other CPU modules cannot be performed through the CPU module connected with Ethernet cable.)

(3) Device data

If the COM instruction is used, not only the data in the END processing but also the data during sequence scan (at the execution of the COM instruction) are subjected to communications. Therefore, if you want to use exact data in the END processing for the program, conduct following operations.

[Transmission source] For the program, use a different device from the one specified for this function. At the end of the program (just before the END), reflect the data of that device to the one specified for this function. [Transmission destination] At the beginning of the program, reflect the data of the device specified for this function to the other device, and use that device for the program.

(4) Incomplete data reception and timeout

Because the load of Ethernet communication becomes heavy during the simple PLC communication, if the other communication (MELSOFT connection or MC protocol) is simultaneously performed by using protocol UDP, the data reception of UDP may not be completed, resulting in a timeout error. Therefore, to perform other communications during the simple PLC communication, the communication using TCP is recommended. Also conduct following operations to reduce Ethernet communication load.

- · Increase the execution interval of the simple PLC communication.
- Reduce the number of device points for communication.

(5) Communication stop

For a certain setting No., if the device is waiting for the response of the destination device due to power off of the module, cable disconnection, or power off of the hub, communications for the other setting No. might be stopped for 1000ms.

(6) Errors at the destination device

If an error related to this function occurs, following errors might be detected at the destination device.

- When the destination device is L/Q series: Remote password mismatch error
- When the destination device is A series: Device number specification error

Also, an error might be detected depending on the settings of the destination device or the conditions of Ethernet communication.

APPENDICES

Appendix 1 Operation Processing Time for Each Instruction

The table below indicates the operation processing times required for the instructions introduced in this manual. For the concept of the LCPU operation processing time, refer to the following manual.

MELSEC-Q/L Programming Manual (Common instructions)

		Condition		Processing time(µs)			
Туре	Instruction			L02CPU,	L02CPU-P	L26CPU-BT, L26CPU-BT	
				Minimum	Maximum	Minimum	Maximum
			Active		58.90		
		TCP	Unpassive	27.20		23.50	45.50
	SP.SUCUPEN		Fullpassive	27.20			
		UDP					
			From the host CPU				43.80
	SP.SOCCLOSE	ТСР	From the connected device	18.90	56.60	16.60	
		UDP					
	_	тор	1 byte		50.70	15.40	
	SP.SOCRCV	TCP	2046 bytes	16.90			39.20
		UDP	1 byte				
Instructions for			2046 bytes				
the socket		тор	1 byte	16.30	46.30	16.00	35.20
communication	S SOCROVS	TCP	2046 bytes	504.30	532.60	394.20	413.20
function	5.50CRCV5	מחוו	1 byte	16.30	46.30	16.00	35.20
		UDP	2046 bytes	504.30	532.60	394.20	413.20
		ТСР	1 byte	45.70	61.30	36.60	48.20
			2046 bytes	379.70	395.30	267.60	278.20
	SI.5005ND	פחוו	1 byte	45.70	61.30	36.60	48.20
		UDF	2046 bytes	379.70	395.30	267.60	278.20
	SP.SOCCINF		-	17.10	43.70	14.70	32.30
	SP.SOCCSET		-	13.30	42.90	12.70	31.40
	SP.SOCRMODE	Standa Fixed-	ard mode $ ightarrow$ length mode	16.00	39.60	13.70	29.30
		Fixed- Standa	length mode $ ightarrow$ ard mode				
	SP.SOCRDATA	1 byte		13.00	35.60	11.30	26.10
SP.SUURDAIA		2046 bytes		500.00	521.60	389.70	404.30

Α

Port number	Application
1388н (5000)	For future extension (For Q series Ethernet modules, this port number is used for "Auto Open UDP Port".)
1389н (5001)	For future extension (For Q series Ethernet modules, this port number is used for "over UDP/IP and Ethernet module".)
138Ан (5002)	For future extension (For Q series Ethernet modules, this port number is used for "over TDP/IP and Ethernet module".)
138Bн (5003) to 138Dн (5005)	For future extension
138Ен (5006)	MELSOFT communication port (over UDP/IP and CPU module)
138Fн (5007)	MELSOFT communication port (over TDP/IP and CPU module)
1390н (5008)	MELSOFT direct connection port (over CPU module)
1391н (5009)	For future extension

The following table lists port numbers used for the system.

Appendix 3 Added and Changed Functions

The following table shows the built-in Ethernet function, which is changed or added to the CPU module and GX Works2, as well as the serial No. and software version of the CPU module and GX Works 2 that support the function.

Added function	Serial No. (first 5 digits) of CPU module	GX Works2 version	Reference
Simple PLC communication function	"13042" or later	1.62Q or later	Page 115, CHAPTER 10

Appendix 4 Performance List of Simple PLC Communication Function

This section shows the performance of the execution interval (simple PLC communication function). The execution interval varies depending on the number of settings, the number of communication points, the scan time of the CPU module. The interval is also affected by the execution conditions of other functions or Ethernet communication condition.

(1) Condition 1

- Communication Setting: "Fixed Interval"
- Destination device: "MELSEC-Q/L (Built-in Ethernet Function)" = L26CPU-BT
- Sequence scan time (host station): 1ms (the period before the execution of simple PLC communication function)
- Sequence scan time (destination device): 1ms (The destination device means both the transmission source and transmission destination for data transfer.)
- Device data: Bit device = M, Word device = D
- Number of settings: The number of destination devices (Double the number for data transfer.)
- The retry of communication is not performed.

CPU module	Communica-	Number of communication points for one	Processing time by the number of settings (unit: ms)								
	tion Fattern	setting	1	8	16						
		32 words for each ^{*1} (Total 64 words)	10.0	18.1	30.7						
	Read	64 words for each ^{*1} (Total 128 words)	10.0	18.2	31.0						
		256 words for each ^{*1} (Total 512 words)	10.0	37.8	-						
		32 words for each ^{*1} (Total 64 words)	10.0	18.2	31.0						
L02CPU, L02CPU-P	Write	64 words for each ^{*1} (Total 128 words)	10.0	18.3	31.1						
		256 words for each ^{*1} (Total 512 words)	12.0	39.2	-						
		32 words for each ^{*1} (Total 64 words)	14.0	27.3	48.6						
	Transfer	64 words for each ^{*1} (Total 128 words)	14.0	27.3	48.6						
		256 words for each ^{*1} (Total 512 words)	20.0	58.0	-						
		32 words for each ^{*1} (Total 64 words)	10.0	18.1	30.7						
	Read	64 words for each ^{*1} (Total 128 words)	10.0	18.2	31.0						
		256 words for each ^{*1} (Total 512 words)	10.0	37.8	-						
		32 words for each ^{*1} (Total 64 words)	10.0	18.2	31.0						
L26CPU-BT, L26CPU-PBT	Write	64 words for each ^{*1} (Total 128 words)	10.0	18.3	31.1						
		256 words for each ^{*1} (Total 512 words)	12.0	39.2	-						
		32 words for each ^{*1} (Total 64 words)	14.0	27.3	48.6						
	Transfer	64 words for each ^{*1} (Total 128 words)	14.0	27.3	48.6						
		256 words for each ^{*1} (Total 512 words)	20.0	58.0	-						

*1 Number of points for each device (bit device and word device)

(2) Condition 2

- Communication Setting: "Fixed Interval"
- Destination device: "MELSEC-Q/L (Built-in Ethernet Function)" = L26CPU-BT
- Sequence scan time (host station): 10ms (the period before the execution of simple PLC communication function)
- Sequence scan time (destination device): 1ms (The destination device means both the transmission source and transmission destination for data transfer.)
- Device data: Bit device = M, Word device = D
- Number of settings: The number of destination devices (Double the number for data transfer.)
- The retry of communication is not performed.

CPU module	Communica-	Number of communication points for one	Processing time by the number settings (unit: ms)								
	tion Pattern	setting	1	8	16						
		32 words for each ^{*1} (Total 64 words)	10.0	17.6	29.8						
	Read	64 words for each ^{*1} (Total 128 words)	11.0	17.9	30.2						
		256 words for each ^{*1} (Total 512 words)	11.0	37.4	-						
		32 words for each ^{*1} (Total 64 words)	10.0	18.1	30.7						
L02CPU,	Write	64 words for each ^{*1} (Total 128 words)	11.0	18.2	31.0						
		256 words for each ^{*1} (Total 512 words)	12.0	39.5	-						
		32 words for each ^{*1} (Total 64 words)	13.0	26.7	47.4						
	Transfer	64 words for each ^{*1} (Total 128 words)	14.0	26.9	47.9						
		256 words for each ^{*1} (Total 512 words)	20.0	58.3	-						
		32 words for each ^{*1} (Total 64 words)	10.0	17.6	29.8						
	Read	64 words for each ^{*1} (Total 128 words)	11.0	17.9	30.2						
		256 words for each ^{*1} (Total 512 words)	11.0	37.4	-						
		32 words for each ^{*1} (Total 64 words)	10.0	18.1	30.7						
L26CPU-BT, L26CPU-PBT	Write	64 words for each ^{*1} (Total 128 words)	11.0	18.2	31.0						
		256 words for each ^{*1} (Total 512 words)	12.0	39.5	-						
		32 words for each ^{*1} (Total 64 words)	13.0	26.7	47.4						
	Transfer	64 words for each ^{*1} (Total 128 words)	14.0	26.9	47.9						
		256 words for each ^{*1} (Total 512 words)	20.0	58.3	-						

*1 Number of points for each device (bit device and word device)

INDEX

Α

A																	4
Active open															. 4	4	L

В

binary .																										. 9	99
bye	•	•	•	•	•	•	•			•		•	•	•	•	•	•	•	•	•	•	•	•	•	•	. 9	9

С

change			103
class			30
close			99
CPU module			15
CPU-module-dedic	ated subcomn	nands	103

D

Data communication frame
delete
dir
DIRECT CONNECTION

Ε

Ethernet cable									1	8
Ethernet communication			• •		•			 -	2	20

F

FILE TRANSFER FUNCTION
FTP
FTP Commands96
FTP server support commands
Fullpassive41

G

get	 	 100
GOT	 	 20

Н

bost namo	23
hub	

Κ

L

LCPU																							. 1	5
lock processing																							11	0
ls	-	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•		•	•	10	0

Μ

MC protocol	 31
mdir	 . 100
mget	 . 101
mput	 . 101

Ν

NAK message																										. 3	33
NAK message	•	• •	•	·	·	·	·	·	•	·	·	÷	·	•	•	•	•	•	·	•	•	•	÷	•	•	. 🤇	5.

0

														10	٦4	
open														10	ונ	

Ρ

Passive open
passwd-rd
passwd-wr
password-lock
password-unlock
pm-write
Programming tool
put
pwd102

Q

quit	 	 	 	102
quote	 	 	 	102

R

recv function .	 									3	37
rename	 									. 10)2
ret	 									9	92
Routers	 									2	25
run	 									. 10)4

S

SD memory card
Searching CPU Modules 24
SIMPLE CONNECTION
Simultaneous broadcast
SNTP
SNTP CLIENT
Socket Communication Function Instructions58
status
stop
Subcommand

-	
-	Т

TCP	19
TCP fixed-length receive mode	83
TCP socket functions	37
TCP standard receive mode	83
TIME SETTING FUNCTION	87

U

UDP	•			•	•	•	•	•	•		•	•	•	•	•			•	•	•		•	•	. 19 110
Unpassive	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	·	. 41
user	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	102

W

INSTRUCTION INDEX

S

S(P).SOCRDATA
S.SOCRCVS
SP.SOCCINF
SP.SOCCLOSE
SP.SOCCSET
SP.SOCOPEN
SP.SOCRCV
SP.SOCRMODE
SP.SOCSND

REVISIONS

*The manual number is given on the bottom left of the back cover.

Print date	*Manual number	Revision
January 2010	SH(NA)-080891ENG-A	First edition
April 2010	SH(NA)-080891ENG-B	Partial correction Section 8.5
January 2011	SH(NA)-080891ENG-C	Partial correction TERMS, Chapter 2, Section 3.5, 5.1, 6.1, 6.2, 6.3, 6.4.1, 6.4.3, 6.4.4, 6.4.5, 6.4.6, 8.4.2, 8.5 Additions Appendix 2
July 2011	SH(NA)-080891ENG-D	Partial correction INTRODUCTION, Chapter 1, Section 5.2.2, 6.3, 6.4.1, 6.4.6, Appendix 1 Additions Chapter 10, Section 10.1, 10.2 10.3, 10.4, 10.5, Appendix 3, Appendix 4
September 2011	SH(NA)-080891ENG-E	Partial correction SAFETY PRECAUTIONS, RELEVANT MANUALS, TERMS, Chapter 2, Section 3.5, 5.2.2

Japanese manual version SH-080875-E

This manual confers no industrial property rights or any rights of any other kind, nor does it confer any patent licenses. Mitsubishi Electric Corporation cannot be held responsible for any problems involving industrial property rights which may occur as a result of using the contents noted in this manual.

WARRANTY

Please confirm the following product warranty details before using this product.

1. Gratis Warranty Term and Gratis Warranty Range

If any faults or defects (hereinafter "Failure") found to be the responsibility of Mitsubishi occurs during use of the product within the gratis warranty term, the product shall be repaired at no cost via the sales representative or Mitsubishi Service Company.

However, if repairs are required onsite at domestic or overseas location, expenses to send an engineer will be solely at the customer's discretion. Mitsubishi shall not be held responsible for any re-commissioning,

maintenance, or testing on-site that involves replacement of the failed module.

[Gratis Warranty Term]

The gratis warranty term of the product shall be for one year after the date of purchase or delivery to a designated place.

Note that after manufacture and shipment from Mitsubishi, the maximum distribution period shall be six (6) months, and the longest gratis warranty term after manufacturing shall be eighteen (18) months. The gratis warranty term of repair parts shall not exceed the gratis warranty term before repairs.

[Gratis Warranty Range]

- (1) The range shall be limited to normal use within the usage state, usage methods and usage environment, etc., which follow the conditions and precautions, etc., given in the instruction manual, user's manual and caution labels on the product.
- (2) Even within the gratis warranty term, repairs shall be charged for in the following cases.
 - 1. Failure occurring from inappropriate storage or handling, carelessness or negligence by the user. Failure caused by the user's hardware or software design.
 - 2. Failure caused by unapproved modifications, etc., to the product by the user.
 - 3. When the Mitsubishi product is assembled into a user's device, Failure that could have been avoided if functions or structures, judged as necessary in the legal safety measures the user's device is subject to or as necessary by industry standards, had been provided.
 - 4. Failure that could have been avoided if consumable parts (battery, backlight, fuse, etc.) designated in the instruction manual had been correctly serviced or replaced.
 - 5. Failure caused by external irresistible forces such as fires or abnormal voltages, and Failure caused by force majeure such as earthquakes, lightning, wind and water damage.
 - 6. Failure caused by reasons unpredictable by scientific technology standards at time of shipment from Mitsubishi.
 - 7. Any other failure found not to be the responsibility of Mitsubishi or that admitted not to be so by the user.

2. Onerous repair term after discontinuation of production

- (1) Mitsubishi shall accept onerous product repairs for seven (7) years after production of the product is discontinued.
 - Discontinuation of production shall be notified with Mitsubishi Technical Bulletins, etc.
- (2) Product supply (including repair parts) is not available after production is discontinued.

3. Overseas service

Overseas, repairs shall be accepted by Mitsubishi's local overseas FA Center. Note that the repair conditions at each FA Center may differ.

4. Exclusion of loss in opportunity and secondary loss from warranty liability

Regardless of the gratis warranty term, Mitsubishi shall not be liable for compensation of damages caused by any cause found not to be the responsibility of Mitsubishi, loss in opportunity, lost profits incurred to the user by Failures of Mitsubishi products, special damages and secondary damages whether foreseeable or not, compensation for accidents, and compensation for damages to products other than Mitsubishi products, replacement by the user, maintenance of on-site equipment, start-up test run and other tasks.

5. Changes in product specifications

The specifications given in the catalogs, manuals or technical documents are subject to change without prior notice.

Microsoft, Windows, Windows NT, and Windows Vista are registered trademarks of Microsoft Corporation in the United States and other countries.

Pentium is a trademark of Intel Corporation in the United States and other countries.

Ethernet is a trademark of Xerox Corporation.

The SD logo and SDHC logo are trademarks.

All other company names and product names used in this manual are trademarks or registered trademarks of their respective companies.


MELSEC-L CPU Module User's Manual

Built-In Ethernet Function

LCPU-U-NE-E

MODEL

MODEL CODE

13JZ37

SH(NA)-080891ENG-E(1109)MEE

MITSUBISHI ELECTRIC CORPORATION

HEAD OFFICE : TOKYO BUILDING, 2-7-3 MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN NAGOYA WORKS : 1-14 , YADA-MINAMI 5-CHOME , HIGASHI-KU, NAGOYA , JAPAN

When exported from Japan, this manual does not require application to the Ministry of Economy, Trade and Industry for service transaction permission.



HEADQUARTERS	
MITSUBISHI ELECTRIC EUROPE B.V. German Branch Gothaer Straße 8 D-40880 Ratingen Phone: +49 (0)2102 / 486-0 Fax: +49 (0)2102 / 486-1120	EUROPE
MITSUBISH IELECTRIC EUROPE B.Vorg.sl. CZ Czech Branch Avenir Business Park, Radlická 714/113a CZ-158 00 Praha 5 Phone: +420 - 251 551 470 Fax: +420 - 251-551-471	ECH REP.
MITSUBISHI ELECTRIC EUROPE B.V. French Branch 25, Boulevard des Bouvets F -22741 Nanterre Cedex Phone: +33 (0)1 / 55 68 55 68 Fax: +33 (0)1 / 55 68 57 57	FRANCE
MITSUBISHI ELECTRIC EUROPE B.V. Irish Branch Westgate Business Park, Ballymount IRL-Dublin 24 Phone: +353 (0)1 4198800 Fax: +353 (0)1 4198890	IRELAND
MITSUBISHI ELECTRIC EUROPE B.V. Italian Branch Viale Colleoni 7 I-20041 Agrate Brianza (MB) Phone: +39 039 / 60 53 1 Fax: +39 039 / 60 53 312	ITALY
MITSUBISHI ELECTRIC EUROPE B.V. Poland Branch Krakowska 50 PL-32-083 Balice Phone: +48 (0)12 / 630 47 00 Fax: +48 (0)12 / 630 47 01	POLAND
MITSUBISHI ELECTRIC EUROPE B.V. 52, bld. 3 Kosmodamianskaya nab 8 floor RU-115054 Moscow Phone: +7 495 721-2070 Fax: +7 495 721-2071	RUSSIA
MITSUBISHI ELECTRIC EUROPE B.V. Spanish Branch Carretera de Rubí 76-80 E-08190 Sant Cugat del Vallés (Barcel Phone: 902 131121 // +34 935653131 Fax: +34 935891579	SPAIN ona)
MITSUBISHI ELECTRIC EUROPE B.V. UK Branch Travellers Lane UK-Hatfield, Herts. AL10 8XB Phone: +44 (0)1707 / 27 61 00 Fax: +44 (0)1707 / 27 86 95	UK
MITSUBISHI ELECTRIC CORPORATION Office Tower "Z" 14 F 8-12,1 chome, Harumi Chuo-Ku Tokyo 104-6212 Phone: +81 3 622 160 60 Fax: +81 3 622 160 75	JAPAN
MITSUBISHI ELECTRIC AUTOMATION, Inc. 500 Corporate Woods Parkway Vernon Hills, IL 60061 Phone: +1 847 478 21 00 Fax: +1 847 478 22 53	USA

Г

EUROPEAN REPRESI	ENTATIVES
GEVA	AUSTRIA
Wiener Straße 89	
AI-2500 Baden Phone: ±43 (0)2252 / 85 55 20	
Fax: +43 (0)2252 / 488 60	
TECHNIKON	BELARUS
Oktyabrskaya 19, Off. 705	
BY-220030 Minsk Phone: ±375 (0)17 / 210 /6 26	
Fax: +375 (0)17 / 210 46 26	
ESCO DRIVES & AUTOMATION	BELGIUM
Culliganlaan 3	
BE-1831 Diegem	
Findle: $+32(0)2/7176431$	
Koning & Hartman b.v.	BELGIUM
Woluwelaan 31	
BE-1800 Vilvoorde	
Findle: $+32(0)2/2570240$ Fax: $+32(0)2/2570249$	
INEA RBT d.o.o. BOSNIA A	ND HERZEGOVINA
Aleja Lipa 56	
BA-71000 Sarajevo	
Phone: $+387(0)33/921164$ Fax: $+387(0)33/524539$	
	RIII GARIA
4, Andrei Ljapchev Blvd., PO Box	21
BG-1756 Sofia	
Phone: $+359(0)2/8176000$	
INEA DDT d o o	CROATIA
Losiniska 4 a	CRUATIA
HR-10000 Zagreb	
Phone: +385 (0)1 / 36 940 - 01 / -0	2/-03
AutoCont C C c t o	
Autocom C.S. S.I.O.	
Technologická 374/6	
Technologická 374/6 CZ-708 00 Ostrava-Pustkovec	
Technologická 374/6 CZ-708 00 Ostrava-Pustkovec Phone: +420 595 691 150 Exer. + 420 595 691 100	
Technologická 374/6 CZ-708 00 Ostrava-Pustkovec Phone: +420 595 691 150 Fax: +420 595 691 199 Pailiar Electronics A/C	
Technologická 374/6 CZ-708 00 Ostrava-Pustkovec Phone: +420 595 691 150 Fax: +420 595 691 199 Beijer Electronics A/S Lykkenärdsvei 17	DENMARK
Technologická 374/6 CZ-708 00 Ostrava-Pustkovec Phone: +420 595 691 150 Fax: +420 595 691 199 Beijer Electronics A/S Lykkegårdsvej 17 DK-4000 Roskilde	DENMARK
Technologická 374/6 CZ-708 00 Ostrava-Pustkovec Phone: +420 595 691 150 Fax: +420 595 691 199 Beijer Electronics A/S Lykkegårdsvej 17 DK-4000 Roskilde Phone: +45 (0)46/75 76 66	DENMARK
Technologická 374/6 CZ-708 00 Ostrava-Pustkovec Phone: +420 595 691 150 Fax: +420 595 691 199 Beijer Electronics A/S Lykkegårdsvej 17 DK-4000 Roskilde Phone: +45 (0)46/75 76 66 Fax: +45 (0)46/75 76 66 Fax: +45 (0)46/75 76 66	DENMARK
Technologická 374/6 CZ-708 00 Ostrava-Pustkovec Phone: +420 595 691 150 Beijer Electronics A/S Lykkegårdsvej 17 DK-4000 Roskilde Phone: +45 (0)46/75 76 66 Fax: +45 (0)46/75 76 66 Beijer Electronics Eesti OÜ Beiner Idoi	DENMARK
Technologická 374/6 CZ-708 00 Ostrava-Pustkovec Phone: +420 595 691 150 Beijer Electronics A/S Lykkegårdsvej 17 DK-4000 Roskilde Phone: +45 (0)46 / 75 76 66 Fax: +45 (0)46 / 75 76 66 Beijer Electronics Eesti OÜ Pärnu mnt.160i EE-11317 Tallinn	DENMARK
Technologická 374/6 C2-708 00 Ostrava-Pustkovec Phone: +420 595 691 150 Beijer Electronics A/S Lykkegårdsvej 17 DK-4000 Roskilde Phone: +45 (0)46/75 76 66 Fax: +45 (0)46/75 76 66 Beijer Electronics Eesti ÖÜ Beijer Electronics Eesti ÖÜ EE-11317 Tallinn Phone: +372 (0)6/51 81 40	DENMARK
Technologická 374/6 CZ-708 00 Ostrava-Pustkovec Phone: +420 595 691 150 Beijer Electronics A/S Lykkegårdsvej 17 DK-4000 Roskilde Phone: +45 (0)46 / 75 76 66 Fax: +45 (0)46 / 75 76 66 Beijer Electronics Eesti OÜ Pärnu mnt.160i EE-11317 Tallinn Phone: +372 (0)6 / 51 81 40 Fax: +472 (0)6 / 51 81 49	DENMARK
Technologická 374/6 CZ-708 00 Ostrava-Pustkovec Phone: +420 595 691 150 Beijer Electronics A/S Lykkegårdsvej 17 DK-4000 Roskilde Phone: +45 (0)46/75 76 66 Fax: +45 (0)46/75 76 66 Beijer Electronics Eesti OÜ Pärnu mnt.160i EE-11317 Tallinn Phone: +372 (0)6 / 51 81 40 Fax: +372 (0)6 / 51 81 49 Beijer Electronics OY Peltria 37	DENMARK
Technologická 374/6 CZ-708 00 Ostrava-Pustkovec Phone: +420 595 691 150 Fax: +420 595 691 199 Beijer Electronics A/S Lykkegårdsvej 17 DK-4000 Roskilde Phone: +45 (0)46/75 76 66 Fax: +45 (0)46/75 76 66 Fax: +45 (0)46/75 76 66 Beijer Electronics Eesti OÜ Pärnu mnt. 160i EE-11317 Tallinn Phone: +372 (0)6/51 81 40 Fax: +372 (0)6/51 81 49 Beijer Electronics OY Peltoie 37 FIN-28400 Ulvila	DENMARK ESTONIA FINLAND
Technologická 374/6 CZ-708 00 Ostrava-Pustkovec Phone: +420 595 691 150 Fax: +420 595 691 199 Beijer Electronics A/S Lykkegårdsvej 17 DK-4000 Roskilde Phone: +45 (0)46/75 76 66 Fax: +45 (0)46/75 76 66 Beijer Electronics Eesti OÜ Pärnu mnt. 160i EE-11317 Tallinn Phone: +372 (0)6/51 81 40 Fax: +372 (0)6/51 81 49 Beijer Electronics OY Peltoie 37 FIN-28400 Ulvila Phone: +358 (0)207 / 463 540	ESTONIA FINLAND
Technologická 374/6 CZ-708 00 Ostrava-Pustkovec Phone: +420 595 691 150 Fax: +420 595 691 199 Beijer Electronics A/S Lykkegårdsvej 17 DK-4000 Roskilde Phone: +45 (0)46/75 76 66 Fax: +45 (0)46/75 76 66 Fax: +45 (0)46/75 76 66 Beijer Electronics Eesti OÜ Pàrnu mnt. 160i EE-11317 Tallinn Phone: +372 (0)6/51 81 40 Fax: +372 (0)6/51 81 49 Beijer Electronics OY Peltoie 37 FIN-28400 Ulvila Phone: +358 (0)207 / 463 540 Fax: +358 (0)207 / 463 541	DENMARK ESTONIA FINLAND
Technologická 374/6 CZ-708 00 Ostrava-Pustkovec Phone: +420 595 691 150 Fax: +420 595 691 199 Beijer Electronics A/S Lykkegårdsvej 17 DK-4000 Roskilde Phone: +45 (0)46/75 76 66 Fax: +45 (0)46/75 76 66 Fax: +45 (0)46/75 76 66 Beijer Electronics Eesti OÜ Pàmu mnt. 160i EE-11317 Tallinn Phone: +372 (0)6/51 81 40 Fax: +372 (0)6/51 81 49 Beijer Electronics OY Peltoie 37 FIN-28400 Ulvila Phone: +358 (0)207 / 463 540 Fax: +358 (0)207 / 463 541 UTEC0	DENMARK ESTONIA FINLAND GREECE
Technologická 374/6 CZ-708 00 Ostrava-Pustkovec Phone: +420 595 691 150 Fax: +420 595 691 199 Beijer Electronics A/S Lykkegårdsvej 17 DK-4000 Roskilde Phone: +45 (0)46/75 76 66 Fax: +45 (0)46/75 76 66 Fax: +45 (0)46/75 76 66 Beijer Electronics Eesti OÜ Pàmu mnt. 160i EE-11317 Tallinn Phone: +372 (0)6/51 81 40 Fax: +372 (0)6/51 81 49 Beijer Electronics OY Peltoie 37 FIN-28400 Ulvila Phone: +358 (0)207 / 463 540 Fax: +358 (0)207 / 463 541 UTEC0 5, Mavrogenous Str. GR-18542 Piraeus	DENMARK ESTONIA FINLAND GREECE
Technologickâ 374/6 CZ-708 00 Ostrava-Pustkovec Phone: +420 595 691 150 Fax: +420 595 691 199 Beijer Electronics A/S Lykkegårdsvej 17 DK-4000 Roskilde Phone: +45 (0)46/75 76 66 Fax: +45 (0)46/75 76 66 Fax: +45 (0)46/75 76 66 Beijer Electronics Eesti OÜ Pàmu mnt. 160i EE-11317 Tallinn Phone: +372 (0)6/51 81 40 Fax: +372 (0)6/51 81 49 Beijer Electronics OY Peltoie 37 FIN-28400 Ulvila Phone: +358 (0)207 / 463 540 Fax: +358 (0)207 / 463 541 UTEC0 5, Mavrogenous Str. GR-18542 Piraeus Phone: +30 211 / 1206 900	DENMARK ESTONIA FINLAND GREECE
Technologická 374/6 CZ-708 00 Ostrava-Pustkovec Phone: +420 595 691 150 Fax: +420 595 691 199 Beijer Electronics A/S Lykkegårdsvej 17 DK-4000 Roskilde Phone: +45 (0)46/75 76 66 Fax: +45 (0)46/75 76 66 Fax: +45 (0)46/75 76 66 Beijer Electronics Eesti OÜ Pàmu mnt.160i EE-11317 Tallinn Phone: +372 (0)6/51 81 40 Fax: +372 (0)6/51 81 49 Beijer Electronics OY Peltoie 37 FIN-28400 Ulvila Phone: +358 (0)207 / 463 540 Fax: +358 (0)207 / 463 541 UTECO 5, Mavrogenous Str. GR-18542 Piraeus Phone: +30 211 / 1206 900 Fax: +30 211 / 1206 999	DENMARK ESTONIA FINLAND GREECE
Technologická 374/6 CZ-708 00 Ostrava-Pustkovec Phone: +420 595 691 150 Fax: +420 595 691 199 Beijer Electronics A/S Lykkegårdsvej 17 DK-4000 Roskilde Phone: +45 (0)46/75 76 66 Fax: +45 (0)46/75 76 66 Fax: +45 (0)46/75 76 66 Beijer Electronics Eesti OÜ Pàmu mnt.160i EE-11317 Tallinn Phone: +372 (0)6/51 81 40 Fax: +372 (0)6/51 81 49 Beijer Electronics OY Peltoie 37 FIN-28400 Ulvila Phone: +358 (0)207 / 463 540 Fax: +358 (0)207 / 463 541 UTECO 5, Mavrogenous Str. GR-18542 Piraeus Phone: +30 211 / 1206 900 Fax: +30 211 / 1206 999 MELTRADE Kft. Entő ufca 140	DENMARK ESTONIA FINLAND GREECE HUNGARY
Technologickâ 374/6 CZ-708 00 Ostrava-Pustkovec Phone: +420 595 691 150 Fax: +420 595 691 199 Beijer Electronics A/S Lykkegårdsvej 17 DK-4000 Roskilde Phone: +45 (0)46/75 76 66 Fax: +45 (0)46/75 76 66 Fax: +45 (0)46/75 76 66 Fax: +45 (0)46/75 76 66 Beijer Electronics Eesti OÜ Pàmu mnt.160i EE-11317 Tallinn Phone: +372 (0)6/51 81 40 Fax: +372 (0)6/51 81 49 Beijer Electronics OY Peltoie 37 FIN-28400 Ulvila Phone: +358 (0)207 / 463 540 Fax: +358 (0)207 / 463 541 UTECO 5, Mavrogenous Str. GR-18542 Piraeus Phone: +30 211 / 1206 900 Fax: +30 211 / 1206 999 MELTRADE Kft. Fertő utca 14. HU-1107 Budapast	DENMARK ESTONIA FINLAND GREECE HUNGARY
Technologickâ 374/6 C2-708 00 Ostrava-Pustkovec Phone: +420 595 691 150 Fax: +420 595 691 199 Beijer Electronics A/S Lykkegårdsvej 17 DK-4000 Roskilde Phone: +45 (0)46/75 76 66 Fax: +45 (0)46/75 76 66 Fax: +45 (0)46/75 76 66 Fax: +45 (0)46/75 76 66 Beijer Electronics Eesti OÜ Pàmu mnt. 160i EE-11317 Tallinn Phone: +372 (0)6/51 81 40 Fax: +372 (0)6/51 81 40 Fax: +372 (0)6/51 81 49 Beijer Electronics OY Peltoie 37 FIN-28400 Ulvila Phone: +358 (0)207 / 463 540 Fax: +358 (0)207 / 463 541 UTECO 5, Mavrogenous Str. GR-18542 Piraeus Phone: +30 211 / 1206 900 Fax: +30 211 / 1206 999 MELTRADE Kft. Fertő utca 14. HU-1107 Budapest Phone: +36 (0)1 / 431-9726	DENMARK ESTONIA FINLAND GREECE HUNGARY
Technologickâ 374/6 C2-708 00 Ostrava-Pustkovec Phone: +420 595 691 150 Fax: +420 595 691 199 Beijer Electronics A/S Lykkegårdsvej 17 DK-4000 Roskilde Phone: +45 (0)46/75 76 66 Fax: +45 (0)46/75 76 66 Fax: +45 (0)46/75 76 66 Fax: +45 (0)46/75 76 66 Beijer Electronics Eesti OÜ Pàmu mnt.160i EE-11317 Tallinn Phone: +372 (0)6/51 81 40 Fax: +372 (0)6/51 81 40 Fax: +372 (0)6/51 81 49 Beijer Electronics OY Peltoie 37 FIN-28400 Ulvila Phone: +358 (0)207 / 463 540 Fax: +358 (0)207 / 463 541 UTECO 5, Mavrogenous Str. GR-18542 Piraeus Phone: +30 211 / 1206 900 Fax: +30 211 / 1206 999 MELTRADE Kft. Fertő utca 14. HU-1107 Budapest Phone: +36 (0)1 / 431-9726 Fax: +36 (0)1 / 431-9727	DENMARK ESTONIA FINLAND GREECE HUNGARY
Technologická 374/6 C2-708 00 Ostrava-Pustkovec Phone: +420 595 691 150 Fax: +420 595 691 159 Beijer Electronics A/S Lykkegårdsvej 17 DK-4000 Roskilde Phone: +45 (0)46/75 76 66 Fax: +45 (0)46/75 76 66 Fax: +45 (0)46/75 76 66 Fax: +45 (0)46/75 76 66 Beijer Electronics Eesti 0Ü Pàmu mnt.160i EE-11317 Tallinn Phone: +372 (0)6/51 81 40 Fax: +372 (0)6/51 81 40 Fax: +372 (0)6/51 81 49 Beijer Electronics 0Y Peltoie 37 FIN-28400 Ulvila Phone: +358 (0)207 / 463 540 Fax: +358 (0)207 / 463 541 UTEC0 5, Mavrogenous Str. GR-18542 Piraeus Phone: +30 211 / 1206 900 Fax: +30 211 / 1206 999 MELIRADE Kft. Fertő utca 14. HU-1107 Budapest Phone: +36 (0)1 / 431-9727 Beijer Electronics SIA	DENMARK ESTONIA FINLAND GREECE HUNGARY LATVIA
Technologická 374/6 C2-708 00 Ostrava-Pustkovec Phone: +420 595 691 150 Fax: +420 595 691 199 Beijer Electronics A/S Lykkegårdsvej 17 DK-4000 Roskilde Phone: +45 (0)46/75 76 66 Fax: +372 (0)6/51 81 40 Fax: +372 (0)6/51 81 40 Fax: +372 (0)6/51 81 49 Beijer Electronics OY Peltoie 37 FIN-28400 Ulvila Phone: +32 (0)6/51 81 49 Beijer Electronics OY Peltoie 37 FIN-28400 Ulvila Phone: +358 (0)207 / 463 540 Fax: +358 (0)207 / 463 541 UTEC0 5, Mavrogenous Str. GR-18542 Piraeus Phone: +30 211 / 1206 900 Fax: +30 211 / 1206 909 MELTRADE Kft. Fertő utca 14. HU-1107 Budapest Phone: +36 (0)1 / 431-9727 Beijer Electronics SIA Ritausmas iela 23 UV-1058 Bina	DENMARK ESTONIA FINLAND GREECE HUNGARY LATVIA
Technologickâ 374/6 CZ-708 00 Ostrava-Pustkovec Phone: +420 595 691 150 Fax: +420 595 691 199 Beijer Electronics A/S Lykkegårdsvej 17 DK-4000 Roskilde Phone: +45 (0)46/75 76 66 Fax: +37 (0)6/51 81 40 Fax: +372 (0)6/51 81 40 Fax: +372 (0)6/51 81 40 Fax: +372 (0)6/51 81 49 Beijer Electronics OY Peltoie 37 FIN-28400 Ulvila Phone: +30 211/1206 900 Fax: +30 211/1206 909 MELTRADE Kft. Fertő utca 14. HU-1107 Budapest Phone: +36 (0)1/431-9727 Beijer Electronics SIA Ritausmas iela 23 LV-1058 Riga Phone: +371 (0)784/2280	DENMARK ESTONIA FINLAND GREECE HUNGARY LATVIA
Technologickâ 374/6 CZ-708 00 Ostrava-Pustkovec Phone: +420 595 691 150 Fax: +420 595 691 199 Beijer Electronics A/S Lykkegårdsvej 17 DK-4000 Roskilde Phone: +45 (0)46/75 76 66 Fax: +37 (0)6/51 81 40 Fax: +372 (0)6/51 81 40 Fax: +372 (0)6/51 81 40 Fax: +372 (0)6/51 81 49 Beijer Electronics OY Peltoie 37 FIN-28400 Ulvila Phone: +358 (0)207 / 463 540 Fax: +358 (0)207 / 463 541 UTEC0 5, Mavrogenous Str. GR-18542 Piraeus Phone: +30 211 / 1206 900 Fax: +30 211 / 1206 999 MELTRADE Kft. Fertő utca 14. HU-1107 Budapest Phone: +36 (0)1 / 431-9727 Beijer Electronics SIA Ritausmas iela 23 LV-1058 Riga Phone: +371 (0)784 / 2280 Fax: +371 (0)784 / 2281	DENMARK ESTONIA FINLAND GREECE HUNGARY LATVIA
Technologickâ 374/6 CZ-708 00 Ostrava-Pustkovecc Phone: +420 595 691 150 Fax: +420 595 691 199 Beijer Electronics A/S Lykkegårdsvej 17 DK-4000 Roskilde Phone: +45 (0)46/75 76 66 Fax: +37 (0)6/51 81 40 Fax: +372 (0)7 463 540 Fax: +358 (0)207 / 463 540 Fax: +358 (0)207 / 463 540 Fax: +358 (0)207 / 463 540 Fax: +36 (0)1 / 431-9727 Beijer Electronics SIA Ritausmas iela 23 LV-1058 Riga Phone: +371 (0)784 / 2280 Fax: +371 (0	DENMARK ESTONIA FINLAND GREECE HUNGARY LATVIA
Technologickâ 374/6 CZ-708 00 Ostrava-Pustkovecc Phone: +420 595 691 150 Fax: +420 595 691 199 Beijer Electronics A/S Lykkegårdsvej 17 DK-4000 Roskilde Phone: +45 (0)46/75 76 66 Fax: +37 (0)6/51 81 40 Fax: +372 (0)7 463 540 Fax: +358 (0)207 / 463 540 Fax: +358 (0)207 / 463 540 Fax: +358 (0)207 / 463 540 Fax: +30 211 / 1206 900 Fax: +30 211 / 1206 909 MELTRADE Kft. Fertő utca 14. HU-1107 Budapest Phone: +36 (0)1 / 431-9727 Beijer Electronics SIA Ritausmas iela 23 LV-1058 Riga Phone: +371 (0)784 / 2280 Fax: +371 (0)	DENMARK ESTONIA FINLAND GREECE HUNGARY LATVIA
Technologickâ 374/6 CZ-708 00 Ostrava-Pustkovecc Phone: +420 595 691 150 Fax: +420 595 691 199 Beijer Electronics A/S Lykkegårdsvej 17 DK-4000 Roskilde Phone: +45 (0)46/75 76 66 Fax: +372 (0)6/51 81 40 Fax: +378 (0)207 / 463 540 Fax: +358 (0)207 / 463 540 Fax: +30211 / 1206 900 Fax: +30211 / 1206 909 MELTRADE Kft. Fertő utca 14. HU-1107 Budapest Phone: +36 (0)1 / 431-9727 Beijer Electronics SIA Ritausmas iela 23 LV-1058 Riga Phone: +371 (0)784 / 2280 Fax: +371 (0)784 / 2280 Fax: +371 (0)784 / 2280 Fax: +371 (0)784 / 2280 Fax: +370 (0)75 / 232 3101	DENMARK ESTONIA FINLAND GREECE HUNGARY LATVIA

EUROPEAN REPRESENTATIVES ALFATRADE Ltd. MALTA 99. Paola Hill Malta- Paola PLA 1702 Phone: +356 (0)21 / 697 816 Fax: +356 (0)21 / 697 817 INTEHSIS srl MOLDOVA bld. Traian 23/1 MD-2060 Kishinev Phone: +373 (0)22 / 66 4242 Fax: +373 (0)22 / 66 4280 HIFLEX AUTOM.TECHNIEK B.V. NETHERLANDS Wolweverstraat 22 NL-2984 CD Ridderkerk Phone: +31 (0)180 - 46 60 04 Fax: +31 (0)180 - 44 23 55 Koning & Hartman b.v. NETHERLANDS Haarlerbergweg 21-23 NL-1101 CH Amsterdam Phone: +31 (0)20 / 587 76 00 Fax: +31 (0)20 / 587 76 05 **Beijer Electronics AS** NORWAY Postboks 487 NO-3002 Drammen Phone: +47 (0)32 / 24 30 00 Fax: +47 (0)32 / 84 85 77 Fax: +961 (0)1 / 240 438 Fonseca S.A. PORTUGAL R. João Francisco do Casal 87/89 **PT - 3801-997 Aveiro, Esgueira** Phone: +351 (0)234 / 303 900 Fax: +351 (0)234 / 303 910 Sirius Trading & Services srl Aleea Lacul Morii Nr. 3 ROMANIA R0-060841 Bucuresti, Sector 6 Phone: +40 (0)21 / 430 40 06 Fax: +40 (0)21 / 430 40 02 INEA RBT d.o.o. SERBIA Izletnicka 10 SER-113000 Smederevo Phone: +381 (0)26 / 615 401 Fax: +381 (0)26 / 615 401 SIMAP s.r.o. **SLOVAKIA** Jána Derku 1671 SK-911 01 Trencín Phone: +421 (0)32 743 04 72 Fax: +421 (0)32 743 75 20 PROCONT, spol. s r.o. Prešov SLOVAKIA Kúpelná 1/Å SK-080 01 Prešov Phone: +421 (0)51 7580 611 Fax: +421 (0)51 7580 650 INEA RBT d.o.o. SLOVENIA Stegne 11 **SI-1000 Ljubljana** Phone: +386 (0)1 / 513 8116 Fax: +386 (0)1 / 513 8170 Beijer Electronics AB SWEDEN Box 426 **SE-20124 Malmö** Phone: +46 (0)40 / 35 86 00 Fax: +46 (0)40 / 93 23 01 Omni Ray AG SWITZERLAND lm Schörli 5 CH-8600 Dübendorf Phone: +41 (0)44 / 802 28 80 Fax: +41 (0)44 / 802 28 28 GTS TURKEY Bayraktar Bulvari Nutuk Sok. No:5 TR-34775 Yukarı Dudullu-Ümraniye-İSTANBUL Phone: +90 (0)216 526 39 90 Fax: +90 (0)216 526 3995 CSC Automation Ltd. UKRAINE 4-B, M. Raskovoyi St. UA-02660 Kiev Phone: +380 (0)44 / 494 33 55 Fax: +380 (0)44 / 494-33-66 UKRAINF Systemgroup 2 M. Krivonosa St. UA-03680 Kiev Phone: +380 (0)44 / 490 92 29 Fax: +380 (0)44 / 248 88 68

EURASIAN REPRESENTATIVES TOO Kazpromavtomatika KAZAKHSTAN UI. Zhambyla 28 KAZ-100017 Karaganda Phone: +7 7212 / 50 10 00 Fax: +7 7212 / 50 11 50 MIDDLE EAST REPRESENTATIVES ILAN & GAVISH Ltd. ISRAEL 24 Shenkar St Kirvat Arie IL-49001 Petah-Tiqva Phone: +972 (0)3 / 922 18 24 Fax: +972 (0)3 / 924 0761 **GIRIT CELADON LTD** ISRAEL 12 H'aomanut Street **IL-42505 Netanya** Phone: +972 (0)9 / 863 39 80 Fax: +972 (0)9 / 885 24 30 **CEG INTERNATIONAL** LEBANON Cebaco Center/Block A Autostrade DORA Lebanon - Beirut Phone: +961 (0)1 / 240 430

AFRICAN REPRESENTATIVE SOUTH AFRICA Private Bag 2016 ZA-1600 Isando Phone: + 27 (0)11 / 977 0770 Fax: + 27 (0)11 / 977 0761

