

備註：1.料號：R4040679 (32MB)
3.材質：80P 模造紙,騎碼釘

2.印刷顏色：Pantone 4695U深咖啡色

165mm+-2



122mm+-2

User Manual

This manual can guide you to use this camera with proper operation and correct setting. Please read it carefully and optimize the performance in accordance with your preference.

R4040679



Table Of Contents

Cautions	03	Starting a SlideShow	23
Overall Introduction	04	Setting Image Protection	24
Accessories	04	Deleting All Images	24
External View	05	Copy to Card	25
Key Function Button	05	DPOF- Standard	25
Icon Display	06	DPOF- Index	26
Getting Ready	07	DPOF- Size	26
Turn On or Off the Camera	07	DPOF- Cancel	26
Loading the Batteries	07	Rotating an Image	27
Inserting or Removing an SD Card	08	Selecting a Start-up Image	27
Attaching the Wrist Strap	08	■ Under Movie Clip Mode ()	28
Basic Photography	09	Video Size Setting	28
Advanced Functionality Settings	11	Video Quality Setting	28
■ Under Image Shooting Mode ()	11	Video Effect Setting	29
TELE / WIDE Button	11	Video White Balance Setting	29
TFT LCD Monitor Button	11	■ Under Setup Mode (SET)	30
Macro Button	12	Setting FILE	30
Flash Button	12	Setting PWR OFF	31
Self-timer Button	13	Setting LANGUAGE	31
Voice Memo Button	13	Setting FORMAT	31
Exposure / Delete Button	14	Setting DATATYPE	31
Image Size Setting	15	Setting DATE	32
Image Quality Setting	15	Setting TIME	32
Metering Setting	16	Setting IMPRINT	32
Sharpness Setting	16	Setting BEEP	32
Effect Setting	17	Setting VIDEO	33
White Balance Setting	17	Setting QUICK VIEW	33
Photo Frame Setting	18	Setting RESET	33
Night Scene Setting	19	Setting START-UP SOUND	33
Voice Recording Setting	19	Setting START-UP IMAGE	34
Continuous Shooting Setting	20	Setting SHUTTER SOUND	34
■ Under Playback Mode ()	21	Setting USB	34
Playback of a Still Image	21	How to Play GAMES	35
Playback of a Movie Clip	21	Printer Connection (PictBridge Mode)	36
Thumbnail Display (Small Images)	22	TV Connection	41
Exploring an Image	22	PC Connection	42
Displaying Image Information	23	Appendix	53



Cautions

- Do not try to open the camera by yourself, which may damage the camera or cause electric shock.
- Do not fire the flash in a close distance (less than 1 meter) because it may hurt your eyes.
- Keep the camera away from the reach of children or animals to prevent them from swallowing the batteries or small accessories.
- Stop using the camera if any kinds of liquid enter the camera. If it happens, power off the camera and contact your dealer for further help.
- Do not use this camera with wet hands, which may cause electric shock as well.
- Putting the camera in a high temperature environment may damage the camera.
- Do not use different types of batteries or new and old batteries at the same time.
- To avoid electricity leakage, please remove the batteries if the camera is not in use for a long period.
- It is normal that the temperature of the camera body rises if the camera is used for a long time.

 
165mm+-2



Overall Introduction

Accessories

Digital Camera



Camera Driver
& Ulead Software



 
2 x AA Batteries



Camera Pouch



User Manual



Quick Start Guide



USB / Video Cable



Wrist Strap



4

 
122mm+-2




Overall Introduction

External View


Top

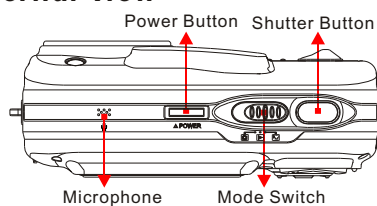


Front

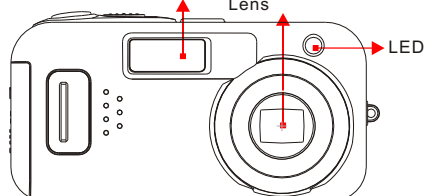 


Back

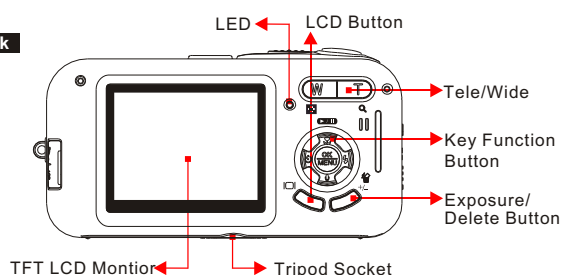 

Side

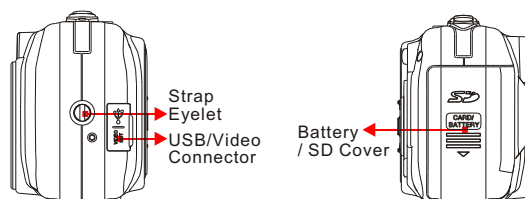 

Key Function Button

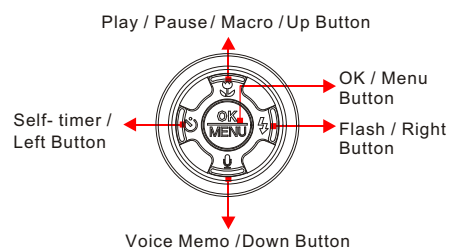 


5



Overall Introduction

Icon Display

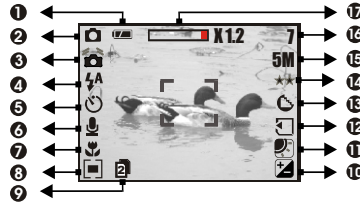 

1 Battery Status
 (Full) Battery Full
 (Half) Battery Half Drained
 (Empty) Battery Drained

2 Working Mode
 (Image) Image Shooting Mode
 (Play) Playback Mode
 (Night) Night Scene Mode
 (Photo) Photo Frame Mode
 (Movie) Movie Clip Mode
 (Voice) Voice Recording Mode

3 Hand Shake
 (Hand) Hand Shake

4 Flash Mode
 (Flash) Auto Flash
 (Flash) Auto Flash with Red-eye Reduction
 (Flash) Slow Sync
 (Flash) Fill-in Flash
 (Flash) Flash Off

5 Self-timer
 (10) 10 Seconds
 (2) 2 Seconds
 (Double) Double

6 Voice Memo
 (Voice) Voice Memo

7 Focus Range
 (Macro) Macro

8 Metering
 (Spot) Spot
 (Multi) Multi

9 Continuous Shooting
 (Single) Single
 (2) 2 Shots
 (4) 4 Shots
 (8) 8 Shots

10 Exposure ±0
 (Exposure) Exposure ±0

11 White Balance
 (Auto) Auto
 (Daylight) Daylight
 (Cloudy) Cloudy
 (Fluorescent) Fluorescent
 (Tungsten) Tungsten
 (Sunset) Sunset
 (Custom) Custom

12 Memory Card
 (Memory) Memory Card

13 Sharp
 (Soft) Soft
 (Normal) Normal
 (Vivid) Vivid

14 Quality
 (Super) Super Fine
 (Fine) Fine
 (Normal) Normal

15 Size
 (7M) 3072x2304
 (5M) 2560x1920
 (4M) 2304x1728
 (3M) 2048x1536
 (2M) 1600x1200
 (1M) 1024x768

 
16 Available Shots
 (7) Available Shots

17 Zoom In / Out Indicator
 (2.8X) 2.8 X Optical/
 (5.0X) 5.0 X Digital
 Zoom



Getting Ready


Turn On or Off the Camera

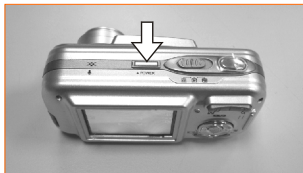

Press down the "POWER" button to turn on the camera.

Repeat the way above to turn off the camera.

 Loading the Batteries

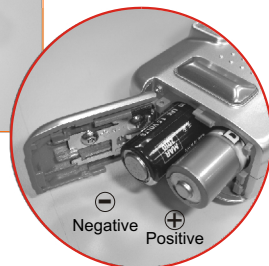

- Slide out Battery Cover to open it.
- Load 2 x AA batteries into the battery chamber, following the polarity indications.
- Close the Battery cover.



The below symbols on the TFT LCD Monitor are the indication of the battery status.

- (Full): Battery power is full.
- (Half): Battery power is half drained. Have new batteries ready.
- (Empty): Battery power is drained. Replace the batteries you are using now.

- 2 pcs of AA alkaline / Ni-MH batteries are strongly recommended for normal operation.
- Batteries may lose power if kept inside the camera for a long time without using. Please remove the batteries while the camera is not in use.
- Do not use manganese batteries since they cannot supply sufficient power to support the camera's operation.
- Batteries may not work normally under 0°C or over 40°C.



Getting Ready

▶ Inserting or Removing an SD Card



1. Power off the camera.
2. Open the Battery Cover.
3. Insert the SD card into the card slot and press it down until a click sound happens. (Press down the inserted SD card again to get it out once a click sound happens.)
4. Close the Battery Cover.



- ✦ Formatting a brand new SD card is strongly recommended for first use.
- ✦ The image(s) can be stored either in built-in flash memory or in memory card. Only if the memory card is inserted, the images will be stored in the memory card rather than the built-in flash memory. On the other hand, the images will be stored in the built-in flash memory only if a memory card is not inserted.

▶ Attaching the Wrist Strap



8

 
122mm+-2




Getting Ready

▶ Basic Photography

1. Press down the POWER button to turn on the camera.
2. Set the Mode Switch at Image Shooting Mode (📷) for still image or Movie Clip Mode (🎥) for video recording.
NOTE: Hold your camera with your hand and position a subject in the center of the frame to focus on.
3. With the TELE/WIDE Button, you may have 2.8X optical zoom and 5.0X digital zoom for zooming in and out.
4. If the subject you are going to shoot is ranged from 6 cm to 80 cm, pressing down MACRO button to change the focus range.
5. Press and hold the shutter button halfway down.
NOTE: 1. When the color of the focus frame turns from white to red, it means the auto focus of this camera is not fixed.
2. When the color of the focus frame turns from white to green, it means the auto focus of this camera is fixed.
6. Press the shutter button fully down to capture an image.
7. The LED Indicator starts blinking right after the Shutter Button is released. Once the LED Indicator stops blinking, you are ready to take another shot.
8. Or you can set Mode Switch at Playback Mode (📺) to view the images or movie clips you just took.

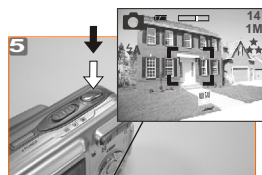

RED (Focus is not fixed)

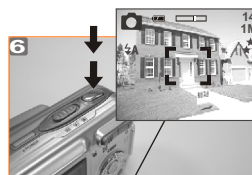 

Green (Focus is fixed)



Blinking



9