RAILhead Effects The PRESET Favorite Switch Manual

Here's how to setup your PRESET Favorite Switch for use with your Strymon pedal.

- 1. Turn off the power to your Strymon pedal.
- 2. Second, set both of the toggle switches on your Strymon to the middle position.
- 3. Third, connect The PRESET to the Strymon's EXP jack with a TRS (stereo) cable. A TRS cable is REQUIRED!
- 4. Now, power-up your Strymon pedal while holding BOTH of the Strymon's footswitches.

Now you're ready to use your PRESET! Press the PRESET's footswitch to engage the Strymon's favorite setting. Press and hold the BYPASS footswitch on your Strymon to save a new favorite setting. Thats it!

Thanks for purchasing the RAILhead Effects PRESET Favorite Switch — I hope you enjoy using it as much I enjoyed building it for you! If you have any questions, comments, or need help, please don't hesitate to email me at: maury@railheadeffects.com.