User Manual of Wireless Earphone

1. Installation

Installation of receiver (Figure A)

Open battery case cover and place in two No.7 batteries Installation of transmitter (Figure B)

Connect transformer correctly (connect 3V transformer respectively to power supply and transmitter; place in two No.7 batteries instead when not using transformer for power supply). Plug lotus jack into "AUDIO OUT" socket of transmitter/TV (or DVD, VCD)

(Note: TV, DVD, VCD uses lotus plug)

Stereo plug should be respectively inserted into transmitter's audio in input socket and audio output earbhone

socket of computer or CD player.

(Note: volume of received sound is also determined by volume of computer or CD player)

2. Operation instructions

- 1)Turn power switch upward to activate transmitter; the power light should be turned on.
- 2)Pull up receiver's antenna, turn receiver's power switch upward and volume tuner to your desired position; the power light should be turned on.
- 3)Press RESET button and SELECT button to receive TV sound. (Note: the first sound received is from TV, and then FM radio, computer/DVD and similar products.)

3. Radio receiving

1)Receiver can be used as FM radio receiver when used alone.

- 2)Turn upward to turn on receiver's volume control, the power light should be turned on and pull up receiver's antenna.
- 3)Press RESET and then digital SELECT to automatically scan FM radio between 88MHz to 108MHz; one radio station will be scanned and locked for each time SELECT button is pressed.

4. Using wired earphone

Receiver is supplied with an audio wire to use as a wired earphone.

Cautions:

If sound is too loud or distorted, please turn down source volume (TV or other products) to improve receiving effect. Replace batteries when the following problems occur: Power light is dim.

Receiver can barely receive sound.

Sound volume is low and distorted.

Turn off transmitter's power supply after usage. (It is suggested to place transmitter at high position for better signal receiving.)

Appearance and functions



Note: this product can be used as wired earphone when connected with audio line.

Antenna

(5.SELECT)
(6.Battery case)
(7.Audio line socket)

2. Power switch and

4. Power light indicator

volume tuner 3.RESET

B. Transmitter

1. Power switch
2. Power indicator light(front)

3、Stereo jack for audio input Stereo jack is plugged in to earphone or audio output socket of computer, CD, tape recorder etc. 4、Lotus line left & right sound channel socketLotus plug is inserted left & right sound output channel of TV, DVD, and VCD.

5, Battery case (bottom)

0

"AUDIO OUT" socket of TV(or DVD, VCD)

Computer & CD player audio o