


English

Desktop POCSAG Transmitter TE505RA User Manual

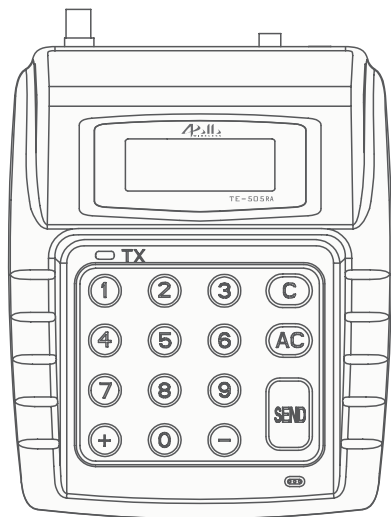

Contents

Introduction.....	1
Getting Started	2
Overview.....	3
Programming.....	4
Set Frequency	5
Enable Beep Tone	6
Enable Back Light.....	7
Pager Range Test	8
Pager Programming	10
Operation.....	12
Programming Table	17
Specification	18

Introduction


TE-505RA is more than just a POCSAG transmitter but also built-in programmer inside. For most users, programming software is quite a challenge while being familiar with whole system at beginning. **TE-505RA** is built for user friendly with simple interface. It shortens not only learning curve but very accessible for everyone in any circumstance. You can choose to pre-program total 30 sets canned messages for various purposes.

Getting Started


Accessory Preparedness



BNC Antenna

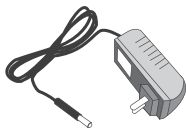


 AC Adapter (9V/2.2A with European/
American plug)




Programming kit for **TE-505RA**


Compatible Pager

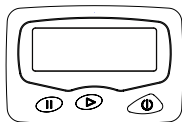

AL-924

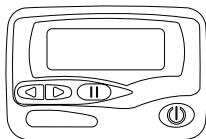


AL-A25

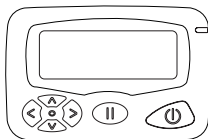

AL-A26


Overview

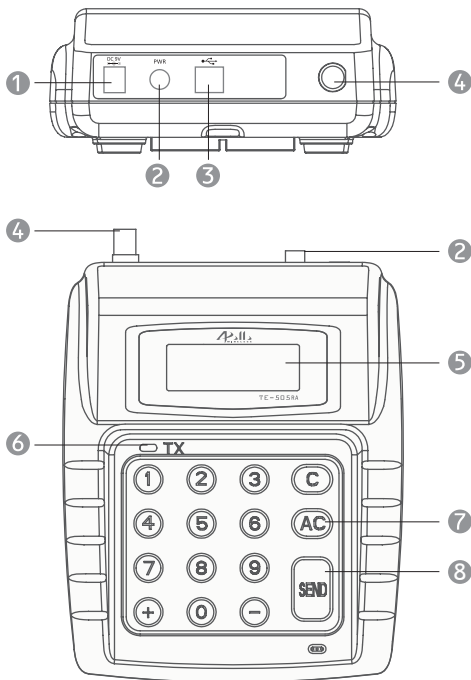

- | | |
|--------------------------|--------------------------|
| ① DC input | ⑤ LCD display |
| ② Power switch | ⑥ Transmitting indicator |
| ③ USB port with Type - B | ⑦ All clear button |
| ④ Antenna connect | ⑧ SEND button |

Programming


1. Programming Mode

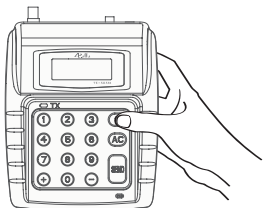

Hold "C" button on **TE-505RA** panel.




Do not release "C" button until turn on the power.

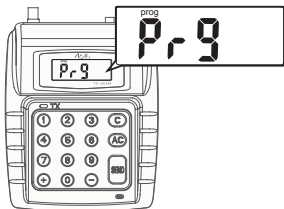


Display shows "Prg" that means you're in *programming mode*.

Programming

2. Set Frequency

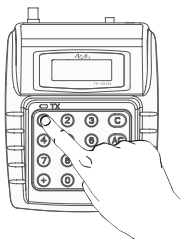


In *programming mode*, press “1” button to set frequency for tone only pager.

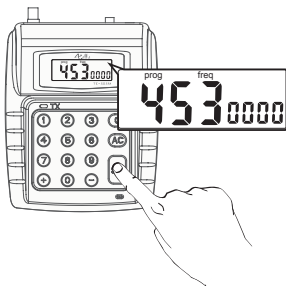

Enter frequency number then press “SEND” button. For example, 453.00 MHz press 4-5-3-0-0-0-0 then press "SEND" button to save the setting.


Programming

3. Enable Beep Tone

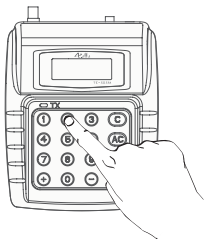


Press "AC" button to escape any sub-setting in *programming mode*.

Press "2" to enter Beep Tone setting.

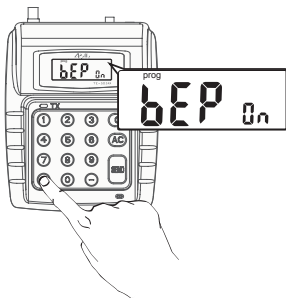


Use "+" or "-" button to switch on/off beep tone.

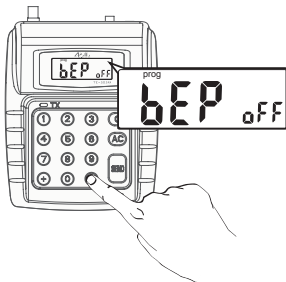


Programming


4. Enable Back Light

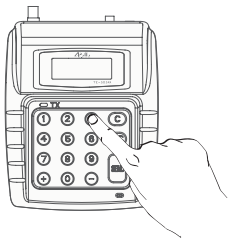

In *programming mode*, press "3" to enter LCD Backlight setting.

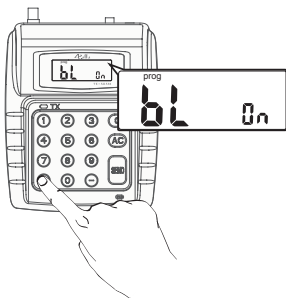


Use "+" or "-" button to switch on/off the LCD backlight in **TE-505RA**.

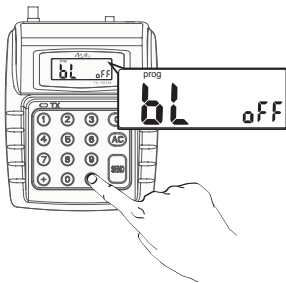


Programming

5. Pager Range Test

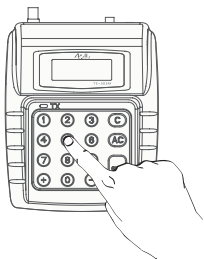


Press "5" to enter Range Test mode.

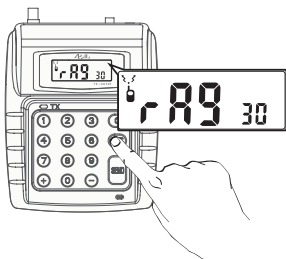


TE-505RA will transmit signal for every 30 seconds until moving to places where pagers won't be responsive anymore. That's roughly the limitation of coverage for **TE-505RA**.

Programming

6. Pager Programming

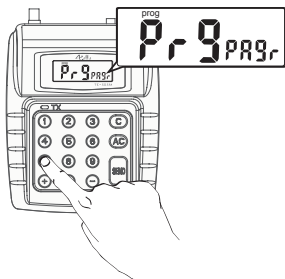

Press "7" to Pager Programming mode.


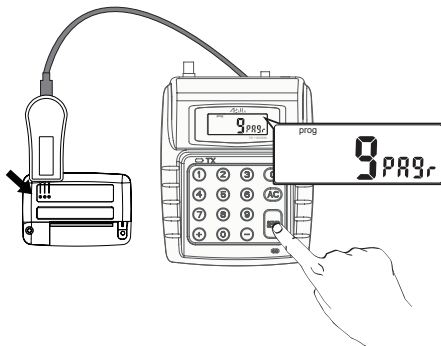


Enter any number from 1 to 100 then insert programming kit into the programming hole of pager. Press "SEND" button and hold programming kit firmly until hearing long beep that stands for programming accomplished. Otherwise, you shall hear three short beeps.

★ Be sure to reboot pagers and transmitter after programming.




Edit Canned Message

1. Launch TE-505RA programming software and connect TE-505RA with PC via USB cable.
2. Input text messages in text line. Each text line corresponds with each message number from Msg # 01 to 30.
3. When finishing all editing, must write (or press F4 key) the latest data into TE-505RA.
4. While choosing canned message number, TE-505RA won't show pre-programmed texts directly on its LCD screen before sending them.
5. Each text line supports up to 40 characters (including space and symbols). One device carries up to 30 sets canned messages.

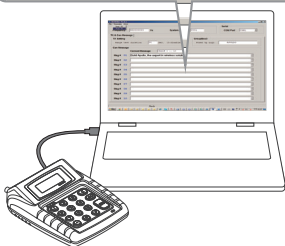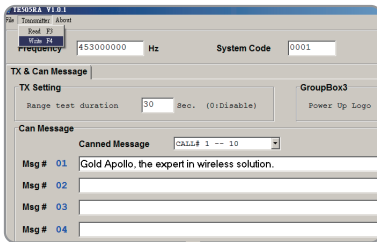

Operation


Single Page

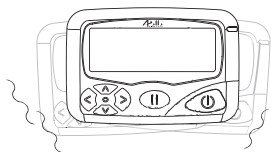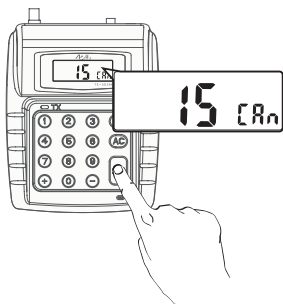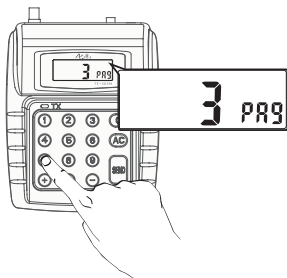



TE-505RA is used to page alphanumeric pager. Press the number button to assign which pager has the same number as you dial. For example, type “3” and press “SEND” then you will be asked for choosing canned messages number and press “SEND” again for confirming transmission. Other than that, press “AC” button to clear number on display. Press “C” button to delete the last number on display.

Operation

Group Page

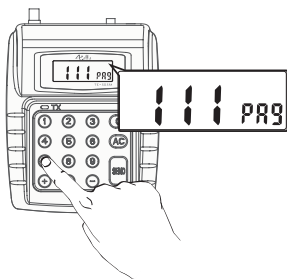


TE-505RA is capable of paging whole pagers those were programmed in advance. Type "1-1-1" and press "SEND" then you will be asked for choosing canned messages number and press "SEND" again for confirming transmission.

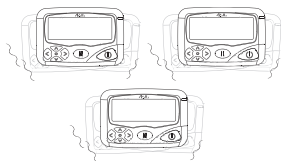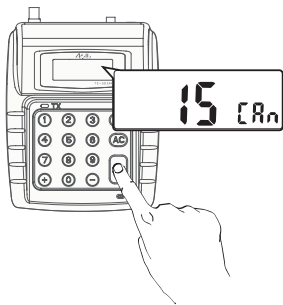





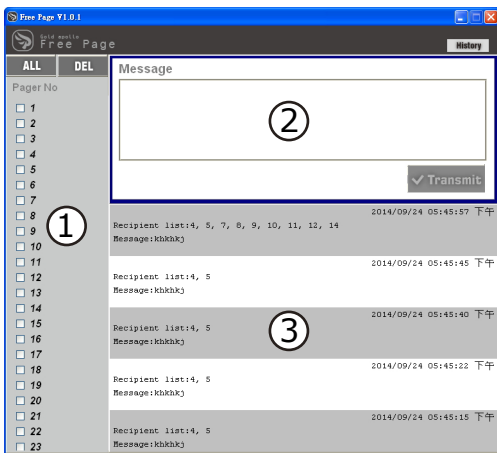




Operation

Send message by Free Page (PC)



1. Select either single or multiple pagersto page. Be sure the targeting pagers must be programmed in advance.
2. Type any desired text and click "Transmit" to send message.
3. Sent messages would be listed in this area. Otherwise, check all records in "History". They can be exported as mdb file by Microsoft Access.

Programming Table

Key	Screen 1	Screen 2	Function
			Programming mode
1			Frequency setting
2			Key tone setting: Enable or Disable
3			Backlight setting: Enable or Disable
5			Range test setting
7			Pager programming

Specification

Dimension (mm)	154 (L) x 190 (W) x 64 (H) mm
Weight (with battery)	390g
Output Power	1W (max)
Frequency range TX	VHF 135~174MHz UHF 430~470MHz
Channel Spacing	12.5 KHz / 25 KHz
Maximum Deviation	$\pm 2.5\text{KHz}$ / $\pm 4.5\text{KHz}$
Harmonic Radiation	60dBc or less -36dBm
Frequency Stability	± 3.0 ppm at $-10^{\circ}\text{C}\sim+60^{\circ}\text{C}$
Output Connect	BNC (F)
Alphanumeric	●

Make sure to read this manual before using the machine.
Please keep it in hand for future reference.



765-00012-0