



DESCRIPTION: RADIANT HEATER MODEL NO: BR2221RH

INSTRUCTION MANUAL - PLEASE SAVE THESE INSTRUCTIONS AND READ FULLY BEFORE USE

1YEAR WARRANTY



TECHNICAL INFORMATION

Please make sure that your house installation supply voltage corresponds to the voltage marked on the unit. Incorrect power supply may cause serious damage to this appliance.

Mains supply: $230-240V \sim 50 \text{ Hz} - AC \text{ only}$

Rated Power: 1000 Watt

Note. Photos used may vary from actual product due to ongoing product development.

INDEX

- Cover page
- 2. Technical Information Index.
- 3. Unpacking Contents Safety Note.
- 4. Operation guide Features Location.
- 5. Power connection Control and Safety Operation.
- 6. Cleaning and caring Important safeguards.
- 7. Important safeguards Trouble shooting.
- 8. Warranty.



UNPACKING

Your BRIO appliance has been packaged carefully to ensure the product reaches you in good condition. Carefully unpack your BRIO appliance. Make sure you do not discard any packaging material until all parts of the appliance have been found (see below).

Carefully wipe the exterior of the appliance to remove any dust that may have accumulated if necessary. Do not use harsh abrasive cleaners as these may damage any plastics. Refer cleaning section. Remove any label or sticker before use.

WARNING! Do not immerse in water or any other liquids.

WARNING! If the product has been damaged, dropped, has a malfunction in any way, or if the supply cord is damaged, immediately contact your retailer for replacement or repair.

PACKAGE CONTENTS

You should have the following. Do not discard any packaging until all accessories have been found. Each product is checked at production and there should be no missing components.

- √ 1 x Manual
- √ 1 x Heater



Before using this BRIO product ensure that it is working order, not damaged and that you have read all the important safety notes in this manual in full and fully understand how this appliance operates.





OPERATION GUIDE

To follow are details on the following information. Please read fully.

- √ Features
- ✓ Location
- ✓ Power connection
- ✓ Control and Safety
- ✓ Operation
- ✓ Care and cleaning
- ✓ Warranty

Features

- ✓ 1000watt power output.
- ✓ Single or double heat.
- ✓ Safety tip over cut out protection.



Location

Place the heater away from open windows or doorways. Keep away from high traffic areas to ensure the heater is not accidentally tipped over. This appliance is for indoor use only. This appliance is for household use only and not for commercial use.

<u>WARNING!</u> Always leave a gap around the exterior of appliance when on. Never use near curtains, furniture, bedding, walls, or other flammable material.

WARNING! Keep away from young children. Do not leave the appliance on while unattended. Do not let young children play with the heater.

WARNING! Do not use directly below a socket outlet. Do not use in the immediate surroundings of any bath, shower or swimming pool or in any other damp environment where contact with water may create an electrical hazard.

WARNING! This heater must not be used in any area where flammable vapour or dust exists.





Power connection

Fully unwind the power supply cord before use. Plug supply plug in and turn power on at wall socket. **WARNING!** This appliance must be connected to a 230-240 volt AC 50 Hz 3 pin power outlet socket supply. Do not overload the supply socket, 10 amps (2300-2400 watts) is the maximum allowed on any one-socket outlet. Appliances such as refrigeration, computers or other critical appliances should not be used on circuits with other appliances connected; they should have dedicated supply circuits to lesson the risk of power loss to any critical appliance should failure occur.

If using an extension cord, ensure that it is suitably rated for the load of this appliance.

WARNING! If in doubt with any power issue consult a suitable person.

Control and Safety

This appliance is fitted with the following control and safety equipment.

- ✓ Tip over safety cut out.
- ✓ Dual heat control Low (500 watts) High (1000 watts)

Operation

To operate simply select the desired heat setting by pressing the selector button inwards. The top button allows top element and 500 watts of heating. The bottom button allows only the bottom element. Both pressed to the "ON" setting allows full heat. To switch "OFF" simply press the buttons again to return to off position **WARNING!** Disconnect from the power supply when not in use. **WARNING!** Do not use this heater with a programmer, timer or any other device that switches the device on automatically, since a risk of fire exists if the heater is covered or positioned incorrectly. **NOTE:** The first time you use your appliance; there may be a small amount of smoke and odour. This is normal. It is due to the heating of a protective coating, placed on the heating elements, to protect the heating elements during shipping.





CLEANING AND CARING

Disconnect fully from the power supply.

Always allow your appliance to cool completely before cleaning. <u>WARNING!</u> Never immerse your appliance in water or other liquids. When cooled completely wipe the exterior of the appliance with a warm soft damp cloth. Dry with a dry towel.

Do not use harsh abrasives as they may damage any plastic, nonstick surface or the exterior finish.

Store your appliance in its original box or in a dry cupboard. Keep this manual with the appliance for future reference.



IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

Carefully read these instructions before using your appliance.

<u>VERY IMPORTANT</u>: Do not immerse in water or other liquids or use near washbasins or sinks. Ensure that the appliance does not get wet (water splashes etc.) and do not use it with wet hands.

Safely dispose of plastic bags and other components of the packaging. They may be potentially dangerous to children.

 $\underline{\mathsf{WARNING!}}$ Unplug from mains outlet when appliance is not in use or cleaning.

An appliance dropped or damaged should not be used until examined by a service engineer.

Do not permit the mains lead to come in contact with hot objects.

If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

<u>CAUTION</u>: Keep out of reach of children. This appliance is not intended for use by young children or infirm persons. Young children must be supervised to ensure that they do not play with the appliance.





Use this appliance only for its intended use. Use only genuine attachments supplied by an authorised Service Dealer.

This appliance is intended for household use only and not for commercial or industrial use.

The appliance should not be used outdoors, placed near a hot gas or electrical burner or placed in a heated oven.

 $\underline{\mathsf{WARNING}}!$ An appliance should never be left unattended when plugged in.

<u>WARNING!</u> Do not use the appliance near flammable materials such as curtains, or other combustible material.

If appliance is to be used by a third party, please supply the instruction manual with it.

No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling.

CAUTION

Do not attempt to service this appliance yourself. Refer servicing to qualified service personnel.

TROUBLESHOOTING

Before calling for help ensure that -

- ✓ The power supply plug is connected properly.
- ✓ The power is on to the circuit.
- ✓ The power socket switch is 'ON'.
- ✓ The appliance is correctly set-up.
- ✓ The appliance 'ON' switch is functioning and 'ON'.
- ✓ Any safety switch mechanism is functioning.
- ✓ You know how to operate the appliance.



Guarantee Card

This product is guaranteed against faulty materials and workmanship for a period of 12 months from the date of purchase. The obligation to the purchaser under this warranty is limited to servicing the unit and replacing defective parts when the product is returned freight prepaid to the retailer. This warranty becomes void if the product has been tampered with, damaged by accident, damaged in any other way by improper use or has been purchased second hand. All production orders have quality inspections. In the unlikely event of a deficiency, please contact the retailer from whom this product was purchased.

WARRANTY FOR APPLIANCES USED COMMERCIALLY LIMITED TO 90 DAYS

Description	Radiant heater
Model No	BR2221RH
Purchase date	
Purchased from	

IMPORTANT!

Please retain this warranty card along with your purchase receipt. Please do not post to the retailer or importer. If service is required, both of these documents are to be returned with the appliance to your retailer, otherwise a fee may be charged.