




[WWW.PROLIGHT.CO.UK](http://WWW.PROLIGHT.CO.UK)

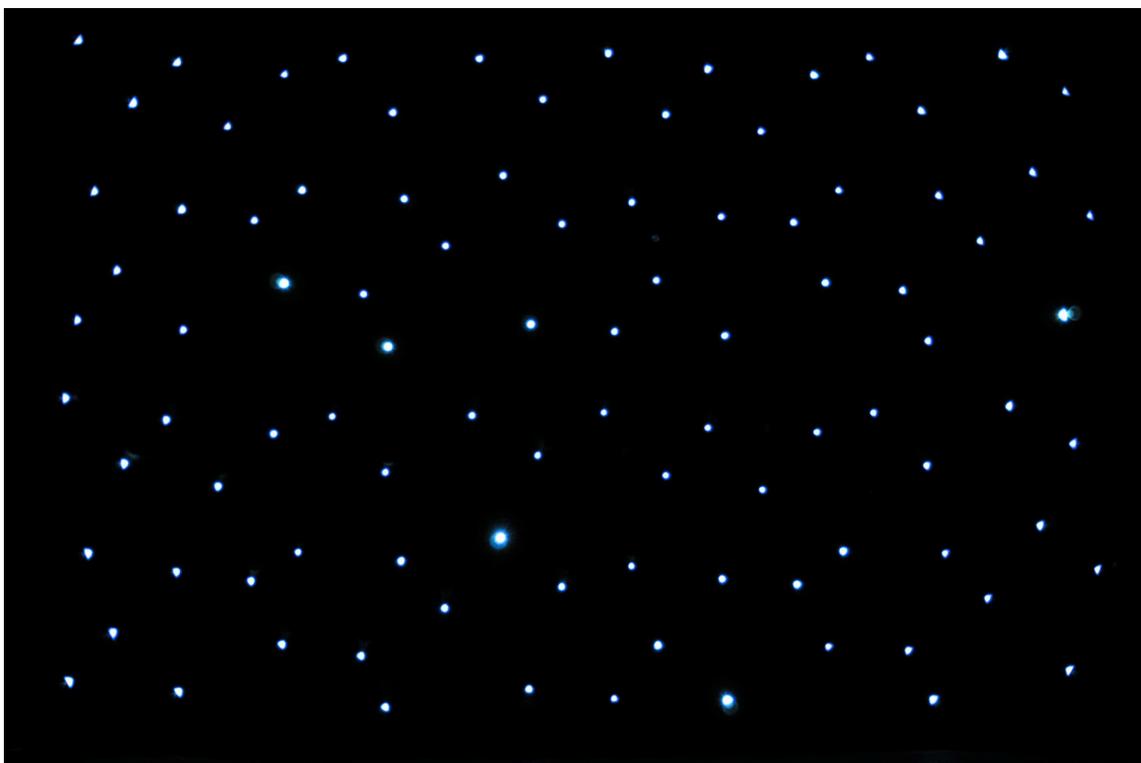

## **DJ Skirt**

(order code: STAR04)

## **Tablecloth**

(order code: STAR08)

## **Star cloth**

(3x2m order code: STAR05)

(3x2m System order code: STAR01)

(6x3m order code: STAR03)

# **USER MANUAL**

## WARNING

**FOR YOUR OWN SAFETY, PLEASE READ THIS USER MANUAL CAREFULLY  
BEFORE YOUR INITIAL START-UP!**



### **CAUTION!**

**Keep this equipment away from rain,  
moisture and liquids.**



### **SAFETY INSTRUCTIONS**

Every person involved with the installation, operation & maintenance of this equipment should:

- Be competent
- Follow the instructions of this manual



**CAUTION! TAKE CARE USING THIS EQUIPMENT!  
HIGH VOLTAGE-RISK OF ELECTRIC SHOCK!!**



Before your initial start-up, please make sure that there is no damage caused during transportation. Should there be any, consult your dealer and do not use the equipment.

To maintain the equipment in good working condition and to ensure safe operation, it is necessary for the user to follow the safety instructions and warning notes written in this manual.

Please note that damages caused by user modifications to this equipment are not subject to warranty.

**IMPORTANT:**

**The manufacturer will not accept liability for any resulting damages caused by the non-observance of this manual or any unauthorized modification to the equipment.**

- Never let the power-cable come into contact with other cables. Handle the power-cable and all mains voltage connections with particular caution!
- Never remove warning or informative labels from the equipment.
- Do not open the equipment and do not modify the equipment.
- Do not connect this equipment to a dimmer-pack.
- Do not switch the equipment on and off in short intervals, as this will reduce the system's life.
- Only use the equipment indoors.
- Do not expose to flammable sources, liquids or gases.
- Always disconnect the power from the mains when equipment is not in use or before cleaning! Only handle the power-cable by the plug. Never pull out the plug by pulling the power-cable.
- Make sure that the available voltage is between 220v/240v.
- Make sure that the power-cable is never crimped or damaged. Check the equipment and the power-cable periodically.
- If the equipment is dropped or damaged, disconnect the mains power supply immediately. Have a qualified engineer inspect the equipment before operating again.
- If the equipment has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. The arising condensation might damage the equipment. Leave the equipment switched off until it has reached room temperature.
- If your product fails to function correctly, discontinue use immediately. Pack the unit securely (preferably in the original packing material), and return it to your Prolight dealer for service.
- Only use fuses of same type and rating.
- Repairs, servicing and power connection must only be carried out by a qualified technician. THIS UNIT CONTAINS NO USER SERVICEABLE PARTS.
- WARRANTY; One year from date of purchase.

**OPERATING DETERMINATIONS**

If this equipment is operated in any other way, than those described in this manual, the product may suffer damage and the warranty becomes void.

Incorrect operation may lead to danger e.g.: short-circuit, burns, electric shocks, lamp failure etc.

Do not endanger your own safety and the safety of others!  
Incorrect installation or use can cause serious damage to people and property!

## Rigging

Please follow the European and national guidelines concerning rigging, trussing and all other safety issues.

### Procedure:

- The Star Cloth must never be allowed to swing freely in the room
- When rigging, de-rigging or servicing the cloth, always make sure, that the surrounding area is clear.

Improper installation can cause serious damage to people and property!

## Description of the equipment

### Features

- LED Star cloth
- Separate controller offering 4 modes of operation



1. **Output:** To LED cloth
2. **Microphone**
3. **Programmes:** All on/sound activate/auto/stop
4. **Speed control:** This control also acts as a sensitivity control when the programme selector (3) is set to sound active.

## Maintenance

The Star Cloth requires almost no maintenance. However, you should keep the unit clean, otherwise, the fixture's light-output will be significantly reduced. Disconnect the mains power supply, and then wipe the cover with a damp cloth. Do not immerse in liquid. The cloth will require monthly cleaning, as smoke-fluid tends to build up residues, reducing the light-output very quickly. Do not use alcohol or solvents. Keep connections clean. Disconnect the power, and then wipe the connections with a damp cloth. Make sure connections are thoroughly dry before re-connecting the power supply.

## Replacing a Fuse

Power surges, short-circuit or inappropriate electrical power supply may cause a fuse to fail. If the fuse fails, the product will not function whatsoever. If this happens, follow the directions below.

1. Unplug the unit from electric power supply.
2. Insert a flat-headed screwdriver into a slot in the fuse cover. Turn the screwdriver to the left, at the same time gently push (Turn and Push). The fuse will come out.
3. Remove the used fuse. If brown or unclear, it has failed.
4. Insert the replacement fuse into the holder where the old fuse was. Reinsert the fuse cover. Be sure to use a fuse of the same type and specification. See the product specification label for details.