



INSTRUCTION MANUAL
Mini-Component W/Video player
SX-5257BT



DEAR CUSTOMER

In order to achieve the best performance of your product, please read this instruction manual carefully before using, and keep it for future reference.

If you need extra support, please write to info@premiermundo.com

 


CONTENT

- 2 Warning
- 4 Panels Instruction
- 5 Remote Control
- 6 System Connection
- 7 Basic Operation
- 10 Audio Ripping Operation
- 11 USB/ Aux In Operation
- 12 Blue-connect/ FM Operation
- 13 Video Menu Setup
- 15 Specification
- 16 Trouble Shooting

ACCESSORIES

- 1* Remote control
- 1* FM Antenna
- 1* Six-head-Audio/Video cable w/RCA plug
- 1* User manual

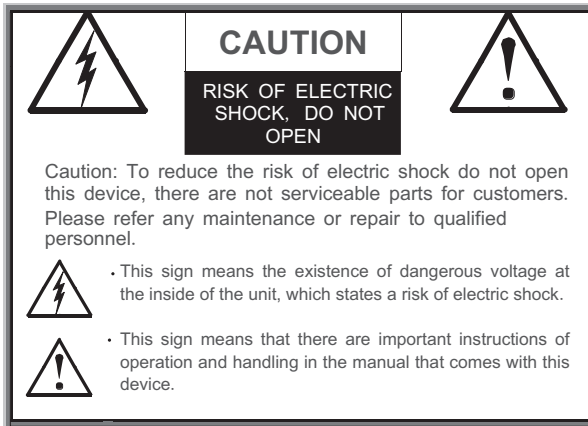

PREMIER CUSTOMER SERVICE

Venezuela:	0800-ELECTRIC (353-2874)
Panama:	300-5185
Website:	www.premiermundo.com
E-mail:	servicioalcliente@premiermundo.com


NOTE

This unit may be submitted to changes in specifications, characteristics and/or operation without prior notice to the user, in order to continue improving and developing its technology.

IMPORTANT SAFETY INSTRUCTION

1. Read the Instructions - All the safety and operating instructions should be read carefully before you use the product.
2. Keep the Instructions -The safety and operating instructions should be retained for future reference.
3. Heed all Warnings -All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow all instructions - All operating and use instructions should be followed.
5. Do not use this apparatus near water- The appliance should not be used near water or moisture -for example, in a wet basement or near a swimming pool, and the like.
6. Clean only with a damp wet cloth.



IMPORTANT SAFETY INSTRUCTION

7. Do not block any of the ventilation openings. Install the unit in accordance with the instructions.
8. Do not install near any heat sources such as radiators, heat Registers, stoves, or other apparatus, including amplifiers, that produce heat.
9. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug the apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture.
15. Please keep the unit in a good ventilation environment.
16. These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operation instructions unless you are qualified to do so.
17. The mains plug is used as disconnect device, the disconnect device shall remain readily operable.
18. This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.
19.  -This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.
 - To reduce the risk of electric shock, do not remove cover (or back) as there're no user-serviceable parts inside. Refer servicing to qualified personnel.
 - The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance in the literature accompanying the appliance.
20. The batteries (if included) shall not be exposed to excessive heat such as sunshine, fire or the like.
21. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
22. To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
23. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.




Portable Cart Warning

PANELS INSTRUCTION

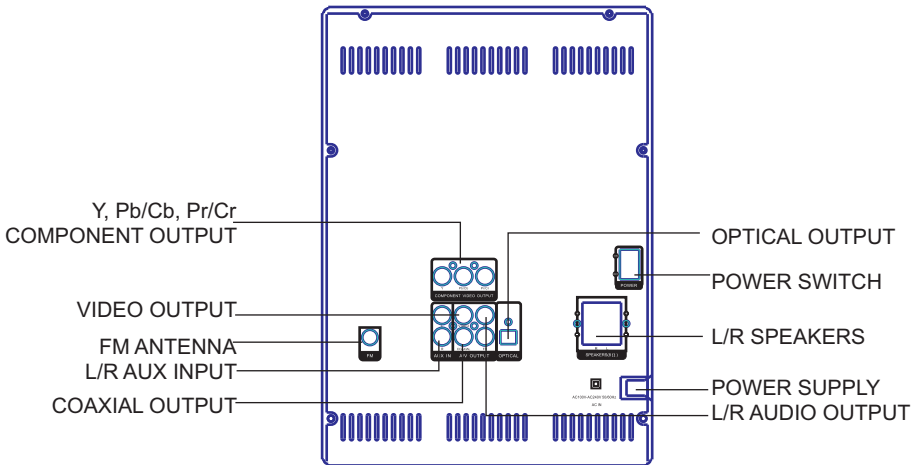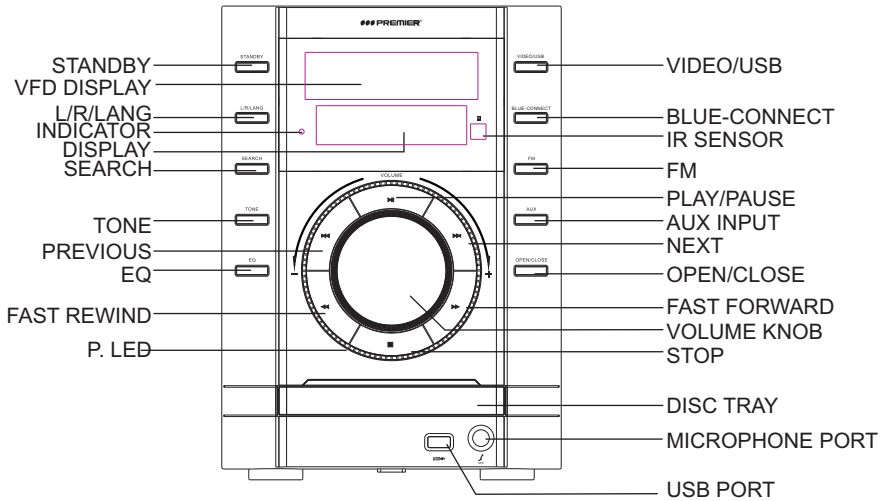


REMOTE CONTROL

 1. Turn on the player and have batteries installed in the remote control, put the emitter against the sensor of player for remote control.
2. The distance of remote control should not exceed 7 meters, or else, it will be invalid.
3. If the sensor or remote controller emitter is stuck with foreign matters, it may result in the mal-in signal reception or not at all.
4. The remote control function may be affected under the strong interference signals, such as power supply and other strong high-frequency signals.

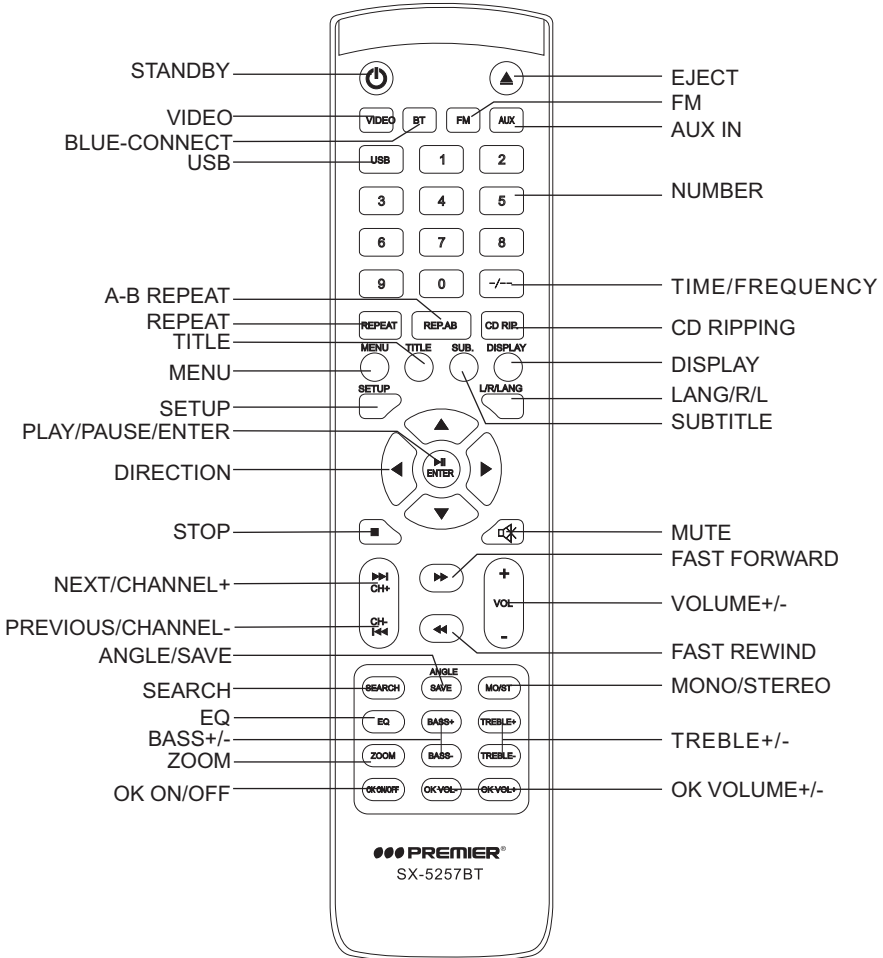

SYSTEM CONNECTION

Please check the below connection and make safe and firm connection before using the machine.

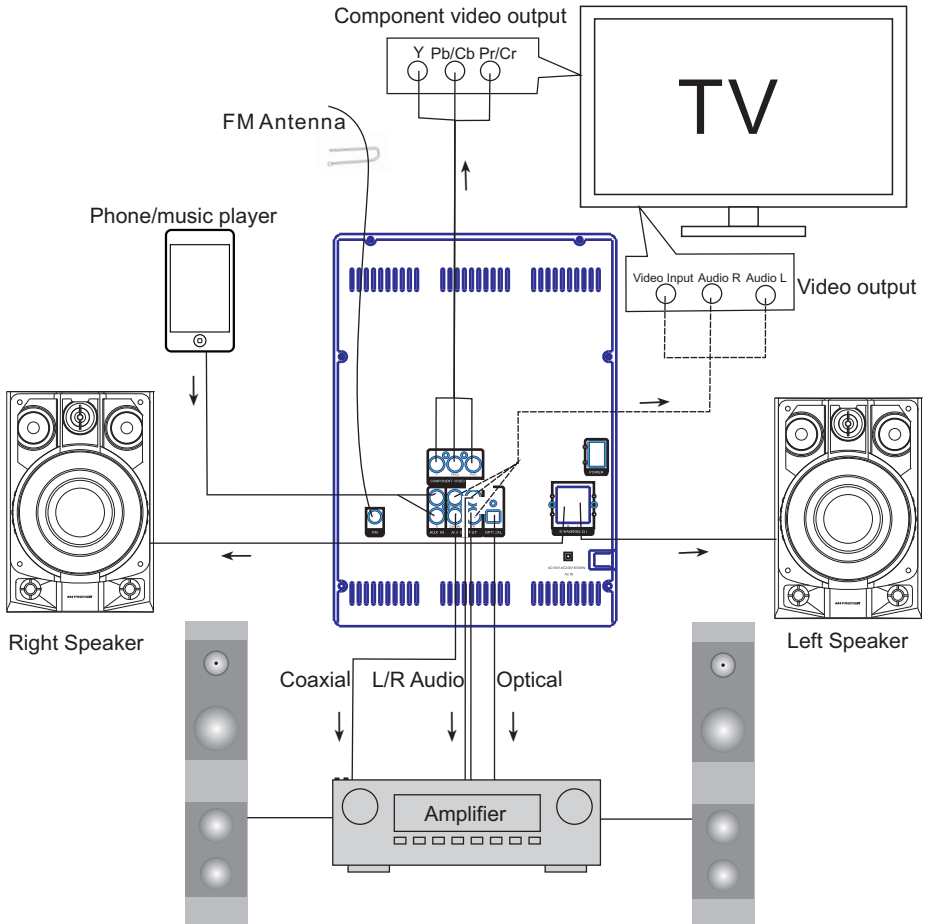



Note:

1. Before connecting the player to the TV-set, turn off and unplug both the units.
2. Adjust the corresponding system according to your TV system while watching various discs.
3. If there are multiple connections between video player and TV, please select one and unplug others so as not to affect the quality of images and sound.
4. Do not switch on and off or press power switch frequently, switching on and off each time must have an interval of 3 seconds.

BASIC OPERATION

PREPARATION

- 1). Before turning on, check whether all the connection are correct and reliable. Insert the power plug into the corresponding power socket. Press the power switch to power on the unit.
- 2). Press **STANDBY**  button to wake up the unit (or put into standby mode).
- 3). Press **EJECT**  button on the remote control or **OPEN/CLOSE** button on the front panel to carry the disc tray out, put the disc into the tray, press either button again, the unit starts reading and playing automatically.

STANDBY

Press the **STANDBY** button on the remote control (or front panel) can switch on the unit or to the standby mode.

MODES SELECTION

- 1) Press the **VIDEO**, **BT**, **FM**, **AUX**, or **USB** button on remote control to select the mode.
- 2) Press the **VIDEO/USB** button on the front panel to select VIDEO or USB mode.
- 3) Press the **BLUE-CONNECT**, **FM**, or **AUX** button on the front panel to select the mode.



PLAY/PAUSE

In play status, press **PLAY/PAUSE** button to pause the playing, press again to resume playback.

PREVIOUS & NEXT

In play status, press  button or  button to skip to the previous or the next track.

FAST FORWARD & FAST BACKWARD

In play status, press  or  button, there will be different speeds of fast forward or fast rewind at the speed X2, X4, X8, X16, X32.

VOLUME ADJUSTMENT

Press **VOL+/+** button or rotate the **volume knob** to turn up or down the volume to a comfortable level.

MUTE

Press the **MUTE** button to mute the sound, press **MUTE** again or press **VOL+/-** button to resume the normal status.

NUMBER BUTTONS

Use **NUMBER** buttons to select tracks, frequency or stations etc.
(E.g. if you want to play track 12, press the number button "1", then press "2".)

STOP

Press **STOP**  button to stop playing, press **PLAY/PAUSE**  button to start from beginning.

ANGLE VIEW

Press **ANGLE** button on remote control repeatedly to view the video on different angles. (The disc must support this angle function.)

BASIC OPERATION

SOUND-FIELD SELECTION

Press the **EQ** button to select different sound fields: Jazz, Rock, Classic, Pop, Live, Dance and Off.

TONE ADJUSTMENT

To adjust the effect of bass and treble, press **TONE** button on the front panel to select bass or treble, then rotate the **VOLUME KNOB** to adjust.

Or, press the **BASS+/-**, **TREBLE+/-** buttons on remote control to directly adjust the levels.

REPEAT

Press **REPEAT** button on remote control to select one of the repeat modes (based on different discs): Chapter, Title, All, or Repeat Off; Track or All; Single, Repeat one, Repeat folder or Repeat Off.

A-B REPEAT

Press **REP.AB** button once at the beginning of the section (i.e A), and press it again at the end of the section (i.e B), the player will automatically return to A and starts to repeat playing the section from A to B. Press **REP.AB** button again to exit.

OK ON/OFF

Press the **OK ON/OFF** button on the remote control to set the microphone on or off.
Please do not point the microphone at the speakers when you set the microphone "on".

OK VOLUME

Press the **OK VOL+/-** buttons to adjust the volume of the microphone.

LEFT/RIGHT CHANNEL/LANGUAGE SELECTION

Press **L/R/LANG** button to select one of the multiple output: L-Mono, R-Mono, Mix-mono, Stereo.
While playing disc with multiple languages, press **L/R/LANG** button to select a language for playback.

TITLE

While playing video, pressing **TITLE** button on remote control will enter the Title menu or Main menu.
Use the **Direction** buttons to move the cursor to select the items you want to play, or directly use the number button to select.

SUBTITLE SELECTION

If the video disc contains multiple subtitles of different languages, press the **SUB.** button on remote to choose one of the subtitles provided by the disc.

DISPLAY

In play status, press **DISPLAY** button on remote control to display the data of the disc:
Single elapsed, TR(track remain), Total elapsed, DR(directory remain), Display off; or Title elapsed, Title remain, Chapter elapsed, Chapter remain, Display off. (depending on different discs.)

BASIC OPERATION

ZOOM

When playing video, press the **ZOOM** button, the screen will be zoomed in 1/2, 1/3, 1/4, 2, 3, 4 times.

ENTER & DIRECTION BUTTONS

Press the Direction buttons ◀ ▶ ▲ ▼ to move the cursor to select items or contents of the menu. Then press the **ENTER** button on remote control to enable the selection.

MENU

When playing video, press **MENU** button on remote control to open or close PBC status (Some discs do not support this function). For some media, press **MUTE** button to go to the root menu or open the folder to check the file list.

DISC DATA

In play status, press “-/--” button, the TV screen displays the data of playing disc:

- 1) Use the **Direction** buttons to move the cursor to check the items.
- 2) Depending on different discs, the items will be different:
Track, Disc time, Track time, Repeat, Time DISP (display);
Title, Chapter, Audio, Subtitle, Angle, TT (total) time, CH (Chapter) time,
Repeat, Time DISP (display).
- 3) Press “-/--” button on when playing audio, the TV will display:

```
--:--          --:/xx          SELECT:--
T:--/xx        --:--          GO TO:-:--:--
```

Press “-/--” button to switch between the “Time Selection (current song/chapter)” and “Song/Chapter Selection”; then input the digits. The system begins playing from the specified time/song/chapter.



 
PLAY SPECIAL DISC

When playing disc of special formats, the TV will display the whole items of the disc and then start playing from the first track/chapter:

- 1) Press **MENU** button on remote control to enter the folder.
- 2) Move the cursor to select one of the contents from the file list, then press **ENTER** button to start playing.

When playing disc of pictures, press **STOP** button to enter the folder.

- 1) Move the cursor to one of the contents, press **ENTER** to display.
- 2) Press **ZOOM** button, then press ◀▶ button to zoom into the picture.
- 3) Press **REPEAT** button to repeatedly play the picture.
- 4) Press **STOP** button during browsing to enter the main menu.

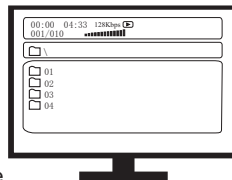

NOTE:

- 1) Press the **Direction** buttons ▲ ▼ to move the cursor UP or DOWN to select contents.
- 2) Press the **Direction** buttons ◀ ▶ to fast enter the PREVIOUS or NEXT page of the contents.
- 3) During playing, press ▶▶ or ◀◀ button to skip tracks/chapters/pictures under the current directory.

AUDIO RIPPING OPERATION

This function needs TV to make operations. The player can convert the music from CD to USB stick. Insert the USB stick into the USB port on the front panel while playing CD disc, then press **CD RIP** button on remote control to enter the ripping menu. Use the **Direction** buttons to move the cursor to contents and press **ENTER** button on remote control to select the items to make ripping settings.

Operation:

- 1) Move the cursor to the **SPEED**, press **ENTER** button to select one of the ripping speed: **NORMAL** or **FAST**. (When you select **FAST**, the music will not play during the process of ripping.)
- 2) Move the cursor to the **BITRATE**, press **ENTER** button to select one of the recording bitrates: **96kps, 112kps, 128kps, 192kps, 256kps, or 320kps**.
- 3) Move the cursor to the **CREATE ID3**, press **ENTER** to choose **Yes** or **No**. If the disc contains the music information such as singers, years, writers, etc. If you choose **Yes** to create ID3, then the player transfers the ID3 information to the USB files.
- 4) Move the cursor to the **TRACK** area, the track numbers and track time are listed one by one. Move the cursor to the tracks you want to rip, and press **ENTER** button to confirm selection. At last move the cursor to the **START** and press **ENTER** button to start ripping.



OPTIONS		TRACK	
SPEED	NORMAL	track01	04:43
BITRATE	128kbps	track02	05:07
CREATE ID3	Yes	track03	04:23
DEVICE	USB 1	track04	04:57
SUMMARY		track05	05:27
SELECTED TRACK	0	track06	04:55
SELECTED TIME	00:00	track07	05:36
START	EXIT	SELECT ALL	SELECT NONE

OPTIONS		TRACK	
SPEED	NORMAL	✓track01	04:43
BIT RATE	128kbps	track02	05:07
CREATE ID3	Yes	track03	04:23
DEVICE	USB 1	✓track04	04:57
SUMMARY		track05	05:27
SELECTED TRACK	02	track06	04:55
SELECTED TIME	09:40	track07	05:36
START	EXIT	SELECT ALL	SELECT NONE

NOTE:

When you move the cursor to **SELECT ALL**, press **ENTER** button will choose all the tracks; to clear the selections you have made, move the cursor to **SELECT NONE** and press **ENTER** button to confirm.


- 5) When the ripping starts the TV will displays as below:

RIPPING	SELECTED TRACK	
TRACK PROGRESS 	track01	8%
TOTAL PROGRESS 	track04	04:57
<input type="button" value="CANCEL"/>		
SUMMARY		
NOW RIPPING TRACK	01/02	

- 6) If the player is ripping the music to the USB stick, you can only cancel the ripping progress and no other operation is available for control. Press **ENTER** button to stop ripping, then move the cursor to **EXIT** and press **ENTER** to exit.

USB OPERATION

 - 1) Insert the USB stick into the USB port of the unit.
- 2) Press the **VIDEO/USB** button on the front panel or **USB** button on remote control to enter the USB mode.
- 3) The player will automatically detect the contents or files of the USB.
- 4) When the folder appear on the TV screen, use **Direction** buttons to select the one of the contents, and press **ENTER** button to play.
- 5) Press **MENU** to display the **file browser**, select the file you want and press **ENTER** button to start playing.
- 6) While playing tracks, press **-/--** button once on remote control, it displays “**---/xxx**”, then use the digit buttons to select the track you want; press **-/--** button twice, it display “**--:--**”, then use the digit buttons to select the playback time of the current track.
- 7) Please check the **BASIC OPERATION** for more detailed operations.

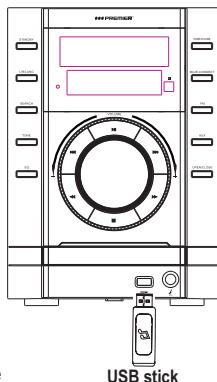


NOTE:

- 1) Depending on the amount of data and media speed, it may take long time for the system to read USB files. In some cases, reading time may be as long as 60 seconds. This is not a malfunction.
- 2) Even when they are in a supported format, some files may not play or display depending on the content compatibility.
- 3) The USB port supports the devices of maximum capacity of 32GB.

AUX IN OPERATION

 1. Use 3.5mm-RCA cable (not supplied) to connect the AUX IN port of the rear panel with the outer music player' output/headphone jack, e.g. smart phone.
2. Press **AUX** button on the front panel or on remote control to enter AUX IN mode.
3. Start playing music by the music player.
4. The playback operations are controlled by your music player.
5. The unit can only connect one device at a time.

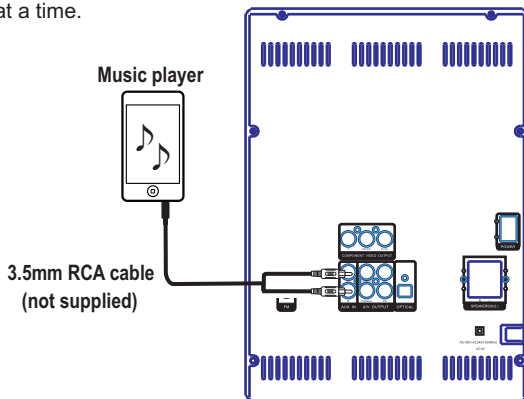

BLUE-CONNECT OPERATION

Pairing Operation

- 1) Press **BLUE-CONNECT** button on the front panel or **BT** button on remote to enter BT mode.
- 2) Turn on the Blue-connect function on your device (e.g. smart phone).
- 3) Place your device in Blue-connect search range (10 meters). The phone will search for this unit.
- 4) Enter the list of found devices on the phone, and select the name **SX-5257BT**. Some devices may ask you to confirm the selection by choosing OK/YES/PAIR.
- 5) For some devices, you may need to input "0000" (four Zero) as the passkey to make connection.
- 6) The player will beep once a connection is established.
- 7) Turn off the Blue-connect function on your device or unpair from the paired device to disconnect the devices and follow the **steps 2-4** above to connect to another device.

NOTE:

- * When playing music through a phone, and a call is coming, music will stop automatically. When the call ends, it depends on the setting of your phone whether the playback will resume playback or not.
- * Some devices may connect immediately in pairing, some may take long time to connect.
- * The unit can only be connected and playing content from one device at a time.

RADIO OPERATION

FM Frequency range: 87.5-108.0MHz. To get the best reception, adjust the FM antenna first.

- 1) Press the **FM** button on remote or on the front panel to enter FM mode.
- 2) Press **MO/ST** button on remote control to turn stereo on or off. If the signal is not strong enough, you can not select turn stereo on.

3) Select stations

- a) Directly input frequency:
Press the **-/--** button on the remote control, input the digits to select the frequency directly.
E.g. 1, to select 89.90MHz, press **-/--** button, then press the number buttons 8, 9, 0.
E.g. 2, to select 105.90MHz, press **-/--** button, then press the number buttons 1, 5, 9, 0.
- b) Press the **CH-** or **CH+** buttons to select the previous or next stations.
- c) Press **◀** or **▶** buttons to tune the frequency up or down on the step of 0.1 MHz.
- d) Press and hold **◀** or **▶** buttons to auto skip to the previous or next available stations of strongest frequency. It stops tuning when it found a strong signal station.

4) Auto-Search

Press the **SEARCH** button to search stations from the low to high frequency automatically.
Press this button again to stop searching.

5) Save Stations

Use the **SAVE** button to save the station.

 
- a) Directly press **SAVE** button on remote control to save the current station into the current preset.
- b) E.g. If you want to save 99.30MHz in 28th, press 2, 8 button to select the preset station, then press **-/--** button and input 9, 9, 3, 0, at last press **SAVE** button to save.

VIDEO MENU SETUP

- 1) In video mode, press **SETUP** button on remote to enter the setup menu.
- 2) Press the **Direction** buttons to switch between the different setup pages.
- 3) Use the **Direction** buttons to move the cursor to the position you want, then press **ENTER** button again to enter the subdirectory. Press **ENTER** buttons again to enter the next subdirectory.
- 4) Press the **SETUP** button again to exit the setup.


Language Setup

- 1) OSD language
To select one of the languages of the screen displays and setup menus.
- 2) Audio
When playing video disc, the player will auto-play the built-in language of the disc. This unit could play languages as in the list.
- 3) Subtitle
When playing video disc with multiple languages, the player will auto-play the built-in subtitle language of the disc. This unit can play the listed built-in languages or you may choose "off" to close the subtitle.
- 4) Disc menu
Choose one of the listed languages for the disc menu.

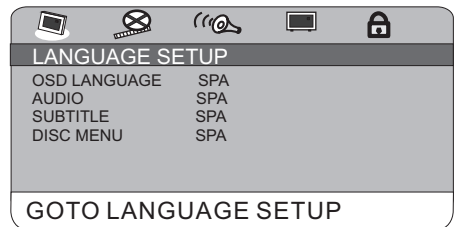

Video Setup Page

 - 1) Video output
To select the the video output: CVBS, YPbPr. (Make sure the player is set to the correct video mode.)
- 2) TV display (4:3PS, 4:3LB, 16:9WIDE)
Choose one of the display formats suited with TV. If the TV display is 4:3, the display format of the video is 16:9, the image will be compressed horizontally.
- 3) TV type
The player supports tv types: PAL, AUTO, NTSC.
- 4) Color setting
Adjust the video color output:
Sharpness: High, Medium and Low;
Brightness: +/-20, the default is 0;
Contrast: +/-16, the default is 0;
Gamma: None, Low, Medium, High;
Hue & Saturation: +/-9, default is 0;
- 5) TV mode (This option is not available when the video output is CVBS.)
To select one of the scan modes: progressive and interlace.
- 6) Panel light
To turn the panel light ON or OFF on the front panel.

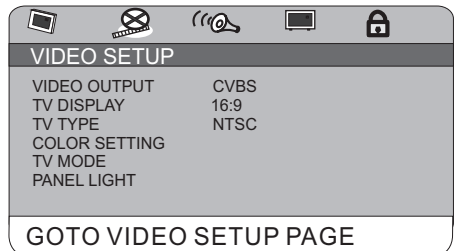

VIDEO MENU SETUP

 
Audio Setup

- 1) Analog audio setup
 - a) Surround:
 - LT/RT: left and right soundtrack audio output;
 - Stereo: stereo audio signal output.
 - b) Dual mono:
 - To select one of the audio output: L-Mono, R-Mono, Mix-Mono and Stereo.
 - c) Video dynamic:
 - To adjust the different compression effects.
 - When the "FULL" is chosen, the peak-peak value of audio signals will be the minimum; when the "OFF" is chosen, it will be the maximum.
- 2) Digital audio
 - a) Digital output:
 - When playing the special disc, the coaxial and optical terminal outputs in SPDIF/ RAW format. SPDIF/PCM may be selected when the player is connected with a 2CH digital stereo amplifier.
 - b) LPCM output:
 - LPCM (linear pulse code modulation) is a non-compressed audio digital technology.
 - There are two LPCM output: 48K, 96K.
- 3) Karaoke Setup
 - a) Mic setup: Set Microphone off or on; adjust the volume of microphone; adjust the Echo level.
 - b) Mic threshold: adjust the threshold of the microphone.
- 4) Equalizer
 - a) Equalizer mode: to select one of the effects: Off, Rock, Pop, Live, Dance, Techno, Classic, Soft.
 - b) Bass Boost: to turn ON or OFF the bass boost.
 - c) Super Bass: to turn ON or OFF the super bass.
 - d) Treble Boost: to turn ON or OFF the treble boost.



General Setup Page

- 1) Angle mark
 - If the disc has multi-angle pictures, setting the Angle mark displays a multi-angle mark on the tv screen.
- 2) Close caption
 - When playing video disc, set the option OFF to close the caption, choose ON to open the caption.
- 3) Last memory
 - When the option is set to ON, the system memory the played disc content. The disc content is not memorized when the OFF option is selected.
- 4) Version
 - To check the model version of the player.
- 5) Default (in EJECT or NO DISC status)
 - To reset the player to the factory setup.

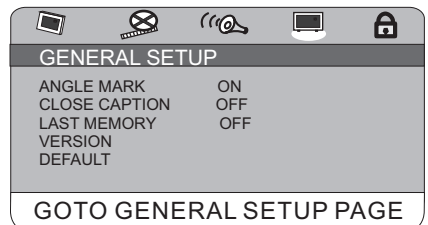


VIDEO MENU SETUP

Parental Control Setup Page

(Only available in EJECT or NO DISC status.)

 - 1) Parental control
This player has several different age ratings for selection. Move the cursor to select one of them, then press **ENTER** button to confirm selection.
- 2) Password
The original password of the player is the "0000" (four Zero). You can change it to a new one.

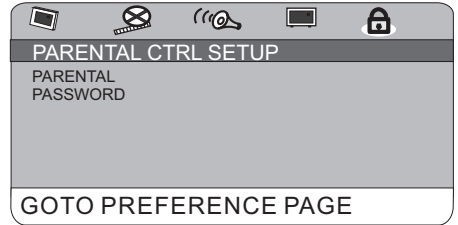

SPECIFICATION

Output power	2*30W
Power input	AC100V-240V, 50/60Hz
Output joint	Component video output; Audio/Video output; Optical output; Coaxial output.
Input joint	Aux in, USB
Outer facilities	Microphone
Remote distance	7 meters
Frequency	87.50MHz~108.0MHz
Blue-connect range	10 meters

TROUBLE SHOOTING

For your convenience, we have listed some methods to solve common problems you may encounter when you using the system. If the problem occurs repeatedly, contact the nearest maintenance center.

Problem	Possible cause	Solution
Power supply does not work	Power plug is not fully inserted into the power socket	Fully insert the power plug into the power socket
Remote does not work	The batteries have been used up	Replace them with new ones
	The remote control is not aimed at the remote control sensor	Please aim the remote control correctly; in line with the remote sensor
No image on the TVscreen	The system is not connected correctly	Reconnect the system by referring to the illustration
	TV not set in video mode	Set the TV in video mode
	The scanning mode does not match to the TV scanning mode	Reset the scanning mode
Play is unavailable	No disc inserted	Insert a disc
	Disc incorrectly inserted	Reinsert the disc with the picture upward
	Disc is not compatible with this device	Only use disc that are compatible with this device
No sound from speakers	Audio wire is not connected correctly	Connect the audio wire correctly
	Incorrectly connected to amplifier	Connect the amplifier correctly by referring to the illustration
Discontinuous sound or distorted pictures	Disc is not clean	Replace with a clean disc or use a soft cloth to clean the disc
	Disc is scratched Disc distorted	Replace with a new one
Invalid display on the screen	Operation incorrect	Please refer to the user manual

