Introduction

Thank you for purchasing Club II. Club II is a three-channel DMX laser can be controlled via a standard DMX controller. It is a lightweight, mini intelligent fixture and is an ideal product for discos, clubs, exhibitions and any place that need visionary effect. Club II provides red, green, yellow laser effect and three operating modes. For safe operation, read this manual before powering or installing the fixture, follow the safety precautions listed below, and observe all warnings printed in this manual and on the fixture.

Safety Precautions

- Do not spill liquids into or onto your unit. If this ever happens, disconnect the main power immediately. Do not connect this unit to any dimmer pack.
- Always disconnect from main power before making any type of connection.
- Be sure to locate this unit in a place with adequate ventilation at least 15 cm from a wall, and mount this unit in safe and stable matter.
- To prevent fire or shock hazard, do not expose this unit to a high temperature or high humidity area. Please unplug unit when not in use.
- Always keep combustible materials away from the fixture.
- This unit is intended for indoor use. Use of this unit outdoors voids all warranties.
- Always refer service to a qualified technician. Never look directly into laser beam.
- Occasional breaks are necessary to prevent breakdowns.
- Caution Use of controls or adjustments or performance of procedures other than as specified herein may result in hazardous radiation exposure!

Set Up


Unpacking Club II comes with: 2 hanging brackets, 4 clamp levers, 4 washers, 1 adapter and 1 user manual. Unpack carefully and be sure that no damage has occurred during shipping. If there is anything missing or appear to be damaged please contact your dealer.

Power Connection Be sure the source voltage in your area matches the required voltage for your Club II before plugging your unit in. Incorrect voltage selection will detrimentally affect the operation of this product.


DMX Cable Connection Club II is a three-channel DMX fixture that can be operated with universal DMX controller. This unit and DMX controller require a standard 3-pin XLR connector for data input and data output.

Installation/Mounting Club II should be properly mounted by using a suitable hanging clamp and safety cable. Use in a well-ventilated area. Be sure no ventilation slots are blocked.

Safety Label Position

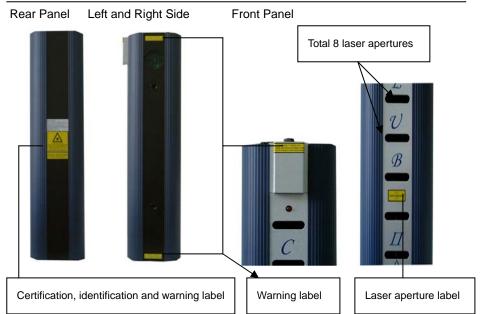

Control Panel Introduction

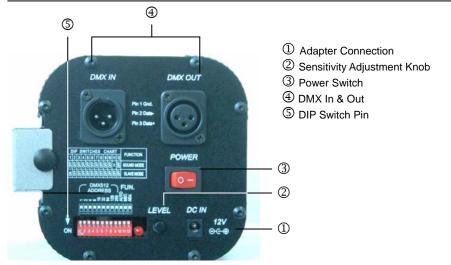

Operating Modes (Cont.)

DMX Signal Levels							
Channel-1							
Range 0-255	Colors and Lines Selection						
226-255	Colors and Lines change every 5 seconds						
208-225	Colors and Lines change every 3 seconds						
196-207	Red + Yellow + Green, dotted line2						
183-195	Red + Green, dotted line2						
170-182	Green, dotted line2						
157-169	Red, dotted line2						
144-156	Red +Yellow + Green, line						
131-143	Red + Yellow, line						
118-130	Green + Yellow, line						
105-117	Red + Green, line						
92-104	Red + Yellow + Green, dotted line						
79-91	Red + Green, dotted line						
66-78	Yellow, dotted line						
53-65	Green, dotted line						
40-52	Red, dotted line						
27-39	Yellow, line						
14-26	Green, line						
1-13	Red, line						
0	OFF						

Operating Modes (Cont.)

DMX Signal Levels (Cont.)

	Chanr	•	Channel-3				
Range 0-255	Laser up/d	own movement selection	Range 0-255	Laser up/down preset			
				movement selection			
228-255		Sound Active	255	×4 times			
216-227		Laser lights continuously move downward					
213-215		Stop		×3 times			
201-212		Laser continuously move upward		×2 times			
0-200		Laser position selection		×1 time			
				Starting Point			
				×1 time			
				×2 times			
				×3 times			
			↓ 56	↓ ×4 times			
			0-55	Not Used			


Trouble Shooting

- If there is no light from the unit, please check the main power supply and fuse.
- If unit does not respond to DMX, please check the DMX cables are connected properly and are wired correctly.
- If unit does not response to the music please check the sound-activation adjustment.
- If problems cannot be solved please contact your dealer for service
- You can adjust the position of green and red light by follow steps to make the best yellow light effect (FOR AL18 TRI-COLOR UNITS ONLY)

Step1: Set the DIP switch 12 to ON, others to OFF

Step2: Open the case (Before you open the case please project light on to the wall. Never look into the beam directly.)




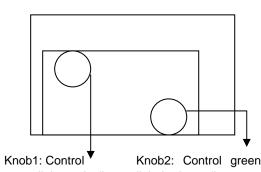

green light vertically.

light horizontally.

Step3: control knob1 to vertically adjust green light line to the same position of height with red light line

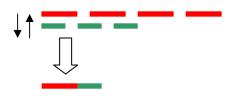

Step4: control knob2 to overlap the green light line and red light line



Operating Modes

- 1. Stand-Alone Operation (Auto, Sound Active Mode) Auto mode
 - The unit runs built-in program to change the laser effects automatically. Set DIP switch pin 10 to ON, other pins to OFF to run Auto mode

Sound Active mode

This unit has built-in program that will react to sound and music under Sound Active mode. Set all DIP switch pins to OFF to run Sound Active mode

2. Master-Slave Operation (Auto, Sound Active Mode)

This mode allows user to link up to 32 units to run the Master-Slave operation. In the Master-Slave operation one unit will act as the controlling unit and the others will react to the controlling unit. Daisy chain your units via the standard XLR microphone cables in the following configuration: 'Out' from the first unit to 'In' on the second, 'Out' from the second to 'In' on the third and so on. Auto mode

To set the master: Set DIP switch pin 10 and 11 to ON, other pins to OFF.

To set the slaves: Set pin 1 to ON, other pins to OFF

Sound Active mode

- To set the master: Set DIP switch pin 11 to ON, other pins to OFF.
- To set the slaves: Set pin 1 to ON, other pins to OFF

3. DMX Operation

- DMX operation gives the users freedom to create their own programs tailored to their own individual needs.
- To run this unit in DMX mode, connect the unit to any standard DMX controller via XLR connectors.
- Please consult DMX controller manual to determine address.

Function Selection Chart

	DIP SWITCHES CHART									FUNCTION		
1	2	3	4	5	6	7	8	9	10	11	12	
OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	\times	OFF	SOUND MODE
OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	\times	OFF	AUTO MODE
	SET SOUND / AUTO MODE ON OF								OFF	MASTER		
ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	SLAVE
	SET ADDRESS OFF OFF							OFF	DMX MODE			
OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	TEST MODE

Cleaning

Use a soft cloth and normal glass cleaner to clean the outside casing. Cleaning frequency depends on the environment in which the fixture operates. Be sure to dry all parts before plugging the unit back in.

Specifications

Product Name	Club II							
Model No.	AL18-5R/ 30R/ 50R/ 100R/ 200R AL18-05G/ 20G/ 30G							
Laser Diode	4.9/ 30/ 50/ 100/ 200mW 4.9/ 20/ 30mW							
Laser Color		Red	G	Green				
Model No.	5R5G	20R10G	50R20G	100R30G	200R50G			
	4.9mW x	20mW +	50mW +	100mW +	200mW +			
Laser Diode	2	10mW	20mW	30mW	50mW			
Laser Color	Red, Green and Yellow							
Net Weight	4.5Kgs							
Device	UL Adapter (Input 120V 60Hz & Output DC 12V) or							
Power	CE Adapter (Input 220-240V 50Hz & Output DC 12V)							
Classification	4.9~20mW: 3R/ 30~200mW: 3B							
Size (mm)	L140 x W120 x H500							
Housing	Metal							
Beam Divergence	< 1.5 mrad							
Operating Temperature	18~25°C							

Club II

AL18 Series User Manual





©2007 ACTOR-MATE CO., LTD. No.15, Lane 83, Lungshou Street, Taoyuan City, Taiwan 330, R.O.C. Tel:+886 3 3791326 / Fax:+886 3 3791919 www.actlaser.com.tw ⊠ active@actlaser.com.tw