

Thank you for purchasing JXD product!

This menu includes very important security arrangement and information about the product. For better using and enjoying it, we highly recommend you to read the following information before starting to use it. We try our best to make the content correct and complete, but it can't certify that there is no mistakes and omit of the introduction. Any further information, please refer to the product.

- DON'T use your device when in very dry environment to avoid static impacts.
- DON'T leave your device near children.
- DON'T use your device when driving to avoid traffic accidents.
- AVOID leaving your device in high temperature, high humidity or dusty air-environment.
- AVOID crushing your device with any hard objects, which may cause its surface scratches or some hardware damage.
- DON'T disassemble your device individually.
- MUST insert or pull out the TF card in power-off status to avoid unpredictable damage to your device caused by transient current.
- DON'T disconnect your device from computers while formatting system or download/upload files, which may cause program errors.
- JXD is not responsible for the loss of your data in your device under any circumstances.
- JXD will not inform its customers for any modification of software of product introduction in advance, and JXD's interpretation shall prevail in the precondition of obeying the local laws.

1

DIGITAL PMP USERS' GUIDE



 
S601

BRIEF INTRODUCTION

S601

S601 Figure

Front View:

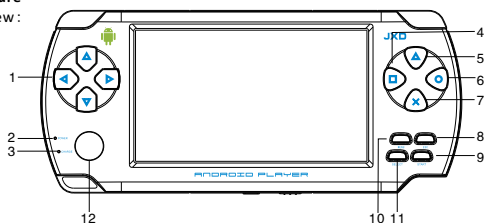

1. DIRECTION BUTTON 2. POWER 3. CHARGE 4. MENU 5. HOME 6. CONFIRM
7. BACK 8. ESC 9. START 10. MENU 11. SELECT 12. JOYSTICK

Functions of the Buttons:


1. DIRECTION BUTTON: Move the icons and control the direction in games
2. POWER: Green light while running
3. CHARGE: Red light while charging and the light goes out while full
4. MENU: Wallpaper and Settings

2

TOP VIEW

S601

5. HOME: Back to the homepage (not suitable for some games)
6. CONFIRM
7. BACK
8. ESC
9. START
10. MENU
11. SELECT: Select button/ Coin button
12. JOYSTICK: Control the direction

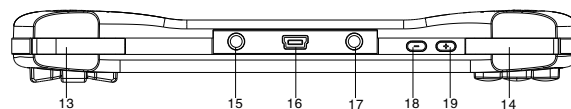

13. L 14. R 15. TV-OUT (via upgrade) 16. USB 17. EARPHONE 18. VOL- 19. VOL+

Functions of the Buttons:


13. L: Left button, switch the pages in the main interface
14. R: Right button, switch the pages in the main interface
15. TV-OUT 16. USB: Data transfer and charge 17. Earphone 18. VOL- 19. VOL+

3

QUICK START

S601

Bottom View

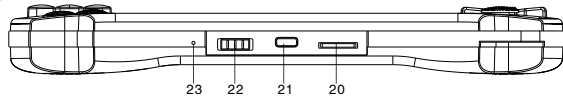

20. TF CARD SLOT 21. POWER ON/OFF 22. LOCK/ON 23. MIC/RESET

Functions of the Buttons:

20. TF CARD SLOT: The back side up when insert the card. (To avoid data lost, please insert the TF card in the power-off state)
21. POWER ON/OFF: A. Press the button for 3s to power on; B. In the power-on state, press 3s to power off and press HOME for 6s to force to power off; C. In the power on state, press the button to lock the screen.
22. LOCK/ON: Control the function buttons: When in ON, you can access to the function buttons; When in LOCK, the function center is locked.
23. MIC/RESET: MIC and the RESET hole.

The Status of the Device and Notice

Notification Icons


When notice appears in the notice board, press the notification bar, and then slide downward with fingers or Touch Pen to start notice board.

4

QUICK START/MAIN INTERFACE

S601

Herein is figure of Status Bar:

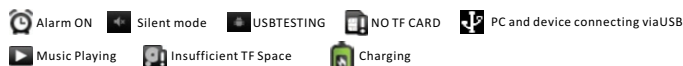

Power On / Off

Power On

Press the power button for 3s to see the starting picture, 50s' later, system enter into the status of Screen Lock, please slide to unlock the screen.

Power Off

1. Press the power button for 3s to pop up the power-off options, shut the device by clicking it;
2. Press the power button for 6s to force to shut the device.

The Start and Turning-off of the Screen

The screen will be shut automatically when it is idle

1. After being idle for a while, the Screen will be shut automatically to save power;
2. In the starting state of the screen, press the power button to shut the screen.

Notice: If you can set the time to turn off the screen, you can find the Setting in All Apps and then touch Screen timeout in the Display

5

QUICK START

S601

Turn on the screen in the Turning-off state

In the turning-off state, you can start the screen by pressing power button and the screen will enter into lock state. Slide the lock icon upward via fingers or touch pen to unlock the screen, and slide the Volume button downward to enter into Silent Mode.

Main Interface

It will enter into the Main Interface after unlocking it, click the corresponding icons to enter into the corresponding applications.

Change the Wallpaper


1. In the main interface, press the Menu button to pop up the menu and then choose the Wallpaper;
2. Click to choose the picture and then click Set wallpaper to confirm.

Change the style of the shortcut in the bottom of the main interface

1. In the main interface, press the Menu button to pop up the menu and then choose the Settings;
2. Click Icon Style to set the style.

The Interface of All Apps

Click the in the main interface, and you can check all the icons by sliding in the blank up and down.

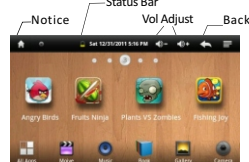

6

QUICK START/MAIN INTERFACE

S601

USB Connect

Storage setting


Before transferring the file, you should set the storage mode;

1. Connect your device with PC via USB and the notifications will appear in the Notice Bar;
2. In the Notice Panel, click USB connected and then click Turn on USB storage;
3. Then the USB connected successfully.

Copy the file into the storage:

1. Connect your device with PC via USB;
2. Set the storage mode and connect the device with PC;
3. Open your device in MY COMPUTER to check up the contents of the Removable Disk (x);
4. Find the file you need and copy it to the "Nand-flash (I Disk)";
5. After backup, click the Safely Remove Hardware to uninstall the storage.

Notice: When your device is connected with USB, if you turn on USB storage, you can not access to your memory card through your device but you disconnect it.

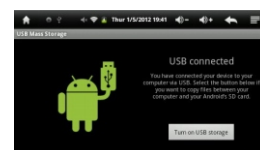

7

Install

Install the third party apps

You can download and install the needed the third party apps of Android. Backup the apps into the internal memory card or TF card, then insert the TF card into the device.

1. Click  ApplInstaller to check up all the apk files;

2. Press your needed apps;

3. Pop up the install options and click to install the apk;

4. You can start the app after installing;

If you install multi apps at the same time, you can choose multi apps and then press Menu button and clickinstall / uninstall.

Notice : The apps of the third party you search for on the Internet is with the suffix .apk.

- (System) Settings
- Click Settings
1. **Sound**: You can set the volume of Media/Alarm/Notification and the Silent mode.
2. **Display**: You can set the Brightness, Auto-rotate screen and Screen timeout.
3. **Location&security**: Set up screen lock: you can cancel the current lock style and set up a new one through corresponding settings.
4. **Applications**: You can check up the running service and Force stop/ Uninstall/Clear data/Move to TF card in the Manage applications.
5. **Privacy**: You can choose Factory data reset.
6. **Language&keyboard**: You can select the language and Input method.
7. **Date & time**: You can set the date, time zone and the time format.

1. Click  to enter into the game 
- Notice: When entering to the sub menu the first time, there is no icon for the game, you should go back to make it shown.
2. Enter into the game with coin through SELECT
3. After coin, press direction buttons to choose the roles and then START the games.
4. In the game interface, you can control the roles by direction buttons or joy sticks, and make them fight through the function buttons.
- Notice: The definition of buttons in different games are different.
5. You can quit the games by ESC.
6. Press the MENU to pop up the options
- You can set the ROM, SOUND and Buttons of the games in the Settings.
7. The save path of the download games
- Take arcade for example:**
- Rom save path:** save rom in mnt/flash/roms/arcade/roms or TFcard/roms/arcade/roms, but you can't build new folders in this menu.
- Game icons:** The game icons are saved in mnt/flash/roms/arcade/snap or Tfcad/roms/arcade/snap, the icon's name should be the same with the game.
- Game list:** you can check mnt/flash/roms/arcade/roms/gamelist.txt.
- Path:** GBA—> gbaroms/roms SEGA MD—>mdroms/roms
Nintendo N64 —>n64roms/roms FC—>nesroms/roms
SONY PS1 —>psroms/roms



1. Wind-up Knight

Wind-up Knight is the type of challenging game you have been waiting for.It is a high-end, action-packed, 3D side-scrolling adventure game. Your Wind-up Knight through devilish levels--over 50 in all--to rescue the Princess from the clutches of the evil Black Knight. Run, jump, roll, and slash your way to victory.

2. Bejeweled2


Match sparkling gems three at a time to make them burst in showers of color and points. Match four or more to create flashy power gems that boost your score and your mood with brilliant cascades and combos.

3. Angry Birds

Use the unique powers of the Angry Birds to destroy the greedy pigs' fortresses! Angry Birds features challenging physics-based game play and hours of replay value. Each of the 300 levels requires logic, skill, and force to solve.

4. Fruit Ninja

Fruit Ninja is a juicy action game with squishy, splatty and satisfying fruit carnage! Become the ultimate bringer of sweet, tasty destruction with every slash. Swipe up across the screen to deliciously slash fruit like a true ninja warrior. With three games modes in single player and worldwide leaderboards using Open feint, the addictive game play will keep you coming back for even higher scores.

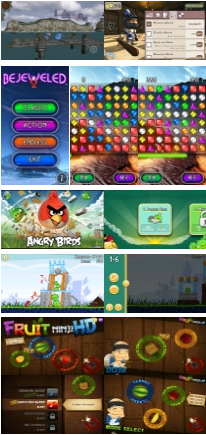

5. Plants vs. Zombies

A mob of zombies is about to invade your home, and your only defense is an arsenal of zombie-zapping plants. Think fast and plant faster to stop the zombies dead in their tracks. And with five game modes to dig into, the fun never dies!

6. Fishing Joy

Catch a big fish. You can spice up the game by trying to earn as many coins as possible. The coins will allow you to use the special laser that kills everything in its path. You also get 7 fishing net sizes and tap game controls. More importantly, it has superb visuals that are colorful as they are crystal clear.

7. Air Hokey

Air hockey is a game for competing players (you and the computer) trying to score points in the opposing player's goal. Join the game to practice your skills against the computer opponent for future World Championships. And you can submit your total scores to the online Leaderboard to compete with global players.

8. Hungry Shark

Chomp your way to the top of the food chain in this fast-paced aquatic eat 'em-up. Binge on the beach, trawl the depths and raid the Antarctic to satisfy your appetite. Pick-up-and-play fun with beat-your-buddies online. Feeling peckish?

9. Trial Xtreme2

Trial Xtreme2 uses the cutting edge NVIDIA® PhysX® engine to give you the most realistic ride of your life, demanding skill and concentration to take to take your bike riding skills to the max!



10. Riptide GP

Set against the backdrop of a futuristic Earth, Riptide GP features daredevil water cyclists rocketing through canals and rivers across a dynamic, ever changing surface of glittering water.

11. Robo Defense

Robo Defense is the ultimate portable tower defense experience. Featuring open maps, upgrades, achievements and nice graphics.

12. Aporkalypse - Pigs of Doom


Smart pigs from hell! The pig world is in danger! Follow the four heroes of ham through the fires of hell and use brains, brawn and bacon to stop the Aporkalypse!

13. EDGE

With narrow passageways, falling ledges, and blocks charging after you every other moment, you never quite feel safe. There's always a feeling that the edge you're so finely balanced on could slip from beneath you, and this thrilling game play is enough to keep you moving and hooked.

14. Puffle Launch

It's time to blast off! Be a high speed hero and face some fast-paced action. Launch your puffle and find the fiery prize in 6 high speed levels! Dodge crazy obstacles, collect Puffle O's and discover amazing surprises! Ready to feel the rush? Go ahead, daredevil. Blast off and go get 'em!

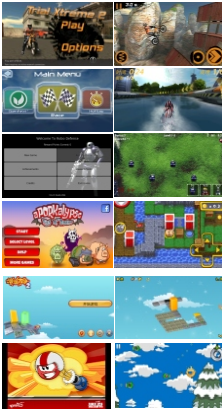

- **Android**
Android is the open source operation based on Linux developed by Google in 5th. Nov. 2007.
- **APK**
APK is short for Android Package.
- **How to download APK?**
Download APK through JXD intelligent cloud service or PC.
- **OS version**
Android 2.3, which can operate the most of the Android applications.
- **USB charge**
Support, please charge with standard adapter of DC 5V.
- **Short standby time**
Start the device in normal temperature because the Li battery's service time is different under different environment. Increasing the volume and frequent operation and some other factors will affect the standby time.
- **How to improve the battery's effective time?**
 1. Proper brightness (low brightness lasts the battery's effective time);
 2. Proper volume (low brightness lasts the battery's effective time);
 3. Stop the redundant running procedures.
- **Can't Transfer Files and Find Disk**
Change another USB cable and ensure your USB cable connected properly with PC.
- **How to improve the system efficiency?**
 1. Stop the redundant running procedures in the background

- Click the Advanced Task Manager in the right of the main menu to stop the redundant running procedures;
2. Clean Procedure Cache
- The Cache Cleaner is pre-installed in the device, click the "System Tools" in the App Center Interface, then click Cache Cleaner to clean the procedure cache.
3. Delete some unused or some less frequent used APK procedures.
- **How to delete applications and games?**
1. Android System: Apps and Games
- Click the "Advanced Task Manager" in the Main Interface and then click the "Uninstall". In the page, click all the procedures you suppose to delete and then click the popup "Confirm" to delete the procedures.
2. Other systems: (button games) simulator games
- A. Delete from the device: in the Game Center, long press the game icons you suppose to delete until the icon can be dragged. Then drag the icon to the TRASHCAN so that the game icon and its file can be delete in the mean while;
- B. Delete from PC: connecting to the PC via USB, find the "roms" in the "nand", and then delete the game file in its subfile.
- **Button Invalid**
Please confirm the button LOCK/ON is in the ON side, or the buttons will be invalid.
- **System Halted**
Installing some Third Party software may result in the system halted. You can press the Reset button to reset the system or press the Power button for 6s to force to shut the device.

Specifications

System	Item	Description
	Capacity	2-16 GB
Display system	Internal	512M DDR2
	Screen	4.3" Touch Screen 480x272
Language	Multi-languages	
	System	Google Android OS 2.3.4
Others	Wifi	WiFi 802.11b/g (Optional)
	Apps	Free download 100,000 apps and software, such as Office Soft and study tools
Video	Mpeg4, Asp, Divx, WMV, RMVB	
TV-OUT	Support TV-out via upgrade	
Music	MP3, WMA, FLAC, APP, OGG	
E-book	PDF, TXT, CHM, UMD and HTML, etc.	
Picture	Slide display JPG、BMP、 PNG etc. formats	
Speaker	Support	
Addition	Gravity	
Expansion	Micro TF Card Slot, max 32GB	
Connect	USB	USB2.0 High speed
	Earphone	3.5mm out
	OS	WIN98SE/ME, WIN2000、XP or above

ACCESSORIES

- User's Manual1
- USB Cable1
- Stereo Earphone1
- Charger.....1