 




---

*ER-380M*

# Operation and Program Manual



All specifications are subject to change without notice

## Precaution Statements

Follow these safety, servicing and ESD precautions to prevent damage and to protect against potential hazards such as electrical shock.

### 1-1 Safety Precautions

1. Be sure that all built-in protective devices are replaced. Restore any missing protective shields.
2. When reinstalling the chassis and its assemblies, be sure to restore all protective devices, including non-metallic control knobs and compartment covers.
3. Make sure there are no cabinet openings through which people - particularly children - might insert fingers and contact dangerous voltages. Such openings include excessively wide cabinet ventilation slots and improperly fitted covers and drawers.
4. Design Alteration Warning:  
Never alter or add to the mechanical or electrical design of the SECR. Unauthorized alterations might create a safety hazard. Also, any design changes or additions will void the manufacturer's warranty.
5. Components, parts and wiring that appear to have overheated or that are otherwise damaged should be replaced with parts that meet the original specifications. Always determine the cause of damage or over-heating and correct any potential hazards.
6. Observe the original lead dress, especially near the following areas: - sharp edges, and especially the AC and high voltage supplies. Always inspect for pinched, out-of-place, or frayed wiring. Do not change the spacing between components and the printed circuit board. Check the AC power cord for damage. Make sure that leads and components do not touch thermally hot parts.
7. Product Safety Notice:  
Some electrical and mechanical parts have special safety-related characteristics, which might not be obvious from visual inspection. These safety features and the protection they give might be lost if the replacement component differs from the original - even if the replacement is rated for a higher voltage, wattage, etc.  
Components that are critical for safety are indicated in the circuit diagram by shading, (⚡) or (⚡). Use replacement components that have the same ratings, especially for flame resistance and dielectric strength specifications. A replacement part that does not have the same safety characteristics as the original might create shock, fire or other hazards.

#### CAUTION

Danger of explosion if battery is incorrectly replaced.

Replace only with the same or equivalent type recommended by the manufacturer.

Dispose of used batteries according to the manufacturer's instructions.

## 1-2 Servicing Precautions

**WARNING:** First read the Safety Precautions-section of this manual. If some unforeseen circumstance creates a conflict between the servicing and safety precautions, always follow the safety precautions.

**WARNING:** An electrolytic capacitor installed with the wrong polarity might explode.

1. Servicing precautions are printed on the cabinet. Follow them.
2. Always unplug the unit's AC power cord from the AC power source before attempting to:  
(a) Remove or reinstall any component or assembly  
(b) Disconnect an electrical plug or connector  
(c) Connect a test component in parallel with an electrolytic capacitor
3. Some components are raised above the printed circuit board for safety. An insulation tube or tape is sometimes used. The internal wiring is sometimes clamped to prevent contact with thermally hot components. Reinstall all such elements to their original position.
4. After servicing, always check that the screws, components and wiring have been correctly reinstalled. Make sure that the portion around the serviced part has not been damaged.
5. Check the insulation between the blades of the AC plug and accessible conductive parts (examples: metal panels and input terminals).
6. Insulation Checking Procedure: Disconnect the power cord from the AC source and turn the power switch ON. Connect an insulation resistance meter (500V) to the blades of AC plug.  
The insulation resistance between each blade of the AC plug and accessible conductive parts (see above) should be greater than 1 megohm.
7. Never defeat any of the B+ voltage interlocks. Do not apply AC power to the unit (or any of its assemblies) unless all solid-state heat sinks are correctly installed.
8. Always connect an instrument's ground lead to the instrument chassis ground before connecting the positive lead; always remove the instrument's ground lead last.

## 1-3 Precautions for Electrostatically Sensitive Devices (ESDs)

1. Some semiconductor (solid state) devices are easily damaged by static electricity. Such components are called Electrostatically Sensitive Devices (ESDs); examples include integrated circuits and some field-effect transistors. The following techniques will reduce the occurrence of component damage caused by static electricity.
2. Immediately before handling any semiconductor components or assemblies, drain the electrostatic charge from your body by touching a known earth ground. Alternatively, wear a discharging wrist-strap device. (Be sure to remove it prior to applying power - this is an electric shock precaution.)
3. After removing an ESD-equipped assembly, place it on a conductive surface such as aluminum foil to prevent accumulation of electrostatic charge.
4. Do not use freon-propelled chemicals. These can generate electrical charges that damage ESDs.
5. Use only a grounded-tip soldering iron when soldering or unsoldering ESDs.
6. Use only an anti-static solder removal device. Many solder removal devices are not rated as anti-static; these can accumulate sufficient electrical charge to damage ESDs.
7. Do not remove a replacement ESD from its protective package until you are ready to install it. Most replacement ESDs are packaged with leads that are electrically shorted together by conductive foam, aluminum foil or other conductive materials.
8. Immediately before removing the protective material from the leads of a replacement ESD, touch the protective material to the chassis or circuit assembly into which the device will be installed.
9. Minimize body motions when handling unpackaged replacement ESDs. Motions such as brushing clothes together, or lifting a foot from a carpeted floor can generate enough static electricity to damage an ESD.



# Contents

<b>Getting Started</b>	<b>1</b>
About the <i>ER-380</i> .....	1
Unpacking .....	2
Installing the Paper .....	2
Basic Features and Functions .....	7
Standard Hardware .....	7
Optional Hardware .....	7
Software Features .....	7
Display .....	8
Control Lock.....	11
Keyboards .....	12
 <b>Operating Instructions</b>	 <b>13</b>
Function Key Descriptions.....	13
Clerk Sign-On/Sign-Off.....	18
Direct Sign-On .....	18
Coded Sign-On .....	18
Receipt On and Off.....	19
Training Mode .....	20
Item Registrations .....	21
Open Keyboard PLU Entry .....	22
Preset Price Keyboard PLU .....	22
Keyboard PLU Repeat Entry .....	23
Keyboard PLU Multiplication .....	24
Keyboard PLU Multiplication with Decimal Point .....	25
Split Pricing (Keyboard PLU) .....	26
Single Item Keyboard PLU .....	27
Open Code Entry PLU .....	28
Preset Price Code Entry PLU .....	28
Code Entry PLU Multiplication .....	29
Code Entry PLU Multiplication with Decimal Point .....	30
Split Pricing Code Entry PLU .....	30
Modifier Key .....	31
Price Level Key .....	32
Promotion .....	33
Waste .....	34
Price Change Item.....	35
Percent Key Operations .....	36
Preset Percent Discount on an Item .....	36
Enter a Percent Discount on an Item .....	37
Percent on Sale Total.....	37
Coupon on Sale (Vendor Coupon) .....	38
Coupon on Item (Store Coupon) .....	39
Return Merchandise Registrations.....	40
Voids and Corrections .....	41
Error Correction (Void Last Item) .....	41

Void Previous Item.....	41
Cancel.....	43
Void Position Operations .....	43
No Sale Operations .....	44
Open Drawer.....	44
Non Add Number.....	44
Received On Account Operations.....	45
Paid Out Operations.....	46
Subtotalling a Sale.....	47
Totalling and Tendering.....	48
Totalling a Cash Sale .....	48
Totalling a CHEQUE Sale .....	48
Tendering a Cash Sale .....	49
Tendering a CHEQUE Sale.....	49
Totalling a Charge Sale.....	50
Tendering a Charge Sale .....	51
CHEQUE Cashing.....	52
Split Tender.....	53
Post Tender.....	54
Currency Conversion.....	55
Not Found Key Operation .....	56
Table Management and Clerk Interrupt Operations .....	57
Overview.....	57
Soft Check.....	58
Hard Check.....	61
<b>X Mode</b> .....	<b>63</b>
Introduction .....	63
X Reports.....	64
Running a Report – General Instructions.....	64
Report Table.....	65
Cash Declaration .....	67
<b>Service Mode Programming</b> .....	<b>68</b>
Overview.....	68
Ram Clear & Memory Allocation.....	69
Clear Totals .....	71
Clear Grand Totals .....	71
Clear PLU File.....	72
Eprom Information.....	72
Memory Allocation.....	72
Load Default Keyboard .....	72
Initial Clear.....	73
PC Online Mode .....	73
Function Key Assignment Programming .....	74
Function Key Codes .....	75
RS232C Port Options .....	76
<b>Program Mode Programming</b> .....	<b>79</b>
Default Programming .....	79
Descriptor Programming Methods .....	79
Program Overlay Method.....	80
Descriptor Code.....	81
Tax Programming .....	82
Straight Percentage Tax Rate Programming .....	82

PLU Programming.....	84
Program 100 - PLU Status Programming .....	85
Program 150 - PLU Group Assignment .....	88
Program 200 - PLU Price/HALO Programming.....	89
Program 250 - PLU Stock Amount Programming.....	91
PLU Stock Programming By ADD / DEDUCT / OVERWRITE KEY .....	92
Program 280 - PLU Minimum Stock Amount Programming .....	93
Program 300 - PLU Descriptor Programming.....	94
Program 350 - PLU Link Programming.....	95
Program 400 – PLU Delete Programming .....	96
Program 450 - PLU MIX & MATCH Programming .....	97
Program 999 – ALL PLU Programming.....	98
System Option Programming.....	100
System Option Table .....	101
Print Option Programming.....	106
Print Option Table .....	107
Function Key Programming.....	112
Program 70 - Function Key Options .....	113
Program 80 - Function Key Descriptor.....	114
Program 90 - Function Key HALO.....	115
ADD CHECK - Function Key Programs .....	116
CANCEL - Function Key Programs .....	117
CASH - Function Key Programs .....	118
CHARGE1-8 - Function Key Programs .....	119
CHEQUE - Function Key Programs .....	121
CHEQUE CASHING - Function Key Programs .....	123
CHEQUE ENDORSEMENT - Function Key Programs .....	124
CHECK # - Function Key Programs .....	125
CURRENCY CONVERSION - Function Key Programs .....	126
ANALYSIS - Function Key Programs .....	127
ERROR CORRECT - Function Key Programs .....	128
F/S TEND - Function Key Programs .....	129
GUEST - Function Key Programs .....	130
PRICE LEVEL1-2 - Function Key Programs .....	130
#/NO SALE - Function Key Programs .....	131
RETURN - Function Key Programs .....	133
LEVEL MODIFIER 1-5 - Function Key Programs .....	134
PAYMENT - Function Key Programs .....	135
PBAL - Function Key Programs .....	135
PROMOTION- Function Key Programs .....	136
PRICE CHANGE - Function Key Programs .....	137
PRICE INQUIRE - Function Key Programs .....	138
STOCK INQUIRE - Function Key Programs .....	139
PAID OUT1-3 - Function Key Programs .....	140
PRINT CHECK - Function Key Programs .....	141
RECD ON ACCT1-3 - Function Key Programs .....	142
SERVICE - Function Key Programs .....	143
SUBTOTAL - Function Key Programs .....	144
TAX EXEMPT - Function Key Programs .....	145
TIP - Function Key Programs .....	146
VALIDATE - Function Key Programs .....	147
VOID - Function Key Programs .....	148
WASTE - Function Key Programs .....	149
% 1- %5 - Function Key Programs .....	150
Clerk Programming .....	152
Program 800 - Secret Code Programming.....	153
Program 801 - Clerk Status Programming.....	154
Program 810 - Descriptor Programming.....	155

Mix & Match Programming.....	156
Program 600 - Trip Level Programming .....	157
Program 601 - Price Programming.....	157
Program 610 - Mix & Match Descriptor Programming .....	158
Group Programming .....	159
Miscellaneous Programming .....	161
Macro Key Sequence Programming .....	161
Logo Descriptor Programming .....	162
NLU Code Number Programming.....	169
Cash-In-Drawer Limit Programming.....	170
Cheque Change Limit Programming .....	171
Date and Time Programming.....	172
Machine Number Programming.....	173
Training Mode Password.....	174
EURO Rounding Programming.....	175
MACRO Schedule Programming .....	176
Program Scans .....	177



# Getting Started

---

## About the *ER-380*

- The *ER-380* features a 44-position keyboard with traditional raised keys. This keyboard will accommodate up to 12 NLU keys and works best in retail stores, or shops where it is not necessary to place a large number of preset item keys on the keyboard.

*ER-380* is an excellent low cost solution for a wide range of retail environments.

*ER-380*, with its superb thermal printing system, always provides the fastest in transaction speeds.

---


## Unpacking

1. Unpack and unwrap the cash register.
2. Located in the packing are the following items:
  - 1 Rolls of paper and paper spindle,
  - 2 sets of control keys,
  - Operation and Program Manual,
3. Remove the cardboard protectors from the cash drawer.
4. Plug the register into a grounded outlet (three prong), insert a control key and turn the key to the **REG** control lock position.


---


## Installing the Paper

1. Remove the printer cover.

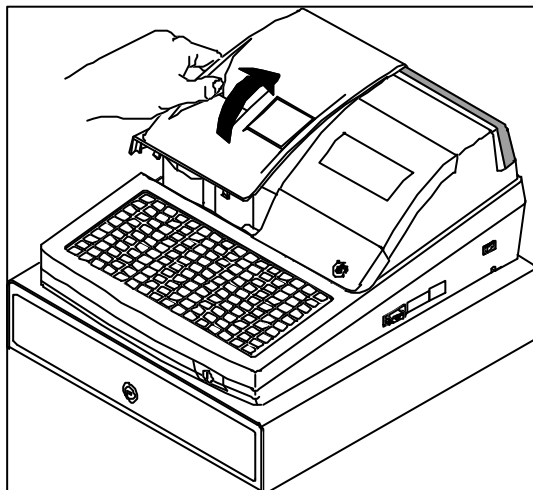


2. Push the blue cap lever and then lift up to open the paper cover.

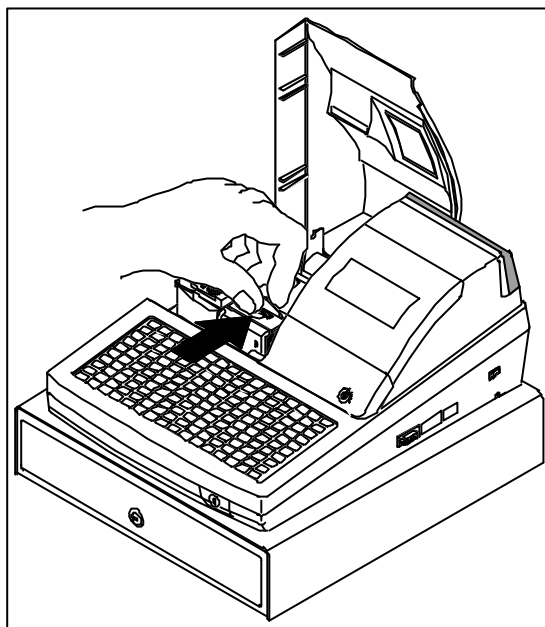


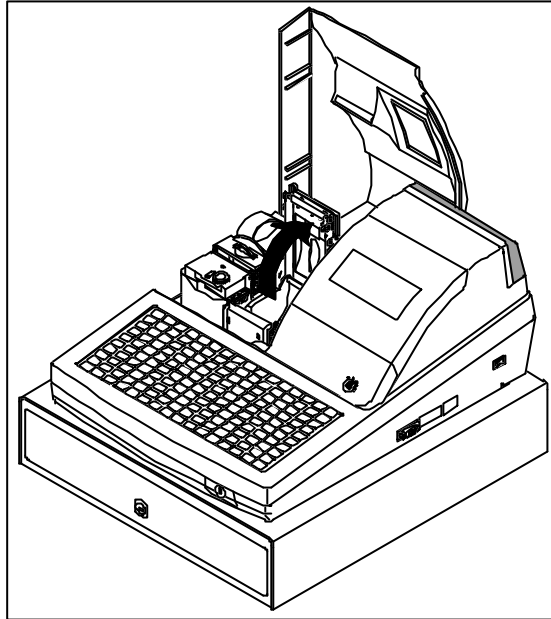


3. Ensure that the paper is being fed from the bottom of the roll.

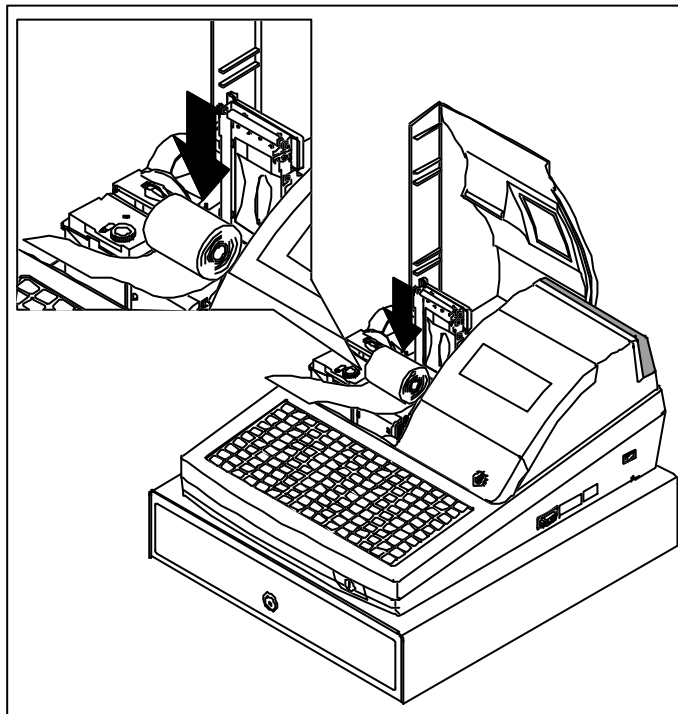


4. Put the the leading edge of the paper over the printer
5. Close the paper cover slowly until it locks firmly

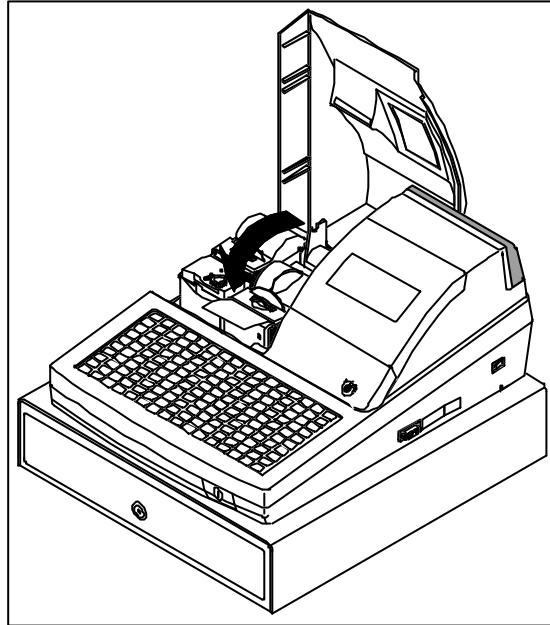

6. Passing the leading edge of the paper through the cutter slot. Tear off the excess paper. Replace the printer cover.

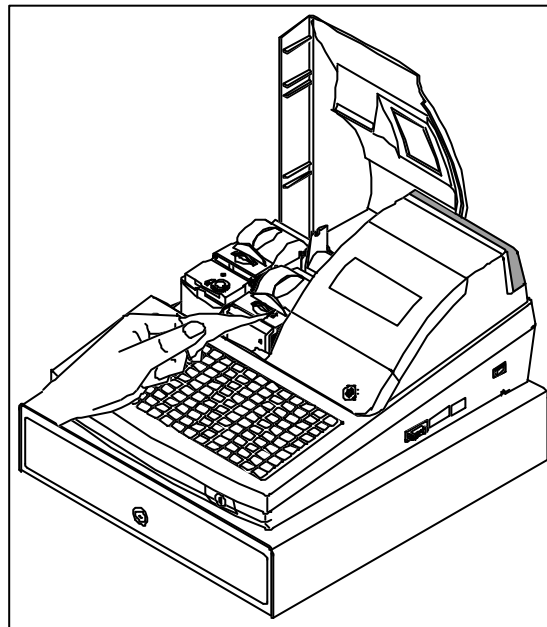

- ? If you wish to use the printer to print a sales journal or electronic journal, insert the paper into the paper take-up spool. Wind the paper two or three turns around the spool shaft and install the spool in the mount.

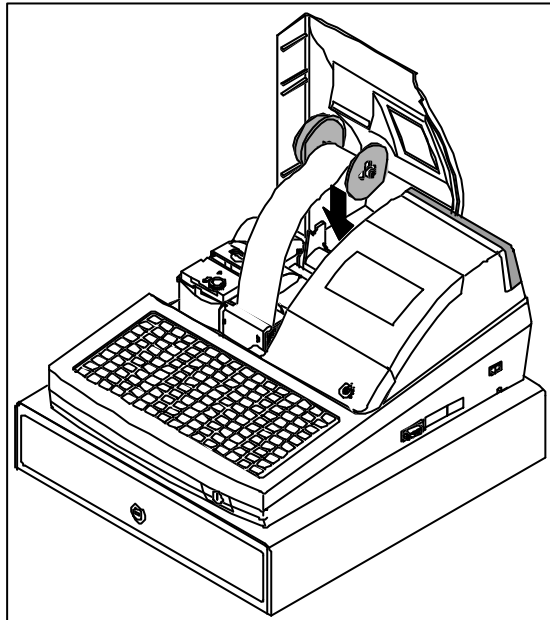

---

## Basic Features and Functions

### Standard Hardware

- Display  
=> LCD: Adjustable 2 line, 16 character liquid crystal display and ten position rear displays with a rear pop up display standard.
- 44 position keyboard.
- 1 station Thermal 32-column printer with drop-and-print mechanism.
- Sturdy Metal Cash Drawer with removable 4 Bill 8 Coin drawer insert.
- 7-position control lock.
- Standard customer pole display.
- Communications ports: RS232C.

### Optional Hardware

- Kitchen printer. / Bill Printer / Journal Printer
- Bar code scanner.
- PC Link

### Software Features

- Up to 2 price levels for each PLU.
- Up to 5 PLU modifier keys.
- 5,000 (expandable) Price Look Ups (PLUs) for open or preset item registration. For direct registrations, up to 12 PLUs are on the keyboard.
- 18 character programmable descriptors for PLUs and functions.
- Up to 99 PLU Group totals.
- Up to 99 clerks with separate report totals.

## Display

The ER-380M comes with a liquid crystal screen, allowing you to view up to 2 lines of information with up to 16 characters per line. The display is backlit to provide excellent visibility, regardless of lighting conditions.

When the control lock is in the OFF position, the register can not be operated. When the control lock in the REG, VOID, X, Z, PGM or SM positions the appropriate message, there are displayed with the message "CLOSED". You must sign on a clerk to remove the "CLOSED" message and begin operation.

### REG

<b>REG MODE</b> <b>CLOSED</b>
----------------------------------

### VOID

<b>VOID MODE</b> <b>CLOSED</b>
-----------------------------------

### Operator Display Example

- ◆ Press 10.00 – PLU1 to register of the PLU1

<b>PLU1</b>	
<b>1</b>	<b>10.00</b>

- ◆ Press 50.00 – PLU1 to tender a sale

<b>CASH</b>	<b>50.00</b>
<b>CHANGE</b>	<b>40.00</b>

### Displayed Error Conditions

<b>** WARNING **</b> <b>SEQUENCE ERROR</b>
---




## Error Messages

<b>E0</b>	SEQUENCE ERROR
<b>E1</b>	PLU NO DATA
<b>E2</b>	CLERK ERROR
<b>E3</b>	AMOUNT COUNT OVER
<b>E4</b>	EFT ERROR
<b>E5</b>	COMMUNICATION ERROR
<b>E6</b>	TIME AND DATE
<b>E7</b>	LIMIT OVER
<b>E8</b>	INACTIVE
<b>E9</b>	XMODE ONLY
<b>E10</b>	NONADD
<b>E11</b>	ADDCHECK ERROR
<b>E12</b>	CONDIMENT ERROR
<b>E13</b>	REQ. EAT IN
<b>E14</b>	REQ. STOCK
<b>E15</b>	REQ.DRAWER
<b>E16</b>	REQ.GUEST
<b>E17</b>	SCALE
<b>E18</b>	CLERK NOT MATCH
<b>E19</b>	COMPULSORY TARE
<b>E20</b>	REQ.DECLARATION
<b>E21</b>	OFF LINE
<b>E22</b>	REQ.ENDORSEMENT
<b>E23</b>	CONSOL OVER
<b>E24</b>	REQ.SUBTOTAL
<b>E25</b>	PROMO ERROR
<b>E26</b>	CHECK OPEN
<b>E27</b>	REQ. PASSWORD
<b>E28</b>	NO VOID PLU
<b>E29</b>	232C SETUP ERROR
<b>E30</b>	REQ.PRESET VALUE
<b>E31</b>	REQ. OPEN VALUE

<b>E32</b>	REQ. AMOUNT
<b>E33</b>	REQ. PAYMENT
<b>E34</b>	INVALID FUNCTION
<b>E35</b>	REQ. TABLE
<b>E36</b>	REQ. PBAL
<b>E37</b>	REQ.CHECK #
<b>E38</b>	ONLY ONE TABLE
<b>E39</b>	REQ. VALID
<b>PER</b>	RECEIPT PRINTER PAPER END
<b>PCO</b>	PRINTER COVER OPEN
<b>PFP</b>	SYSTEM ERROR (If this problem occurs, call the service engineer.)
<b>E43</b>	MEMORY ALLOCATION ERROR
<b>E44</b>	ELECTRONIC JOURNAL FULL
<b>E45</b>	CLOSE OPEN CHECKS TO FINALIZE TRAIN MODE

## Control Lock

The control lock has 7 positions, accessed with 5 keys. Each ECR is shipped with two full sets of keys.

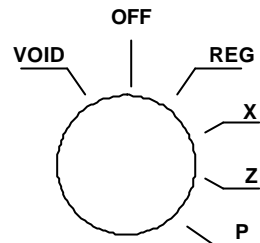

- VOID** Use to void (correct) items outside of a sale.
- OFF** The register is inoperable.
- REG** Use for normal registrations.
- X** Use to read register reports.
- Z** Use to read register reports and reset totals to zero.
- P** Use to program the register.
- S** The S position is a hidden position reserved for dealer access.

Before performing any operations in Register Mode a clerk must be signed on. See “Clerk Sign-On/Sign-Off” for a description of clerk operations.

## Control Keys

The *ER-380* includes two sets of keys that may be used to access the following control lock positions.

Key	Positions Accessible
REG	OFF, REG
VOID	VOID, OFF, REG, X
Z	VOID, OFF, REG, X, Z
P	VOID, OFF, REG, X, Z, P
C	ALL POSITIONS

---


Note: Keys may be removed from the control lock in the OFF or REG positions.

---

## Keyboards

The *ER-380* keyboard is shown below with the default legends and key assignments.

This configuration has 12 keyboard NLU locations. Programmable key locations are shown with a bold border.

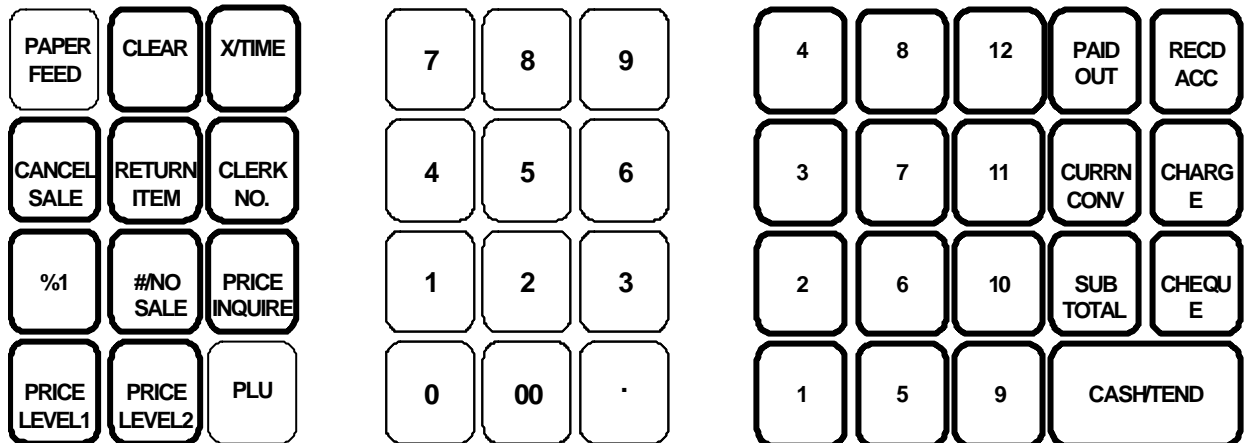

# Operating Instructions

---

## Function Key Descriptions

Keys are listed in alphabetical order. Some of the keys described below are not included on the default keyboard. See "Function Key Assignment Programming" to add or change programmable keys.

Keyboard Legend	Description
<b>#/NO SALE</b>	Use as a non-add key to print up to an 8-digit numeric entry on the receipt and journal. This entry will not add to any sales totals. The <b>#/NO SALE</b> key is also used to open the cash drawer without making a sale.
<b>X/TIME</b>	Use to multiply a quantity of items or calculate split pricing on PLU entries.
<b>00, 0-9, Decimal</b>	Use to make numeric entries in <b>REG</b> , <b>X</b> , <b>Z</b> , <b>VOID</b> , or <b>P</b> positions. The decimal key is used for decimal or scale multiplication, when setting or entering fractional percentage discounts, or when programming fractional tax rates. Do not use the decimal key when making amount entries into PLUs.
<b>ADD CHECK</b>	Use to combine individual trays (in a cafeteria situation) that will be paid together. Each tray subtotal can advance the consecutive number, depending on programming.
<b>CANCEL</b>	Cancels a transaction without updating PLU, or function key totals. The Cancel function may only be used prior to tendering. Once tendering begins, the Cancel function may no longer be used. The <b>CANCEL</b> key corrects the appropriate totals and counters and the Financial report records total of transactions cancelled.
<b>CASH</b>	Calculates the sale total including tax, finalises the sale, and opens the cash drawer. Change computation is allowed by entering an amount before pressing the <b>CASH</b> key. The cash drawer will open only if the amount tendered is equal to or greater than the total amount of the sale. Post tendering is also available should a second change calculation be necessary. Re-enter the tendered amount and press the <b>CASH</b> key to show the new change computation. Press the <b>CASH</b> key a second time to issue a buffered receipt (up to 200 lines) when the receipt on/off function is OFF.

<b>CHEQUE</b>	Use to finalise cheque sales. Calculates the sale total including tax, finalises the sale, and opens the cash drawer. Change computation is allowed by entering an amount before pressing the <b>CHEQUE</b> key. The cash drawer will open only if the amount tendered is equal to or greater than the total amount of the sale. Change issued will be subtracted from the appropriate in-drawer total.
<b>CHEQUE CASHING</b>	Use to exchange a cheque for cash. Cash-in-drawer and Cheque-in-drawer totals are adjusted.
<b>CHEQUE ENDORSEMENT</b>	Use to print a cheque endorsement message on an optional slip printer with a programmable endorsement message.
<b>CHARGE(1-8)</b>	Use to finalise charge sales. Calculates the sale total including tax, finalises the sale, and opens the cash drawer. Change computation is allowed by entering an amount before pressing the <b>CHARGE</b> key. The cash drawer will open only if the amount tendered is equal to or greater than the total amount of the sale. Change issued will be subtracted from the appropriate in-drawer total.
<b>CHECK #</b>	<p>The <b>CHECK #</b> key is used to begin a new, or access an existing balance (hard check) or itemized bill (soft check.)</p> <p>Check track numbers that are entered manually may be set at a fixed length of one to nine digits. Check track numbers assigned automatically will begin with #1.</p> <p>Existing checks are accessed by entering the check track number and pressing the <b>CHECK #</b> key.</p>
<b>CLEAR</b>	Use to clear entries made into the 10 key numeric pad or <b>X/TIME</b> key before they are printed. Also used to clear error conditions.
<b>CLERK</b>	<p>The register will not operate in register mode unless a clerk has been signed on. Clerk sign-on is accomplished by direct or secret code sign on.</p> <p>All entries made on the register will report to one of the 15 clerk totals. When a clerk is signed on, all entries following will add to that clerk's total until another clerk is signed on. However, a clerk cannot be changed in the middle of a transaction.</p> <p>To sign a clerk off, thereby displaying the "CLOSED" message on the display, enter 0 (zero), then press the <b>CLERK</b> key. This disables the register until another clerk is signed on. The current clerk must first be signed off before another clerk can sign on.</p>
<b>CONV (1 &amp; 4)</b>  <b>ANALYSIS 1/2/3</b>	<p>The currency conversion function, allowed after subtotal, converts and displays the new subtotal at a preprogrammed exchange rate. Tendering is allowed after using the currency conversion function. Change is calculated and issued in home currency. The amount of foreign currency tendered is stored in a separate total on the Financial report, but not added to the drawer total.</p> <p>Sale analyse 1,2,3 keys (Eat-in, Take-out and Drive-thru), are subtotal functions. In areas that have different tax rules for eat-in and take out sales, each key can be programmed to automatically charge or exempt taxes. Sales may not be split between each key.</p>
<b>ERROR CORR</b>	Use to correct the last entry. The <b>ERROR CORR</b> key corrects the appropriate totals and counters.
<b>F/S SHIFT</b>	When pressed before a PLU entry, the <b>F/S SHIFT</b> key reverses the

	preprogrammed food stamp status of the PLU. For example, an item not food stamp eligible can be made food stamp eligible.
<b>F/S SUB</b>	Displays the amount of the sale that is food stamp eligible.
<b>F/S TEND</b>	Use to tender food stamps for eligible sales.
<b>GUEST #</b>	Use to enter the count of guests served as part of a guest check.
<b>MACRO (1-10)</b>	Macro keys may be programmed to record, then later perform, up to 50 keystrokes. For example, a macro key could be set to tender (preset tender) a common currency, such as £ 5 into the cash key.
<b>RETURN ITEM</b>	Used to return or refund merchandise. Returning an item will also return any tax, which may have been applied.
<b>MODIFIER 1-5</b>	The Modifier key alters the next PLU registered, either by changing the Code number of the PLU so that a different item is registered, or by adding the modifier descriptor.
<b>P/BAL</b>	Use to enter the amount of an outstanding balance.
<b>PAID OUT</b>	Use to record money taken from the register to pay invoices, etc. The paid out amount subtracts from the cash-in-drawer total. Paid outs are allowed outside of a sale only.
<b>% Keys 1- 5</b>	Up to five % keys may be placed on the keyboard. Each % key is set with a specific function, such as item discount or surcharge, or sale discount or surcharge. The percent rate may be entered or preprogrammed, or the percent keys can be programmed with a negative, open or preset price, thus acting as coupon keys. A percentage key may also be set up to accept charge tip entries.
<b>PLU</b>	The PLU key is used to register price look ups by number entry. PLUs can be programmed open or preset, and positive or negative.
<b>PAYMENT</b>	Use to Charge Posting Feature. This key can be enforced prior to cashing off a check sale.
<b>PRINT CHECK</b>	Use to print a guest check. The check can be printed on an optional (RS-232C) printer, or can be printed on the receipt printer. The <b>PRINT CHECK</b> key can be set to automatically service the check.
<b>PROMOTION</b>	The <b>PROMOTION</b> key allows you to account for promotional items. Pressing this key will remove an item's cost from the sale, but will include the sale of the item in the item's sales counter.
<b>RECD ACCT</b>	The <b>RECD ACCT</b> (received on account) key is used to record media loaned to the cash drawer, or payments received outside of a sale. The cash drawer will open. The amount received adds to the cash-in-drawer total.
<b>SERVICE</b>	Use to temporarily finalise Previous Balance or Table Tracking transactions.
<b>SUBTOTAL</b>	Displays subtotal of sale including tax. Must be pressed prior to a sale discount or sale surcharge.
<b>TABLE #</b>	Tracks the current balance for a guest check or table.
<b>TAX EXEMPT</b>	Press the <b>TAX EXEMPT</b> key to exempt tax 1, tax 2, tax 3, and/or tax 4 from the entire sale.
<b>TAX (1-4) SHIFT</b>	When pressed before a PLU entry, the tax shift keys reverse the tax status of the PLU, i.e., a PLU with non-tax status would become taxable

or a PLU with tax status would become non-taxable.



<b>TIP</b>	<p>The <b>TIP</b> key allows a gratuity to be added to a guest check before payment. The tip amount is deducted from the Cash-in-Drawer amount for the Clerk/Cashier closing the guest check.</p> <p>The <b>TIP</b> key may be programmed as either a percentage or amount. If programmed as a percentage, tax programming defines whether the percentage is calculated on the net amount or the amount after taxes.</p>
<b>VOID</b>	<p>Use to correct an item entered earlier within a sale. The <b>VOID</b> key corrects the appropriate totals and counters. To correct the last item, use the <b>ERROR CORR</b> key. For void operations outside of a sale (Transaction Void), use the <b>VOID</b> position on the control lock. The Financial report records totals for each type of void separately.</p>
<b>VALID</b>	<p>Press the <b>VALID</b> key to print a one-line validation on a separate form or piece of paper. Any item registration, discount or payment may be validated. If validation is required after a particular function, the message "<b>SP</b>" will appear on the front display.</p>
<b>WASTE</b>	<p>The <b>WASTE</b> key allows control of inventory by accounting for items, which must be removed from stock due to spoilage, breakage or mistakes. Press the <b>WASTE</b> key before entering wasted items, then press the <b>WASTE</b> key again to finalise. The <b>WASTE</b> key may be under manager control, requiring the control lock to be in the <b>X</b> position. The <b>WASTE</b> operation is not allowed within a sale.</p>

---

## Clerk Sign-On/Sign-Off

 

See "System Option Programming", to review your clerk options:

- System option #2 allows you to select direct or code entry sign on and/or stay-down or pop-up operation.


Depending on how your machine has been programmed, sign-on will take place only at the beginning of a shift (stay-down), or may have to be repeated for each transaction (pop-up). If your machine has been programmed for stay-down clerks, the clerk currently signed on must be signed off before another clerk may be signed on.

### Direct Sign-On

There are two ways to sign on a clerk. One is to enter the clerk number and press the clerk key and the other is to enter direct clerk no. key.

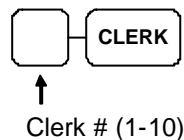


 There are two ways to sign the clerk off. One is to enter 0 (Zero) and press the clerk key and the other is to enter 0 (zero) and press direct clerk no. key.




### Coded Sign-On

 To sign on a clerk, press the clerk key, enter the clerk code, then press the clerk key again.



Clerk Code (up to 6 digits)

 To sign the clerk off, enter 0 (Zero) and press the clerk key.



---

## Receipt On and Off

1. Turn the control lock to the **X** position.
2. To turn the receipt *off*, enter **9 9**, press the **SBTL** key. Enter **1**, press **CASH**.



3. To turn the receipt *on*, enter **9 9**, press the **SBTL** key. Enter **0**, press **CASH**.



---

## Training Mode

 
A training mode is available so that you can operate the cash register without updating totals and counters. Note the following conditions:

- The receipt and journal print the message "TRAINING MODE BEGIN" when training mode is activated.
- The receipt and journal print the message "TRAINING MODE END" when training mode is exited.
- The message "TRAINING MODE" prints on each receipt printed while training mode is active.
- The journal does not print during training mode.

### To Enter Training Mode

There are two ways to enter the train mode. One is by training password and the other is by training clerk. First, you must program a training password

1. Turn the control lock to the **X** position.
2. To begin the program, enter **199**, press the **SBTL** key.




3. Input Training Password # and press X/TIME key.




### To Exit Training Mode

 Note :- It is not possible to exit training mode with either open clerks or check balances

1. Turn the control lock to the **X** position.
2. To begin the program, enter **199**, press the **SBTL** key.



 3. Input Training Password (Zero is the default code) and press X/TIME key.



---


## Item Registrations

 All registrations on *ER-380* are made into open or preset PLUs.

- In place of traditional PLU keys, some PLUs are located directly on the keyboard.
- When more items or categories are needed than the number of PLUs available on the keyboard, registrations through PLUs can be made by entering the PLU code number and pressing the **PLU** key on the keyboard.
- This system simplifies reporting by listing all items (regardless of how they are entered) on the PLU report, while reporting for groups of items or categories is available from the Group report.

## Open Keyboard PLU Entry

1. Enter an amount on the ten keypad. *Do not use the decimal key.* For example, for £2.99, enter:



2. Press a PLU key. For example, press PLU 1:



THANK-YOU	
CALL AGAIN	
DATE 01/15/2003 WED	TIME
8:33	
PLU1 T1	
£2.99	
TAX1	
£0.18	
TOTAL	
£3.17	
CASH	
£3.17	
CLERK 1	No.000011
00001	

## Preset Price Keyboard PLU

A preset PLU registers the price that was previously programmed for the PLU. See "PLU Programming" in the "Program Mode Programming" chapter to program preset prices.

1. Press a preset PLU key. For example, press PLU 5:

 


THANK-YOU	
CALL AGAIN	
DATE 01/15/2003 WED	TIME
8:33	
PLU5	
£1.29	
TOTAL	
£1.29	
CASH	
£1.29	
CLERK 1	No.000011
00001	

## Keyboard PLU Repeat Entry

Open or preset price PLUs can be repeated as many times as necessary by pressing the same PLU again. The number of times the item is repeated is shown on the display.

1. Enter an amount on the ten keypad. *Do not use the decimal key.* For example, for £2.99, enter:



2. Press a PLU key. For example, press PLU 1:



3. To register a second item exactly as the first, press the PLU key a second time. For example, press PLU 1:




THANK-YOU		
CALL AGAIN		
DATE	01/15/2003 WED	TIME
	8:33	
PLU1	T1	
£2.99		
PLU1	T1	
£2.99		
TAX1		
£0.36		
TOTAL		
£6.34		
CASH		
£6.34		
CLERK 1	No.000011	
00001		


## Keyboard PLU Multiplication

 When several of the same items are to be sold of the same PLU, you can use multiplication. You can enter a quantity (1 to 999.999) using the **X/TIME** key. You can multiply open or preset PLUs.

1. Enter the quantity of items being purchased, press the **X/TIME** key. For example, enter **4** on the numeric key pad and press the **X/TIME** key:



 2. Enter an amount on the ten keypad. *Do not use the decimal key.* For example, for £1.99, enter:



3. Press a PLU key. For example, press PLU 1:




THANK - YOU	
CALL AGAIN	
DATE 01/15/2003 WED	TIME
08:33	
4X	@1.99
PLU1 T1	
£7.96	
TAX1	
£0.48	
TOTAL	
£8.44	
CASH	
£8.44	
CLERK	No.000011
00001	



## Keyboard PLU Multiplication with Decimal Point

 If you are selling items by weight, or decimal quantities such as half-pints, you can multiply a fraction of a unit.

1. Enter the amount with the decimal point, press the **X/TIME** key. For example, for 3.75 kilos of produce, enter:



2. Enter an amount on the ten keypad. *Do not use the decimal key.* For example, if the price is £.99 per kilo, enter:



3. Press a PLU key. For example, press **PLU 1**:



THANK-YOU	
CALL AGAIN	
DATE 01/15/2003 WED	TIME
08:33	
3.75X	@0.99
PLU1 T1	
£3.71	
TAX1	
£0.22	
TOTAL	
£3.93	
CASH	
£3.93	
CLERK 1	No.000011
00001	

## Split Pricing (Keyboard PLU)

When items are priced in groups, i.e. 3 for £1.00, you can enter the quantity purchased and let the register calculate the correct price.

1. Enter the quantity purchased, press the **X/TIME** key. For example, enter:

2 X/TIME

2. Enter the quantity of the group price, press the **X/TIME** key. For example, if the items are priced 3 for £1.00, enter:

3 X/TIME

3. Enter an amount on the ten keypad. For example, if the items are priced 3 for £1.00, enter:

1 0 0

4. Press a PLU key. For example, press **PLU 1**:

1

THANK - YOU	
CALL AGAIN	
DATE 01/15/2003 WED	TIME
08:33	
2@3FOR	@1.00
PLU1 T1	
£0.67	
TAX1	
£0.04	
TOTAL	
£0.71	
CASH	
£0.71	
CLERK 1	No.000011
00001	

# Single Item Keyboard PLU

Single item PLUs automatically total as a cash sale immediately after registration. Use single item PLUs for speedy one-item sales. For example if you are selling admission tickets, and all ticket sales are one item sales, you can use an open or preset PLU. After each registration, the drawer will immediately open, and a separate transaction receipt is printed. See "PLU Programming" in the "Program Mode Programming" chapter to program a single item PLU.

- 1. Press a single item preset PLU key. (or enter a price and press a single item open PLU key.) For example, press PLU 6:



THANK-YOU			
CALL AGAIN			
DATE	01/15/2003	WED	TIME
	08:33		
PLU6			
	£1.29		
TOTAL			
	£1.29		
CASH			
	£1.29		
CLERK	1	No.	000011
	00001		

 
## Open Code Entry PLU

If the PRESET status of a PLU is set to N (no), the PLU will operate as an open PLU. See "PLU Programming" in the "Program Mode Programming" chapter to program PLU descriptors and options.

1. Enter the PLU number; press the PLU key. For example, enter:



2. Enter an amount on the ten keypad. *Do not use the decimal key.* For example, for £2.99, enter:



3. Press the **PLU** key again.



THANK-YOU	
CALL AGAIN	
DATE 01/15/2003 WED	TIME
08:33	
PLU2 T1	
£2.99	
TAX1	
£0.18	
TOTAL	
£3.17	
CASH	
£3.17	
CLERK 1	No.000011
00001	

## Preset Price Code Entry PLU

1. Enter the PLU number; press the PLU key. For example, enter:

 


THANK-YOU	
CALL AGAIN	
DATE 01/15/2003 WED	TIME
08:33	
PLU1	
£1.29	
TOTAL	
£1.29	
CASH	
£1.29	
CLERK 1	No.000011
00001	

## Code Entry PLU Multiplication

When several of the same items are to be entered into the same PLU, you can use multiplication. You can enter a quantity (1 to 999.999) using the **X/TIME** key. You can multiply open or preset PLUs.

1. Enter the quantity of items being purchased, press the **X/TIME** key. For example, enter **4** on the numeric key pad and press the **X/TIME** key:



2. Enter the PLU number; press the **PLU** key. For example, enter:



THANK-YOU		
CALL AGAIN		
DATE	01/15/2003 WED	TIME
	08:33	
4X		@1.99
PLU1	T1	
£7.96		
TAX1		
£0.48		
TOTAL		
£8.44		
CASH		
£8.44		
CLERK 1		No.000011
00001		

## Code Entry PLU Multiplication with Decimal Point

If you are selling items by weight, or if you are selling yard goods, you can multiply a fraction of a unit.

1. Enter the quantity with the decimal point, press the **X/TIME** key. For example, for 3.75 Kilos of produce, enter:

3 . 7 5 X/TIME

2. Enter the PLU number; press the **PLU** key. For example, enter:

3 PLU

THANK-YOU	
CALL AGAIN	
DATE 01/15/2003 WED	TIME
08:33	
3.75X	@2.99
PLU3 T1	
£11.21	
TAX1	
£0.67	
TOTAL	
£11.88	
CASH	
£11.88	
CLERK 1	No.000011
00001	

## Split Pricing Code Entry PLU

When items are priced in groups, i.e. 3 for £1.00, you can enter the quantity purchased and let the register calculate the correct price.

1. Enter the quantity purchased, press the **X/TIME** key. For example, enter:

2 X/TIME

2. Enter the quantity of the group price, press the **X/TIME** key. For example, if the items are priced 3 for £1.00, enter:

3 X/TIME

3. Enter the PLU number; press the **PLU** key. For example, enter:

3 PLU

THANK-YOU	
CALL AGAIN	
DATE 01/15/2003 WED	TIME
08:33	
2@3FOR	@2.99
PLU3 T1	
£1.99	
TAX1	
£0.12	
TOTAL	
£2.11	
CASH	
£2.11	
CLERK 1	No.000011
00001	

## Modifier Key

Pressing a modifier key alters the next PLU registered, either by changing the code number of the PLU so that a different item is registered, or by just adding the modifier descriptor and registering the same PLU.

**See** "Modifier 1-5" in the "Program Mode Programming" chapter in order to determine how the modifier key will affect the PLU entry.

Modifiers can be:

- **STAY DOWN** so that registrations will be modified by the same modifier until another modifier is selected,
- **POP UP after each item** to register, for example large, medium or small soft drink,
- **POP UP after each transaction** to register, for example, toppings of various pizza sizes.

See "System Options" in the "Program Mode Programming" chapter to select stay down/pop-up status.

### Pop-Up Modifier Key Affecting PLU Code

1. Press a preset PLU key. For example, press PLU 1 with a price of £1.00.



2. Press the **MOD 1** key. The message "MOD1" displays.



3. Press the same PLU key. In this example the modifier 1 will add the digit 1 to the fourth PLU # position, resulting in the registration of PLU #1001.



4. Press another PLU key. In this example press PLU 2 with a price of £1.50.

THANK-YOU			
CALL AGAIN			
DATE	01/15/2003	WED	TIME
	08:33		
PLU1			
£1.00			
MOD1			
#1001			
£1.25			
PLU2			
£1.50			
TOTAL			
£3.75			
CASH			
£3.75			
CLERK 1		No.000011	
00001			

## Price Level Key

If you choose to use the price level feature, you must allocate memory for each level. See "Memory Allocation" in the "Service Mode Programming" chapter. Note that the default program selects one price level. You must also place price level keys on the keyboard. See "Function Key Assignment" in the "Program Mode Programming" chapter.

If you use this feature, the same PLU can be given up to 2 different preset prices. Price Level keys shift the price that is being registered. Levels can be:

- **STAY DOWN** so that registrations will stay in the selected level until **another is** selected,
- **POP UP after each item** to register, for example large, medium or small soft drink,
- **POP UP after each transaction** to register, for example, toppings of various pizza sizes.

See "System Options" in the "Program Mode Programming" chapter to set how the price level keys operate.

### Pop-Up Price Level Keys

 
1. Press a preset PLU key. For example, press PLU 1 programmed with a price of £1.00 for price level 1.



2. Press the **LEVEL 2** key. The message "LEVEL 2" displays.



3. Press the same PLU key. In this example the PLU 1 key is programmed with a price of £2.00 for price level 2.



4. Press another PLU key. In this example press PLU 2 programmed to register PLU #2 with price level 1. Note that the level 1 price is registered.

THANK-YOU		
CALL AGAIN		
DATE	01/15/2003 WED	TIME
	08:33	
PLU1		
£1.00		
PLU1		
£2.00		
PLU2		
£1.50		
TOTAL		
£4.50		
CASH		
£4.50		
CLERK 1	No.000011	
00001		



# Promotion

The **PROMOTION** key allows you to account for Promotional items. Pressing this key will remove an item's cost from the sale, and the Promotion item will not be added to the PLU sales total, but it is added to the item sales counter. If stock (inventory) reporting is used, the item will be subtracted from inventory.

- 1. Register an item. For example, press  
PLU 1 programmed with a price of £1.00  
for price level 1.

1

- 2. Press the **PROMOTION** key. The  
message "**PROMOTION**" displays.

PROMO

- 3. Enter the item to be **Promoted**. You can  
not enter an item that has not been  
already registered in this transaction.

1

THANK-YOU		
CALL AGAIN		
DATE	01/15/2003 WED	TIME
	08:33	
PLU1		
£1.00		
***PROMOTION***		
PLU1		
TOTAL		
£0.00		
CASH		
£0.00		
CLERK 1	No.000011	
00001		

## Waste

The **WASTE** key allows control of inventory by accounting for items that must be removed from stock due to spoilage, breakage or mistakes. Press the **WASTE** key before entering wasted items, and then press the **WASTE** key again to finalise. The **WASTE** key may be under manager control, requiring the control lock to be in the **X** position. The **WASTE** key is not allowed within a sale.

1. Press the **WASTE** key. The message "WASTE" displays at the top of the screen.

WASTE

2. Enter the item or items that are wasted.
3. Press the **WASTE** key again to total the wasted items:

WASTE

```
THANK-YOU
CALL AGAIN

DATE 01/15/2003 WED    TIME
08:33

***WASTE***

PLU1
£1.25
PLU2
£1.50

***WASTE***

TOTAL
£2.75
CLERK 1                No.000011
00001
```

## Price Change Item

The **PRICE CHANGE** key allows you to change PLU price when you sale the item. Before you use this key, the price change item option of the PLU should be programmed first.

1. Press the **Price Change** key.

**PRICE CHANGE**

2. Enter the PLU No.
3. Enter the Price.
4. Press the **Price Change** key again to to sale the item.

**PRICE CHANGE**

---

# Percent Key Operations

A total of five % functions are available to be allocated to the keyboard.

Each function is individually programmable to add or subtract, from an individual item or from a sale total, amounts (coupons) or percentages. You can also program the percentage key taxable or non-taxable, so that sales taxes are calculated on the net, or the gross amount of the item or sale. You can also program preset prices or percentages.

The operation examples in this section show the percentage key in a variety of configurations. See "Function Key Programming" in the "Program Mode Programming" chapter to assign a specific function to each percentage key.

## Preset Percent Discount on an Item

In this example the %1 function is preset with a rate of 10 %.

- 1. Register the item.
- 2. Press the %1 key:

% 1
- 3. The discount is automatically subtracted.

THANK - YOU		
CALL AGAIN		
DATE	01/15/2003 WED	TIME
	08:33	
PLU2		
£10.00		
% 1		-
10.000%		
AMOUNT		-
1.00		
TOTAL		
£9.00		
CASH		
£9.00		
CLERK 1	No.000011	
00001		

## Enter a Percent Discount on an Item

You can also operate the percentage functions by entering the percentage of the discount or surcharge. If necessary, you can enter a fractional percentage up to 3 digits beyond the decimal (i.e. 99.999%).

1. Register the discounted item.
2. Enter the percentage. If you are entering a fraction of a percent, you must use the decimal key. For example, for one third off enter:

3 3 . 3 3 3

3. Press the %1 key:

%1

4. The discount is automatically subtracted.

THANK-YOU	
CALL AGAIN	
DATE 01/15/2003 WED	TIME 08:33
PLU2	
£10.00	
% 1	-
33.333%	
AMOUNT	-
3.33	
TOTAL	
£6.67	
CASH	
£6.67	
CLERK 1	No.000011
00001	

## Percent on Sale Total

The percent can be an open or preset amount. In this example an open percentage surcharge of 15% is applied.

1. Register the items you wish to sell.
  2. Press the **SBTL** key:
- SBTL
3. Enter the percentage, press the appropriate discount key. For example, for 15% enter:

1 5 %1

4. The surcharge is automatically added.

THANK-YOU	
CALL AGAIN	
DATE 01/15/2003 WED	TIME 08:33
PLU2	
£10.00	
% 1	
15.000%	
AMOUNT	
£1.50	
TOTAL	
£11.50	
CASH	
£11.50	
CLERK 1	No.000011
00001	

## Coupon on Sale (Vendor Coupon)

When programmed as "amount", "sale", "open" and "negative", a % key will perform a coupon against a sale (or vendor coupon.) Also, depending upon programming:

- You may be allowed to enter only one coupon in a sale, after the **SBTL** key is pressed,
- You may be allowed to enter multiple coupons, but you must press the **SBTL** key before each coupon,
- You may be allowed to enter multiple coupons, without first pressing **SBTL**.

In this example, a coupon may be entered only once, and you must first press **SBTL**.

1. Register the items you wish to sell.

2. Press the **SBTL** key:

**SBTL**

3. Enter the amount of the coupon, press the appropriate % key. For example:

2 0 0 % 1

4. The coupon is subtracted.

THANK-YOU	
CALL AGAIN	
DATE 01/15/2003 WED	TIME
08:33	
PLU2	
10.00	
%1	-
2.00	
TOTAL	
£8.00	
CASH	
£8.00	
CLERK 1	No.000011
00001	

## Coupon on Item (Store Coupon)

When programmed as "amount", "item", "open" and "negative", a % key will perform a coupon against an item (or store coupon.) In this case, you must press the PLU (or enter the PLU number) of the PLU you wish the coupon to be subtracted from.

- 1. Register the items you wish to sell.
- 2. Enter the amount of the coupon, press the appropriate % key. For example:

2

0

0

% 1

- 3. Press the PLU key you wish to subtract the coupon from (or enter the PLU number of the PLU you wish to subtract the coupon from and press **PLU**.)

1

- 4. The coupon is automatically subtracted.

THANK-YOU			
CALL AGAIN			
DATE	01/15/2003	WED	TIME
	08:33		
PLU1			
£10.00			
PLU1 C			-
2.00			
TOTAL			
£8.00			
CASH			
£8.00			
CLERK 1	No.000011		
00001			

---

 
# Return Merchandise Registrations

If you wish to return or refund an item, press **RETURN**, then re-enter any item. You can return merchandise as part of a sale, or you can return merchandise as a separate transaction and return cash to the customer.

1. Press **RETURN**:



2. Enter the price of the item you wish to return, then press the PLU key where it was registered originally.



3. Total the sale with **CASH**, **CHEQUE**, or a **CHARGE** function.

THANK-YOU		
CALL AGAIN		
DATE	01/15/2003 WED	TIME
	08:33	
RETURN		
*****		
PLU2 T1		-
2.99		
TAX1 AMT		-
0.18		
TOTAL		-
3.17		
CASH		-
3.17		
CLERK 1	No.000011	
00001		



---

## Voids and Corrections

### Error Correction (Void Last Item)

This function corrects the last item entered.

1. Register the item you wish to sell.
2. Press the **ERROR CORR** key:



THANK-YOU	
CALL AGAIN	
DATE 01/15/2003 WED	TIME
08:33	
PLU1 T1	£2
29	
PLU2	
£1.29	
ERR CORR -----	
---	
PLU2	-
1.29	
TAX1 AMT	
£0.14	
TOTAL	
£2.43	
CASH	
£2.43	
CLERK 1	No.000011
00001	

 
### Void Previous Item

This function allows you to correct an item registered previously in a transaction.

1. Register an item. Then register a second item.
2. To correct the first item, press **VOID:**



3. Enter the price of the first item, then press the PLU key where it was registered originally.



THANK-YOU	
CALL AGAIN	
DATE 01/15/2003 WED	TIME
08:33	
PLU2	
£1.29	
PLU1 T1	
£2.29	
VOID -----	
---	
PLU2	-
1.29	
TAX1 AMT	
£0.14	
TOTAL	
£2.43	
CASH	

£2.43

CLERK 1

00001

No.000011

## Cancel

The **CANCEL** key allows you to stop any transaction. Anything registered within the transaction before the **CANCEL** key is pressed is automatically corrected. The **CANCEL** key can be inactivated through programming, see "Function Key Programming" in the "Program Mode Programming" chapter, or the key can be programmed to require manager control.

1. Register the items you wish to sell.
2. Press the **CANCEL** key



THANK-YOU	
CALL AGAIN	
DATE 01/15/2003 WED	TIME
08:33	
PLU1 T1	
£2.29	
PLU2	-
0.50	
CANCEL	
*****	
CLERK 1	No.000011
00001	

## Void Position Operations

You can use the **VOID** control lock position to correct any complete transaction. To correct any transaction:

1. Turn the control lock to the **VOID** position.
2. Enter the transaction you wish to correct exactly as it was entered originally in the **REG** control lock position. You can enter discounts, voids, returns, tax exemptions or any other function.
3. All totals and counters are corrected as if the original transaction did not take place.

THANK-YOU	
CALL AGAIN	
DATE 01/15/2003 WED	TIME
08:33	
VOID MODE	
*****	
PLU1 T1	-
2.29	
PLU2	-
1.00	
TAX1 AMT	-
0.14	
TOTAL	-
3.43	
CASH	-
3.43	
CLERK 1	No.000011
00001	

---

## No Sale Operations

### Open Drawer

The **#/NO SALE** key will open the cash drawer when you have not already started a transaction. The no sale function can be disabled or placed under manager control through programming, see "Function Key Programming" in the "Program Mode Programming" chapter.

1. Press **#/NS**:

**#/NS**

2. The drawer will open and the receipt will print as in the example on the right.

```
THANK-YOU
CALL AGAIN

DATE 01/15/2003 WED   TIME
08:33

NO SALE -----
---
CLERK 1                No.000011
00001
```

### Non Add Number

You can also use the **#/NO SALE** key to print any number (up to 9 digits) on the printer paper. You can enter the number any time during a transaction. For example, if you wish to record a checking account number, enter the number and press the **#/NO SALE** key before totalling the sale with the cheque key.

1. Register the items you wish to sell.
2. Enter the number you wish to record, for example enter:

1 2 3 4

3. Press **#/NS**:

**#/NS**

4. Press **CHEQUE**

**CHEQUE**

```
THANK-YOU
CALL AGAIN

DATE 01/15/2003 WED   TIME
08:33

PLU1 T1
£2.99
NON-ADD#
1234
TAX1 AMT
£0.18
TOTAL
£3.17
CHEQUE
£3.17
CLERK 1                No.000011
00001
```

---

## Received On Account Operations

You can use one of the received on account functions (**RA1-RA3**) to accept cash or checks into the cash drawer when you are not actually selling merchandise. For example, use received on account to accept payments for previously sold merchandise, or record loans to the cash drawer.

1. Press one of the received on account keys (**RA1-RA3**)

RA1

2. Enter the amount of cash received, press **CASH**.

1 0 0 0 CASH

3. Enter the cheque amount received, press **CHEQUE**

1 0 0 0 CHEQUE

4. Enter the charge amount received, press **CHARGE1**

1 0 0 0 CHARGE  
1

5. You can continue to itemise receipts, or you can finalise by pressing or selecting the same received on account key.

RA1

THANK-YOU	
CALL AGAIN	
DATE 01/15/2003 WED	TIME
08:33	
RA1	
CASH	
£10.00	
CHEQUE	
£10.00	
CHARGE1	
£10.00	
RA1	
£30.00	
CLERK 1	No.000011
00001	

# Paid Out Operations

You can use the paid out function(**PO1-PO3**) to track cash or checks paid out or to record loans from the cash drawer.

- 1. Press one of the paid out keys(**PO1-PO3**)  

PO1
- 2. Enter the amount of cash paid out, press **CASH**.  

1000CASH
- 3. Enter the cheque amount paid out, press **CHEQUE**.  

1000CHEQUE
- 4. Enter the charge amount received, press **CHARGE1**  

1000CHARGE1
- 5. You can continue to itemize paid outs, or you can finalise by pressing or selecting the same paid out key.

PO1

THANK-YOU		
CALL AGAIN		
DATE	01/15/2003 WED	TIME
	08:33	
PO1		
CASH	10.00	-
CHEQUE	10.00	-
CHARGE1	10.00	-
PO1	30.00	
CLERK	100001	No.000011

---

## Subtotalling a Sale

1. Register the items you wish to sell.
2. Press **SBTL**. The subtotal will display with the message "Sub" indicated on the rear display.



The subtotal can be printed if the system option is set. See "Print Option Programming" in the "Program Mode Programming" chapter.

---

## Totalling and Tendering

There are ten tender functions available to categorise sales. **CASH** and **CHEQUE** are individual keys on the keyboard

### Totalling a Cash Sale

1. Register the items you wish to sell.
2. To total a cash sale, press **CASH**:

CASH

3. The display will indicate the total amount of the cash sale.

THANK-YOU	
CALL AGAIN	
DATE 01/15/2003 WED	TIME
08:33	
PLU2	
£7.96	
TOTAL	
£7.96	
CASH	
£7.96	
CLERK 1	No.000011
00001	

### Totalling a CHEQUE Sale

1. Register the items you wish to sell.
2. To total a cash sale, press **CHEQUE**:

CHEQUE

3. The display will indicate the total amount of the cash sale.

THANK-YOU	
CALL AGAIN	
DATE 01/15/2003 WED	TIME
08:33	
PLU2	
£7.96	
TOTAL	
£7.96	
CHEQUE	
£7.96	
CLERK 1	No.000011
00001	



## Tendering a Cash Sale

1. Register the items you wish to sell.
2. Enter the amount tendered by the customer. For example, for £20.00 enter:

2 0 0 0

3. Press **CASH**:

CASH

4. The display will indicate the total amount of the cash tendered and the change due, if any.

```

THANK-YOU
CALL AGAIN

DATE 01/15/2003 WED    TIME
08:33

PLU1 T1
£2.99
PLU1 T1
£2.99
4X                      £1.99
PLU2
£7.96
TAX1
£0.36
TOTAL
£14.30
CASH
£20.00
CHANGE
£5.70
CLERK 1                No.000011
00001
  
```

## Tendering a CHEQUE Sale

1. Register the items you wish to sell.
2. Enter the amount tendered by the customer. For example, for £20.00 enter:

2 0 0 0

3. Press **CHEQUE**:

CHEQUE

4. The display will indicate the total amount of the check tendered and the change due, if any.

```

THANK-YOU
CALL AGAIN

DATE 01/15/2003 WED    TIME
08:33

PLU1 T1
£2.99
PLU1 T1
£2.99
4X                      £1.99
PLU2
£7.96
TAX1
£0.36
TOTAL
£14.30
CHEQUE
£20.00
CHANGE
£5.70
CLERK 1                No.000011
00001
  
```

## Totalling a Charge Sale

Use the charge keys to track charge or credit card sales. See "Function Key Programming" in the "Program Mode Programming" chapter to change the descriptors for the charge tender functions. For example, you can use CHARGE 1 to track Visa card sales. The descriptor "VISA" will display on the function look up menu and print on the printer. You can also set tendering options for the charge keys, i.e. whether to allow over tendering or to enforce tendering.

1. Register the items you wish to sell.
2. Press one of the charge keys if it is located on the keyboard:

 


THANK - YOU	
CALL AGAIN	
DATE 01/15/2003 WED	TIME
08:33	
PLU1 T1	
£2.99	
PLU1 T1	
£2.99	
4X	£1.99
PLU2	
£7.96	
TAX1	
£0.36	
TOTAL	
£14.30	
CHARGE1	
£14.30	
CLERK 1	No.000011
00001	

# Tendering a Charge Sale

Tendering a charge sale may or may not be allowed. See "Function Key Programming" in the "Program Mode Programming" chapter to set tendering options for the charge keys, i.e. whether to allow over tendering or to enforce tendering.

- 1. Register the items you wish to sell.
- 2. Enter the amount of the charge and press one of the charge keys if it is located on the keyboard:



THANK-YOU		
CALL AGAIN		
DATE	01/15/2003 WED	TIME
	08:33	
PLU1	T1	
	£2.99	
PLU1	T1	
	£2.99	
4X		£1.99
PLU2		
	£7.96	
TAX1		
	£0.36	
TOTAL		
	£14.30	
CHARGE1		
	£20.00	
CHANGE		
	£5.70	
CLERK	1	No.000011
	00001	

## CHEQUE Cashing

Cheque cashing means exchanging cash for a cheque. If you wish to cash cheques, you must place a **CHQCASH** key on the keyboard. See "Function Key Assignment" in the "Program Mode Programming" chapter.

1. Enter the amount of the cheque tendered by the customer. For example, for £20.00 enter:

2 0 0 0

2. Press **CHQCASH**:

CHQ  
CASH

3. The display will indicate the amount of the cheque and the cash change.

```
THANK-YOU  
CALL AGAIN  
  
DATE 01/15/2003 WED    TIME  
08:33  
  
***CHKCASH***  
  
CHEQUE  
£20.00  
CASH  
20.00  
CLERK 1                No.000011  
00001
```

## Split Tender

Split tendering is paying for one transaction by more than one payment method. For example, a £20.00 sale could be split so £10.00 is paid in cash, and the remaining £10.00 is paid by a cheque. If necessary, you can make several different payments.

1. Register the items you wish to sell.
2. Enter the amount of cash tendered by the customer. For example, enter £10.00 and press **CASH**:

1	0	0	0	CASH
---	---	---	---	------

3. The display will indicate the £10.00 cash tender and the £10.00 total still due.
4. Enter the amount of cheque tendered by the customer. For example, enter £10.00 and press **CHEQUE**:

1	0	0	0	CHEQUE
---	---	---	---	--------

5. When the total tendered equals or exceeds the total due, the receipt will print and the transaction is complete.

THANK-YOU			
CALL AGAIN			
DATE	01/15/2003	WED	TIME
	08:33		
PLU2			£20
00			
TOTAL			
£20.00			
CASH			
£10.00			
TOTAL			
£10.00			
CHEQUE			
£10.00			
CLERK 1		No.000011	
00001			

## Post Tender

Post tendering means computing change after the sale has been totalled and the drawer is open. This feature is useful when a customer changes the amount of the tender. Normally, this function is not allowed. If you wish to allow post tendering, you must set the appropriate system option.

1. Register the items you wish to sell.

2. Press **CASH**:

CASH

3. The display will indicate the total of the cash sale.

4. Enter the amount of the new tender,  
Press **CASH**:

2 0 0 0 CASH

5. The display will indicate the change due.

```
THANK-YOU
CALL AGAIN

DATE 01/15/2003 WED    TIME
08:33

PLU1 T1
£2.00
TAX1
£0.12
CASH
£2.12
CLERK 1                No.000011
00001
```

## Currency Conversion

 
If you normally accept currency from neighbouring nations, you can program to convert the subtotal of a sale to the equivalent cost in the foreign currency. You can set up four separate conversion functions for different foreign currencies. To do this, you need to program the conversion factor. For example, if the pound (home currency) is worth approximately 63 euros (foreign currency), the conversion factor could be 0.632511.

See "Function Key Programming" in the "Program Mode Programming" chapter to set a conversion factor.

1. Register the items you wish to sell.
2. Press the **CONV1** key if it is located on the keyboard:



3. Enter the amount of the foreign currency tender, Press **CASH**:



4. The display will indicate the amount of foreign currency tendered and display £5.17 change due. The change due is computed in home currency!

THANK-YOU			
CALL AGAIN			
DATE	01/15/2003	WED	TIME
	08:33		
PLU1	T1		
£2.00			
TAX1			
£0.12			
TOTAL			
£2.12			
CONV	1		
€2.90			
CHANGE RATE			
@1.3720			
HOME AMT.			
£10.00			
CHANGE			
£5.17			
CLERK	1	No.000011	
00001			

## Not Found Key Operation

The 380M has the ability to create a PLU within a sale. If during a sale a PLU is sold that does not exist an error tone will sound, follow the sequence below to create and sell the PLU.

1. If there is a PLU error tone during the item registration, Press NOT FOUND key.

NOT FOUND

2. Enter a price of the PLU up to eight digits, (or "0" for no price) and press X/TIME key.  
Then the PLU code and price of the PLU will be automatically programmed and sold.

X/TIME

### ***Descriptor***

- Refer to "Program 80 – Function Key Descriptor"



---

# Table Management and Clerk Interrupt Operations

## Overview

The *ER-380* can employ a manual previous balance, hard check, or soft check system. (You must select hard or soft check posting in memory allocation programming - the default selection is soft.)

There are two methods in ER-380 to manage check track. One is table management system and the other is clerk interrupt system. If you want to use clerk interrupt system.

First, Program as below.

### **To Enter Clerk Interrupt System (To Exit Table Management system )**

1. Program Clerk Secret Code
2. Set system option #2 to a value of **1**. See "System Option Programming"
3. Set system option #26 to a value of **1**. See "System Option Programming".

 
### **To Exit Clerk Interrupt System (To Enter Table Management system)**

Set system option #26 to a value of **0**. See "System Option Programming" .

## Soft Check

### Opening a Soft Check

1. Enter the number of the guest check, press the **CHECK #** key:




or, press the **CHECK #** key to automatically assign a check:



2. If required, enter the table number and press the **TABLE** key:



 3. If required, enter the number of guests and press the **GUEST** key:



4. Register the items you wish to sell.
5. To total the posting, press **SERVICE**:



#### Receipt Example:

THANK-YOU	
CALL AGAIN	
DATE 01/15/2003 WED	TIME 08:33
CHECK #	
<b>#123</b>	
PBAL	
£0.00	
TABLE	
#3	
GUEST	
#2	
CHICKEN	
£7.00	
STEAK	
£10.00	
SERVICE	
£17.00	
BFWD	
<b>£17.00</b>	
CLERK 1	No.000011
00001	

 
---

Note: If a table number entry is required for all guest checks, and checks are assigned by register, the check will be assigned by the register when the table # is entered.


---

### Adding to a Soft Check

1. Enter the number of the guest check, press the **CHECK #** key:



 or, if you entered a table number, enter the table number and press the **TABLE** key:



2. Register the next items you wish to sell.
3. To total the posting, press **SERVICE**:




#### Receipt Example:
 
```
THANK-YOU  
CALL AGAIN  
  
DATE 01/15/2003 WED    TIME  
08:33  
  
CHECK #  
#123  
PBAL  
£17.00  
TABLE  
#3  
GARLIC BREAD  
£2.00  
SERVICE  
£2.00  
BFW  
£19.00  
CLERK 1                No.000012  
00001
```

### Printing a Soft Check

1. Enter the number of the guest check, press the **CHECK #** key:



or, if you entered a table number, enter the table number and press the **TABLE** key:



2. Press **PRINT CHECK** to print the complete check. If programmed to do so, the **PRINT CHECK** key will automatically service the check



#### Sample of soft check printed on the receipt:

```
THANK-YOU  
CALL AGAIN  
  
DATE 01/15/2003 WED    TIME  
08:33  
  
CHECK #  
#123  
PBAL  
£19.00  
TABLE  
#3  
CHICKEN  
£7.00  
STEAK  
£10.00  
GARLIC BREAD  
£2.00  
SERVICE  
£0.00  
BFW  
£19.00  
  
CHK # :  
1  
CLERK 1                No.000012  
00001
```

## Paying a Soft Check

1. Enter the number of the guest check, press the **CHECK #** key:

1 2 3 CHECK#

or, if you entered a table number, enter the table number and press the **TABLE** key:

3 TABLE

2. If necessary, add additional items. If you wish to add a tip, press **SBTL**, then enter the tip amount and press the **TIP** key:

SBTL

3 0 0 TIP

3. Pay the balance as you would normally tender a transaction, with **CASH**, **CHEQUE**, or one of the **CHARGE** functions. If the tender is greater than the balance due, change is displayed.

2 5 0 0 CASH

 
Sample of soft check printed on the receipt:

THANK-YOU	
CALL AGAIN	
DATE 01/15/2003 WED	TIME
08:33	
CHECK #	
# 1 2 3	
PBAL	
£19.00	
TABLE	
#3	
TIP	
£3.00	
CHECKS PAID	
£22.00	
CASH	
£25.00	
CHANGE	
£3.00	
	CHK #
: 2	
CLERK 1	No.000013
00001	

## Hard Check

### Opening a Hard Check

1. Enter the number of the guest check, press the **CHECK #** key:




or, press the **CHECK #** key to automatically assign a check:



2. If required, enter the table number and press the **TABLE** key:



 3. If required, enter the number of guests and press the **GUEST** key:



4. Register the items you wish to sell.
5. Place a slip in an optional slip printer, the check will print automatically when you press **SERVICE**:




### Receipt Example:

 THANK-YOU	
CALL AGAIN	
DATE 01/15/2003 WED	TIME 08:33
CHECK #	
# 1 2 3	
PBAL	
£0.00	
TABLE	
#3	
GUEST	
#2	
CHICKEN	
£7.00	
STEAK	
£10.00	
SERVICE	
£17.00	
BFWD	
£17.00	
CLERK 1	No.000011
00001	

### ***Adding to a Hard Check***

1. Enter the number of the guest check, press the **CHECK #** key:



or, if you entered a table number, enter the table number and press the **TABLE** key:



2. Register the next items you wish to sell.
3. To total the posting, press **SERVICE**:



#### Receipt Example:

THANK-YOU	
CALL AGAIN	
DATE 01/15/2003 WED	TIME
08:33	
CHECK #	
#123	
PBAL	
£17.00	
TABLE	
#3	
GARLIC BREAD	
£2.00	
SERVICE	
£2.00	
BFWD	
<b>19.00</b>	
CLERK 1	No.000012
00001	

# X Mode

---

## Introduction

All Management Functions take place with the control lock in the **X** position. This way only those with the correct key will have access to these functions. Some register operations may be programmed to require the control lock in the **X** position in order to operate. All reports require a key that will access the **X** or **Z** position.

---

## X Reports

System reports are divided into two basic categories:

- **X** reports, which read totals without resetting
- **Z** reports, which read totals and reset them to zero

Most reports are available in both categories. Some reports, such as the Cash-in-Drawer report and the From-To PLU report are available only as **X** reports.

Some reports also provide identical but separate *period to date* reports. These reports maintain a separate set of totals, which may be allowed to accumulate over a period of days, weeks, months, or even years. **X2** reports read period to date totals without resetting, and **Z2** reports read period to date totals and reset them to zero. Period to date totals are updated each time a **Z1** report is completed.

A complete list of available reports is presented in a chart on the following page.

An example is given for each of these reports in the pages that follow. Those reports which may be optionally abbreviated through register programming are represented twice. They are first shown with the option off, giving all totals, and again with the option turned on, showing the abbreviated version of the same report.

Registers programmed with pop-up clerks must be signed on in the **REG** control lock position prior to taking reports.

### Running a Report – General Instructions

1. Refer to the “Report Table”.
2. Select a report type and the report mode.
3. Turn the control lock to the position indicated.
4. Enter the key sequence for the report you have selected.



## Report Table

Report Type	Report Number	Report Mode	Control Lock Position	Key Sequence
Financial	1	X	X	1 – SBTL
		Z	Z	1 – SBTL
		X2	X	201 – SBTL
		Z2	Z	201 – SBTL
Time	2	X	X	2 – SBTL
		Z	Z	2 – SBTL
		X2	X	202 – SBTL
		Z2	Z	202 – SBTL
All PLU	3	X	X	3 – SBTL
		Z	Z	3 – SBTL
		X2	X	203 – SBTL
		Z2	Z	203 – SBTL
All Clerk	4	X	X	4 – SBTL
		Z	Z	4 – SBTL
		X2	X	204 – SBTL
		Z2	Z	204 – SBTL
Group	5	X	X	5 – SBTL
		Z	Z	5 – SBTL
		X2	X	205 – SBTL
		Z2	Z	205 – SBTL
All STOCK	6	X	X	6 – SBTL
		Z	Z	6 – SBTL
VOID	7	X	X	7 – SBTL
		Z	Z	7 – SBTL
		X2	X	207 – SBTL
		Z2	Z	207 – SBTL
Daily Sales	8	X2	X	208 – SBTL
		Z2	Z	208 – SBTL
Individual Clerk Report	9	X	X	9 – SBTL - #-CLERK - #-CLERK
		X2	X	209 – SBTL - #-CLERK - #-CLERK
MIX AND MATCH	10	X	X	10 – SBTL
		Z	Z	10 – SBTL
		X2	X	210 – SBTL
		Z2	Z	210 – SBTL
Open Table	11	X	X	11 – SBTL
		Z	Z	11 – SBTL

Report Type	Report Number	Report Mode	Control Lock Position	Key Sequence
TRAIN FINANCIAL	12	X	X	12 – SBTL
		Z	Z	12 – SBTL
		X2	X	212 – SBTL
		Z2	Z	212 – SBTL
From/To PLU	13	X	X	13-SBTL XXXX – PLU – XXXX – PLU
From/To PLU		X2	X	213-SBTL XXXX – PLU – XXXX – PLU
From/To STOCK	14	X	X	14-SBTL XXXX – PLU – XXXX – PLU
Minimum Stock	15	X	X	16 – SBTL
DRAWER TOTAL	111	X	X	111-SBTL
PRINT ALL EJ	300	X	X	300 -SBTL
PRINT EJ CASH	301	X	X	301 -SBTL
PRINT EJ CHECK	302	X	X	302 -SBTL
PRINT EJ MISC/T	303	X	X	303 -SBTL
PRINT EJ %	304	X	X	304 -SBTL
PRINT EJ RA/PO	305	X	X	305 -SBTL
PRINT EJ RETURN	306	X	X	306 -SBTL
PRINT EJ EC/VOID	307	X	X	307 -SBTL
PRINT EJ NO SALE	308	X	X	308 -SBTL
PRINT EJ CANCEL	309	X	X	309 –SBTL
PRINT EJ TRAIN	311	X	X	311 - SBTL
PRINT VOID MODE	312	X	X	312 - SBTL
PRINT EJ BY CLERK	401 – 15	X	X	401-415(depends on Max Clerk)-SBTL
RESET EJ	399	Z	Z	399- SBTL

---

## Cash Declaration

If compulsory cash declaration is required, you must declare the count of the cash drawer prior to taking **X** or **Z** financial and clerk reports.

You can enter the cash drawer total in one step, or to facilitate the counting of the cash drawer, you can enter each type of bill/coin and cheques separately and let the register act as an adding machine. You can also use the **X/TIME** key to multiply the denomination of currency times your count.

Either way you choose to enter cash, the register will compare your declaration with the expected cash and cheque in drawer totals and print the over or short amounts on the report.

For example:

1. Turn the control lock to the **X** or **Z** position (depending upon the type of report you are taking.)

2. Press the **CASH** key.

9 0 SBTL

3. Enter the total of cash.

9 8 7 6 CASH

4. Enter the total of **cheques**.

2 0 0 0 CHEQUE

5. Press the **CASH** key to total the declaration.

CASH

THANK-YOU  
CALL AGAIN

DATE 01/15/2003 WED TIME  
08:33

\*\*\* CASH DECLARATION \*\*

CASH  
£98.76

CASH  
£20.00

CASH  
£118.76

CLERK 1 No.000011  
00001

# Service Mode Programming

---

## Overview

The following procedures are done from the Service Mode menu:

 
- Clear all totals
- Clear grand total
- Clear PLU file
- EPROM Information
- Memory Allocation
- Assignment of functions to keyboard locations
- RS232C Port

## Ram Clear & Memory Allocation

1. Turn the key to the **S mode** and power on the register whilst holding down the **CHEQUE** key. Then press the **top left, bottom left, top right** and **bottom right** keys to start the memory allocation procedure.

If you want to allocate memory by default value, Press **CASH** key only,  
Alternatively:

Refer to the chart below . Enter the index number and press the **X/TIME** key.




X	MEMORY ITEM
1	PLU
2	CLERK
3	GROUP
4	CHECK#
5	SOFT CHECK LINE
6	CHECK TYPE : Hard(1), Soft(0)
7	PRICE LEVEL
8	MIX AND MATCH
9	ELECTRONIC JOURNAL

**Note:-** \*\*\*The number of clerks must be equal to or less than the number of check# details entered in file 4.

2. Enter the Number to allocate for the Memory Item and Press **CASH** key.

 See the example data table below



MEMORY ITEM	N
PLU	300 (Max.5000)
CLERK	10 (Max. 99)
GROUP	20 (Max. 99)
CHECK #	15 (Max. 500)
SOFT CHECK LINE	30 (Max. 100)
CHECK TYPE	0(Soft Check), 1(Hard Check)
PRICE LEVEL	1 (Max. 2)
MIX AND MATCH	10 (Max. 99)
ELECTRONIC JOURNAL	3000(Max. 15000)

Default Memory Allocation


3. If you want to finish memory allocation, Enter CASH key with no numeric key input. And if you want to allocate another memory area, Repeat the file number entry sequence.

CASH

---

## Clear Totals

 1. Turn the control lock to the S position.
2. To Reset Totals, enter **20**, press the **SBTL** key.



3. Press the **X/TIME** key to confirm.




4. Press CASH key to finalise



---

## Clear Grand Totals

 1. Turn the control lock to the S position.
2. To Reset Grand Totals, enter **30**, press the **SBTL** key.



3. Press the **/TIME** key to confirm.




4. Press CASH key to finalise




## Clear PLU File

 
1. Turn the control lock to the S position.
2. To Reset PLU file, enter **40**, press the **SBTL** key.



 3. Press the **/TIME** key to confirm.



 
4. Press the **CASH** key to finalise



---

## Eprom Information

 
1. Turn the control lock to the S position.
2. To Scan Eprom Information, enter **50**, press the **SBTL** key.



---

## Memory Allocation

 1. Turn the control lock to the S position.
2. To Scan Eprom Information, enter **60**, press the **SBTL** key.



---

## Load Default Keyboard

1. Turn the control lock to the S position.
2. Turn the power switch to the OFF position .
3. Press and hold the SUBTOTAL key. While continuing to hold the SUBTOTAL key, turn the power switch to the ON position.



---

## Initial Clear

1. Turn the control lock to the P position.
2. Turn the power switch to the OFF position .
3. Press and hold the CASH key. While continuing to hold the CASH key, turn the power switch to the ON position.

---

## PC Online Mode

In ER-380, There are no special commands to enter PC Online Mode.

When you want to enter PC Online mode, All you have to do is to set 232 Communication Option in Programming.

When PC sends commands to the ECR, the ECR will be automatically in Online Mode if connected.

---

## Function Key Assignment Programming

 
Function keys may be relocated, inactivated or changed with this program. For example, you may wish to place functions, such as PREVIOUS BALANCE and SERVICE that are not placed on the default keyboard. Or perhaps, you may wish to remove a function, such as CANCEL, for security reasons.

Please note the following limitations:


- If you assign a duplicate of a function code, the duplicate will function exactly as the original - you will not get separate totals and counters on reports for the duplicated key.
- You can reassign keys only in locations that are programmable. See "Keyboards", where the key locations that may be programmed are identified.

### ***To Assign a Function Key to a Location:***


1. Turn the control lock to the **S** position.
2. Enter 70, press the **SBTL** key.



 3. Refer to Function Key Codes to find the code for the key you wish to assign, press the location you wish to program. Repeat this step to assign another key.



 4. Press the **CASH** key to finalise key assignment program.




## Function Key Codes

Code	Function	Code	Function	Code	Function	Code	Function
1	NLU 1	43	CHARGE 7	73	MACRO 9	103	VOID ITEM
12	NLU 12	44	CHARGE 8	74	MACRO 10	104	WASTE
15	Numeric 1	45	CHEQUE CASHING	75	MDSE RETURN	105	VALIDATION
16	Numeric 2	46	ENDORSE	76	MODIFIER 1	106	PAYMENT
17	Numeric 3	47	CHEQUE TEND	77	MODIFIER 2	107	RCPT ON/OFF
18	Numeric 4	48	CHECK #	78	MODIFIER 3	108	INACTIVE
19	Numeric 5	49	CLEAR (ESC)	79	MODIFIER 4	109	NON ADD
20	Numeric 6	50	CLERK #	80	MODIFIER 5	110	PRICE CHANGE
21	Numeric 7	51	CURR.CONV.1	81	P/BAL	111	CLERK 1
22	Numeric 8	52	CURR. CONV.2	82	PAID OUT 1	112	CLERK 2
23	Numeric 9	53	CURR. CONV.3	83	PAID OUT 2	113	CLERK 3
24	Numeric 0	54	CURR. CONV.4	84	PAID OUT 3	114	CLERK 4
25	Numeric 00	55	ANALISE 2	85	PAPER FEED	115	CLERK 5
26	DECIMAL	56	ANALISE 1	86	PRINT CHECK	116	CLERK 6
27	#/NS	57	ERR CORRECT	87	PROMOTION	117	CLERK 7
28	%1	58	F/S SHIFT	88	REC ON ACCT 1	118	CLERK 8
29	%2	59	F/S SUB	89	REC ON ACCT 2	119	CLERK 9
30	%3	60	F/S TEND	90	REC ON ACCT 3	120	CLERK 10
31	%4	61	GUEST	91	SUBTOTAL	121	PRICE INQ
32	%5	62	PLU	92	SCALE	122	ADD STOCK
33	QTY/TIME	63	PRICE LEVEL 1	93	SERVICE	123	DEDUCT STOCK
34	ADD CHECK	64	PRICE LEVEL 2	94	TABLE #	124	OVERWRITE STOCK
35	CANCEL	65	MACRO 1	95	TARE	125	NOT FOUND
36	CASH	66	MACRO 2	96	ANALISE 3	126	STOCK INQUIRE
37	CHARGE 1	67	MACRO 3	97	TAX EXEMPT	127	CHARGE #
38	CHARGE 2	68	MACRO 4	98	TAX SHIFT 1	128	MACRO #
39	CHARGE 3	69	MACRO 5	99	TAX SHIFT 2		
40	CHARGE 4	70	MACRO 6	100	TAX SHIFT 3		
41	CHARGE 5	71	MACRO 7	101	TAX SHIFT 4		
42	CHARGE 6	72	MACRO 8	102	TIP		

## RS232C Port Options

Turn the control lock to the **S** position

To program PORT1 enter **80** and press **SBTL** key.

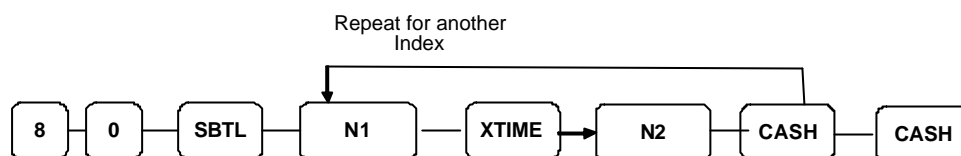

N1	OPTION	N2	VALUE
1	Baud Rate	0	9600 BPS
		1	1200 BPS
		2	2400 BPS
		3	4800 BPS
		4	19200 BPS
2	Parity	0	NONE
		1	ODD
		2	EVEN
3	Data Bits	0	8 BITS
		1	7 BITS
4	Stop Bits	0	1 BIT
		1	2 BIT
5	Device Function	0	NONE
		1	PC
		2	Not Used
		3	RJ PRINTER
		4	RECEIPT PRINTER
		6	SCANNER
		7	COIN
		8	EFT
		9	POLE
6	Initial Feeding Line KP	0 - 20	
7	End Feeding Line KP	0 - 20	
8	Initial Feeding Line Slip	0 - 20	
9	Print Line On Guest Check	0 - 50	
	Scale Type (Non UK)	0	NCI

<b>N1</b>	<b>OPTION</b>	<b>N2</b>	<b>VALUE</b>
<b>10</b>	Scale Type (Non UK)	0	NCI
		1	CAS

<b>11</b>	Printer Type	0	NONE
		1	SAMSUNG SRP-100
		2	SRP-250
		3	SRP-300
		4	SRP-350
		5	CITIZEN3550
		6	CITIZEN810
		7	CITIZEN230
		8	EPSON TMT88-2
		9	EPSON U200
		10	EPSON U295
		11	EPSON U300
		12	EPSON U325
		13	EPSON U375
		14	STAR SP-200
		15	STAR SP-298
		16	STAR SP-300
		17	STAR TSP-200
<b>12</b>	Pole Display	0	EPSON
		1	ICD
<b>13</b>	EFT TYPE – (Non Uk)	0	EFT GLED
		1	EFT INGE
		2	EFT ZVT700
<b>14</b>	EFT CONFIG BYTE(Non Uk)	0 - 127	
<b>15</b>	EFT CURRENCY (Non Uk)	0	NONE
		1	DM
		2	EURO
<b>16</b>	EFT PASSWORD (Non Uk)	0- 99999999	

# Program Mode Programming

---

## Default Programming

- All keyboard PLUs are non-taxable and open, without entry limits by default status programming of "00000000".
- All system options are set to **0** in default programming, unless otherwise noted. Change only the options, which will deviate, from default programming. There is no need to re-enter an option status of **0**, since **0** is its original setting.
- All programming (unless otherwise stated) is done with the control lock in the **P** position. Each section details a specific area of register programming.

---

## Descriptor Programming Methods

Descriptors are programmable for PLUs, function keys, groups, clerks and the logo/messages. There is a method available to program descriptors the *Descriptor Code Method*.

## Program Overlay Method

### *ER380 Alpha Keyboard Overlay*

			7	8	9	M	Q	U	X	SPACE
C	F	I	4	5	6	L	P	T	W	Z
B	E	H	1	2	3	K	O	S	V	Y
A	D	G	0	00	.	J	N	R		



## Descriptor Code

**Descriptor Code Chart**

CHAR	C	ü	é	â	ä	à	á	c	ê	ë
CODE	001	002	003	004	005	006	007	008	009	010
CHAR	è	ï	î	ì	Ä	Å	É	æ	?	ô
CODE	011	012	013	014	015	016	017	018	019	020
CHAR	ö	ò	û	ù	ÿ	Ö	Ü	œ	£	¥
CODE	021	022	023	024	0250	026	027	028	029	030
CHAR	€	SPACE	!	"	#	\$	%	&	'	(
CODE	031	032	033	034	035	036	037	038	039	040
CHAR	)	*	+		-		/	0	1	2
CODE	041	042	043	044	045	046	047	048	049	050
CHAR	3	4	5	6	7	8	9	:	:	<
CODE	051	052	053	054	055	056	057	058	059	060
CHAR	-	>	?	@	A	B	C	D	E	F
CODE	061	062	063	064	065	066	067	068	069	070
CHAR	G	H	I	J	K	L	M	N	O	P
CODE	071	072	073	074	075	076	077	078	079	080
CHAR	Q	R	S	T	U	V	W	X	Y	Z
CODE	081	082	083	084	085	086	087	088	089	090
CHAR							a	b	c	d
CODE	091	092	093	094	095	096	097	098	099	100
CHAR	e	f	g	h	I	i	k	l	m	n
CODE	101	102	103	104	105	106	107	108	109	110
CHAR	o	p	q	r	s	t	u	v	w	x
CODE	111	112	113	114	115	116	117	118	119	120
CHAR	v	z	BACK SPACE			Double				
CODE	121	122	123			999				

---

## Tax Programming

The *ER-380* has the capability to support four separate taxes.

Taxes can be calculated as either a straight percentage rate of between .001% and 99.999%, or a 60 break point tax table. Each tax may be either an add-on tax (added to the cost of a taxable item), or a value added tax (VAT) that is included in the price of the item.

Tax rate 4 may be set to function as the Canadian Goods & Services Tax (GST). Definitions for tax rates 1, 2, 3 & 4 are made as part of tax programming.

- If you are entering a tax rate (add-on or VAT), see "Straight Percentage Tax Rate Programming" to enter the percentage rate.
- If you are entering a Canadian Goods and Services Tax (GST), use tax rate 4 for the GST tax, and use tax rates 1, 2 and/or 3 for any other provincial tax or taxes. See "Straight Percentage Tax Rate Programming" to enter the GST status and percentage rate.

---

**Important Note:** After you have entered your tax program(s), test for accuracy by entering several transactions of different amounts. Carefully check to make sure the tax charged by the cash register matches the tax on the printed tax chart for your area. As a merchant, you are responsible for accurate tax collection. If the cash register is not calculating tax accurately, contact your dealer for assistance.

---

### ***Descriptor***

- Refer to "Program 80 – Function Key Descriptor"

## **Straight Percentage Tax Rate Programming**

When tax requirements may be met using a straight percentage rate, use the following method to program a tax as a straight percentage.

### ***Programming Straight Percentage Tax Rates and Status***

1. Turn the control lock to the **P** position.
2. If the tax is a percentage rate, with a decimal (0.000-99.999), it is not necessary to enter preceding zeros. For example, for 6%, enter 06.000 or 6.000.
3. For the type of tax:


If the tax is a percentage added to the sale (normal add on tax), enter:	<b>0</b>
If the tax is a percentage value added tax (VAT; calculated as part of the sale), enter:	<b>2</b>

4. Enter **0** here for all taxes, unless you are programming tax 4 as a Canadian GST. If tax 4 is a Canadian GST, enter the sum of the options below:

OPTION	VALUE	=	SUM
GST (tax 4) is taxable by rate 1?	Yes = 1 No = 0		
GST (tax 4) is taxable by rate 2?	Yes = 2 No = 0		
GST (tax 4) is taxable by rate 3?	Yes = 4 No = 0		

5. Press the Tax Shift key for the tax you are programming.
6. Press the **CASH** key to end programming.

### ***Tax Rate Programming Flowchart***

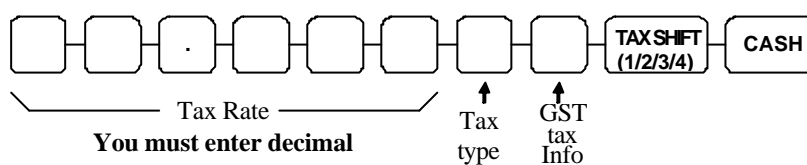

---


## PLU Programming

 All PLUs, whether they are registered by pressing a PLU key on the keyboard, or by entering the PLU number and pressing the **PLU** key, have the same programming options. These options are set through separate programs:

- Program 100 – PLU Status Programming determines whether the PLU is open, preset or inactive. Also selected here are tax, food stamp, scale, negative, single item, hash, gallonage, compulsory number entry, compulsory validation, compulsory condiment and print options.
- Program 150 – PLU Group Assignment allows you to select up to two groups where each PLU's sale will accumulate.
- Program 200 - PLU Price/HALO Programming determines the PLU price if the PLU is preset, or the high amount lock out (HALO) if the PLU is open.
- Program 250 - PLU Stock Amount Programming and ADD STOCK function key.
- Program 300 - PLU Descriptor Programming allows you to set a unique, up to 18 character, descriptor for each PLU.
- Program 350 - PLU Link Programming allow you to link a PLU to another PLU, so that registration of the first PLU will automatically trigger registration of the linked PLU.
- Program 400 - PLU Delete Programming allows you to delete the PLU.
- Program 450 - PLU Mix & Match Programming. Allows you to set promotion offers.
- Program 999 – Lead Thru PLU programming

## Program 100 - PLU Status Programming

1. Turn the control lock to the **P** position.
2. To begin the program, enter **1 0 0**, press the **SBTL** key.



3. Select the PLU or PLUs you wish to program in one of the following ways:

 
- Press a PLU key on the keyboard, or



- Press the first PLU keys that are to receive the same status and Press the last PLU keys, or




- Enter up to 15 digit number of the PLU and press the **PLU** key, or



- Enter the number of the first PLU in a range of PLUs that are to receive the same setting; press the **PLU** key. Enter the last number in the range; press the **PLU** key.



 4. Refer to the "PLU Status Chart" to determine the values for **N1** through **N9**. (If an address offers more than one option, add the values for each option and enter the sum. For example, if you wish the PLU to be taxable by rates 1 and 3, add the values for your choices, 1 + 4, and enter the sum "5" for address N5.) Enter the values you have selected, press the **X/TIME** key. (You do not need to enter preceeding zeros. For example, if you are only selecting a value for N8, i.e. print price on guest check number 1, just enter 10.)



5. To program additional PLUs, repeat from step 3, or press the **CASH** key to finalise the program.



### PLU Status Chart

Address	Program Option	Value	=	Sum
<b>N1</b>	PLU is preset?	Yes = 0 No = 1		
	PLU is override preset ?	Yes = 0 No = 2		
	PLU is taxable by rate 1?	Yes = 4 No = 0		
<b>N2</b>	PLU is taxable by rate 2?	Yes = 1 No = 0		
	PLU is taxable by rate 3?	Yes = 2 No = 0		
	PLU is taxable by rate 4?	Yes = 4 No = 0		
<b>N3</b>	PLU is food stamp eligible?	Yes = 1 No = 0		
	PLU is negative item?	Yes = 2 No = 0		
	PLU is hash ?	Yes = 4 No = 0		
<b>N4</b>	PLU is single item?	Yes = 1 No = 0		
	Compulsory non-add number?	Yes = 2 No = 0		
	PLU is gallonage?	Yes = 4 No = 0		
<b>N5</b>	PLU is inventory?	Yes = 1 No = 0		
	PLU is inactive?	Yes = 2 No = 0		
<b>N6</b>	PLU is a condiment?	Yes = 2 No = 0		
	Compulsory condiment entry?	Yes = 4 No = 0		
<b>N7</b>	Print PLU on receipt?	Yes = 0 No = 1		
	Not Used			
	Print PLU on check?	Yes = 0 No = 4		
<b>N8</b>	Print item's price on receipt?	Yes = 0 No = 1		
	Print item's price on check?	Yes = 0 No = 2		
	PLU is disabled PROMO function?	Yes = 4 No = 0		
<b>N9</b>	Allow Discounts	Yes = 0 No = 1		
	PLU is preset override in MGR control?	Yes = 2 No = 0		
	PLU is price change Item	Yes = 4 No = 0		

## Program 150 - PLU Group Assignment

 
Each PLU may report to any three levels of groups. Group totals appear on reports, so that you can track sales of different types of items. A group can also be used to designate items that are to print on an optional kitchen printer.

---

Note: The PLU will report to group "0", if not programmed to report to groups 1-20.

---

1. Turn the control lock to the **P** position.
2. To begin the program, enter **1 5 0**, press the **SBTL** key.



3. Select the PLU or PLUs you wish to program in one of the following ways:

 
- Press a PLU key on the keyboard, or




- Press the first PLU keys that are to receive the same status and Press the last PLU keys, or




- Enter up to 15 digit number of the PLU and press the **PLU** key, or



 - Enter the number of the first PLU in a range of PLUs that are to receive the same setting; press the **PLU** key. Enter the last number in the range; press the **PLU** key.



 4. Enter up to three 2-digit numbers representing the groups where you wish to add the PLUs sales, i.e. enter **1 0** for group 10 or enter **0 4** for group four. Press the **X/TIME** key.




5. To program additional PLUs, repeat from step 3, or press the **CASH** key to finalise the program.



## Program 200 - PLU Price/HALO Programming

 
If a PLU is open, set the HALO (high amount lock out) here. If a PLU is preset set the preset price here.  
If a PLU is set with gallonage status, enter the price per gallon here. (Enter price per gallon in tenths of a penny, i.e. 1299 for £1.29 9/10 per gallon.)

1. Turn the control lock to the **P** position.
2. To begin the program, enter **2 0 0**, press the **SBTL** key.



3. Select the PLU or PLUs you wish to program in one of the following ways:

 
- Press a PLU key on the keyboard, or




- Press the first PLU keys that are to receive the same status and press the last PLU keys, or



- Enter up to 15 digit number of the PLU and press the **PLU** key, or

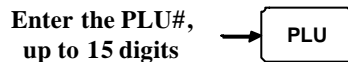

 - Enter the number of the first PLU in a range of PLUs that are to receive the same setting; press the **PLU** key. Enter the last number in the range; press the **PLU** key.




4. If the PLU is open, enter a HALO of up to 7 digits. If the PLU is preset, enter a preset price.



If the PLU Price Level is 2, Repeat this again.



 5. To program additional PLUs, repeat from step 3, or press the **CASH** key to finalise the program.






## Program 250 - PLU Stock Amount Programming

With this program, you can add stock to the PLU sales counters for PLUs you have designated as stock keeping PLUs.

 1. Turn the control lock to the **P** position.
2. To begin the program, enter **2 5 0**, press the **SBTL** key.



3. Select the PLU or PLUs you wish to program in one of the following ways:

 
- Press a PLU key on the keyboard, or




- Press the first PLU keys that are to receive the same status and Press the last PLU keys, or



- Enter up to 15 digit number of the PLU and press the **PLU** key, or



 - Enter the number of the first PLU in a range of PLUs that are to receive the same setting; press the **PLU** key. Enter the last number in the range; press the **PLU** key.



4. Enter the stock amount you wish to add (up to six digits), press the **X/TIME** key.



Stock Amount

5. To program additional PLUs, repeat from step 3, or press the **CASH** key to finalize the program.



## PLU Stock Programming By ADD / DEDUCT / OVERWRITE KEY

There are three keys to program stock. ADD, DEDUCT, OVERWRITE.

1. Turn the control lock to the P position.

2. To begin the program, Press ADD STOCK, DEDUCT STOCK, OVERWRITE STOCK, Keys on the Keyboard Location.

3. Select the PLU or PLUs you wish to program in one of the following ways:

 
- Press a PLU key on the keyboard, or




- Press the first PLU keys that are to receive the same status and Press the last PLU keys, or



- Enter up to 15 digit number of the PLU and press the **PLU** key, or




 - Enter the number of the first PLU in a range of PLUs that are to receive the same setting; press the **PLU** key. Enter the last number in the range; press the **PLU** key.



4. Press **ADD STOCK, DEDUCT STOCK, REPLACE STOCK** key.

 5. Enter the stock amount you wish to add (up to six digits), press the **X/TIME** key.



Stock Amount


6. To program additional PLUs, repeat from step 3, or press the **CASH** key to finalise the program.



# Program 280 - PLU Minimum Stock Amount Programming

 Turn the control lock to the **P** position.

1. To begin the program, enter **2 8 0**, press the **SBTL** key.



2. Select the PLU or PLUs you wish to program in one of the following ways:

 
- Press a PLU key on the keyboard, or




- Press the first PLU keys that are to receive the same status and press the last PLU keys, or



- Enter up to 15 digit number of the PLU and press the **PLU** key, or



 - Enter the number of the first PLU in a range of PLUs that are to receive the same setting; press the **PLU** key. Enter the last number in the range; press the **PLU** key.



3. Enter the stock amount you wish to add (up to 4 digits), press the **X/TIME** key.



Stock Amount

4. To program additional PLUs, repeat from step 3, or press the **CASH** key to finalise the program.




## Program 300 - PLU Descriptor Programming

 ---

Program descriptors by entering three digit alpha character codes.

---

1. Turn the control lock to the **P** position
2. To begin the program, enter **3 0 0**, press the **SBTL** key.




3. Select the PLU you wish to program in one of the following ways:


- Press a PLU key on the keyboard, or




- Enter up to 15 digit number of the PLU and press the **PLU** key, or

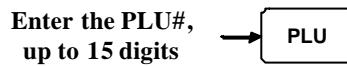

 4. If you are programming using alpha overlay;



or,

 


5. To program additional PLUs, repeat from step 3, or press the **CASH** key to finalise the program.



## Program 350 - PLU Link Programming

 PLU link programming allows you to link a PLU to another PLU, so that registration of the first PLU will automatically trigger registration of the linked PLU. For example, you may wish to link a bottle deposit with the sale of beverages, or you may wish to register a group of items normally sold together.

1. Turn the control lock to the **P** position.
2. To begin the program, enter **3 5 0**, press the **SBTL** key.




3. Select the PLU you wish to program in one of the following ways:


- Press a PLU key on the keyboard, or




- Enter up to 15 digit number of the PLU and press the **PLU** key, or

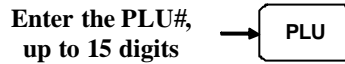

 4. Enter the number of the PLU you wish the PLU linked to; press the PLU key.  
Or press the PLU key on the keyboard you wish the PLU linked to.



OR

 

If you want to unlink,



5. To program additional PLUs, repeat from step 3, or press the **CASH** key to finalise the program.




## Program 400 – PLU Delete Programming

 ---

NOTE: To delete a PLU, all totals for the PLU must be cleared from Z reports(including Stock and PLU reports.)

---

1. Turn the control lock to the **P** position.
2. To begin the program, enter **4 0 0**, press the **SBTL** key.



3. Select the PLU or PLUs you wish to program in one of the following ways:

 
- Press a PLU key on the keyboard, or




- Press the first PLU key to be deleted, then press the last PLU key to be deleted, or



- Enter up to 15 digit number of the PLU and press the **PLU** key, or



 - Enter the number of the first PLU in a range to be deleted and press the **PLU** key, then enter the last number in the range, and press the **PLU** key.



4. Press X/TIME key.




5. To program additional PLUs, repeat from step 3, or press the **CASH** key to finalise the program.



## Program 450 - PLU MIX & MATCH Programming

 1. Turn the control lock to the **P** position.
2. To begin the program, enter **4 5 0**, press the **SBTL** key.



3. Select the PLU you wish to be linked to the mix & match table:

 
- Press a PLU key on the keyboard, or




- Press the first PLU to be linked, then the PLU key, and the last PLU in the range, or




- Enter up to 15 digit number of the PLU and press the **PLU** key, or



 - Enter the number of the first PLU in the range, and press the PLU key, then enter the last PLU number in the range and press the PLU key.



 4. Enter the number of the Mix & Match Table then press the **X/TIME** key.




5. To program additional PLUs, repeat from step 3, or press the **CASH** key to finalise the program.



## Program 999 – ALL PLU Programming

 
1. Turn the control lock to the **P** position.
2. To begin the program, enter **999**, press the **SBTL** key.




3. Enter the PLU you wish to program all.
  - Press a PLU key on the keyboard, or



 
Enter up to 15 digit number of the PLU and press the **PLU** key, or



 4. Enter the **PLU STATUS** and press the **X/TIME** key.



 5. Enter the **PLU GROUP LINKED** and press the **X/TIME** key.



6. Enter the **PLU PRICE/HALO** and press the **X/TIME** key.

 


If the PLU Price Level is 2, Repeat this again.






8. Enter the **PLU DESCRIPTOR** and press the **X/TIME** key.

Type up to 18  
descriptor keys → 

or,

Enter up to 18  
three-character  
codes → 

9. Enter the **PLU MIX AND MATCH LINK TABLE** and press the **X/TIME** key.

10. Press the **CASH** key to finalise the program.



---

## System Option Programming

Refer to the “System Option Table” to review the system options. Read each option carefully to determine if you wish to make any changes.


---

**NOTE:** Because after clearing memory all option settings are automatically set to 0, and because your most likely option selections require a status setting of 0, you do not need to program this section unless you wish to change the default status.

### ***Programming a System Option:***

1. Turn the control lock to the **P** position.
2. Enter **3 0**, press the **SBTL** key.
3. Enter a system option address, press the **X/TIME** key.
4. Enter the number representing the status you have selected, or if there is more than one decision to be made in an address, add the values representing your choices for each decision and enter the sum. Press the **SBTL** key.
5. Repeat from step 3 for each system option that you wish to change.
6. Press the **CASH** key to end system option programming.

### ***System Option Flowchart***

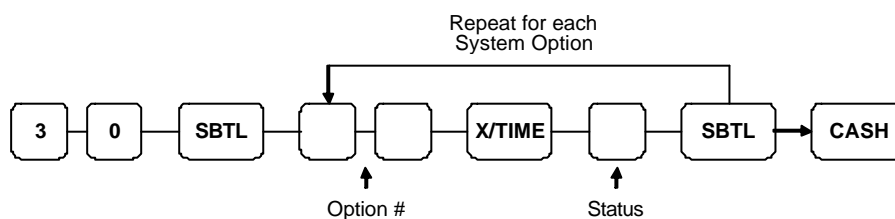

## System Option Table

Address	SYSTEM OPTION		VALUE	=	SUM
1	Beeper is active?		Yes = 0 No = 1		
	% will not affect net sales?		Yes = 2 No = 0		
2	Clerk sign on method is:	direct entry =	0		
		code entry =	1		
3	Clerks are:	pop-up =	1		
		stay down =	0		
4	Enforce closed drawer for register operating?		Yes = 0 No = 1		
	Open drawer alarm is active?		Yes = 2 No = 0		
5	The number of seconds before the open drawer warning tone sounds (default is 30 seconds).		1-99		
6	Allow the post-tender function?		Yes = 0 No = 1		
	Drawer is opened on post tender?		Yes = 0 No = 2		
	Allow multiple receipts?		Yes = 0 No = 4		
7	Cash declaration is compulsory before report may be taken?		Yes = 1 No = 0		
	Allow negative balance sales in the X control lock position only?		Yes = 2 No = 0		
8	Allow zero balance sales in the X control lock position only?		Yes = 1 No = 0		
	Consecutive number is reset after a financial report?		Yes = 2 No = 0		
9	Grand total is reset after a Z Financial report?		Yes = 1 No = 0		
	Cash drawer will open when reports are run?		Yes = 0 No = 2		
	Open drawer during training mode?		Yes = 0 No = 4		
10	Decimal place : (0,1,2,3) default=2		0-3		
11	Date format is:	DDMMYY =	0(default)		
		MMDDYY =	1		
		YYMMDD =	2		

12	Percentage and Tax calculations will:	round up at 0.005 =	0(default)		
		always round up =	1		
		always round down =	2		
13	Split price calculations will:	round up at 0.005 =	0(default)		
		always round up =	1		
		always round down =	2		
14	Analysis procedure compulsory before tendering is allowed?		Yes = 1 No = 0		
	Hash is	non-add =	0		
		Normal=	2		
15	Reset the Financial report Z counter after a Z1 Financial report?		Yes = 1 No = 0		
	Reset the Time report Z counter after a Z1 Time report?		Yes = 2 No = 0		
	Reset the PLU report Z counter after a Z1 PLU report?		Yes = 4 No = 0		
16	Reset the Clerk report Z counter after a Z1 Clerk report?		Yes = 1 No = 0		
	Reset the Group report Z counter after a Z1 Group report?		Yes = 2 No = 0		
17	Reset the Daily sale report Z counter after a Z2 Daily sale report?		Yes = 1 No = 0		
	Paper sensor is enabled?		Yes = 0 No = 2		
	Split pricing is deactivated?		Yes = 4 No = 0		
18	Multiple preset PLU by entering the quantity?		Yes = 1 No = 0		
	Not Used				
19	The number of numeric digits: 0 is no limit		0-14		

20	Allow direct multiply by more than one digit?		Yes = 0 No = 1		
	Tender validation amount is:	amount tendered =	2		
		amount of sale =	0		
21	Display add price of linked item?		Yes = 1 No = 0		
	Allow sale when stock reaches "0"?		Yes = 0 No = 2		
	Allow Euro Rounding		Yes = 4 No = 0		
22	Not used				
	Allow Z stock report?		Yes = 2 No = 0		
24	Electronic Journal enable ?		Yes = 1 No = 0		
	Prompt operator when Electronic Journal is full		Yes = 0 No = 2		
	Stop operation when Electronic Journal is full		Yes = 4 No = 0		
25	Send only negative entries to Electronic Journal		Yes = 1 No = 0		
	Send reset report to Electronic Journal		Yes = 2 No = 0		
	Disable Cash Declaration?		Yes = 4 No = 0		
26	Table Management Clerk Interrupt	=	0		
		=	1		
	Overlay Descriptor not alpha code entry?		Yes = 0 No = 2		
	Do not totalise in void mode?		Yes = 4 No = 0		
27	Disable level keys:	Level1 =	1		
		Level2 =	2		
28	Price level is:	Pop-up after item =	0		
		Pop-up after sale =	1		
		Stay-down =	2		
29	Modifier is:	Pop-up after item =	0		
		Pop-up after sale =	1		
		Stay-down =	2		

<b>30</b>	Base Currency	Euro Home	1 0		
	Print Euro Amount Total		Yes = 2 No = 0		
	Print Euro Input Amount		Yes = 4 No = 0		
<b>31</b>	Print Euro Change		Yes = 1 No = 0		
	Don't Print in Void Mode		Yes = 2 No = 0		
	Don't Print Guest Check at Finalization		Yes = 4 No = 0		

---

## Print Option Programming

Refer to the “Print Option Table” to review the print options. Read each option carefully to determine if you wish to make any changes.

---


**NOTE:** **After** clearing memory all option settings are automatically set to 0, and because your most likely option selections require a status setting of 0, you do not need to program this section unless you wish to change the default status.

---

### ***Programming a Print Option:***

1. Turn the control lock to the **P** position.
2. Enter **4 0**, press the **SBTL** key.
3. Enter a print option address, press the **X/TIME** key.
4. Enter the number representing the status you have selected, or if there is more than one decision to be made in an address, add the values representing your choices for each decision and enter the sum. Press the **SBTL** key.
5. Repeat from step 3 for each print option that you wish to change.
6. Press the **CASH** key to end print option programming.

### ***Print Option Flowchart***

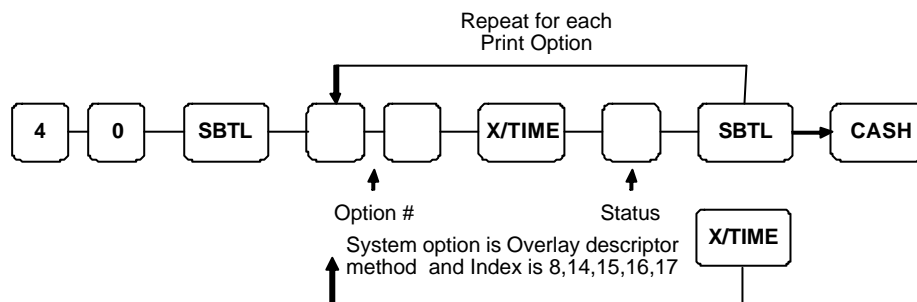

## Print Option Table

Address	PRINT OPTION	VALUE	=	SUM
1	Print media total on clerk report?	Yes = 1 No = 0		
	Print tax symbol?	Yes = 0 No = 2		
2	Void/Return totals will print on the Financial report ?	Yes = 0 No = 1		
	Audaction total will print on the Financial report ?	Yes = 2 No = 0		
3	Skip media totals with zero activity on the Financial report?	Yes = 0 No = 1		
	Skip media totals with zero activity on the Clerk report?	Yes = 0 No = 2		
	Print Clerk report at the end of the Financial report?	Yes = 4 No = 0		
4	Print PLU sale item number?	Yes = 1 No = 0		
	Print PLU with zero totals on report?	Yes = 2 No = 0		
	Subtotal is printed when the SBTL key is pressed?	Yes = 4 No = 0		
5	Print percentage of sales on the PLU report ?	Yes = 1 No = 0		
	Print consecutive number counter on receipt?	Yes = 0 No = 2		
6	Print date on receipt?	Yes = 0 No = 1		
	Print time on receipt?	Yes = 0 No = 2		
	Print machine number on receipt?	Yes = 0 No = 4		
7	Print clerk name on receipt?	Yes = 0 No = 1		
	Print Z counter on reports?	Yes = 0 No = 2		
8	Home Currency symbol (see note1 below)	? default		
9	Print receipt when sign on/off?	Yes = 1 No = 0		
	Print Grand total on the X Financial report?	Yes = 0 No = 2		
	Print Grand total on the Z Financial report?	Yes = 0 No = 4		
10	Print Gross total on the X Financial report?	Yes = 0 No = 1		
	Print Gross total on the Z Financial report?	Yes = 0 No = 2		



Address	PRINT OPTION		VALUE	=	SUM
11	Print the subtotal without tax on the receipt?		Yes = 1 No = 0		
	Tax amount to print on receipt is:	combine =	2		
		itemize =	0		
12	Print the tax amount on receipt?		Yes = 0 No = 1		
	Print taxable totals?		Yes = 2 No = 0		
	Print the tax rate?		Yes = 4 No = 0		
13	Print a breakdown of the VAT eligible sale?		Yes = 1 No = 0		
	Print training mode message on the receipt during training mode operations?		Yes = 0 No = 2		
14	Currency Symbol: (see note2 below)	CONV. #1 =	<b>Euro</b>		
15		CONV. #2 =	.		
16		CONV. #3 =	.		
17		CONV. #4 =	.		
	Print the KP order number on receipt.		Yes = 0 No = 1		
	Print the item's price on the kitchen printer requisition?		Yes = 2 No = 0		
19	Print registrations in void mode on the kitchen printer requisition?		Yes = 0 No = 1		
	Print registrations in training mode on the kitchen printer requisition?		Yes = 2 No = 0		
20	Combine like items on the kitchen printer?		Yes = 0 No = 1		
	Consolidation of like items on check track?		Yes = 0 No = 2		
	Chooses volume unit when the PLU is gallonage.	gallons =	0		
		litres =	4		
21	Print preamble message on receipt?		Yes = 0 No = 1		
	Print postamble message on receipt?		Yes = 0 No = 2		
	Print preamble message on the guest check?		Yes = 4 No = 0		
22	Print postamble message on the guest check?		Yes = 1 No = 0		
	Do not print pre/postamble message on the journal receipt?		Yes = 0 No = 2		

<b>23</b>	Print average items per customer on the Financial report?		Yes = 0 No = 1		
	Print average sales per customer on the Financial report?		Yes = 0 No = 2		
<b>24</b>	Issue a second receipt for the same transaction?		Yes = 1 No = 0		
	Priority print by group on the kitchen printer?		Yes = 2 No = 0		
	Print the PLU number and descriptor on the receipt?		Yes = 4 No = 0		
<b>25</b>	Not Print when polling reports?		Yes = 1 No = 0		
	Print PLU# on PLU report?		Yes = 2 No = 0		
	Grand total is:	net sale =	0		
		gross sale =	4		
<b>26</b>	Print journal font	small =	0		
		normal =	1		
	Print journal reverse?		Yes = 2 No = 0		
	Receipt mode use?		Yes = 0 No = 4		
<b>27</b>	Send order to the kitchen printer when the SBTL key is pressed?		Yes = 1 No = 0		
	Print date on hard check?		Yes = 2 No = 0		
<b>28</b>	Pre Print graphic logoon receipt?		Yes = 1 No = 0		
	Post Print graphic logo on receipt?		Yes = 2 No = 0		
<b>29</b>	Pre Print graphic logoon the guest check?		Yes = 1 No = 0		
	Post Print graphic logo on the guest check?		Yes = 2 No = 0		
<b>30</b>	Print pre- logo	Default =	0		
		User =	1		
	Not Used				
<b>31</b>	Number of Pre-feeding lines on receipt.		0-5		
<b>32</b>	Number of Post-feeding lines on receipt.		0-5		

<b>33</b>	Reserved			
	Suppress bitmap in PGM and X/Z Mode	Yes = 0 No = 2		
	Suppress printing of last report date	Yes = 4 No = 0		
<b>34</b>	Print Group Details on receipt	Yes = 1 No = 0		
	Two line print on KP	Yes = 2 No = 0		

---

NOTE 1: Print Option# 8 - Users outside of the USA can designate a different currency symbol. To select a different symbol enter three digit alpha character codes.

NOTE 2: Print Option# 14,15,16,17 - If you are using the currency conversion feature, you can select the appropriate symbol for each foreign currency you are accepting. To select a different symbol enter three digit alpha character codes.

---

---

## Function Key Programming

Three programs are used to program function keys;

- *Program 70* - is used to set each keys individual options
- *Program 80* - is used to program a 18 character alpha numeric descriptor
- *Program 90* - is used to set a high amount limit (HALO)

 
In this chapter you will find:

- General instructions for programs 70, 80 and 90.
- Specific programming instructions for each function key.


## Program 70 - Function Key Options

Use Program 70 to set options for function keys. Because of the differences inherent in function keys, individual options will be different. See the specific instructions for each key in this chapter to find the options for each key.

1. Turn the control lock to the **P** position.
2. To begin the program, enter **7 0**, press the **SBTL** key.



 3. Enter the values for the option digit or digits. Depending on the function key you are programming, you may enter up to six digits **N1** through **N6**. Determine the values for **N1** through **N6** by referring to the specific function key information that follows. (You do not need to enter preceding zeros.
4. For example, if the function key offers six digits, **N1** through **N6** and you are only selecting a value for **N6**, just enter the value for **N6**.) Press the function key you wish to program.



5. To program additional function keys, repeat from step 3, or press the **CASH** key to finalise the program.




## Program 80 - Function Key Descriptor

 ---


Program descriptors by entering three digit alpha character codes.

---


1. Turn the control lock to the **P** position.
2. To begin the program, enter **8 0**, press the **SBTL** key.



 
3. If you are programming alpha Overy



or,

 

 
4. To program additional function keys, repeat from step 3, or press the **CASH** key to finalise the program.




## Program 90 - Function Key HALO

Use Program 90 to program a high amount lock out (HALO) for a function key. Only specific keys require this program. For example, you can set a HALO for the **CASH**, **CHEQUE** or **CHARGE** keys. Refer to the specific function key programming information in this chapter to determine when the HALO option is available.

 1. Turn the control lock to the **P** position.
2. To begin the program, enter **9 0**, press the **SBTL** key.



 
3. Enter a HALO of up to eight digits, (or "0" for no HALO).



4. Press the function key on the keyboard you wish to program.




 5. To program additional function keys, repeat from step 2, or press the **CASH** key to finalise the program.



## ADD CHECK - Function Key Programs

### Options - Program 70

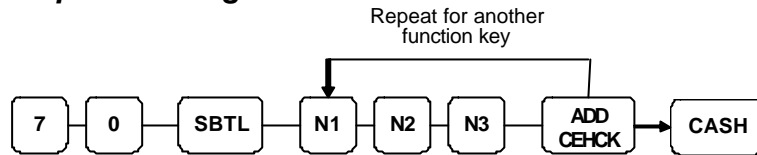

Address	OPTION	VALUE	=	SUM
N1	Key is inactive?	Yes = 1 No = 0		
	Compulsory before tendering?	Yes = 2 No = 0		
	Advance the consecutive # when this function is used?	Yes = 0 No = 4		
N2	Delete the pre/postamble when this function is used?	Yes = 0 No = 1		
	Exempt tax 1?	Yes = 2 No = 0		
	Exempt tax 2?	Yes = 4 No = 0		
N3	Exempt tax 3?	Yes = 1 No = 0		
	Exempt tax 4?	Yes = 2 No = 0		
	Validation is compulsory?	Yes = 4 No = 0		


### Descriptor

- Refer to "Program 80 – Function Key Descriptor"



# CANCEL - Function Key Programs

## Options - Program 70

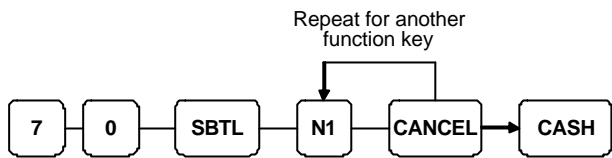

Address	OPTION	VALUE	=	SUM
N1	Key is inactive?	Yes = 1 No = 0		
	Key in active in X control lock position only?	Yes = 2 No = 0		
	Validation is compulsory ?	Yes = 4 No = 0		

## Descriptor


- Refer to “Program 80 – Function Key Descriptor”

## HALO

- Refer to “Program 90 – Function Key HALO ”

## CASH - Function Key Programs

### Options - Program 70

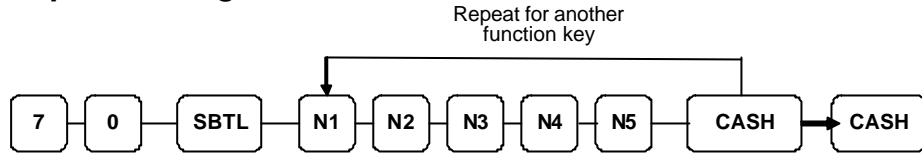

Address	OPTION	VALUE	=	SUM
N1	Amount tender is compulsory?	Yes = 1 No = 0		
	Allow over tendering and under tendering in <b>X</b> control lock position only?	Yes = 2 No = 0		
	Disable under tendering?	Yes = 4 No = 0		
N2	Open cash drawer?	Yes = 0 No = 1		
	Exempt tax 1?	Yes = 2 No = 0		
	Exempt tax 2?	Yes = 4 No = 0		
N3	Exempt tax 3?	Yes = 1 No = 0		
	Exempt tax 4?	Yes = 2 No = 0		
	Validation is compulsory?	Yes = 4 No = 0		
N4	Change Deduct From OWN TOTAL Cheque Charge 1 ~ Charge 8 =	0 1 2 ~ 9		
N5	Tender Total to OWN TOTAL Cheque Charge 1 ~ Charge 8 =	0 1 2 ~ 9		

### Descriptor

 
- Refer to "Program 80 – Function Key Descriptor"

### HALO

- Refer to "Program 90 – Function Key HALO"

## CHARGE1-8 - Function Key Programs

Repeat for another  
function key



Address	OPTION	VALUE	=	SUM
N1	Amount tender is compulsory?	Yes = 1 No = 0		
	Allow over tendering and under tendering in X control lock position only?	Yes = 2 No = 0		
	Disable under tendering?	Yes = 4 No = 0		
N2	Open cash drawer?	Yes = 0 No = 1		
	Allow over tendering?	Yes = 2 No = 0		
	Non-add # entry compulsory?	Yes = 4 No = 0		
N3	Exempt tax 1?	Yes = 1 No = 0		
	Exempt tax 2?	Yes = 2 No = 0		
	Exempt tax 3?	Yes = 4 No = 0		
N4	Exempt tax 4?	Yes = 1 No = 0		
	Validation compulsory?	Yes = 2 No = 0		
	Send to EFT? (not Uk)	Yes = 4 No = 0		
N5	EFT PORT (not UK)	0-1		

Continued.....

<b>N6</b>	Change Deduct From			
	OWN TOTAL	0		
	Cash	1		
	Cheque	2		
	If Charge1, From Charge 2,3,4,5,6,7,8	3 ~ 9		
	if Charge2, From Charge 1,3,4,5,6,7,8	3 ~ 9		
	if Charge3, From Charge 1,2,4,5,6,7,8	3 ~ 9		
	if Charge4, From Charge 1,2,3,5,6,7,8	3 ~ 9		
	if Charge5, From Charge 1,2,3,4,6,7,8	3 ~ 9		
	if Charge6, From Charge 1,2, 3,4,5,7,8	3 ~ 9		
	if Charge7, From Charge 1,2,3,4,5,6,8	3 ~ 9		
	if Charge8, From Charge 1,2,3,4,5,6,7	3 ~ 9		
<b>N7</b>	Tender Totaled To			
	OWN TOTAL	0		
	Cash	1		
	Cheque	2		
	If Charge1, From Charge 2,3,4,5,6,7,8	3 ~ 9		
	if Charge2, From Charge 1,3,4,5,6,7,8	3 ~ 9		
	if Charge3, From Charge 1,2,4,5,6,7,8	3 ~ 9		
	if Charge4, From Charge 1,2,3,5,6,7,8	3 ~ 9		
	if Charge5, From Charge 1,2,3,4,6,7,8	3 ~ 9		
	if Charge6, From Charge 1,2, 3,4,5,7,8	3 ~ 9		
	if Charge7, From Charge 1,2,3,4,5,6,8	3 ~ 9		
	if Charge8, From Charge 1,2,3,4,5,6,7	3 ~ 9		

### ***Descriptor***


- Refer to “Program 80 – Function Key Descriptor”

### ***HALO***

- Refer to “Program 90 – Function Key HALO”

## CHEQUE - Function Key Programs

### Options - Program 70

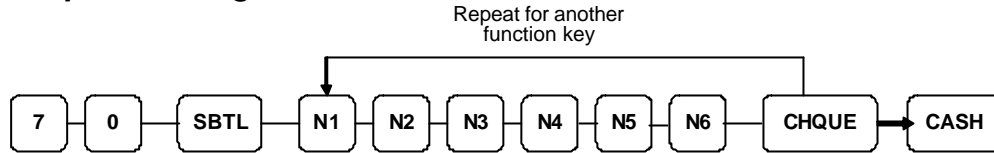

Address	OPTION	VALUE	=	SUM
N1	Amount tender is compulsory?	Yes = 1 No = 0		
	Allow over tendering and under tendering in X control lock position only?	Yes = 2 No = 0		
	Disable under tendering?	Yes = 4 No = 0		
N2	Open cash drawer?	Yes = 0 No = 1		
	Exempt tax 1?	Yes = 2 No = 0		
	Exempt tax 2?	Yes = 4 No = 0		
N3	Exempt tax 3?	Yes = 1 No = 0		
	Exempt tax 4?	Yes = 2 No = 0		
N4	Cheque endorsement compulsory?	Yes = 1 No = 0		
	Validation is compulsory?	Yes = 2 No = 0		
N5	Change Deduct From OWN TOTAL Cash Charge 1 ~ Charge 8 =	0 1 2 ~ 9		
N6	Tender Total to OWN TOTAL Cash Charge 1 ~ Charge 8 =	0 1 2 ~ 9		

### Descriptor


- Refer to "Program 80 – Function Key Descriptor"

## ***HALO***

- Refer to “Program 90 – Function Key HALO”

# CHEQUE CASHING - Function Key Programs

## Options - Program 70

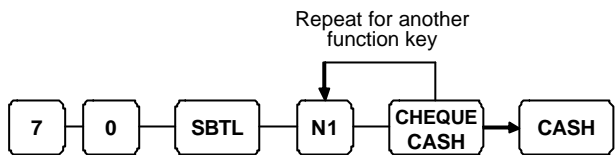

Address	OPTION	VALUE	=	SUM
N1	Key is inactive?	Yes = 1 No = 0		
	Key in active in X control lock position only?	Yes = 2 No = 0		
	Validation is compulsory ?	Yes = 4 No = 0		

### Descriptor


- Refer to “Program 80 – Function Key Descriptor”

### HALO

- Refer to “Program 90 – Function Key HALO”

## CHEQUE ENDORSEMENT - Function Key Programs

### Options - Program 70

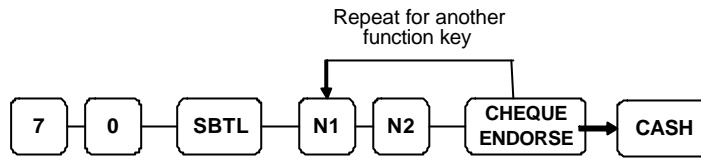

Address	OPTION	VALUE	=	SUM
N1	Key is inactive?	Yes = 1 No = 0		
	Print the amount of the cheque and endorsement message?	Yes = 2 No = 0		
	Print date?	Yes = 0 No = 4		
N2	Print time?	Yes = 0 No = 1		
	Print clerk?	Yes = 0 No = 2		
	Print consecutive number?	Yes = 0 No = 4		


### Descriptor

- Refer to "Program 80 – Function Key Descriptor"



## CHECK # - Function Key Programs

### Options - Program 70

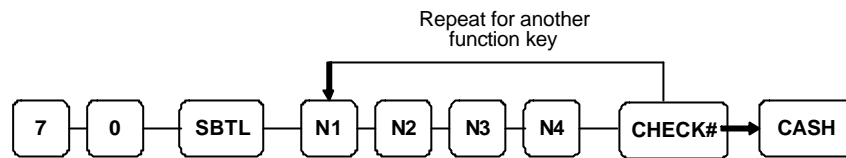

Address	OPTION	VALUE	=	SUM
N1	Key is inactive?	Yes = 1 No = 0		
	Before registering, begin a tracking number?	Yes = 2 No = 0		
	Opening clerk has exclusive access?	Yes = 4 No = 0		
N2	Check track # and balance will print on receipt?	Yes = 0 No = 1		
	Check track # and balance will print on remote?	Yes = 0 No = 2		
	Allow only one check per table?	Yes = 4 No = 0		
N3	Check# is automatically assigned by register?	Yes = 1 No = 0		
	PBAL key is used Drive thru recall key?	Yes = 2 No = 0		
N4	Length of Check(0-9)	0-9		


### Descriptor

 - Refer to "Program 80 – Function Key Descriptor"


## CURRENCY CONVERSION - Function Key Programs

### *Currency Conversion Rate - Program 90*

1. Turn the control lock to the **P** position.
2. To begin the program, enter **9 0**, press the **SBTL** key.




3. Enter the exchange rate of up to 7 digits (do not enter the decimal point), then enter a number from 0 to 7 to indicate the decimal position. See "Currency Exchange Rate Programming Examples" below.

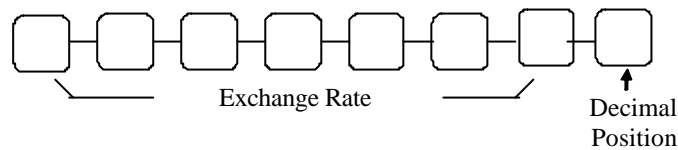

4. Press the function key on the keyboard you wish to program.



 5. To program additional function keys, repeat from step 2, or press the **CASH** key to finalise the program.




### *Currency Exchange Rate Programming Examples*

---

Note: Foreign currency exchange rates may be stated as "foreign currency in euros ". Use the rate stated in "Sterling in foreign currency" when you are programming this section.


---

The £1.00 is worth 63 Euros (foreign currency).

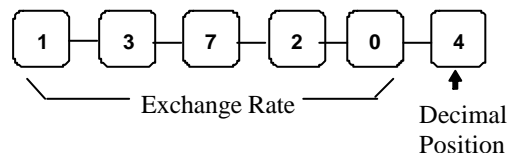

# ANALYSIS - Function Key Programs

## Options - Program 70

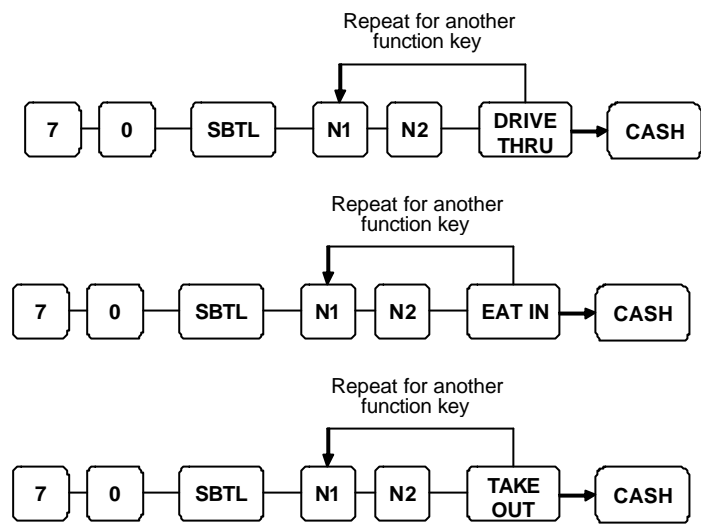


Address	OPTION	VALUE	=	SUM
N1	Exempt tax 1?	Yes = 1 No = 0		
	Exempt tax 2?	Yes = 2 No = 0		
	Exempt tax 3?	Yes = 4 No = 0		
N2	Exempt tax 4?	Yes = 1 No = 0		
	Validation is compulsory ?	Yes = 2 No = 0		

### Descriptor

- Refer to “Program 80 – Function Key Descriptor”

## ERROR CORRECT - Function Key Programs

### Options - Program 70

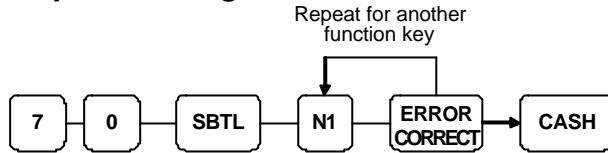

Address	OPTION	VALUE	=	SUM
N1	Key is inactive?	Yes = 1 No = 0		
	Key in active in X control lock position only?	Yes = 2 No = 0		
	Validation is compulsory?	Yes = 4 No = 0		

### Descriptor


- Refer to “Program 80 – Function Key Descriptor”

### HALO

- Refer to “Program 90 – Function Key HALO”

## F/S SUB - Function Key Programs

### Options - Program 70

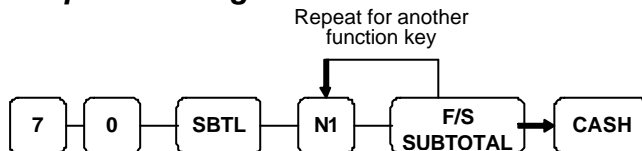


Address	OPTION	VALUE	=	SUM
N1	Key is inactive?	Yes = 1 No = 0		

### Descriptor

- Refer to “Program 80 – Function Key Descriptor”

## F/S TEND - Function Key Programs

### Options - Program 70

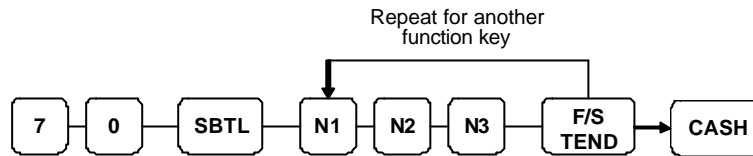

Address	OPTION	VALUE	=	SUM
N1	Exempt tax 1?	Yes = 1 No = 0		
	Exempt tax 2?	Yes = 2 No = 0		
	Exempt tax 3?	Yes = 4 No = 0		
N2	Exempt tax 4?	Yes = 1 No = 0		
	The tender is allowed in any amount?	Yes = 2 No = 0		
	Food stamp change is issued in	Cash = 4		
		Food stamps = 0		
N3	Open cash drawer?	Yes = 0 No = 1		
	Validation is compulsory ?	Yes = 2 No = 0		

### Descriptor


- Refer to "Program 80 – Function Key Descriptor"

### HALO

- Refer to "Program 90 – Function Key HALO"

## GUEST - Function Key Programs

### Options - Program 70

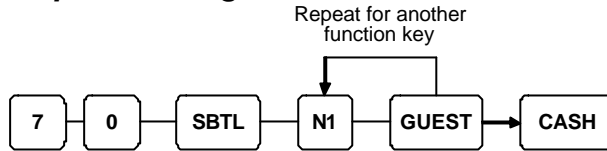


Address	OPTION	VALUE	=	SUM
N1	Guest # compulsory when you use guest check operation?	Yes = 1 No = 0		
	Before registering, enter a guest number?	Yes = 2 No = 0		
	Print Guest # at the kitchen printer and Bill?	Yes = 4 No = 0		

### Descriptor

- Refer to “Program 80 – Function Key Descriptor”

## PRICE LEVEL1-2 - Function Key Programs

### Options - Program 70

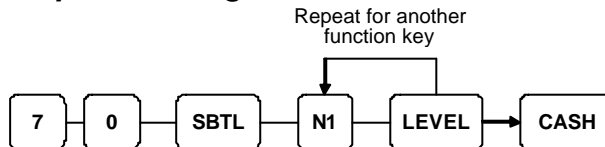


Address	OPTION	VALUE	=	SUM
N1	Print level description at the KP?	Yes = 0 No = 1		
	Key is active in X control lock	Yes = 2 No = 0		
	Print descriptor on guest check	Yes = 0 No = 4		
N2	Print descriptor on receipt	Yes = 0 No = 1		

### Descriptor

- Refer to “Program 80 – Function Key Descriptor”

## #/NO SALE - Function Key Programs


### Options - Program 70

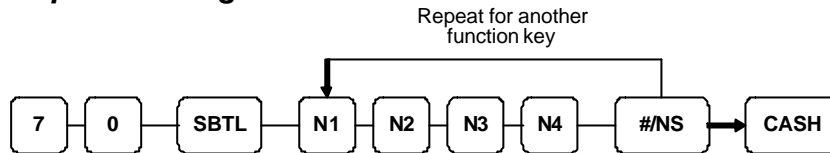


Address	OPTION	VALUE	=	SUM
<b>N1</b>	No Sale is inactive?	Yes = 1 No = 0		
	No Sale active in <b>X</b> control lock position only?	Yes = 2 No = 0		
	No Sale inactive after non-add # entry?	Yes = 4 No = 0		
<b>N2</b>	Enforce non-add # entry at start of sale?	Yes = 1 No = 0		
	Print when a NO SALE is performed?	Yes = 0 No = 2		
	Non-add # entries are prohibited?	Yes = 4 No = 0		
<b>N3</b>	Compulsory non-add entry must match number of digits set in the MAX DIGIT flag below?	Yes = 1 No = 0		
	Print non-add on guest check?	Yes = 2 No = 0		
<b>N4</b>	Enter maximum number of digits for non-add number entry. Zero(0) means no limit.	0-8		

### Descriptor - Programs 80 & 81

Since two distinct functions, # entry and no sale, reside on the same key, different programs are used to program each descriptor. To program the no sale descriptor:

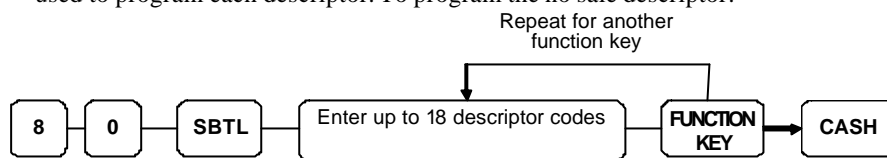


To program the # descriptor:

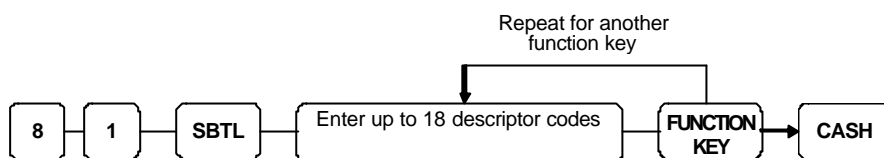



# RETURN - Function Key Programs

## Options - Program 70

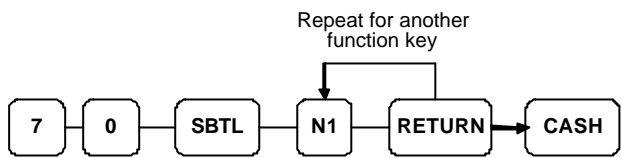

Address	OPTION	VALUE	=	SUM
N1	Key is inactive?	Yes = 1 No = 0		
	Key in active in X control lock position only?	Yes = 2 No = 0		
	Validation is compulsory ?	Yes = 4 No = 0		
N2	Add to Net Grand total on Financial/Clerk Report	Yes = 0 No = 1		

### Descriptor


- Refer to “Program 80 – Function Key Descriptor”

### HALO

- Refer to “Program 90 – Function Key HALO”


## LEVEL MODIFIER 1-5 - Function Key Programs

### Options - Program 70

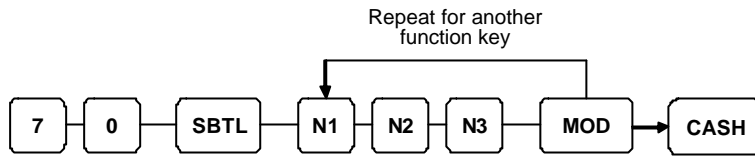

Address	OPTION	VALUE	=	SUM
N1	Key in active in <b>X</b> control lock position only?	Yes = 1 No = 0		
	Affect to modify the PLU?	Yes = 2 No = 0		
N2	Print modifier descriptor on the guest check?	Yes = 0 No = 1		
	Print modifier descriptor on the receipt?	Yes = 0 No = 2		
	Print modifier descriptor on the KP?	Yes = 0 No = 4		
N3	Value of affected digit(0-9)	0-9		

\* Affect Digit(1-14) of PLU#

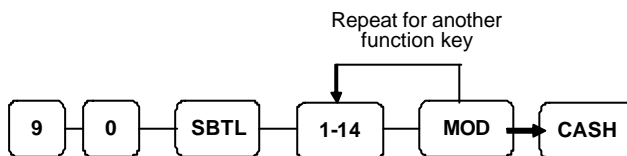


### Descriptor

- Refer to "Program 80 – Function Key Descriptor"

PAYMENT - Function Key Programs

Options - Program 70

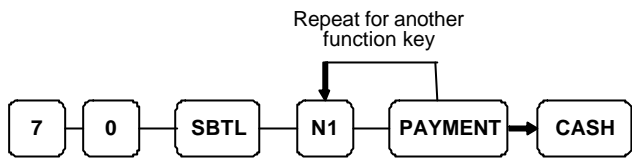


Address	OPTION	VALUE	=	SUM
N1	Require to close check?	Yes = 1 No = 0		

Descriptor

- Refer to “Program 80 – Function Key Descriptor”

PBAL - Function Key Programs

Options - Program 70

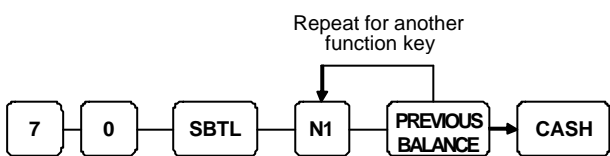


Address	OPTION	VALUE	=	SUM
N1	Previous balance may be entered at any time?	Yes = 1 No = 0		
	Previous balance required at the start of the sale?	Yes = 2 No = 0		

Descriptor

- Refer to “Program 80 – Function Key Descriptor”

## PROMOTION- Function Key Programs

### Options - Program 70

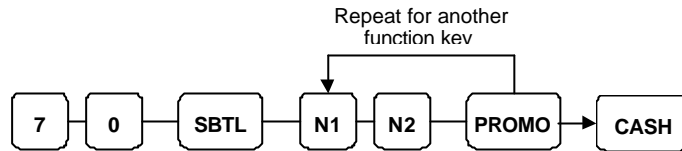


Address	OPTION	VALUE	=	SUM
N1	Key is inactive?	Yes = 1 No = 0		
	Key in active in <b>X</b> control lock position only?	Yes = 2 No = 0		
	Taxable by Tax 1	Yes = 4 No = 0		
N2	Taxable by Tax 2	Yes = 1 No = 0		
	Taxable by Tax 3	Yes = 2 No = 0		
	Taxable by Tax 4	Yes = 4 No = 0		

### Descriptor

- Refer to “Program 80 – Function Key Descriptor”

PRICE CHANGE - Function Key Programs

Options - Program 70

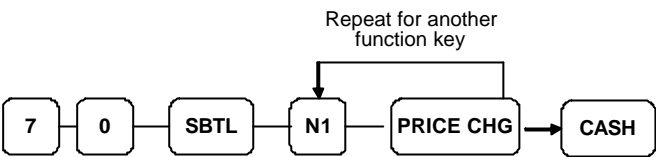


Address	OPTION	VALUE	=	SUM
N1	Key is inactive?	Yes = 1 No = 0		
	Key in active in X control lock position only?	Yes = 2 No = 0		

Descriptor

- Refer to “Program 80 – Function Key Descriptor”

## PRICE INQUIRE - Function Key Programs

### *Options - Program 70*

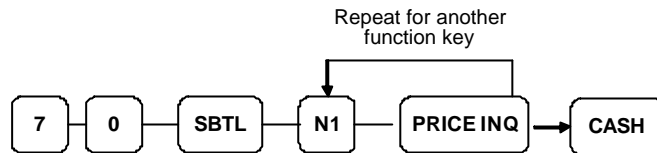


Address	OPTION	VALUE	=	SUM
N1	Pop up	0		
	Stay Down	1		
	Key in active in <b>X</b> control lock position only?	Yes = 2 No = 0		

### ***Descriptor***

- Refer to “Program 80 – Function Key Descriptor”

# STOCK INQUIRE - Function Key Programs

## Options - Program 70

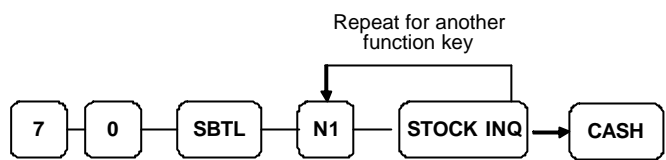


Address	OPTION	VALUE	=	SUM
N1	Pop up	0		
	Stay Down	1		
	Key in active in X control lock position only?	Yes = 2 No = 0		

### Descriptor

- Refer to “Program 80 – Function Key Descriptor”

## PAID OUT1-3 - Function Key Programs

### Options - Program 70

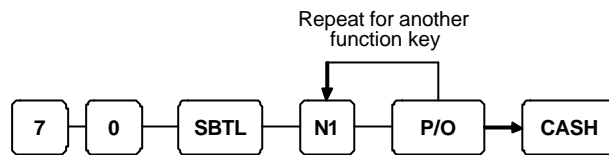

Address	OPTION	VALUE	=	SUM
N1	Key is inactive?	Yes = 1 No = 0		
	Key in active in <b>X</b> control lock position only?	Yes = 2 No = 0		
	Validation is compulsory?	Yes = 4 No = 0		


### Descriptor

- Refer to “Program 80 – Function Key Descriptor”



PRINT CHECK - Function Key Programs

Options - Program 70

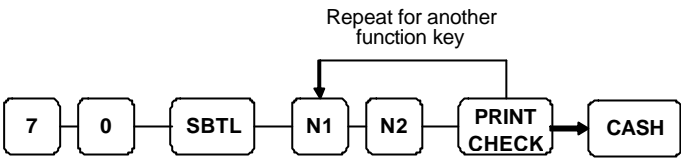


Address	OPTION	VALUE	=	SUM
N1	Print Check Port (0 – 1 )	0-1		
N2	This key is to automatically check?	Yes = 0 No = 1		
	Print Check On Receipt	Yes = 0 No = 2		
	Skip Print Check consecutive count of bill prints	Yes=4 No=0		

Descriptor

- Refer to “Program 80 – Function Key Descriptor”

## RECD ON ACCT1-3 - Function Key Programs

### *Options - Program 70*

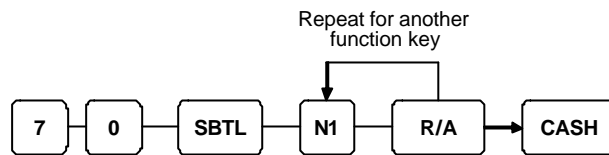

Address	OPTION	VALUE	=	SUM
N1	Key is inactive?	Yes = 1 No = 0		
	Key in active in X control lock position only?	Yes = 2 No = 0		
	Validation is compulsory?	Yes = 4 No = 0		

### ***Descriptor***


- Refer to “Program 80 – Function Key Descriptor”

### ***HALO***

- Refer to “Program 90 – Function Key HALO”

## SERVICE - Function Key Programs

### Options - Program 70

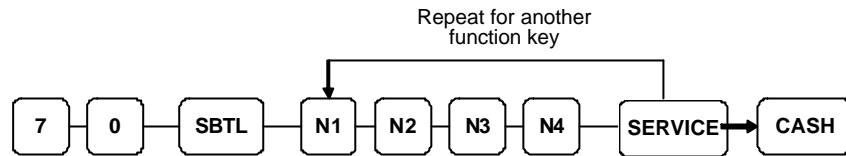


Address	OPTION	VALUE	=	SUM
N1	Compulsory non-add number before this key is used?	Yes = 1 No = 0		
	Print on receipt?	Yes = 0 No = 2		
	Allow negative balance in X control lock position only?	Yes = 4 No = 0		
N2	Calculate tax 1?	Yes = 0 No = 1		
	Calculate tax 2?	Yes = 0 No = 2		
	Calculate tax 3?	Yes = 0 No = 4		
N3	Calculate tax 4?	Yes = 0 No = 1		
	Validation is compulsory ?	Yes = 2 No = 0		
N4	Enter the port number if you are using a hard check system.	0-1		

### Descriptor

- Refer to “Program 80 – Function Key Descriptor”

## SUBTOTAL - Function Key Programs

### Options - Program 70

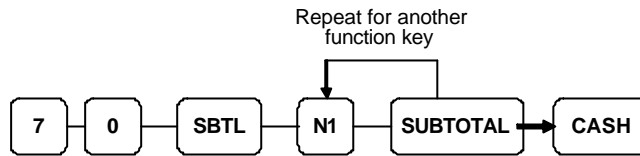


Address	OPTION	VALUE	=	SUM
N1	Key is inactive?	Yes = 1 No = 0		

### Descriptor

- Refer to "Program 80 – Function Key Descriptor"

## TABLE - Function Key Programs

### Options - Program 70

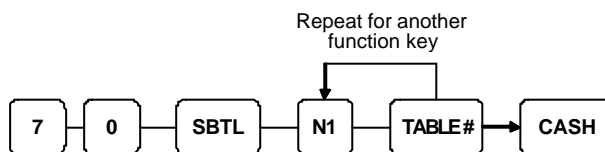


Address	OPTION	VALUE	=	SUM
N1	Table number entry compulsory before opening a new check?	Yes = 1 No = 0		
	Table number entry compulsory for all sales?	Yes = 2 No = 0		
	Print table# at the remote printer and guest check?	Yes = 4 No = 0		

### Descriptor

- Refer to "Program 80 – Function Key Descriptor"

# TAX EXEMPT - Function Key Programs

## Options - Program 70

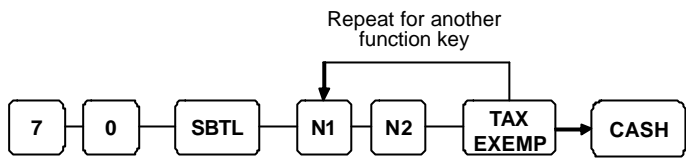


Address	OPTION	VALUE	=	SUM
N1	Exempt tax 1?	Yes = 1 No = 0		
	Exempt tax 2?	Yes = 2 No = 0		
	Exempt tax 3?	Yes = 4 No = 0		
N2	Exempt tax 4?	Yes = 1 No = 0		
	Compulsory non-add number before this key is used?	Yes = 2 No = 0		
	Validation is compulsory ?	Yes = 4 No = 0		

### Descriptor

- Refer to “Program 80 – Function Key Descriptor”

## TIP - Function Key Programs

### Options - Program 70

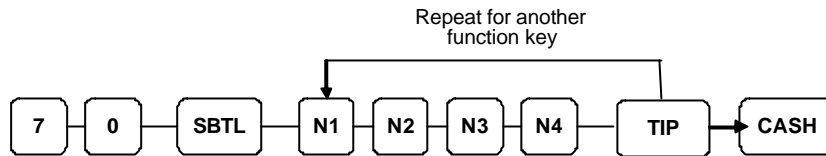


Address	OPTION		VALUE	=	SUM
N1	Type of tip is:	Percentage =	1		
		Amount =	0		
N2	Key is inactive?		Yes = 1 No = 0		
	Key in active in <b>X</b> control lock position only?		Yes = 2 No = 0		
	Add tax rate 1?		Yes = 4 No = 0		
N3	Add tax rate 2?		Yes = 1 No = 0		
	Add tax rate 3?		Yes = 2 No = 0		
	Add tax rate 4?		Yes = 4 No = 0		
N4	Add the tip total to the NET and GROSS sales total?		Yes = 1 No = 0		

### Descriptor

- Refer to "Program 80 – Function Key Descriptor"

# VALIDATE - Function Key Programs

## Options - Program 70

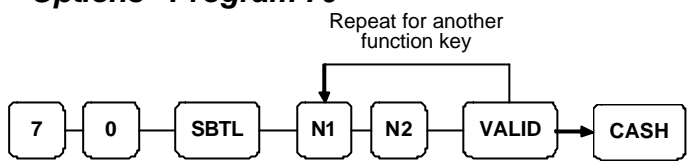


Address	OPTION	VALUE	=	SUM
N1	Enter output communication port.(0-1) Enter Zero if validation is no used.	0-1		
N2	Key is inactive?	Yes = 1 No = 0		
	Allow multiple validation?	Yes = 2 No = 0		

## Descriptor

- Refer to “Program 80 – Function Key Descriptor”

## VOID - Function Key Programs

### Options - Program 70

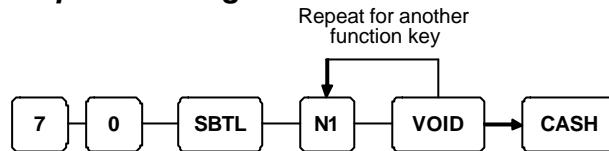

Address	OPTION	VALUE	=	SUM
N1	Key is inactive?	Yes = 1 No = 0		
	Key in active in <b>X</b> control lock position only?	Yes = 2 No = 0		
	Validation is compulsory?	Yes = 4 No = 0		

### Descriptor

- Refer to “Program 80 – Function Key Descriptor”


### HALO

- Refer to “Program 90 – Function Key HALO”



# WASTE - Function Key Programs

## Options - Program 70

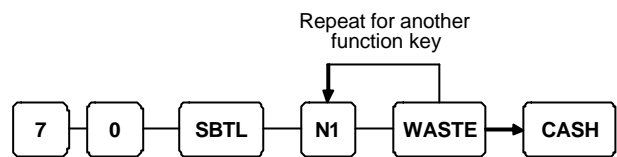

Address	OPTION	VALUE	=	SUM
N1	Key is inactive?	Yes = 1 No = 0		
	Key in active in X control lock position only?	Yes = 2 No = 0		
	Validation is compulsory ?	Yes = 4 No = 0		

### Descriptor


- Refer to “Program 80 – Function Key Descriptor”

### HALO

- Refer to “Program 90 – Function Key HALO”

## %1- %5 - Function Key Programs

### Options - Program 70

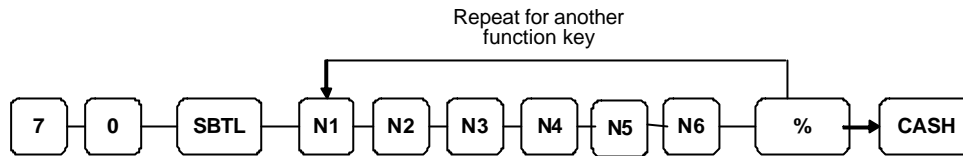


Address	OPTION		VALUE	=	SUM
N1	Apply an:	Amount =	1		
		Percentage =	0		
	Key is inactive?		Yes = 2 No = 0		
	% key is active in <b>X</b> control lock position only?		Yes = 4 No = 0		
N2	% key is:	Open =	0		
		Preset =	1		
	% key is:	Sale =	2		
		Item =	0		
	Allow % key override preset?		Yes = 4 No = 0		
N3	% key is: (Not allowed positive item amount)	Positive =	1		
		Negative =	0		
	% amount taxable tax 1?		Yes = 2 No = 0		
N4	% amount taxable tax 2?		Yes = 1 No = 0		
	% amount taxable tax 3?		Yes = 2 No = 0		
	% amount taxable tax 4?		Yes = 4 No = 0		
N5	Reduce (or increase) the food stamp subtotal by % entry?		Yes = 1 No = 0		
	Allow only one time subtotal entry?		Yes = 2 No = 0		
	Allow multiple amount coupons without pressing subtotal?		Yes = 4 No = 0		
N6	Allow % key preset override active in <b>X</b> control lock position only?		Yes = 1 No = 0		
	Validation is compulsory?		Yes = 2 No = 0		

**Descriptor**

- Refer to “Program 80 – Function Key Descriptor”

**HALO - Program 90**

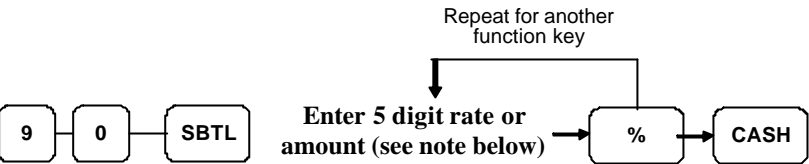

---

Note: If key is amount , enter 5 digit HALO, or 0 for no HALO. If key is percentage enter the percentage in a five-digit format, without the decimal (XX.XXX). For example: for 10%, enter 10000; for 5.55%, enter 05550; for 99.999%, enter 99999.

---

---


## Clerk Programming

 Clerks have the following programming options. These options are set through separate programs:


- *Program 800 - Secret Code programming* determines the code that is used for clerk sign on if a code entry sign on method is selected in system option #2 (See "System Option Programming")
- *Program 801 – Training Clerk Programming.* This allows the setting of a training clerk or alternative drawers.
- *Program 810 - Clerk Descriptor Programming* allows you to set a unique, up to 18 character, descriptor for each clerk

## Program 800 - Secret Code Programming


1. Turn the control lock to the **P** position.
2. To begin the program, enter **8 0 0**, press the **SBTL** key.



 3. Enter the number (**1-15**) of the clerk you wish to program; press the **X/TIME** key.



 4. Enter a secret code (up to 6 digits); press the **SBTL** key.




5. Repeat from step 3 for each clerk you wish to program. Press the **CASH** key to finalise the program.



## Program 801 - Clerk Status Programming

 1. Turn the control lock to the **P** position.
2. To begin the program, enter **8 0 1**, press the **SBTL** key.




3. Enter the number (**1-15**) of the clerk you wish to program; press the **X/TIME** key.



4. Enter an option digit from the table below, press the **SBTL** key.
5. Enter an option digit from the table below, press the **SBTL** key.

Address	OPTION	VALUE	=	SUM
<b>N1</b>	Drawer assignment (0: default drawer, 1: no drawer)	0-1		
<b>N2</b>	Training Clerk	Yes=1 No=0		

 

5. Repeat from step 3 for each clerk you wish to program. Press the **CASH** key to finalise the program.




## Program 810 - Descriptor Programming

 ---

Program descriptors by entering three digit alpha character codes.

---

1. Turn the control lock to the **P** position.
2. To begin the program, enter **8 1 0**, press the **SBTL** key.



3. Enter the number (**1-15**) of the clerk you wish to program; press the **X/TIME** key.



4. If you are programming using alpha overlay;

Type up to 18  
descriptor keys → X/TIME

or,

Enter up to 18  
three-character  
codes → SBTL

5. Press the **CASH** key to finalise the program.



---

## Mix & Match Programming

 
Mix & Match Tables have the following programming options. These options are set through separate programs:

- *Program 600 - Trip Level Programming*
- *Program 601 - Price Programming*
- *Program 610 - Mix & Match Descriptor Programming* allows you to set a unique, up to 18 character, descriptor for Mix & Match Table.



## Program 600 - Trip Level Programming

1. Turn the control lock to the **P** position.
2. To begin the program, enter **6 0 0**, press the **SBTL** key.



3. Enter the number of the M&M table you wish to program; press the **X/TIME** key.



4. Enter a level of up to 5 digits. (The Maximum Level you can enter is 50000) ; press the **SBTL** key.




5. Repeat from step 3 for each table you wish to program. Press the **CASH** key to finalise the program.




## Program 601 - Price Programming

 1. Turn the control lock to the **P** position.
2. To begin the program, enter **6 0 1**, press the **SBTL** key.



 3. Enter the number of the M&M table you wish to program; press the **X/TIME** key.



4. Enter a price (up to 7 digits); press the **SBTL** key.



5. Repeat from step 3 for each table you wish to program. Press the **CASH** key to finalise the program.


## Program 610 - Mix & Match Descriptor Programming

 ---

Program descriptors by entering three digit alpha character codes.

---


1. Turn the control lock to the **P** position.
2. To begin the program, enter **6 1 0**, press the **SBTL** key.




3. Enter the number of the M&M table you wish to program; press the **X/TIME** key.



 4. If you are programming using alpha overlay;



or,

 

5. Press the **CASH** key to finalise the program.



---


## Group Programming

 Group totals are available to accumulate totals of individual PLUs that are assigned to each group. Each PLU can be assigned to one, two or three different groups.


- Use program 900 to assign a group status, i.e. a group can be set to *not add* to the total of all groups, or a group can be used to designate like items for kitchen printer assignment.
- Use program 910 to assign a unique descriptor for each group, so that the group may be easily understood on the group report.

### **Programming Group Status - Program 900**

1. Turn the control lock to the **P** position.
2. To begin the program, enter **9 0 0**, press the **SBTL** key.




 3. Enter the number of the group you wish to program; press the **X/TIME** key.



4. Enter an option digit from the table below, press the **SBTL** key.

Address	OPTION	VALUE	= SUM
N1	Group total is added to the total of all group on the Group report?	Yes = 0 No = 1	
	Send to kitchen printer?	Yes = 2 No = 0	
N2	No Choice	0	
	KP PORT# : R(print a kitchen requisition)	1	
	KP PORT# : 1	2	
N3	Print RED on KP?	Yes = 1 No = 0	

 


5. To program additional groups, repeat from step 3, or press the **CASH** key to finalise the program.




### ***Programming Group Descriptors***

 
1. Turn the control lock to the **P** position.
2. To begin the program, enter **9 1 0**, press the **SBTL** key.



 
3. Enter the number (**1-20**) of the group you wish to program; press the **X/TIME** key.



4. If you are programming using alpha overlay;

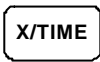Type up to 18  
descriptor keys → 

or,

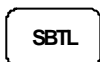Enter up to 18  
three-character  
codes → 

5. To program additional groups, repeat from step 3, or press the **CASH** key to finalise the program.



---


## Miscellaneous Programming
 
### Macro Key Sequence Programming

Macros are special function keys that are used to execute a sequence of key depressions. For example, a macro might be used to execute a string of reports or to automatically tender a preset amount. Up to ten different macros may be placed on the keyboard. (See "Function Key Assignment Programming" to place macros on the keyboard.)

#### *To Program a Macro*

1. Turn the control lock to the **P** position.
2. To begin the program, enter **1 5 0 0**, press the **SBTL** key.



3. Press the **Macro** key that you wish to program.



4. First, you must change the Mode Key. Default Mode is PGM Mode.

Therefore, If you want to start in REG Mode, you must change Mode key to REG Mode. Type up to 50 key strokes

Type up to 50 key strokes

5. Turn the control lock to the P position. Press the same **Macro** key to end the sequence



6. Repeat from step 3 - 5 to program additional macros. Press the **CASH** key to finalise the program.



#### *To remove a Macro*

 
If you wish to remove a key stroke from a macro, replace the current function with the INACTIVE function.

## Logo Descriptor Programming


### *Programming the Receipt/Check Endorsement Message*

A preamble message of up to six lines can be printed at the top of each receipt; a postamble message of up to six lines can be printed at the bottom of each receipt; an endorsement message of up to ten lines can be printed when a check is endorsed on an optional slip printer. Each line can consist of up to 32 characters.

1. Turn the control lock to the **P** position.
2. To begin the program, enter **7 0 0**, press the **SBTL** key.




 3. Refer to the chart below and enter the number that represents the line you wish to program; press the **X/TIME** key.




X	Message Line	X	Message Line
1	1 <sup>st</sup> line of Preamble	12	6 <sup>th</sup> line of Postamble
2	2 <sup>nd</sup> line of Preamble	13	1 <sup>st</sup> line of Endorsement
3	3 <sup>rd</sup> line of Preamble	14	2 <sup>nd</sup> line of Endorsement
4	4 <sup>th</sup> line of Preamble	15	3 <sup>rd</sup> line of Endorsement
5	5 <sup>th</sup> line of Preamble	16	4 <sup>th</sup> line of Endorsement
6	6 <sup>th</sup> line of Preamble	17	5 <sup>th</sup> line of Endorsement
7	1 <sup>st</sup> line of Postamble	18	6 <sup>th</sup> line of Endorsement
8	2 <sup>nd</sup> line of Postamble	19	7 <sup>th</sup> line of Endorsement
9	3 <sup>rd</sup> line of Postamble	20	8 <sup>th</sup> line of Endorsement
10	4 <sup>th</sup> line of Postamble	21	9 <sup>th</sup> line of Endorsement
11	5 <sup>th</sup> line of Postamble	22	10 <sup>th</sup> line of Endorsement

 4. If you are programming using alpha overlay;



or,

 


5. Press the **CASH** key to finalise the program.




### ***Programming the Financial Report Message***

 The Financial Report selection allows you to reprogram the descriptors that appear with the Financial Report totals and counters. For example, the first total on the financial report "+PLU TTL" represents the total of all positive PLU entries. You might wish to re-label this total to say "FOOD SALES". You can reprogram any of the Financial Report totals listed here with any 18-character descriptor. (See "Financial Report Message").


1. Turn the control lock to the **P** position.
2. To begin the program, enter **7 0 1**, press the **SBTL** key.



 
3. Refer to the chart below and enter the number that represents the line you wish to program; press the **X/TIME** key.



 4. If you are programming using alpha overlay;



or,

 

5. Press the **CASH** key to finalise the program



## ***Financial Report Message***

 


<b>X</b>	<b>Message Line</b>	<b>X</b>	<b>Message Line</b>	<b>X</b>	<b>Message Line</b>
1	+PLU TTL	32	CREDIT TAX 3	6	CHG1 SALES
2	-PLU TTL	33	CREDIT TAX 4	7	CHG2 SALES
3	ADJST TTL	34	FD/S CREDIT	8	CHG3 SALES
4	NONTAX	35	RETURN	9	CHG4 SALES
5	TAX1 SALES	36	ERROR CORR	0	CHG5 SALES
6	TAX2 SALES	37	PREVIOUS VD	1	CHG6 SALES
7	TAX3 SALES	38	VOID MODE	2	CHG7 SALES
8	TAX4 SALES	39	CANCEL	3	CHG8 SALES
9	TAX1	40	GROSS SALES	4	FOREIGN 1
10	TAX2	41	CASH SALES	5	FOREIGN 2
11	TAX3	42	CHECK SALES	6	FOREIGN 3
12	TAX4	43	R/A 1	7	FOREIGN 4
13	NET TAX 1	44	R/A 2	8	DRWR TTL
14	NET TAX 2	45	R/A 3	9	PROMO
15	NET TAX 3	46	P/O 1	0	WASTE
16	NET TAX 4	47	P/O 2	1	TIP
17	XMPT1 SALES	48	P/O 3	2	TRAIN TTL
18	XMPT2 SALES	49	HASH TTL	3	BAL FORWARD
19	XMPT3 SALES	50	AUDACTION	4	GUESTS
20	XMPT4 SALES	51	NOSALE	5	P/BAL
21	ANALYSIS 2	52	CASH-IN-D	6	CHECKS PAID
22	ANALYSIS 3	53	CHECK-IN-D	7	SERVICE
23	ANALYSIS 1	54	FD/S-IN-D	8	MIX&MATCH
24	% 1	55	CHG1-IN-D	9	PLU LEVEL1 TTL
25	% 2	56	CHG2-IN-D	0	PLU LEVEL2 TTL
26	% 3	57	CHG3-IN-D	1	MOD 1 TTL
27	% 4	58	CHG4-IN-D	2	MOD 2 TTL
28	% 5	59	CHG5-IN-D	3	MOD 3 TTL
29	NET SALE	60	CHG6-IN-D	4	MOD 4 TTL
30	CREDIT TAX1	61	CHG7-IN-D	5	MOD 5 TTL
31	CREDIT TAX2	62	CHG8-IN-D	6	


### ***Programming the Clerk Report Message***

The Clerk Report selection allows you to reprogram the descriptors that appear with the Clerk Report totals and counters. For example, the first total on the clerk report "NET SALES" might be re-labeled to say "GROSS SALES". You can reprogram any of the Financial Report totals listed here with any 18-character descriptor. (See "Clerk Report Message").


1. Turn the control lock to the **P** position.
2. To begin the program, enter **7 1 0**, press the **SBTL** key.



 
3. Refer to the chart below and enter the number that represents the line you wish to program; press the **X/TIME** key.



 4. If you are programming using alpha overlay;



or,

 

5. Press the **CASH** key to finalise the program.




### ***Clerk Report Message***
 
<b>X</b>	<b>Message Line</b>	<b>X</b>	<b>Message Line</b>	<b>X</b>	<b>Message Line</b>
<b>1</b>	NET SALE	<b>25</b>	CREDIT TAX3	<b>49</b>	CHG4 SALES
<b>2</b>	NONTAX	<b>26</b>	CREDIT TAX4	<b>50</b>	CHG5 SALES
<b>3</b>	TAX1 SALES	<b>27</b>	FD/S CREDIT	<b>51</b>	CHG6 SALES
<b>4</b>	TAX2 SALES	<b>28</b>	RETURN	<b>52</b>	CHG7 SALES
<b>5</b>	TAX3 SALES	<b>29</b>	ERROR CORR	<b>53</b>	CHG8 SALES
<b>6</b>	TAX4 SALES	<b>30</b>	PREVIOUS VD	<b>54</b>	FOREIGN 1
<b>7</b>	TAX1	<b>31</b>	VOID MODE	<b>55</b>	FOREIGN 2
<b>8</b>	TAX2	<b>32</b>	CANCEL	<b>56</b>	FOREIGN 3
<b>9</b>	TAX3	<b>33</b>	GROSS SALES	<b>57</b>	FOREIGN 4
<b>10</b>	TAX4	<b>34</b>	CASH SALES	<b>58</b>	DRWR TTL
<b>11</b>	XMPT1 SALES	<b>35</b>	SALES	<b>59</b>	PROMOTION
<b>12</b>	XMPT2 SALES	<b>36</b>	R/A 1	<b>60</b>	WASTE
<b>13</b>	XMPT3 SALES	<b>37</b>	R/A 2	<b>61</b>	TIP
<b>14</b>	XMPT4 SALES	<b>38</b>	R/A 3	<b>62</b>	TRAIN TTL
<b>15</b>	ANALYSIS 2	<b>39</b>	P/O 1	<b>63</b>	BAL FORWARD
<b>16</b>	ANALYSIS 3	<b>40</b>	P/O 2	<b>64</b>	GUESTS
<b>17</b>	ANALYSIS 1	<b>41</b>	P/O 3	<b>65</b>	P/BAL
<b>18</b>	% 1	<b>42</b>	HASH TTL	<b>66</b>	CHECKS PAID
<b>19</b>	% 2	<b>43</b>	CASH-IN-D	<b>67</b>	SERVICE
<b>20</b>	% 3	<b>44</b>	CHEQUE-IN-D	<b>68</b>	NOSALE
<b>21</b>	% 4	<b>45</b>	FD/S-IN-D	<b>69</b>	MIX&MATCH
<b>22</b>	% 5	<b>46</b>	CHG1 SALES	<b>70</b>	PLU LEVEL 1 TTL
<b>23</b>	CREDIT TAX1	<b>47</b>	CHG2 SALES	<b>71</b>	PLU LEVEL 2 TTL


### ***Programming the Macro Name***

Up to ten function locations may be designated as Macro keys. You may wish to program a name for a macro. For example if a macro executes a series of commands to produce daily reports, you can program the descriptor “DAILY”, so the macro can easily be identified. Macro names can also be helpful when looking at keyboard layout information with the PC communication utility.


1. Turn the control lock to the **P** position.
2. To begin the program, enter **7 1 1**, press the **SBTL** key.



 
3. Refer to the chart below and enter the number that represents the line you wish to program; press the **X/TIME** key.



 4. If you are programming using alpha overlay;



or,

 

5. Press the **CASH** key to finalise the program.


## NLU Code Number Programming

 NLU are fixed keys on the keyboard (like traditional department keys) that access specific PLUs.


On the default keyboard, there are 12 NLU keys and the PLU# assigned to the NLU key is the same, i.e. NLU key number one is PLU #1. However, with this program, you can assign any PLU number you wish to any one of the 12 possible NLU keys.

### *Programming the NLU Code Number*

1. Turn the control lock to the **P** position.
2. To begin the program, enter **1 0 0 0**, press the **SBTL** key.



 3. Type the new PLU code number you wish to use for this NLU key, and Press the NLU key on the keyboard you wish to program, and Press the NLU key again.



4. Press **CASH** to finalise the program




## Cash-In-Drawer Limit Programming.

 
A Cash-In-Drawer limit can be programmed so that a warning appears on screen when the limit is exceeded. Pressing the **CLEAR** key will remove the error. The operator should carry out a Paid Out operation to reduce the Cash-in-drawer amount.

### *Programming the Drawer Limit*

1. Turn the control lock to the **P** position.
2. To begin the program, enter **1 1 0 0**, press the **SBTL** key.



 3. Enter a cash-in-drawer limit (up to 8 digits or **0** for no limit); press the **X/TIME** key.



4. Press the **CASH** key to finalise the program.




## Cheque Change Limit Programming

 
Use this program to set the maximum amount of cash that can be returned when a cheque is tendered for an amount greater than the amount of the sale. For example, if the cheque change limit is £10.00 the maximum amount that can be tendered into the cheque key on a £5.00 sale is £15.00.

### *Programming the Cheque Change Limit*

1. Turn the control lock to the **P** position.
2. To begin the program, enter **1 2 0 0**, press the **SBTL** key.



 3. Enter a cash-in-drawer limit (up to 8 digits or **0** for no limit); press the **X/TIME** key.



4. Press the **CASH** key to finalise the program.




## Date and Time Programming

 
Use this program to set the clock and calendar on your ER380. The date changes automatically. After initial setting, time changing will probably be required only for beginning and ending daylight savings time.

### *Programming the Date and Time*


1. Turn the control lock to the **P** position.
2. To begin the program, enter **1 3 0 0**, press the **SBTL** key.



 3. Enter time in military standard time (based on 24 hours), must be four digits (i.e. 1300 hours = 1:00 PM); press the **X/TIME** key.



 4. Enter the date in MM(month) DD(day) and YY(year) format. Press the **X/TIME** key:



5. Press the **CASH** key to finalise the program.






## Machine Number Programming

 The machine number is printed on the register receipt. Program a machine number so that any receipt can be identified with the store or register where the transaction took place.

### *Programming the Machine Number*

1. Turn the control lock to the **P** position.
2. To begin the program, enter **1 6 0 0**, press the **SBTL** key.



3. Enter a machine number (up to 5 digits); press the **X/TIME** key.




4. Press the **CASH** key to finalise the program.



## Training Mode Password

 If you wish to use training mode, you must program a password that you will use to enter training mode. The password may be up to 4 digits long, however, if you choose to use a password less than 4 digits, you must enter preceding zeros to complete a 4 digit entry. For example, if you program the password to be "77", you must type "0077" when entering training Programming the Check Change Limit

1. Turn the control lock to the **P** position.
2. To begin the program, enter **18 0 0**, press the **SBTL** key.



3. Enter a 4-digit password and press the **X/TIME** key.




4. Press the **CASH** key to finalise the program.



## EURO Rounding Programming

 
1. Turn the control lock to the **P** position.
2. To begin the program, enter **1 9 0 0**, press the **SBTL** key.



2. Enter the number (1-9) or (1-99) of End. To finalize the program, Enter 9 or 99.  
Press the **X/TIME** key.



 
3. Enter the number (1-10) or (1-100) of the value. To finalize the program, Enter 10 or 100. Press the **X/TIME** key.




4. When you program all successfully, The program automatically ends.

## MACRO Schedule Programming

 
1. Turn the control lock to the **P** position.
2. To begin the program, enter **2000**, press the **SBTL** key.



 3. Press the **MACRO** key you want to program.




 4. Enter the scheduled time value, press the **X/TIME** key. If 10:35, enter 1035 and press X/TIME. Enter 0 for No use.



5. Repeat steps 3 – 4 if you want to program more macro schedules. Default scheduled macro count is 5.

 6. Press the **CASH** key to finalise the program




---

## Program Scans

 Since much time and energy has been invested in the planning and programming of your *ER-380*, it is advisable to print a hard copy of the final program for future reference. This copy should be kept in a safe place.


1. Turn the control lock to the **P** position.
2. To print a program scan, enter **1 5**, press the **SBTL** key.



3. In this step, there are three different ways to scan program information. One is PLU, the other is Macro, The third is Others.

### PLU PROGRAM SCAN

 
To read one PLU program information, enter the number (1-1000) of the PLU and press the same number and **PLU** key.



Press a PLU key on the keyboard and press same key again.



 To read multiple PLU program information, enter the first number and press PLU key. Press the last number and press PLU key.




Press a PLU key on the keyboard .




### MACRO PROGRAM SCAN

 To read MACRO information, press the MACRO key to be scanned,



Refer to the chart below and enter a digit to represent the segment of the program you wish to print; press the **X/TIME** key. To program additional scan, repeat this operation.

## OTHERS PROGRAM SCAN

 

X	Program	X	Program
0	Group	11	Macro Name
1	Tax	12	Drawer Limit
2	System option	13	Cheque Change Limit
3	Print option	14	Time & Date
4	Function keys	15	Tare Weight
5	Clerk	16	Machine Number
6	Preamble message	17	Mix & Match
7	Postamble message	18	Scheduled Macro
8	Endorsement message	19	Euro Rounding
9	Financial Report message	20	All Function Keyboard Scan
10	Clerk Report message		

4. Press the **CASH** key to finalise the program.



