

 
QUICK START GUIDE



1. REMOVE BACK COVER




2. INSERT SIM CARDS AND MEMORY CARD

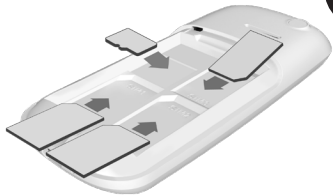

EN

 3. INSERT BATTERY

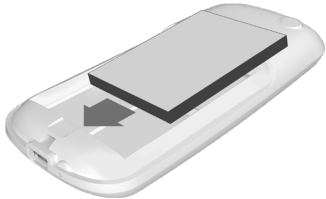

4. CHARGE FOR 8 HOURS BEFORE
TURNING ON.



5. TURN CELL PHONE ON AND
WAIT FOR INITIAL SETUP



6. MULTIMEDIA PLAYER



CONNECT PHONE TO COMPUTER VIA USB
CABLE TO TRANSFER MUSIC



PLUG EARPHONES TO AND PRESS
PLAY [►||] BUTTON TO ENJOY YOUR
FAVORITE MUSIC

7. LED LIGHT



PRESS AND HOLD THE CENTER BUTTON
TO TURN ON AND OFF THE LED LIGHT

USER
MANUAL

ZUM^{P130}



EN

pārla™

INTRODUCING YOUR MOBILE PHONE

Learn about your mobile phone's layout, keys, display and icons.

UNPACKING

Check the product box for the following items:

Mobile phone

Battery

 
Travel adapter (charger)

User manual

The supplied accessories perform best for your phone.

PHONE LAYOUT

From the front view of your phone you will observe the following elements:

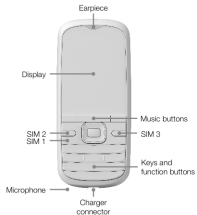

From the back view of your phone you will observe the following elements:



KEYS

The following table offers you a quick description about the phone's keys:

TECLA	Função.
FUNÇÃO	Executar a ação indicada na parte inferior da tela.
NAVEGAÇÃO	Em modo de espera, você pode acessar as funções definidas pelo usuário. No modo de Menu, percorre as opções de menu.
BOTÃO CENTRAL	Em modo de espera, pressione e segure o botão para ligar a lanterna. No modo de Menu, selecione a opção de menu realçada ou confirmar uma ação.
LIGAR SIM 1	Abre a lista de chamadas recentes ou fazer uma chamada para o número apresentado. Você pode atender uma chamada.

LIGAR SIM 2	Abre a lista de chamadas recentes ou fazer uma chamada para o número apresentado. Você pode atender uma chamada.
LIGAR SIM 3	Abre a lista de chamadas recentes ou fazer uma chamada para o número apresentado. Você pode atender uma chamada.
DESLIGAR	Termina uma chamada ou rejeitar uma chamada recebida. Segure por 3 segundos para ligar ou desligar o telefone.
0123.....9	Digite números, texto e / ou caracteres especiais.
#	Segure 3 segundos para mudar o perfil de som para vibrar.

pārla™

PREPARING YOUR MOBILE PHONE

Get started setting up your mobile phone for its first use.

INSERT SIM AND BATTERY

When you subscribe to a cellular service, you will receive a Subscriber Identity Module (SIM) card, with subscription details, such as your personal identification number (PIN) and optional services.

 
To install the SIM card and battery,

1. Remove the battery cover.



2. Insert SIM cards.

Your phone has 3 SIM card slots to allow you use 3 SIM cards and switch between them.

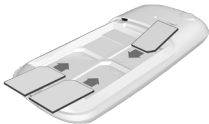

- Place the SIM card in the phone with the gold- colored contacts facing down..
- Without inserting a SIM card, you can use your phone's non-network services and some menus.

3. Insert the battery.



4. Replace the battery cover.

INSERT A MEMORY CARD(OPTIONAL)

To store additional multimedia files, you must insert a memory card. Your phone accepts microSD™ or microSDHC™ memory cards up to 8 GB (depending on memory card manufacturer and type).

Formatting the memory card on a PC may cause incompatibility with your phone. Format the memory card only on the phone.

1. Remove the battery cover.



2. Unlock the memory card holder

3. Lift the memory card holder and insert a memory holder with the label side facing up.



4. Close the memory card holder

5. Lock the memory card holder.

6. Replace the battery cover.

To remove the memory card, remove the battery cover, unlock and lift the memory card holder, and remove the memory card.



USING BASIC FUNCTIONS

Learn how to perform basic operations of your mobile phone.

ON AND OFF

To turn your phone on,

1. Press and hold [].
2. Enter your PIN and press < OK > (if necessary).

ACCESS MENUS

To access your phone's menus,

1. In Idle mode, press the left soft key < Menu > to access Menu mode.
2. Use the Navigation key to scroll to a menu or option.
3. Press < Select >, < OK >, or the Confirm

- key to confirm the highlighted option.
4. Press <Back> to move up one level; Press [] to return to Idle mode.

USE BASIC CALL FUNCTIONS

Learn to make or answer calls in this section

Make a call:

1. In Idle mode, enter an area code and a phone number.
2. Press [] to dial the number.
3. To end the call, press [].

Answer a call:

1. When a call comes in, press [].
2. To end the call, press [].

SEND AND VIEW MESSAGES

In this section, learn to send and view text (SMS), multimedia (MMS).

To send a text or multimedia message:

1. In Menu mode, select Messages → Create new message →z Message.
2. Enter a destination number and scroll down.
3. Enter your message text.

For sending as a text message, skip to step 5.
For attaching multimedia, continue with step 4.

4. Press < Options> -> Add multimedia and add an item.

5. Press < Options> -> Send to send the message.

Add contacts

Learn the basics of using the phonebook feature.

Add a new contact:

1. In Idle mode, enter a phone number and

press <Options>.

2. Select Save -> a memory location (phone, SIM1, or SIM2) -> New.

3. Select a number type (if necessary).

4. Enter contact information.

5. Press < Options > -> Save to add the contact to memory.

Find a contact

1. In Menu mode, select Phonebook.

2. Enter the first few letters of the name you want to find.

3. Select the contact's name from the search list.

Once you have found a contact, you can call the contact by pressing []

LISTEN TO MUSIC

Learn how to listen to music via the music player or FM radio.

Listen to the FM radio:

1. Plug the supplied headset into the phone's multifunction jack.
2. In Menu mode, select FM radio.
3. Press the Confirm key to start the radio.

4. Control the FM radio using the following keys:

KEY	FUNCTIONS
NAVEGATION	In standby mode, you can access the user-defined functions, In Menu mode, scroll through menu options.

Listen to music files:

After transferring music files to the "My Music" folder of your phone or memory card,

1. In Menu mode, select Multimedia → Audio Player.
2. Select a music category → a music

file.

3. Control playback using the following keys:

KEY	FUNCTIONS
NAVEGATION	In standby mode, you can access the user-defined functions, In Menu mode, scroll through menu options.

Using the flashlight

To turn on or off the flashlight, press and keep pressing the center button for about 3 seconds.

Browse the web

Learn to access your favorite web pages.

Browse web pages:

1. In Menu mode, select Browser → Home → a SIM card (if necessary) to launch your service provider's homepage.

2. Navigate web pages using the following keys:

KEY	FUNCTIONS
NAVEGATION	In standby mode, you can access the user-defined functions, In Menu mode, scroll through menu options.



USING THE CAMERA

Learn the basics to capture and view photos.

Capture photos

1. In Menu mode, select Camera to turn on the camera.
2. Aim the lens at the subject and make any adjustments.
3. Press the Confirm key to take a photo. The photo is saved automatically.
4. Press < Back > to take another photo (step 2).

View taken photos

Press the left soft key then choose Photos to access to the photos gallery quickly.

Camera options

Entering in the Camera options you will be able to configure the following options:

Camera settings:

Select a shutter sound every time you take a picture.

Change the exposure value to adjust the photo brightness.

Change the Anti-flicker value to eliminate the fluorescent effect on the photos.

Adjust the contrast to differentiate dark and light areas.

Modify the delay timer to take self-photos.

Change the continuous shot number to take a series of photos.

Image settings:

You can change the image size.

You can adjust the image quality.

White balance:

Chose a color scheme according to the ambient.

Scene mode:

Allow you to select the night mode (extra light) or let the phone to choose the best mode.

Effect settings:

Add a color effect to the photos taken.

Storage:

Let you choose where to store the photos taken.

Restore default:






Restore the camera setting to the factory values.

pārla™

SECURITY INFORMATION

Please remember to obey relevant rules and regulations whenever use your phone. This will prevent bad effect from you and the environment.

GENERAL SECURITY

	Don't make or receive handheld calls while driving. And never text while driving.
	Don't use at petrol stations.
	Keep your phone at least 15 mm away from your ear or body while making calls.
	Your phone may produce a bright or flashing light.
	Small parts may cause a choking.

	Don't dispose of your phone in fire.
	Your phone can produce a loud sound.
	Avoid contact with anything magnetic.
	Keep away from pacemakers and other electronic medical devices.
	Avoid extreme temperatures.
	Switch off when asked to in hospitals and medical facilities.

	Avoid contact with liquids. Keep your phone dry.
	Switch off when told to in aircrafts and airports.
	Don't take your phone apart.
	Switch off when near explosive materials or liquids.
	Only use approved accessories.
	Don't rely on your phone for emergency communications.