Switching Quick Charger

USER MANUAL


Congratulations to your purchase of the PowerBase Switching Quick Charger C-511and batteries. This manual will help you understand how to operate this Charger and Batteries properly.

Instructions for Use


- 1) Auto Voltage switching 100~240V, international use.
- Place 2 or 4, AA or A AA size batteries into the battery compartment. Batteries must be inserted properly for good electrical contact and correct polarity direction.
- 3) Plug the charger into the wall AC outlet. The red LED indicator light will glow to indicate a normal charging mode.
- 4) C-511 charger is designed to charge 2 or 4 AA/AAA size Ni-MH batteries. Please refer to the combinations below.
- 5) Indications of RED and GREEN LED Light.

Red LED Light - will turn on to indicate the charger is charging the batteries. Green LED Light - will turn on when the batteries are fully charged and cut off by 8 hours timer cut-off device.

(1) For 2 or 4 AA size Ni-MH Cells

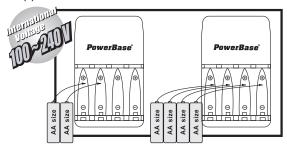

(2) For 2 or 4 AAA size Ni-MH Cells

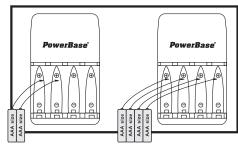

NOTE: Never put Ni-MH and Ni-Cd batteries together in the PowerBase Charger.

CAUTION

- 1. Do NOT recharge Ni-Mh & Ni-Cd rechargeable batteries at the same time.
- This product is designed for Ni-Mh/Ni-Cd rechargeable batteries only.
 To avoid personal injury and damage, do not charge any primary alkaline, zinc chloride, or zinc carbon type batteries.
- 3. Do not expose the charger to rain or moisture.
- 4. Do not operate the charger using an extension cord.
- Do not use the charger if it has received a sharp blow, been dropped, Or damaged in anyhow.
- To reduce risk of shock, disconnect the AC power source (AC adaptor) from outlet before attempting any cleaning of the charger.
- 7. Do not charge a leaking, corroded or dead battery.
- 8. Do not attempt to repair charger by yourself. When service or repair is required, contact qualified service personnel.
- 9. Do not try to disassemble the charger.
- Store the charger in a cool and dry place when not in use. Keep away from children.

PLEASE NOTE:

*PowerBase Industrial (HK) Ltd. will not be responsible for any personnel loss and/or injury if the defect was caused by misuse or mishandling by the user in any way.

CHARGER SPECIFICATION:

International Voltage	Switching : 100~240V 50~60Hz (UL, VDE)
Battery Type / Size	Ni-MH AA & AAA Batteries
Charging Current	330mA / AA 160mA / AAA
Time Pratectich	8 hours timer cut-off device




- Switching Quick Charger

USER MANUAL


Congratulations to your purchase of the PowerBase Switching Quick Charger C-511and batteries. This manual will help you understand how to operate this Charger and Batteries properly.

Instructions for Use

- 1) Auto Voltage switching 100~240V, international use.
- Place 2 or 4, AA or A AA size batteries into the battery compartment. Batteries must be inserted properly for good electrical contact and correct polarity direction.
- 3) Plug the charger into the wall AC outlet. The red LED indicator light will glow to indicate a normal charging mode.
- C-511 charger is designed to charge 2 or 4 AA/AAA size Ni-MH batteries. Please refer to the combinations below.
- 5) Indications of RED and GREEN LED Light. Red LED Light - will turn on to indicate the charger is charging the batteries. Green LED Light - will turn on when the batteries are fully charged and cut off by 8 hours timer cut-off device.
 - (1) For 2 or 4 AA size Ni-MH Cells

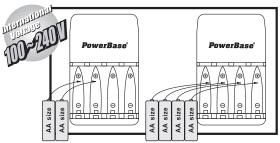

(2) For 2 or 4 AAA size Ni-MH Cells

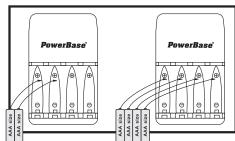

NOTE: Never put Ni-MH and Ni-Cd batteries together in the PowerBase Charger.

CAUTION

- 1. Do NOT recharge Ni-Mh & Ni-Cd rechargeable batteries at the same time.
- This product is designed for Ni-Mh/Ni-Cd rechargeable batteries only. To avoid personal injury and damage, do not charge any primary alkaline, zinc chloride, or zinc carbon type batteries.
- 3. Do not expose the charger to rain or moisture.
- 4. Do not operate the charger using an extension cord.
- Do not use the charger if it has received a sharp blow, been dropped, Or damaged in anyhow.
- 6. To reduce risk of shock, disconnect the AC power source (AC adaptor) from outlet before attempting any cleaning of the charger.
- 7. Do not charge a leaking, corroded or dead battery.
- 8. Do not attempt to repair charger by yourself. When service or repair is required, contact qualified service personnel.
- 9. Do not try to disassemble the charger.
- Store the charger in a cool and dry place when not in use. Keep away from children.

PLEASE NOTE:

*PowerBase Industrial (HK) Ltd. will not be responsible for any personnel loss and/or injury if the defect was caused by misuse or mishandling by the user in any way.

CHARGER SPECIFICATION:

International Voltage	Switching : 100~240V 50~60Hz (UL, VDE)
Battery Type / Size	Ni-MH AA & AAA Batteries
Charging Current	330mA / AA 160mA / AAA
Time Pratectich	8 hours timer cut-off device