Mod. SL489 3PK Solar Path Light

Lighting Instructions


Location of the Solar Panel Controller

For best results, locate the solar panel controller in a position where it can get direct sunlight, and free from cover and shade. (As shown in figure 1). Make sure that the solar panel is not going to be affected by any other light source.

Assembly Instructions

Solar Panel Controller Installation

- 1) Carefully remove the unit and all fittings from the box.
- 2) Assemble the mounting pole to the ground stake. Push the stake directly into the ground at desired location.
- 3) Attach the Solar panel controller head to the mounting pole carefully and adjust to face direct sunlight.
- 4) Adjust the switch under the solar panel to "AUTO" position.

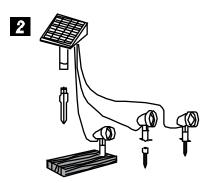

Solar Light Fixture

- 5) Attach the lamp heads to the posts using the hardware provided.
- 6) Mount the lamps on a flat surface with the screws provided or use the ground stakes.
- 7) Choose the desired direction of the light beam and connect the wire to the solar panel controller on the back of the unit. (As shown in Figure 2)

Replacing the Battery

For best results the batteries should be replaced every 12 months.

- 1) Turn the switch to off on the back of the solar panel controller and remove the 4 screws.
- 2) Replace the batteries with new 1.2 v 900 mAh AA rechargeable batteries.

- 3) Re-assemble and turn the battery switch to auto.
- 4) Allow the solar panel controller to receive a full 8 hours of sunlight to allow the rechargeable batteries to reach maximum capacity.

Troubleshooting

If the light does not turn on at dusk after 8 hours of charging:

- Check the batteries to make sure it is making secure contact with the terminal.
- Be sure the solar fixture is in a relatively sunny location.
- Make sure the light's photocell is not affected by other light.

Caution

- Failure to insert batteries in the correct polarity, as indicated in the battery compartment, may shorten the life of the batteries or cause them to explode or leak.
- Do not dispose of batteries in fire.

Maintenance

Periodically clean light fixture with soft cloth and warm soapy water.

One Year Limited Warranty

This product is warranted to be free from defects in workmanship or materials at the time of purchase for a period of one year, (excluding batteries). Should a defect occur, please contact our customer service line at 1-866-460-4604 for service. Should any evidence of defects in material or workmanship appear within the warranty period after the date of purchase, Classy Caps Mfg. Inc. will either repair or replace the product at its option. Classy Caps Mfg. Inc. is not responsible for injury, property damage, or other consequential damages or damages to third parties arising directly or indirectly from an actual or alleged defect in material or workmanship of the product.